


## UB300-18GM40-E5-V1

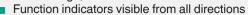



Switching output

5 different output functions can be set


Program input

Temperature compensation

### Single head system



## **Dimensions**

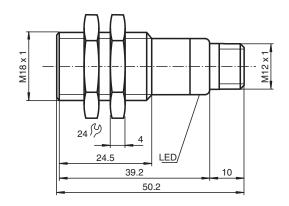


### **Technical Data**

General specifications		
Sensing range	35 300 mm	
Adjustment range	50 300 mm	
Dead band	0 35 mm	
Standard target plate	100 mm x 100 mm	
Transducer frequency	approx. 390 kHz	
Response delay	approx. 50 ms	
Indicators/operating means		
LED green	Power on	

#### Technical Data LED yellow indication of the switching state flashing: program function object detected solid red: Error LED red red, flashing: program function, object not detected **Electrical specifications** Operating voltage $\mathsf{U}_\mathsf{B}$ 10 ... 30 V DC , ripple 10 $\%_{\text{SS}}$ No-load supply current ≤ 20 mA $I_0$ Input Input type 1 program input operating distance 1: -U<sub>B</sub> ... +1 V, operating distance 2: +6 V ... +U<sub>B</sub> input impedance: > 4,7 k $\Omega$ program pulse: $\geq$ 1 s Output 1 switching output E5, PNP NO/NC, programmable Output type Rated operating current 200 mA, short-circuit/overload protected Switch point A1: 50 mm Switch point A2: 300 mm Default setting Voltage drop $U_{\text{d}}$ ≤3 V ≤1 % Repeat accuracy Switching frequency f ≤ 13 Hz Range hysteresis Н 1 % of the set operating distance Temperature influence ± 1.5 % of full-scale value Compliance with standards and directives Standard conformity Standards EN IEC 60947-5-2:2020 IEC 60947-5-2:2019 Approvals and certificates **UL** approval cULus Listed, Class 2 Power Source CCC approval CCC approval / marking not required for products rated ≤36 V **Ambient conditions** Ambient temperature -25 ... 70 °C (-13 ... 158 °F) -40 ... 85 °C (-40 ... 185 °F) Storage temperature Mechanical specifications Connection type Connector plug M12 x 1, 4-pin Housing diameter 18 mm IP67 Degree of protection Material Housing brass, nickel-plated Transducer epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT 25 g Mass

### Connection

Standard symbol/Connections: (version E5, pnp)

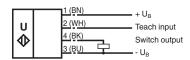

Core colours in accordance with EN 60947-5-2.

## **Connection Assignment**




Wire colors in accordance with EN 60947-5-2


1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)

### **Characteristic Curve**

#### Characteristic response curve

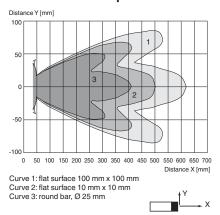

## Programmable output modes

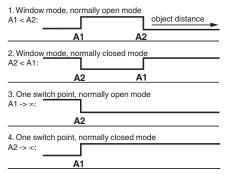

<sup>5.</sup> A1 ->  $\infty$ , A2 ->  $\infty$ : Object presence detection mode Object detected: Switch output closed No object detected: Switch output open

### **Accessories**

21	UB-PROG2	Programming unit
	OMH-04	Mounting aid for round steel ø 12 mm or sheet 1.5 mm 3 mm



# **Accessories BF 18** Mounting flange, 18 mm BF 18-F Plastic mounting adapter, 18 mm BF 5-30 Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm Female cordset single-ended M12 straight A-coded, 4-pin, PVC cable grey V1-G-2M-PVC V1-W-2M-PUR Female cordset single-ended M12 angled A-coded, 4-pin, PUR cable grey UVW90-K18 Ultrasonic -deflector M18K-VE Plastic nuts with centering ring for the vibration-free mounting of cylindrical sensors

#### Adjusting the switching points

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage  $-U_B$  or  $+U_B$  to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with  $-U_B$ , A2 with  $+U_B$ .

Five different output functions can be set

- 1. Window mode, normally-open function
- 2. Window mode, normally-closed function
- 3. one switching point, normally-open function
- 4. one switching point, normally-closed function
- 5. Detection of object presence

#### **TEACH-IN** window mode, normally-open function

- Set target to near switching point
- TEACH-IN switching point A1 with -U<sub>B</sub>
- Set target to far switching point
- TEACH-IN switching point A2 with +U<sub>B</sub>

#### **TEACH-IN** window mode, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A2 with +U<sub>B</sub>
- Set target to far switching point
- TEACH-IN switching point A1 with -U<sub>B</sub>

#### **TEACH-IN** switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with +U<sub>B</sub>
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -U<sub>B</sub>

#### **TEACH-IN** switching point, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A1 with -U<sub>B</sub>
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with +U<sub>B</sub>

### **TEACH-IN** detection of objects presence

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -U<sub>R</sub>
- TEACH-IN switching point A2 with +U<sub>B</sub>

### **LED Displays**

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN switching point:		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	On	off
Normal operation	off	Switching state
Fault	on	Previous state

### **Installation Conditions**

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.