


## 200-616 Eclipse Yoke Button Assignments

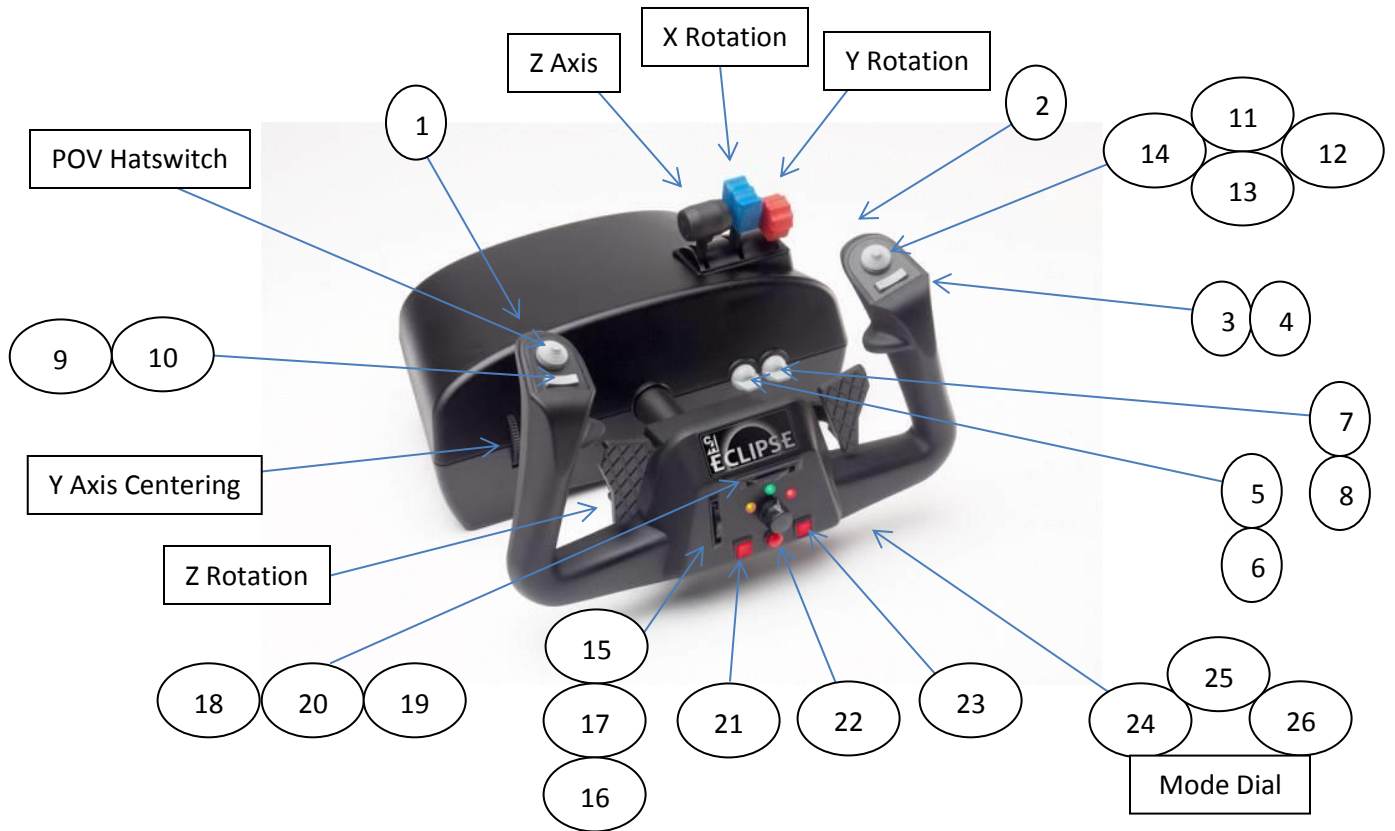

- Button 1 = Back Side Left Red Button
- Button 2 = Back Side Right Red Button
- Button 3 and 4 = Rocker Switch Left/Right, typically used for Trim
- Button 5 and 6 = Toggle Switch Up/Down, typically used for Landing Gear
- Button 7 and 8 = Toggle Switch Up/Down, typically used for Flaps
- Button 9 and 10 = Rocker Switch Left/Right, typically used for Trim
- Buttons 11 through 14 = Four Way Hatswitch
- POV Hatswitch = 8 Directions
- Buttons 15 through 17 = Up/Down/Push Wheel
- Buttons 18 through 20 = Left/Right/Push Wheel
- Button 21 = Left Square Red Button
- Button 22 = Middle Round Red Button
- Button 23 = Right Square Red Button
- Buttons 24 through 26 = Yellow/Green/Red LED Dial, also used to switch modes (Control Manager only)
- X & Y Axes = Yoke Handle, typically used for Elevator and Ailerons
- Z Axis = Black Lever, typically used for Throttle
- X Rotation = Blue Lever, typically used for Propeller
- Y Rotation = Red Lever, typically used for Mixture
- Z Rotation = Black Paddles, typically used for Rudder