FA-1008PB2-C SHOCK ABSORBER - FIXED

Bansbach easylift



| SI LEII ICATIONS | | | | | | | |
|------------------------|--------------|---|--|------------------------------------|--|--|--|
| Model | Stroke mm | Max Absorption Energy J(kgf∙m) | | Max Equivalent Mass kg (kgf) | | | |
| FA-1008PB2-C | 8 | 1.47(0.15) | | 10(10) | | | |
| Max Drag N (kgf) | Energy pe | Absorption Energy per min. J/min(kgf·m/min) | | Extension Force N(kgf) | | | |
| 735 (75) | 58.8(6 | 58.8(6.0) | | 5.88(0.6) or lower | | | |

SPECIFICATIONS

COMMON SPECIFICATIONS

| Range of Impact Rate | m/s | 0.3~1 | |
|-----------------------|-----------|-------|--|
| Maximum Cycle Rate | cycle/min | 60 | |
| Operating Temperature | C° | -5~70 | |


PRECAUTIONS FOR USE


- Do not use this product without carefully reading the attached owner's manual.
- Ensure that an external stopper (Stopper nut OP-020SB) is also used.
- Do not turn the oil inlet screw located at the bottom of the main unit.
- Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- Do not use this product in a vacuum or a location where it may come in contact with oil.
- Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: within ±2.5°)

OPTIONAL PARTS

Eccentric angle adaptor OP-010PB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until it is secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is ±10°.
- The caps and the guides for inclined use are not unbundled.

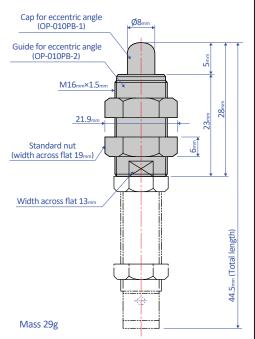


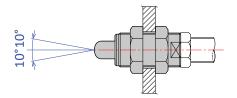


Note: Material of cap for eccentric angle: POM

Stopper nut OP-020PB

 Adjust so that it stops 1 mm before the stroke end, and fasten with the main unit's nut until secured.

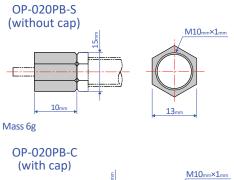

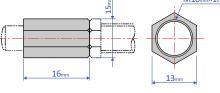

Mass 9g


Note: When attaching, make sure that the side without a bearing chamfer is the impact surface.

Standard nuts are

sold separately as well - M10 Nut

Square flange OP-040PB


 Once the attachment site is determined, use the main unit's nut to securely fasten in place.

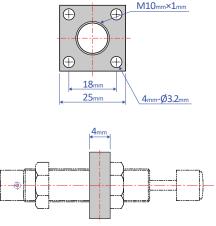

Mass 16g

Liquid-proof cap FA-1008PB2-C-060

- A drip-proof cap is fitted on the unit on delivery.
- Liquid-proof caps are not sold separately.
- Ensure that the cap is facing upward.
 If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.

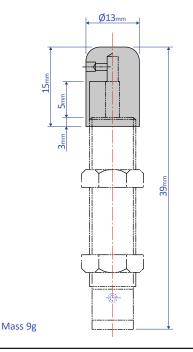

Holder with a switch OP-030KB-2

Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.

