# **PRODUCT DESCRIPTION**

The SP 400 features a 200mV d.c. measurement range with auto-zero and auto-polarity. Decimal points are user selectable. The SP 400 features a negative rail generator which enables the meter to measure a signal referenced to its own power supply GND. LED backlighting ensures excellent readability under low light conditions. The module is easily fitted into the panel, using the fixing clip provided. The module's low cost means it will suit high and low volume applications. The design of the panel meter's housing ensures splash proofing using the supplied seal.

### **FEATURES**

- 9.75mm (0.38") Digit Height
- 200mV d.c. Full Scale Reading
- 3.0 to 7.5V or 6.0 to 15.0V Operation
- Auto-zero and Auto-polarity
- Programmable Decimal Points
- LED Backlighting
- Low Battery Warning
- Splash Proof

## **TYPICAL APPLICATIONS**

- Precision Instrumentation Systems
- Power Supply Monitoring
- Test Boxes
- Panel-Mount Indication
- Low Power Voltage Measurement

# **ELECTRICAL SPECIFICATIONS**



### **ORDERING INFORMATION**

Standard Meter

Stock Number SP 400

Specification		Min.	Тур.	Max.	Unit
Accuracy (overall error) *			0.1		% (±1 count)
Linearity				±1	count
Sample rate			2.5		samples/sec
Operating temperature range		0		50	°C
Temperature stability			100		ppm/°C
Supply voltage	V+ to GND configuration	3.0	5.0	7.5	V d.c.
	V+ to V- configuration	6.0	9.0	15.0**	V d.c.
Supply current	V+ to GND configuration		350		μΑ
	V+ to V- configuration		175		μΑ
Backlight supply voltage		4.75	5.0	***	V d.c.
Backlight supply current @ 5V d.c.			40	80****	mA
Input leakage current (Vin = $0V$ )			1	10	рА

\* To ensure maximum accuracy, re-calibrate periodically.

\*\* Operation of the meter beyond the maximum supply voltage rating may cause permanent damage to the meter.

\*\*\* An external series resistor is required above 5V, see Applications.

\*\*\*\* This specification linearly derates to 50mA @ 50°C.

Unless otherwise noted, specifications apply at  $T_A = 25^{\circ}$ C,  $V_{supply} = 5$ Vd.c. ( $f_{clock} = 48$ kHz) and are tested with the module configured for single ended input mode.

### **SAFETY**

To comply with the Low Voltage Directive (LVD 93/68/EEC), input voltages to the module's pins must not exceed 60Vdc. The user must ensure that the incorporation of the panel meter into the user's equipment conforms to the relevant sections of BS EN 61010 (Safety Requirements for Electrical Equipment for Measuring, Control and Laboratory Use).

LASCAR ELECTRONICS LTD. MODULE HOUSE, WHITEPARISH, WILTSHIRE SP5 2SJ, UK TEL: +44 (1794) 884567 FAX: +44 (1794) 884616 E-mail: sales@lascar.co.uk




LASCAR ELECTRONICS INC. 4258 WEST 12th STREET, ERIE, PA 16505, USA TEL: +1 (814) 835 0621 FAX: +1 (814) 838 8141 E-mail: us-sales@lascarelectronics.com LASCAR ELECTRONICS (HK) LTD. 8th FLOOR, CHINA AEROSPACE CENTRE, 143 HOI BUN ROAD, KWUN TONG, KOWLOON, HONG KONG TEL: +852 2389 6535 E- mail: saleshk@lascar.com.hk


www.lascarelectronics.com


No: 695 - Page 1 of 4

# SP 400

**LASCAR** 

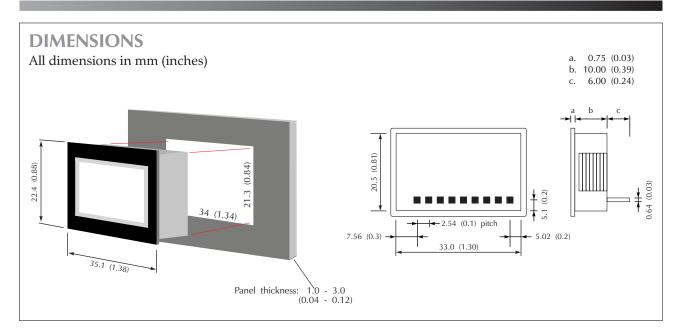

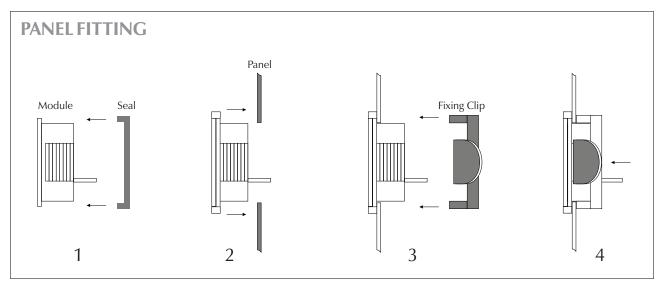

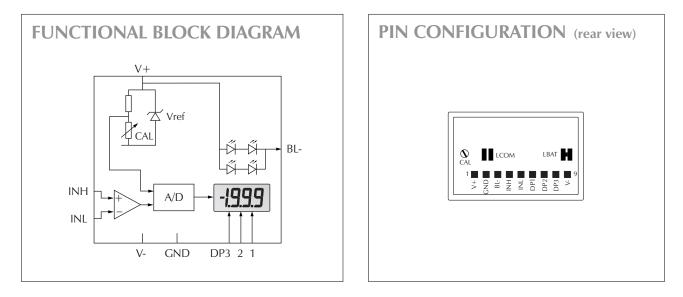

No: 695 - Page 2 of 4

#### **CIRCUIT DIAGRAM** v+ <u>1</u> RA and RB factory fitted options INT R1 180K 28 BUFF ICI С3 A/Z INHI MAX138DIE INLO COM C REF+ LCD1 14 D -100 IN LO IC2 4070 LCD SP200 34 20 11 10 8 DP3 (1.999) IC2a 33 C REF (1.99 36 REF HI 22 DP2 (19.99) REF LO DP2 (19,99) IC26 23 16 24 15 24 CAP GND \_ 2 SND 6 DP1 (199.9) CAP 105 CET + 67 DP (199,9 IC2c TEST TEST R14 1M R13 R12 1M 1M R10 1M R4 100× BC84 TR2 IC24 13 R11 180K R5 3KØ TEST 11 TEST R9 130K V١ 22R 3 BL Pins 11 and 18 not fitted as standard

### **PIN FUNCTIONS**

- 1. V+ Positive power supply to the meter.
- 2. GND 0V power supply to the meter (3.0 to 7.5V meter power supply applications only).
- BL- Connect to the meter's negative supply voltage to switch on the LED backlighting. For meter supply voltages above 5V, add a series resistor Rs. See Applications for suitable circuit diagrams.
- 4. INH Positive measuring input.
- 5. INL Negative measuring input.
- 6. DP1 Connect to V+ to display DP1 (199.9).
- 7. DP2 Connect to V + to display DP2 (19.99).
- 8. DP3 Connect to V + to display DP3 (1.999).
- 9. V- Negative power supply to the meter (6.0 to 15.0V meter power supply applications only).

### Note:

A negative supply is generated internally and mirrors the positive supply. For example: if V + is +5V, then the internally generated V- is -5V. When measuring with the input referenced to the same supply rail as that of the panel meter, then the limitations on the input range are (V - 1.5V) to (V + -1.5V).

Solder Links:

LCOMNormally Open.Connects INL to COM.LBATNormally Closed.Cut this link to disable the low battery warning sign.




www.lascarelectronics.com

# SP 400

## **SCALING**

Two external resistors Ra and Rb may be used to alter the full scale reading (FSR) of the meter - see table. The meter will have to be re-calibrated by adjusting the calibration potentiometer on the rear of the module.


	FSR	Ra	Rb
	2V	910k	100k
Voltage	20V	1M	10k
_	200V	1M	1k
	2000V*	1M	100R
	200µA	0R	1k
Current	2mA	0R	100R
	20mA	0R	10R
	200mA	0R	1R

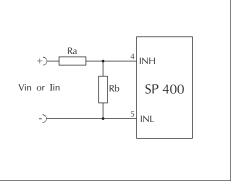

# APPLICATIONS

Do not connect more than one meter to the same power supply if the meters cannot use the same signal ground. Taking any input beyond the power supply rails will damage the meter.


5V supply operation (3.0 to 7.5V Meter Power Supply)

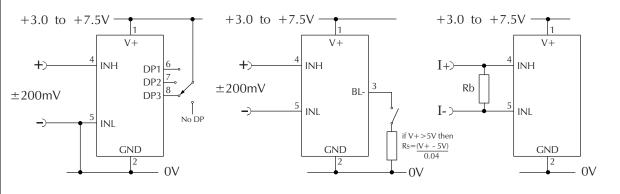

Measuring a single ended input voltage referenced to supply, i.e. the input voltage and the meter's power supply share the same 0V rail. Ensure solder link LCOM is open.

Measuring an input voltage referenced to a floating supply, i.e. the input voltage and the meter's power supply are isolated from each other. Ensure solder link LCOM is closed.

Measuring a current from a circuit which is floating with respect to the DPM's supply, i.e. the current and the meter's power supply are isolated from each other. Ensure solder link LCOM is closed.

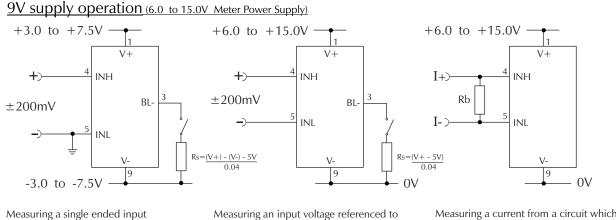

Measuring a current from a circuit which is a floating supply, i.e. the input voltage floating with respect to the DPM's supply, i.e. the current and the meter's power and the meter's power supply are isolated supply are isolated from each other. Ensure solder link LCOM is closed. Ensure solder link LCOM is closed.

S.L.

06/2010

Specifications liable to change without prior warning



voltage referenced to supply, i.e. the

input voltage and the meter's power

supply share the same OV rail.

Ensure solder link LCOM is open.

www.lascarelectronics.com

Issue 9

SP 400

from each other.

No: 695 - Page 4 of 4

Applies to SP 400/3