

## Using the **ADM1073** Hot Swap Controller Evaluation Kit

### FEATURES

- Evaluation kit for the **ADM1073** hot swap controller
- External FET to control load current
- Programmable current limit (default 6 A)
- Programmable operating voltage range (UV/OV resistors)
- SOA timing values using external TIMER capacitor
- LEDs on all logic inputs and outputs
- Push-buttons for asserting logic inputs
- Drops into a user's system, replacing the current hot swap device

### EVALUATION KIT CONTENTS

- EVAL-ADM1073MEBZ** evaluation board
- EVAL-ADM1073MEBZ** user guide

### GENERAL DESCRIPTION

The **EVAL-ADM1073MEBZ** is a compact, full feature evaluation board for the **ADM1073** device. The layout provides users with a clear visual of all the peripheral components and the hot swap power path. The layout also maximizes the ability of the board

to dissipate heat for some of the key components on the power path, allowing evaluation of high current hot swap setups.

One sense resistor footprint and one FET footprint provides users with flexibility and allows them to simulate a wide range of application setups.

Multiple test points allow easy access to all critical points and pins. There is one LED to provide users with a direct visual indication of IC power good output.

This evaluation kit allows the **ADM1073** negative-voltage hot swap controller to be easily evaluated. The **ADM1073** provides undervoltage and overvoltage protection by monitoring the supply voltage and provides robust current limiting by monitoring the load current. The device uses an FET in the power path to control the load current.

Complete specifications for the **ADM1073** can be found in the **ADM1073** data sheet, available at [www.analog.com](http://www.analog.com), and should be consulted in conjunction with this user guide when using the evaluation board

### PHOTOGRAPH OF THE EVALUATION BOARD

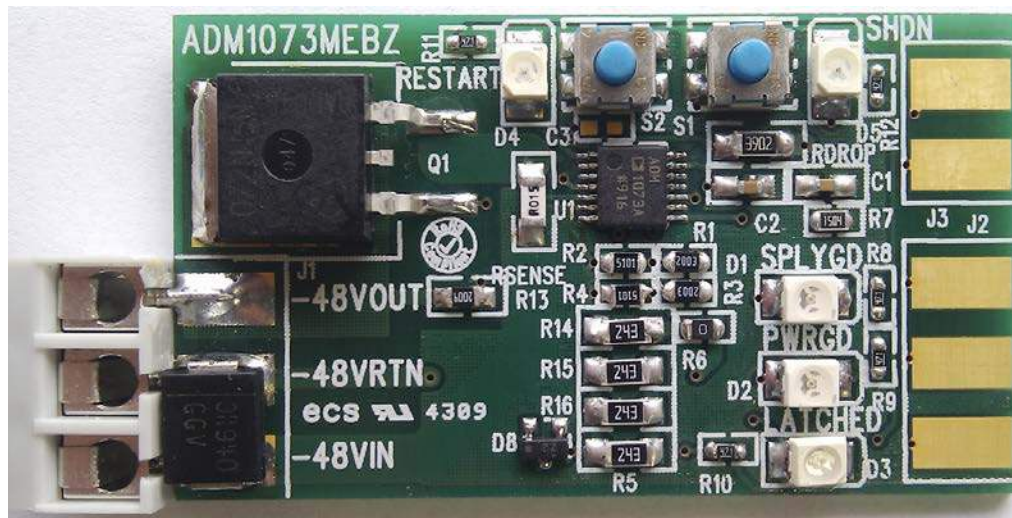


Figure 1.

**TABLE OF CONTENTS**

Features .....	1	Integrating the Evaluation Board into the System .....	5
Evaluation Kit Contents.....	1	Load Capacitance .....	5
General Description .....	1	Evaluation Board Hardware.....	6
Photograph of the Evaluation Board.....	1	Switch, Jumper, and LED Functions.....	6
Revision History .....	2	Evaluation Board Schematics.....	7
Important Safety Information.....	3	Bill of Materials.....	8
Evaluation Board Description.....	4	EVAL-ADM1073MEBZ .....	8
Evaluation Board Configuration .....	4		

**REVISION HISTORY**

5/13—Revision 0: Initial Version

## IMPORTANT SAFETY INFORMATION

Take the following precautions when using the [EVAL-ADM1073MEBZ](#) evaluation kit under high voltage conditions:

- Do not work alone.
- Always check the grounding when working with negative voltages.
- Always keep one hand in your pocket or behind your back when around a high voltage system.
- Wear footwear with a rubber sole if possible.
- Wear eye protection (safety goggles).
- Do not wear any jewelry or other articles that could accidentally contact circuitry and conduct current.
- Set up your work area away from possible grounds that you might accidentally contact.
- With the power off and the equipment unplugged, connect/disconnect any test leads. Use clip leads or solder temporary wires to reach locations that are difficult to access.
- Perform as many tests as possible with the power off and the equipment unplugged.
- After performing tests that require the power to be turned on, turn off the power and disconnect the power supply from the board.
- Fully discharge large load capacitors with an appropriate resistor.

## EVALUATION BOARD DESCRIPTION

The [EVAL-ADM1073MEBZ](#) is designed to demonstrate several features of the [ADM1073](#). It can be used to drop onto a plug-in module or a backplane, replacing the current hot swap device. A simplified drawing of the evaluation board is shown in Figure 2.

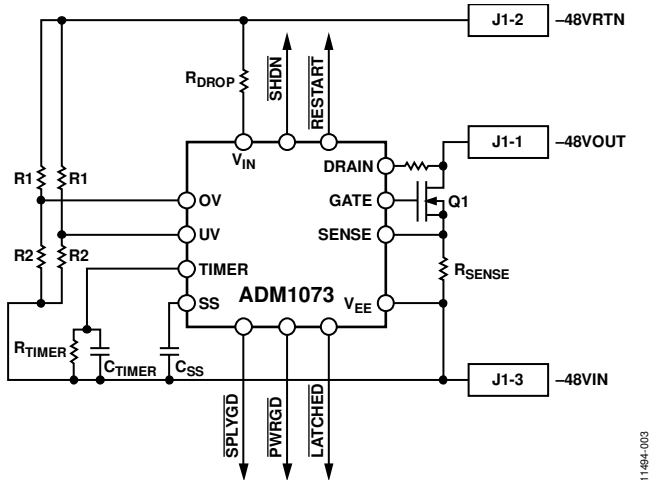


Figure 2. Evaluation Board Functional Block Diagram

The [ADM1073](#) evaluation board consists of the following:

- On-board FET to control load current
- Programmable operating voltage range (R1 to R4 resistors)
- Programmable current-limit levels (value of  $R_{SENSE}$ )
- Programmable soft start ramp (Capacitor C2)
- Programmable TIMER on-time (Capacitor C1)
- LEDs on all logic I/Os
- Push-button switches for asserting logic inputs

By cutting various tracks around the current hot swap device in a user system and soldering the [ADM1073](#) evaluation board in position above it, the [ADM1073](#) and its external components can be integrated into the system in place of the original hot swap circuitry. This allows the user to evaluate the performance of the [ADM1073](#) in the system.

## EVALUATION BOARD CONFIGURATION

You can set up the [ADM1073](#) evaluation board in various configurations, as follows:

1. Choose a shunt resistor. A default  $R_{DROP}$  of 39 k $\Omega$  is mounted on the [ADM1073](#) evaluation board. A constant voltage of 12.3 V (above  $V_{EE}$ ) is generated at the  $V_{IN}$  pin. This resistor dissipates a maximum of 125 mW at 75 V and allows a minimum power supply of 35 V to be used for operation.
2. Choose values for Resistors R1 to R4 to suit the desired operating voltage range and hysteresis levels. The default resistors values ( $R1 = 200$  k $\Omega$ ,  $R2 = 5.1$  k $\Omega$ ,  $R3 = 200$  k $\Omega$ ,  $R4 = 5.36$  k $\Omega$ ) give an operating range of  $\sim 34.9$  V to  $\sim 74.0$  V with hysteresis levels of  $\sim 1$  V on the UV and OV pins. See the [ADM1073](#) data sheet for other resistor ratios and their operating ranges. Note that resistors that are accurate to within  $\pm 1\%$  should be used for optimum accuracy.
3. Choose the maximum load current that is permitted before the [ADM1073](#) registers a current fault. This is determined by the choice of sense resistor,  $R_{SENSE}$ . The evaluation board has a 15 m $\Omega$  sense resistor by default, which sets up a maximum inrush current level of 6.8 A and a circuit breaker level between 5.7 A and 6.5 A ( $\sim 6$  A typical).  $R_{SENSE}$  can be changed to alter the load current level. See the [ADM1073](#) data sheet for details. Note that resistors that are accurate to within  $\pm 1\%$  should be used for optimum accuracy.
4. Choose a value for the soft start capacitor,  $C_{SS}$ . This capacitor is connected between the SS and  $V_{EE}$  pins. It adjusts the soft start current profile when the FET is enabled. Capacitors of various values can be soldered in this location. See the [ADM1073](#) data sheet for details. The default value of this capacitor is 0.82 nF, which results in a soft start time of  $\sim 400$   $\mu$ s.
5. Choose values for the TIMER capacitor,  $C_{TIMER}$ , and the TIMER resistor,  $R_{TIMER}$ . These components set the on-time of the limited consecutive retry scheme. Capacitors and resistors of various values can be soldered in this location. See the [ADM1073](#) data sheet for details. For the MOSFET used on the board, the default value for the capacitor is 22 nF. This gives a maximum timer of  $\sim 3$  ms and a minimum timer of  $\sim 1.1$  ms. This timer depends on the  $V_{DS}$  of the MOSFET; however,  $C_{SS}$  and  $R_{DRAIN}$  also affect this parameter. For example,
  - if  $V_{DS} = 75$  V, then  $t = 1.1$  ms
  - if  $V_{DS} = 48$  V, then  $t = 1.5$  ms
  - if  $V_{DS} = 35$  V, then  $t = 1.7$  ms
  - if  $V_{DS} = 0$  V, then  $t = 3$  ms
6. The default value of the drain resistor is 2 M $\Omega$ . This ensures that the maximum drain current of 36  $\mu$ A is not exceeded while maintaining optimum foldback.
7. The [ADM1073](#) evaluation board has an IPP075N15N3 D2PAK FET mounted by default. If you want to change this FET, remove the component, Q1, and mount a replacement. The footprint can accommodate DPAK and D2PAK packages.

### INTEGRATING THE EVALUATION BOARD INTO THE SYSTEM

The current system must be modified to disconnect or remove the existing hot swap circuitry and replace it with the ADM1073 evaluation board. The following steps describe a situation in which the hot swap circuitry resides on a plug-in module. The same method applies when a hot swap system is implemented on the backplane side.

1. Locate the existing hot swap device and its accompanying components, and disconnect this portion of the system by cutting the relevant tracks on the board. Alternatively, you can desolder and remove the relevant components, as shown in Figure 3.

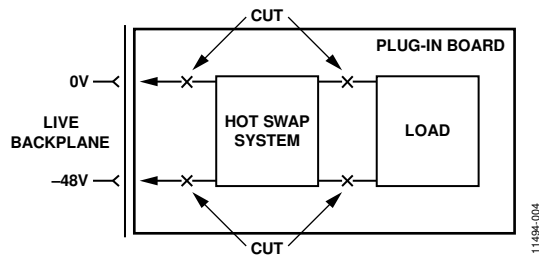


Figure 3. Removing Existing Hot Swap Circuitry from the System

2. To integrate the ADM1073 evaluation board into your system in place of the original hot swap circuitry, clamp three wires into the J1 terminal block of the ADM1073 evaluation board and solder them into position on the board. If you need to access the logic I/Os, there are blank pads on the board that can be used for this purpose. The ADM1073 evaluation board now acts as a substitute for the old hot swap circuitry, as shown in Figure 4.

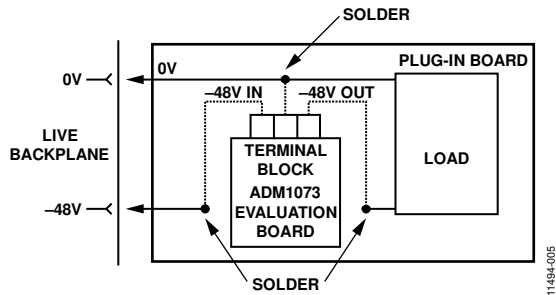


Figure 4. Integrating the ADM1073 Evaluation Board into the System

The ADM1073 evaluation board has an insulating coating on its underside to protect the system. If the underside of the board were not protected, shorts could occur on the module or backplane below it.

### LOAD CAPACITANCE

The ADM1073 can accommodate a limited multiple retry scheme to charge up larger load capacitance while keeping the FET within the programmed safe operating area (SOA) limits. There is a maximum of seven attempts allowed. Table 1 can be used as a guide for nominal load capacitance limits for this particular design.

Table 1. Nominal Load Capacitance Limits<sup>1</sup>

V <sub>IN</sub> (V)	Number of Attempts	~Maximum C <sub>LOAD</sub> (μF)
48	1	250
48	7	1800
75	1	150
75	7	1000

<sup>1</sup> Excluding tolerances and assuming no dc load current enabled during power-up.

## EVALUATION BOARD HARDWARE

### SWITCH, JUMPER, AND LED FUNCTIONS

#### EVAL-ADM1073MEBZ

Table 2. Connector Functions

Connector	Description
-48VRTN, -48VIN	Hot swap line voltage inputs that also power the board components. The input voltage ranges from -18 V to -75 V.
-48VOUT	Hot swap line voltage output.

Table 3. Switch Functions

Switch	Description
S1	Push-button for shutdown.
S2	Push-button for restart.

Table 4. LED Functions

LED	Description
D1	SPLYGD, green.
D2	PWRGD, green.
D3	LATCHED, red.
D4	RESTART, yellow.
D5	SHDN, yellow.

Table 5. On-Board ICs

IC	Description
U1	<a href="#">ADM1073</a> main IC.

# EVALUATION BOARD SCHEMATICS

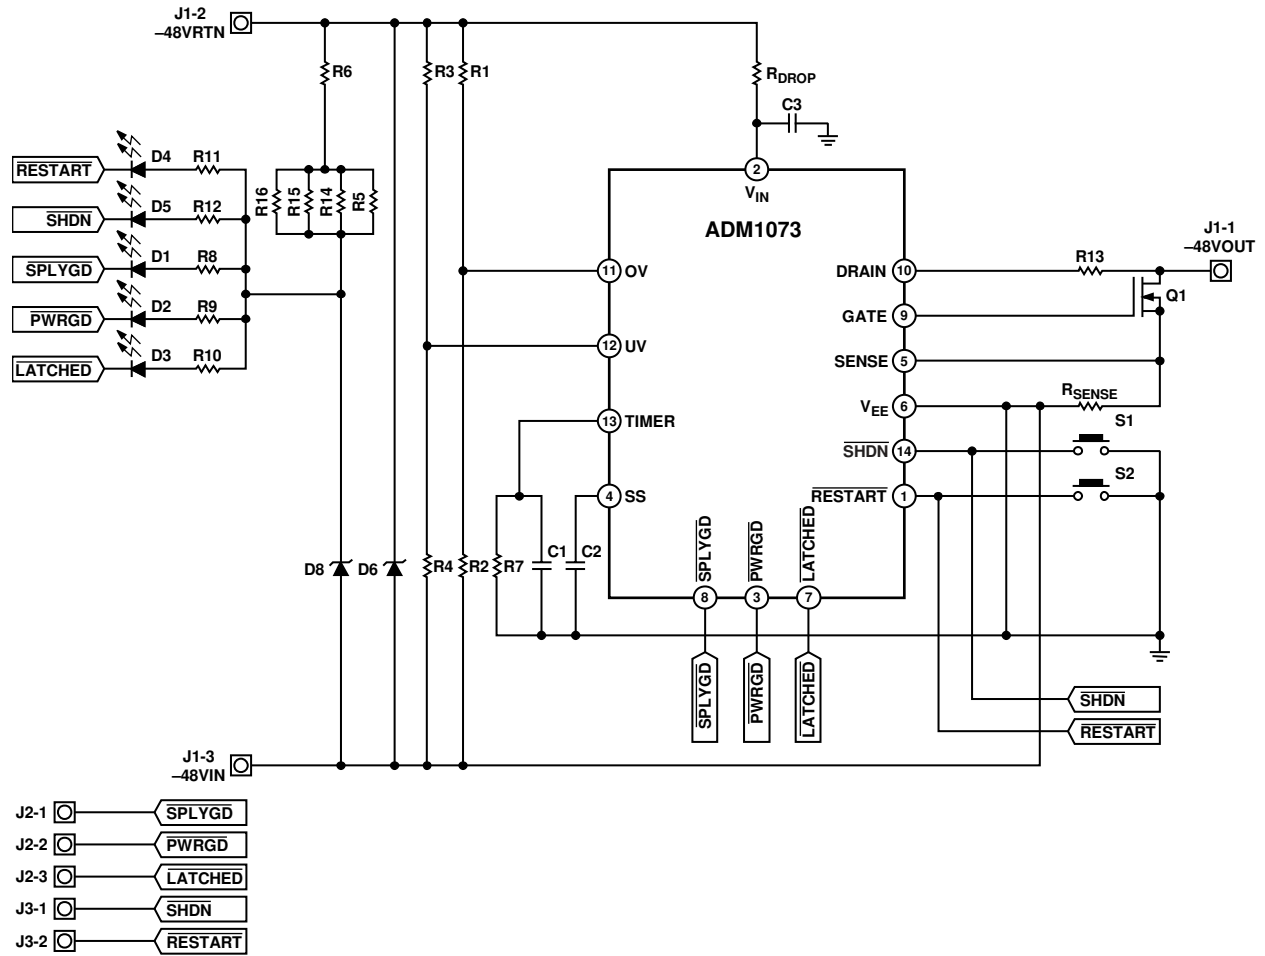


Figure 5. EVAL-ADM1073MEBZ Evaluation Board Circuit Diagram

11494-006

## BILL OF MATERIALS

### EVAL-ADM1073MEBZ

Table 2. Bill of Materials

Qty	Reference Designator	Part Type	Value	Part Decal	Part No.	Source
1	U1	Hot swap controller		14-lead TSSOP	<a href="#">ADM1073ARUZ</a>	Analog Devices, Inc.
1	C1	Capacitor (C <sub>TIMER</sub> nom)	22 nF	0603	881-9998	Farnell
1	C2	Capacitor (C <sub>SS</sub> nom)	0.82 nF	0603	175-9086	Farnell
1	C3	Capacitor	100 nF	0603	182-8899	Farnell
2	R1, R3	Resistor	200 kΩ	0805	165-2950	Farnell
1	R2	Resistor	5.1 kΩ	0805	146-9937	Farnell
1	R4	Resistor	5.36 kΩ	0805	2305132	Farnell
4	R5, R14, R15, R16	Resistor	24 kΩ	1206	184-1781	Farnell
1	R6	Resistor	0 Ω	0805	9333681	Farnell
1	R7	Resistor (R <sub>TIMER</sub> nom)			Do not insert	
5	R8 to R12	Resistor	470 Ω	0805	923-3962	Farnell
1	R13	Resistor (R <sub>DRAIN</sub> )	2 MΩ	0805	150-6150	Farnell
1	RDROP	Resistor (R <sub>SHUNT(NOM)</sub> )	39 kΩ	1206	923-6910	Farnell
1	RSENSE	Resistor	15 mΩ	1206	WSLP1206R0150FEA	Vishay
1	Q1	FET	7.2 mΩ	D2PAK	IPP075N15N3 G	Infineon
2	D4, D5	LED		LED SMT yellow	121-2751	Farnell
2	D1, D2	LED		LED SMT green	122-6375	Farnell
1	D3	LED		LED SMT red	122-6394	Farnell
1	D6	TVS diode	85 V	SMC	SMCJ85A-FDICT-ND	Digi-Key
1	D8	Zener diode		3-pin SOT23	984-4392	Farnell
2	S1, S2	SW-PUSH-SMD		Push-button switch	112-3624	Farnell
1	J1	Connector/power		3-way terminal block	151-786	Farnell
1	J2	Connector/power		3-way terminal block	Do not insert	
1	J3	Connector/power		2-way terminal block	Do not insert	



#### ESD Caution

**ESD (electrostatic discharge) sensitive device.** Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

#### Legal Terms and Conditions

By using the evaluation board discussed herein (together with any tools, components documentation or support materials, the "Evaluation Board"), you are agreeing to be bound by the terms and conditions set forth below ("Agreement") unless you have purchased the Evaluation Board, in which case the Analog Devices Standard Terms and Conditions of Sale shall govern. Do not use the Evaluation Board until you have read and agreed to the Agreement. Your use of the Evaluation Board shall signify your acceptance of the Agreement. This Agreement is made by and between you ("Customer") and Analog Devices, Inc. ("ADI"), with its principal place of business at One Technology Way, Norwood, MA 02062, USA. Subject to the terms and conditions of the Agreement, ADI hereby grants to Customer a free, limited, personal, temporary, non-exclusive, non-sublicensable, non-transferable license to use the Evaluation Board FOR EVALUATION PURPOSES ONLY. Customer understands and agrees that the Evaluation Board is provided for the sole and exclusive purpose referenced above, and agrees not to use the Evaluation Board for any other purpose. Furthermore, the license granted is expressly made subject to the following additional limitations: Customer shall not (i) rent, lease, display, sell, transfer, assign, sublicense, or distribute the Evaluation Board; and (ii) permit any Third Party to access the Evaluation Board. As used herein, the term "Third Party" includes any entity other than ADI, Customer, their employees, affiliates and in-house consultants. The Evaluation Board is NOT sold to Customer; all rights not expressly granted herein, including ownership of the Evaluation Board, are reserved by ADI. CONFIDENTIALITY. This Agreement and the Evaluation Board shall all be considered the confidential and proprietary information of ADI. Customer may not disclose or transfer any portion of the Evaluation Board to any other party for any reason. Upon discontinuation of use of the Evaluation Board or termination of this Agreement, Customer agrees to promptly return the Evaluation Board to ADI. ADDITIONAL RESTRICTIONS. Customer may not disassemble, decompile or reverse engineer chips on the Evaluation Board. Customer shall inform ADI of any occurred damages or any modifications or alterations it makes to the Evaluation Board, including but not limited to soldering or any other activity that affects the material content of the Evaluation Board. Modifications to the Evaluation Board must comply with applicable law, including but not limited to the RoHS Directive. TERMINATION. ADI may terminate this Agreement at any time upon giving written notice to Customer. Customer agrees to return to ADI the Evaluation Board at that time. LIMITATION OF LIABILITY. THE EVALUATION BOARD PROVIDED HEREUNDER IS PROVIDED "AS IS" AND ADI MAKES NO WARRANTIES OR REPRESENTATIONS OF ANY KIND WITH RESPECT TO IT. ADI SPECIFICALLY DISCLAIMS ANY REPRESENTATIONS, ENDORSEMENTS, GUARANTEES, OR WARRANTIES, EXPRESS OR IMPLIED, RELATED TO THE EVALUATION BOARD INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, TITLE, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS. IN NO EVENT WILL ADI AND ITS LICENSORS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES RESULTING FROM CUSTOMER'S POSSESSION OR USE OF THE EVALUATION BOARD, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DELAY COSTS, LABOR COSTS OR LOSS OF GOODWILL. ADI'S TOTAL LIABILITY FROM ANY AND ALL CAUSES SHALL BE LIMITED TO THE AMOUNT OF ONE HUNDRED US DOLLARS (\$100.00). EXPORT. Customer agrees that it will not directly or indirectly export the Evaluation Board to another country, and that it will comply with all applicable United States federal laws and regulations relating to exports. GOVERNING LAW. This Agreement shall be governed by and construed in accordance with the substantive laws of the Commonwealth of Massachusetts (excluding conflict of law rules). Any legal action regarding this Agreement will be heard in the state or federal courts having jurisdiction in Suffolk County, Massachusetts, and Customer hereby submits to the personal jurisdiction and venue of such courts. The United Nations Convention on Contracts for the International Sale of Goods shall not apply to this Agreement and is expressly disclaimed.