

USB Serial Controller for Linear Technology QuikEval Demo Boards

DESCRIPTION

Demonstration circuit 590B is a USB-based controller with generic serial peripheral interface (SPI) and interintegrated circuit (I²C) ports. It is designed to mate with Linear Technology's family of QuikEvalTM demonstration boards. The demo board is fully isolated from the host PC's ground, and in many cases no external power source is required. The evaluation software automatically detects which demo board is connected and loads the appropriate control screen.

BOARD PHOTO

The QuikEval system provides a quick and easy way to evaluate the performance of a wide variety of Linear Technology's products, including ADCs, DACs, SMBus power control products and many others.

Design files for this circuit board are available at http://www.linear.com/demo

\(\mathcal{T}\), LT, LTC, LTM, Linear Technology and the Linear logo are registered trademarks and
QuikEval and PScope are trademarks of Linear Technology Corporation. All other trademarks
are the property of their respective owners.

SELECT ISOLATED SUPPLY VOLTAGE (2.7V, 3.3V, 5.0V, - OR EXTERNAL CONNECT EXTERNAL 10V TO 12V SUPPLY ONLY IF JP5, ISO IS SET TO OFF CONNECT 2.7 TO 5V LOGIC SUPPLY ONLY IF VCCIO IS SET TO EXT (SEE TEXT) (SEE TEXT) **UNDER EVALUATION** DEMO CIRCUIT 5 ISOLATED GROUND DO NOT CONNECT DO NOT CONNECT U23 ISOLATED POWER SUPPLY (SHOWN IN OFF POSITION) R (468) 432-1900

USB CABLE TO HOST PC

Figure 1. DC590B Connection Diagram



QUICK START PROCEDURE

For proper equipment setup, use the following procedure:

- Do NOT plug in DC590B before running the installation program.
- Download the QuikEval installation program from http://www.linear.com/software/
- 3. Run the QuikEval installation program and follow the onscreen instructions.
- NOTE: The QuikEval demo software requires a PC that is running Windows XP (or later), and has an available USB port.
- Connect the demonstration circuit to be evaluated to the DC590B using the supplied 14-conductor ribbon cable. The demo software detects the circuit and starts the appropriate control screen.

Each demonstration board also comes with a Quick Start guide similar to this one. For usage details relevant to a particular circuit, refer to its Quick Start Guide.

To update the software (requires Internet connection):

 Choose Update from the Tools menu. This automatically updates the main program and drivers for individual demo circuits.

To view the DC590B Demo Manual:

Choose Quick Start Guide from the View menu.

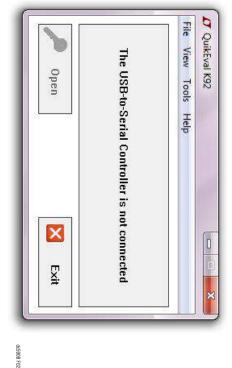


Figure 2. QuikEval Software



CONNECTIONS TO THE DC590B

Figure 1 shows the connections to the DC590B. In most cases, DC590B and the demonstration circuit under evaluation can operate from available USB power, and thus require nothing more than a USB connection to the host PC and a ribbon connecting DC590B to the demo circuit under evaluation. The DC590B offers several other power options, as described in the following text.

Isolated Supply Options

An LT3439 low noise switching power supply provides isolated power to the demonstration circuit under evaluation and to the isolation circuitry. This is adequate in many cases, however an external power supply is recommended to reduce the load on the host computer's USB port or to reduce power supply noise in the circuit under test.

The LT3439 switching power supply is enabled by default but may be disabled by moving jumper JP5 (ISO, to the left) to the OFF position. This allows the isolated side of the board and the demonstration circuit under evaluation to be powered separately. This is recommended when testing precision components such as high resolution ADCs and DACs. After moving JP5 ISO to the OFF position, apply a clean, regulated power supply from 7V to 10V to the V⁺ and AGND turret posts.

Isolated Digital Supply

The signal levels on the digital interface are determined by the VCCA voltage. The onboard regulator can be set to 5V, 3.3V and 2.7V, by installing JP6 in the appropriate position (remove jumper for 2.7V). Selecting EXT shuts the regulator down, and an external supply between 2.7V and 5V must be applied to the VCCA turret post.

The +5V turret is the digital supply for the isolated portion of DC590B. Do not draw current from this point.

LED Indicators

Two LED indicators are provided. The ISO PWR LED is lit when either the onboard switching power supply is running or external power is applied to the isolated side of the board.

The COMMAND LED indicates that a command has been sent to the board by the host PC and is waiting to be executed. The LED may not appear to be blinking in some cases, as the duty cycle may be very short.

Jumper Summary

Some jumpers on the DC590B board are for future use and MUST be left in the default positions.

JUMPER	POSITION	FUNCTION
JP1	PROG	Microcontroller in-circuit programming header. Do NOT install jumper; make no connections
JP2	MODE	Do NOT install jumper; make no connections
JP3	Watchdog Enable	Do NOT install jumper; make no connections
JP4	EE	Jumper MUST be in the EN position
JP5	SW (Right-hand side)	MUST be in the ON Position. See Connections section.
	ISO (Left-hand side)	Controls the isolated supply. See Connections section.
JP6	VCCA Control	See Connections section



TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
The DC590B is plugged in, but the	The most likely cause is improper installation of the USB drivers, which
QuikEval screen still says "USB Serial Controller Not Connected"	causes Windows to recognize DC590B as an "Unknown Device." Open the Windows Control Panel, open "System" and click the "Device"
	\mid Manager" tab. Open the "Other Devices" item and look for USB SERIAL
	CONTROLLER. Select this item and click the remove button. Unplug
	the DC590B, re-install the QuikEval software, and follow the onscreen instructions.
The demo board software loads	Verify that the demo board is properly powered up. This Demo Manual
properly but will not run, or	lists the basic power connections to the DC590B. Some demo boards
displays "Device Not Accessible"	may have additional requirements; refer to the demo board's Quick Start
After connecting the demo board to	Contact Linear Technology Applications Engineering.
DC590B with the supplied 14-pin ribbon cable, QuikEval software still displays "Evaluation Reard is Not	
Connected"	

PARTS UST

dc590bf				
VISHAY, CRCW040216K9FKED	RES., CHIP, 16.9k, 1/16W, 1%, 0402	R38	_	36
AAC, CR05-101JM	RES., CHIP, 100, 1/16W, 5%, 0402	R34, R36, R37, R40	4	35
AAC, CR05-2211FM	RES., CHIP, 2.21k, 1/16W, 1%, 0402	R32	_	34
AAC, CR05-6341FM	RES., CHIP, 6.34k, 1/16W, 1%, 0402	R26	_	33
AAC, CR05-1023FM	RES., CHIP, 102k, 1/16W, 1%, 0402	R10, R66	2	32
AAC, CR05-1402FM	RES., CHIP, 14k, 1/16W, 1%, 0402	R7	_	31
AAC, CR05-152JM	RES., CHIP, 1.5k, 1/16W, 5%, 0402	R5, R15, R16, R18, R19, R22, R25, R51, R52, R56, R58, R59, R62	13	30
AAC, CR05-22R1FM	RES., CHIP, 22.1, 1/16W, 1%, 0402	R4, R6, R14, R17, R23, R24, R29	7	29
AAC, CR05-103JM	RES., CHIP, 10k, 1/16W, 5%, 0402	R3, R8, R9, R21, R27, R28, R30, R31, R33, R35, R39, R43-R48, R63, R68	19	28
AAC, CR05-4750FM	RES., CHIP, 475, 1/16W, 1%, 0402	R2, R11, R12, R13, R20	51	27
AAC, CR05-4992FM	RES., CHIP, 49.9k, 1/16W, 1%, 0402	R1, R49, R57, R64	4	26
VISHAY, WSL0805R1000F	RES., CHIP, 0.1Ω, 1%, 0805	RSENSE	_	25
VISHAY, Si2306DS-T1-E3	MOSFET, N-CH, DS, SOT23	Q4	_	24
VISHAY, 2N7002-T1-E3	XSTOR, N-CH, SOT23	Q2, Q5	2	23
DIODES INC., MMBT3904-7-F	TRANS, NPN, MMBT3904, SOT23	Q1	_	22
LITE ON, LTST-C190KGKT	LED, GND, 0603	LED1-LED5	27	21
MOLEX, 87831-1420	HEADER, 2×7 PIN, 0.079"	J4	_	20
MILL-MAX, 897-43-004-90-000	CON, USB-B, 4 PINS, SINGLE THR. HOLE	J3	<u></u>	19
OPT.	JMP, 2×7, 0.100"	J2	0	18
OPT.	JMP, 2×20, 0.100"	J1	0	17
SAMTEC, 2SN-BK-G	SHUNT, 0.079" CENTER	SHUNTS ON JP4 (1 AND 2), JP5 (1 AND 3, 2 AND 4), JP6 (3 AND 4)	4	16
0РТ.	JMP, 2-PIN, 1 ROW, 0.079"	JP7	0	15
SAMTEC, TMM-103-02-L-S	JMP, 3-PIN, 1 ROW, 0.079"	JP4	_	14
0РТ.	JMP, 3-PIN, 1 ROW, 0.079"	JP3	0	13
SAMTEC, TMM-103-02-L-D	JMP, 2×3, 0.079"	JP1, JP2, JP5, JP6	4	12
MILL-MAX, 2308-2-00-80-00-00-07-0	TESTPOINT, TURRET, 0.064"	E1, E2, E3, E4, E5, E6, E7	7	⇉
DIODES INC., BAT54S-7-F	DIODE, SCHOTTKY, SOT23	D1,D2	2	10
AVX, 04025A470KAT2A	CAP., NPO, 47pF, 50V, 10%, 0402	C43, C44	2	9
AVX, 1206AC222KAT1A	CAP., X7R, 2.2nF, 1000V, 1206	029	_	8
AVX, 04025C331KAT2A	CAP., X7R, 330pF, 100V, 10%, 0402	025	_	7
AVX, 0402YC103KAT2A	CAP., X7R, 0.01µF, 16V, 10%, 0402	C22, C28, C39	ω	6
TDK, C3225X5R0J107M	CAP., X5R, 100μF, 6.3V, 20%, 1210	C20	_	5
TDK, C2012X5R0J106M	CAP., X5R, 10μF, 6.3V, 20%, 0805	C11, C21, C24, C38, C40, C41, C42	7	4
AVX, 04025A101KAT2A	CAP., NPO, 100pF, 50V, 10%, 0402	07	<u></u>	ω
AVX, 04025C222KAT2A	CAP., X7R, 2200pF, 100V, 10%, 0402	C6	<u></u>	2
AVX, 0402ZD104KAT	CAP., X5R, 0.1µF, 10V, 10%, 0402	C1-C5, C8-C10, C12-C19, C23, C26, C27, C30-C37	27	_
MANUFACTURER/PART NUMBER	PART DESCRIPTION	REFERENCE	QTY	ITEM



PARTS LIST

ITEM 37	% VTD	REFERENCE R41, R42, R50, R53, R54,	PART DESCRIPTION RES., CHIP, 4.99k, 1/16W, 1%, 0402
38	_	R65	RES., CHIP, 26.7k, 1/16W, 1%, 0402
39	_	R67	RES., CHIP, 41.2k, 1/16W, 1%, 0402
40	_	R69	RES., CHIP, 0, 1/8W, 1206
41	_	SW1	SW, LIGHT TOUCH, EVQPPDA25
42	_	П	XFMR, PA0510, TRANS-PA0510
43	_	U1	I.C., PIC16LF877A-I/PT, QFP44
44	1	U2	I.C., LTC1799CS5#PBF, TS0T23-5
45	1	N3	I.C., LTC1726EMS8-2.5#PBF, MS8
46	2	U6, U4	I.C., NC7SP17P5X, SC70-5
47	1	J5	I.C., 74HC74PW, TSS0P14
48	_	U7	I.C., FT245BL, LQFP32
49	_	N8	I.C., 93LC46BT-I/OT, SOT23-6
50	_	U9	I.C., LTC6905CS5-96#TRPBF, TS0T23-5
51	1	U10	I.C., LT1761ES5-3.3#TRPBF, S0T23-5
52	1	U11	I.C., LT3439EFE#PBF, TSS0P16FE
53	_	U12	I.C., LTC4210-1CS6#PBF, TS0T23-6
54	2	U13, U17	I.C., 74VHC125MTC, TSS0P14
55	1	U14	I.C., OPTO-COUPLER, HCPL-092J-000E, S016-NB
56	2	U15, U20	I.C., 74VHC4052MTC, TSS0P16
57	2	U23, U16	I.C., OPTO-COUPLER, MOCD207M, S08
58	1	U18	I.C., LTC4302CMS-2#PBF, MS10
59	_	U19	I.C., LT1719CS6#TRPBF, S0T23-6
60	_	U21	I.C., LT1761ES5-5#TRPBF, S0T23-5
61	1	U22	I.C., LT1761ES5-SD#PBF, S0T23-5
62	0	VR1	RPOT, 10k, 1 TURN, RPOT-3313J
63	4	MH1-MH4	STAND-OFF, NYLON (SNAP-ON), 0.25" TALL

SCHEMATIC DIAGRAM

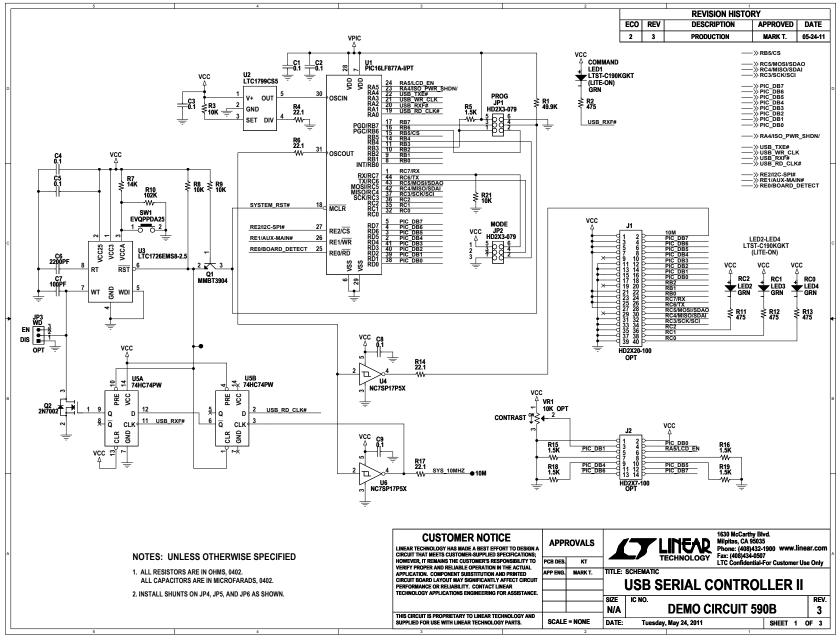


Figure 3. DC590B USB Serial Controller

SCHEMATIC DIAGRAM

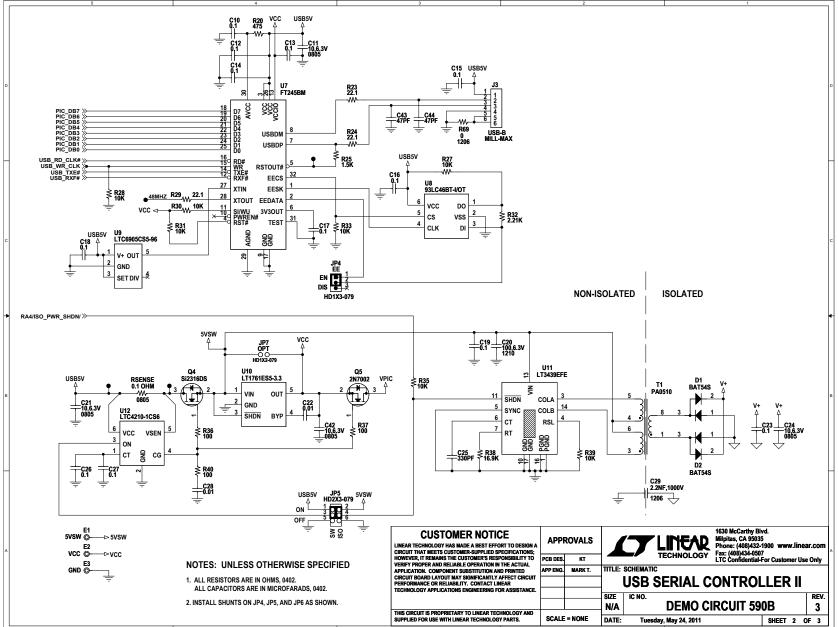


Figure 4. DC590B USB Serial Controller

SCHEMATIC DIAGRAM

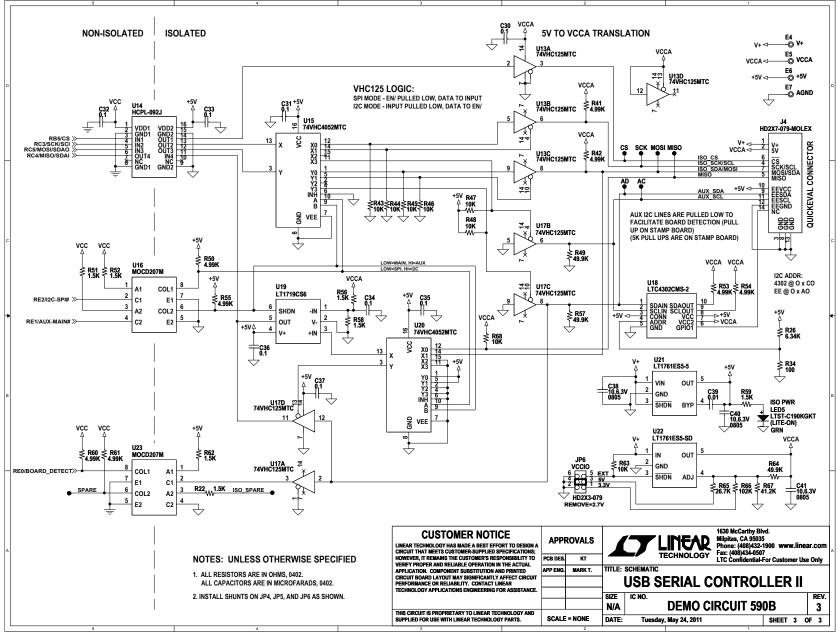


Figure 5. DC590B USB Serial Controller

DEMONSTRATION BOARD IMPORTANT NOTICE

Linear Technology Corporation (LTC) provides the enclosed product(s) under the following **AS IS** conditions:

This demonstration board (DEMO BOARD) kit being sold or provided by Linear Technology is intended for use for **ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY** and is not provided by LTC for commercial use. As such, the DEMO BOARD herein may not be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including but not limited to product safety measures typically found in finished commercial goods. As a prototype, this product does not fall within the scope of the European Union directive on electromagnetic compatibility and therefore may or may not meet the technical requirements of the directive, or other regulations.

If this evaluation kit does not meet the specifications recited in the DEMO BOARD manual the kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY THE SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THIS INDEMNITY, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user releases LTC from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge. Also be aware that the products herein may not be regulatory compliant or agency certified (FCC, UL, CE, etc.).

No License is granted under any patent right or other intellectual property whatsoever. LTC assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or any other intellectual property rights of any kind.

LTC currently services a variety of customers for products around the world, and therefore this transaction **is not exclusive**

Please read the DEMO BOARD manual prior to handling the product. Persons handling this product must have electronics observe good laboratory practice standards. **Common sense is encouraged**. training and

This notice contains important safety information about temperatures and voltages. For further safety concerns, please contact a LTC applica-

Mailing Address:

Linear Technology 1630 McCarthy Blvd. Milpitas, CA 95035

Copyright © 2004, Linear Technology Corporation

dc590bf