



PARTS LIST

EDP. NO.	ITEM SIZE	ENG. NO.	DESCRIPTION	REQ. Q.
11-40-4896	1	8381-5	TERMINATOR BASE & TRACK	1
11-40-4897	2	8381-6	WIRE STOP	1
11-40-4898	2	8381-7	NEEDLE DRIVER - CONDUCTOR PUNCH	1
11-40-4899	4	8381-8	SPACER	1
11-40-4900	5	8381-9	REAR COVER	1
11-40-4069	6	8382-103	PIVOT PIN	1
11-40-4135	7	8315-6	STOP FINGER	1
11-17-0109	8	8315-9	TERMINAL DRAG SPRING	1
11-40-4087	9	8301-12	TERMINAL DRAG SPRING	1
11-24-1067	10	4996-4	CUTOFF PLUNGER SPRING	1
11-40-4134	11	8315-5	PLUNGER STRIKER	1
	12		1/8" X 1/8" LG. TUBULAR RIVET	1
	13		#5-40 X 1/2 LG. F.H.C.S.	1
	14		#6-32 X 1/4 LG. B.H.C.S.	1
	15		#8-32 X 3/8 LG. B.H.C.S.	1
	16		#8-32 X 1/2 LG. B.H.C.S.	1
	17		#8-32 X 3/4 LG. S.H.C.S.	1
	18		#10-32 X 5/4 LG. S.H.C.S.	1
	19		#10-32 X 1 1/4 LG. S.H.C.S.	1

PERISHABLE TOOLING

11-40-4857	20	8375-1	INSULATION PUNCH	1
11-40-4859	21	8375-3	INSULATION ANVIL	1
11-40-4892	22	8381-1	CONDUCTOR PUNCH	1
11-40-4893	23	8381-2	CONDUCTOR ANVIL	1
11-40-4894	24	8381-3	CUTOFF PLUNGER	1
11-40-4895	25	8381-4	TERMINAL CUTOFF BLADE	1
11-40-3187		K8381-A	TOOL KIT (ALL ABOVE ITEMS)	1

FEED FINGER SUB-ASSEMBLY

11-40-0123	26	TH40-24	FEED FINGER SHAFT	1
11-40-0125	27	TH40-26	FEED FINGER SPRING	1
11-40-4810	28	8513-3	FEED FINGER INSERT	1
11-40-4916	29	8513-4	FEED FINGER INSERT	1
	30		#5-40 X 1/4 LG. SOCCO-CAP SCA.	1

FEED FINGER SUB-ASSEMBLY

11-40-0123	26	TH40-24	FEED FINGER SHAFT	1
11-40-0125	27	TH40-26	FEED FINGER SPRING	1
11-40-4810	28	8513-3	FEED FINGER INSERT	1
11-40-4916	29	8513-4	FEED FINGER INSERT	1
	30		#5-40 X 1/4 LG. SOCCO-CAP SCA.	1

TERMINATOR ASSEMBLY FOR
ETC # P2-4152 TERMINAL 12-14 AWG.
MOLEX INCORPORATED
11-40-2185
78381-A