# FS-1406L-S SHOCK ABSORBER - ADJUSTABLE





## **SPECIFICATIONS**

| Model       | Stroke<br>mm | Max Energy<br>Absorption<br>J(kgf·m) | Max Equiv.<br>Mass<br>kg(kgf) | Range of<br>Impact Rate<br>m/s | Max<br>Drag<br>N(kgf) |
|-------------|--------------|--------------------------------------|-------------------------------|--------------------------------|-----------------------|
| FS-1406L -S | 6            | 3.5(0.36)                            | 80(80)                        | 0.3~1                          | 2,000(204)            |

## **COMMON SPECIFICATIONS**

| Max Cycle<br>Rate<br>cycle/min | Max Energy<br>Absorption per min.<br>J/min(kgf·m/min) | Extension<br>Force<br>N(kgf) | Operating<br>Temp. C° | Mass<br>g |
|--------------------------------|---|------------------------------|-----------------------|-----------|
| 45                             | 100(10.2)   | 20(2.0)<br>or lower          | -5~70                 | 49        |

## **PRECAUTIONS FOR USE**

- Do not use this product without carefully reading the attached owner's manual.
- Ensure that an external stopper is also used.
- Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- Do not use this product in a vacuum or a location where it may come in contact with oil.
- Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: ±2.5°)
- Do not turn the oil inlet screw located at the bottom of the main unit.

### **ADJUSTMENT METHOD**

- To adjust, turn the adjustment knob located at the bottom of the main unit.
- Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.

Standard nuts are sold separately as well - M16 nut