

## **Features and Benefits**

- ☐ Conforms with ISO/IEC 18092 (NFC)
- ☐ Conforms with ISO/IEC 14443A and B,
- □ Conforms with ISO/IEC 15693
- Conforms with ISO/IEC 18000-3 mode 1
- ☐ High speed communication (up to 848kbit/s)
- Standard SPI/UART interfaces
- Built-in Field and TAG detectors

## **Application Examples**

- NFC enabled car for access and start
- Combo NFC and Wireless Power Charging solutions
- □ NFC applications in Industrial area (e.g. White goods, security ...)

## **Ordering Information**

Part Code	Temperature Code	Package Code	Option Code	Packing Form Code
MLX90132	R (-40°C to 105°C)	LQ (Lead free QFN 5x5 32 leads)	AEA-000	RE
MLX90132	R (-40°C to 105°C)	LQ (Lead free QFN 5x5 32 leads)	AEA-000	TU
MLX90132	S (-20°C to 85°C)	LQ (Lead free QFN 5x5 32 leads)	AEA-000	RE
MLX90132	S (-20°C to 85°C)	LQ (Lead free QFN 5x5 32 leads)	AEA-000	TU

## **Functional Diagram**

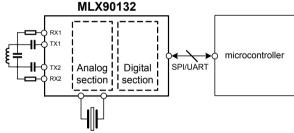


Figure 1: MLX90132 functional diagram

## **Description**

The MLX90132 is a 13.56MHz, fully integrated, multi-protocol RFID/NFC transceiver IC. It has been designed to handle sub-carrier frequencies from 106 to 848 kHz and baud rates up to 848kbit/s.

The dual driver architecture of the MLX90132 requires minimal external support components and allows the transmitter to provide up to 300milliwatts RF power to an appropriate antenna load. This delivered power is suitable for most short to mid-range applications.

The MLX90132 embeds tag emulation functionality to support NFC Peer to Peer passive communication mode. Enhanced tag and field detection capabilities provide significant power consumption reduction in RFID reader configuration and in NFC mode.

The digital section of the MLX90132 handles the low protocol layers from API to physical layer using advanced bit and frame encoding/decoding functions. It contains a digital demodulator based on sub-carrier detection and a programmable bit/symbol encoder/decoder. It also encodes and decodes the start and stop bits, parity bits, extra guard time (EGT), start and end of frame (SOF/EOF) and CRC.

Its 528 byte buffer handles an entire RFID frame. The SPI/UART communication ports guarantee easy interface with the majority of microcontrollers.






## **Table of Contents**

1 Pin and signal descriptions	3
2 General Description	4
3 Power Management and Operating modes	6
4 Start-up sequence	
5 Communication Interface & protocol	9
5.1 UART	
5.2 SPI	
5.2.1 Polling mode	
5.2.2 IRQ mode	
6 Commands	
6.1 Command format	
6.2 List of commands	
6.3 IDN command (0x01)	
6.4 Protocol select command (0x02)	
6.5 PollField command (0x03)	
6.6 SendRecv command (0x04)	
6.6.1 Support of extended frames	
6.6.2 List of Error codes	
6.7 Listen command (0x05)	
6.8 Send command (0x06)	
6.9 Idle command (0x07)	
6.10 BaudRate command (0x0A)	
6.11 SubFreqRes command (0x0B)	
6.12 AcFilter command (0x0D)	29
7 Modifying internal settings for optimal performances	
7.1.1 Example: How to modify the ARC_B register	
7.1.2 Example how to read back WUFlags content	
8 Tag Detector	
8.1 Operating Principle	
8.2 Calibration procedure	
9 Field Detector	
10 Electromagnetic support (EMD)	
11 Application Information	37
11.1 External Antenna network	
11.2 Application schematic	
12 Electrical Specifications	
12.1 Absolute Maximum Ratings	
12.2 DC Characteristics	
12.3 Power Consumption Characteristics	
12.4 RF Characteristics	
12.5 SPI Characteristics	
12.6 Oscillator Characteristics	
14 ESD Precautions	
15 Standard information regarding manufacturability of Melexis products with different soldering processes	
16 Package Information	
17 Disclaimer	
18 Contact Information	
10 Outlast Information	→→



# 1 Pin and signal descriptions

The device is packaged in a 32 pin lead free QFN package.

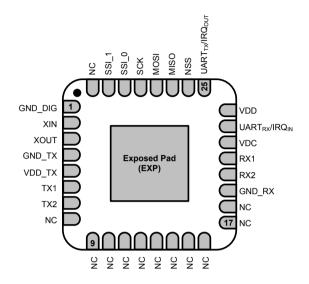

Pin	Symbol	Pin Type	Description
1	GND_dig	Supply	Ground (Digital)
2	XIN	Analog	Xtal oscillator input
3	XOUT	Analog	Xtal oscillator output
4	GND_TX	Supply	Ground (Drivers)
5	VDD_TX	Supply	Drivers Power Supply
6	TX1	Analog	Driver output_1
7	TX2	Analog	Driver output_2
19	GND_RX	Supply	Ground (analog)
20	RX2	Analog	Receiver input_2
21	RX1	Analog	Receiver input_1
22	VDC	Analog	Melexis Reserved
23	UART_RX / IRQ_in	Digital I	UART Receive pin/Interrupt input
24	VDD	Supply	Main Power Supply
25	UART_TX / IRQ_out	Digital O	UART Transmit pin/Interrupt output
26	NSS	Digital I	SPI Slave Select
27	MISO	Digital O	SPI data output
28	MOSI	Digital I	SPI data input
29	SCK	Digital I	SPI clock
30	SSI_0	Digital I	Select serial communication interface
31	SSI_1	Digital I	Must be set to GND
8-18, 32	NC		Not connected
EXP		Exposed Pad	Must be set to GND

Table 1: Pin definitions and descriptions



## 2 General Description

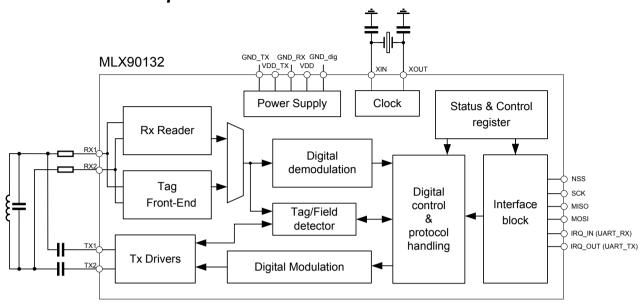


Figure 2: MLX90132 simplified block diagram

#### **Power Supply**

The MLX90132 is supplied with the 2 pins  $V_{DD}$  (supply of the digital and analog blocks) and  $V_{DD\_TX}$  (direct supply of the TX Drivers), each requiring a nominal stable external power supply from 2.7 to 5.5 volt. Both pins  $V_{DD}$  and  $V_{DD\_TX}$  are independent and could be connected together to the same power supply level or to different ones. The current drain depends on the antenna impedance and on the output matching network configuration.

Special attention should be paid to the filtering of  $V_{DD\_TX}$ . Typically, a ferrite and a decoupling capacitor will be added close to the MLX90132 device.

#### **TX Drivers**

The transmission stage of the MLX90132 is composed of two differential outputs  $T_{X1}$  and  $T_{X2}$ , providing square waves with a frequency of  $f_{HFO}$  (typ. 13.56MHz), an amplitude of  $V_{DD\_TX}$  and with a phase shift of 180 degrees. Each output is featuring an equivalent serial resistance  $R_{ON}$  which has to be taken into account when calculating the antenna matching network.

The transmission stage of the MLX90132 could be modulated using Amplitude Shift Keying (ASK) with a modulation index between 10% and 100%. The modulation index is automatically set with the selection of the protocol of communication, using the command <a href="Protocol select command (0x02">Protocol select command (0x02)</a>. The modulation index could be fine adjusted by following the procedure described in the section <a href="Modifying internal settings for optimal performances">Modifying internal settings for optimal performances</a>.

In TAG emulation mode, the two outputs TX1 and TX2 are internally connected together, insuring a proper parallel resonance of the antenna. In this configuration, the two serial capacitors CS are put in parallel to the parallel capacitor CP. This operation is done automatically when selecting TAG emulation modes and should also be taken into account when defining an EMI filter for EMC considerations.



### 13.56MHz RFID / NFC Transceiver

#### RX Reader

The reception stage of the MLX90132 is used in Reader mode to receive information from a transponder or an NFC/RFID device. This stage performs the analog demodulation using two internal diode detectors on RX1 and RX2. The information is then filtered with the appropriate bandwidth and finally digitized for further processing. The receiver inputs RX1 and RX2 are typically connected to the resonance point of the antenna, through two external attenuation resistors or capacitors to avoid saturation of the internal detector set to  $V_{RXMAX}$ . The complete receiver stage is automatically configured according to the protocol in use (Protocol select command (0x02)).

#### Tag Front-end

This block is enabled in Tag emulation mode and performs all operations related to Tag emulation functionality with low power consumption. The modulated information coming from an NFC/RFID device is demodulated through the two built-in detectors connected on RX1 and RX2, filtered with the appropriate bandwidth and finally digitized for further processing. The full settings of the Tag front-end stage are automatically set with the selected protocol using the <u>Protocol select command (0x02)</u>. The load modulation used to send back the information in TAG emulation mode is also performed by the Tag front-end block. In this case, an internal resistor is connected between the two inputs RX1 and RX2, modifying the antenna load.

#### Digital control & protocol handling

This block is responsible for the control of the device, as well as the frame coding and decoding parts of the protocols supported by the MLX90132. The MLX90132 exchanges with the application microcontroller, pure payload information after adding/removing frame related information such as SOF, EOF, EGT ... It can also be configured to calculate the CRC for each communication protocol.

#### Interface Block

The MLX90132 is addressed through SPI or UART (Reader mode only) interfaces with a specific and simple set of commands. The built-in 528 byte buffer allows minimum interaction with the application microcontroller. This reduces the burden of the microcontroller whose resources can be fully dedicated for the application.

#### Tag/Field Detector

This block manages the enhanced Tag and Field detection capabilities. It generates a detection signal that is available for the application microcontroller through the interrupt pin IRQ\_OUT. It allows the use of the MLX90132 with low power consumption constraints.

#### Reference clock and internal oscillator

The built-in reference oscillator works with a reference crystal  $f_{XTAL}$  of 27.12MHz from which the internal nominal system clock frequency  $f_{HFO}$  of 13.56 MHz is derived. An internal low frequency RC oscillator frequency  $f_{LFO}$  of 32 kHz is used for low-power operating modes, for example to control the internal timings.

In TAG emulation mode the clock is recovered from the HF field, through the built-in Clock Recovery block. In case of field loss (e.g. during Reader modulation), an internal backup clock of ~10MHz is used instead.

#### Power management

The MLX90132 features 2 modes of operation (Active and Idle), subdivided in 6 different states of operation:

- Hibernate, the device typically consumes 1µA
- Sleep, the device typically consumes 20µA
- **TAG detection**, the device typically consumes 45µA.
- TAG emulation, the device typically consumes 2.5mA.
- Ready (RF field OFF), the device typically consumes 2.5mA.
- Reader, the consumption depends on the antenna load and on the operating conditions

## 13.56MHz RFID / NFC Transceiver

## 3 Power Management and Operating modes

The MLX90132 features 2 main operating modes: Idle and Active, with 6 different states of operation, as described on the table below:

Mode	State	Description
	Hibernate	Lowest power consumption, the MLX90132 wakes-up with low level pulse on IRQ_IN pin
		Low Power consumption: Wake-up source to exit from this mode is configurable:
Idle	Sleep	- Timer - IRQ_in pin (low-level) - NSS pin (low-level) - Field detector
		Low power consumption: Tag detection feature, wake up source is configurable
	Tag detection	- Timer - IRQ_in pin (low level) - NSS pin (low level) - Tag detector (mandatory)
	Ready	High frequency oscillator (HFO) is running. In this mode the MLX90132 is in reader mode with its HF field turned OFF. The MLX90132 waits for a command from the external application, through the selected serial interface SPI or UART
Active	Reader	High frequency oscillator (HFO) is running. In this mode the MLX90132 is selected in reader mode with its HF field set ON. The MLX90132 is able to receive and execute commands through the selected serial interface SPI or UART and is able to communicate with transponders and NFC devices, according to the selected protocol. In Reader mode, the command "SendRecv" is used to send and receive information from an NFC/RFID transponder or devices
	TAG Emulation	High frequency oscillator (HFO) is running. In this mode the MLX90132 is selected in Tag emulation mode with its HF field set OFF. The MLX90132 is able to receive and execute commands through the serial interface SPI and is able to communicate with an NFC/RFID reader, according to the selected protocol. In TAG emulation mode, the commands "Listen" and "Send" will be used to respectively receive/send the information from/to an NFC/RFID reader. The information is returned to the NFC/RFID reader by using load modulation method

Table 2: MLX90132 Operating modes & States

Entering in Hibernate, Sleep and Tag detector states is done with the <u>Idle command (0x07)</u>. As soon as one of these states is activated, an appropriate source signal is required to wake-up the device (see description above). The wake-up time from Sleep or Hibernate to Ready state is typically of 2ms. This time is mainly due to settling time of XTAL oscillator (HFO).



## 13.56MHz RFID / NFC Transceiver

In Reader state, the MLX90132 is able to communicate with Transponder (TAG). In TAG emulation state, the MLX90132 is able to communicate with a reader by emulating a Transponder. Both states could be entered using the <u>Protocol select command (0x02)</u>. In Ready state, the MLX90132 is fully enabled but waiting for the required command to enter either the Reader or the TAG Emulation state, without settling time penalty.

Please note the IDLE mode could be entered directly from Reader/Tag emulation state by sending the <u>Idle</u> command (0x07), no need to return to READY state to access the IDLE mode.

The command <u>Protocol select command (0x02)</u> with the option field OFF is used to return from Reader/Tag emulation state to Ready state.

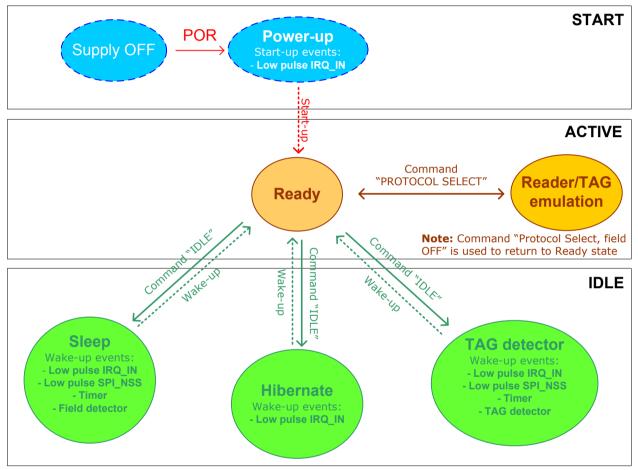


Figure 3: MLX90132 Power modes transitions



## 4 Start-up sequence

Once powered-up, the MLX90132 waits for a low pulse on the pin IRQ\_IN (greater than 10µs) before automatically selecting the external interface (SPI or UART) and entering Ready state after a delay of approximately 2ms.

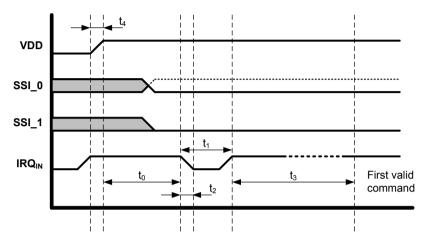


Figure 4: MLX90132 operating states transition

Figure 4 above shows the power-up sequence for a MLX90132 device where:

•	t₀is the initial wake-up delay¹)	100µs (minimum)
•	t₁ is the minimum pulse width in IRQ <sub>IN</sub> pin <sup>1)</sup>	10µs (minimum)
•	t₂ is the delay for the serial interface selection <sup>1)</sup>	250ns (typical)
•	t₃ is the delay before the MLX90132 could accept commands <sup>1)</sup>	2ms (minimum)
•	t <sub>4</sub> is the <sub>VDD</sub> ramp-up time <sup>1)</sup>	10ms (maximum)

1) Value specified by design

The following configuration at power on reset (POR) is required to select the communication interface to be used.

Interface/Pin	SSI_1	SSI_0
SPI	0	1
UART	0	0

Table 3: Selection of the serial communication interface

#### Notes:

- The Serial Interface is selected after the following falling edge of the pin IRQ\_IN when leaving from POR
  or Hibernate states.
- When the MLX90132 leaves the IDLE state following a UART\_RX/IRQ<sub>IN</sub> low level pulse, this pulse is NOT interpreted as the UART start bit character.



## 5 Communication Interface & protocol

Whatever the communication protocol selected (SPI or UART), the principle of communication is always the same: The application sends a command to the MLX90132 and waits for the appropriate answer. A simple and specific set of commands allows the configuration and control of the MLX90132.

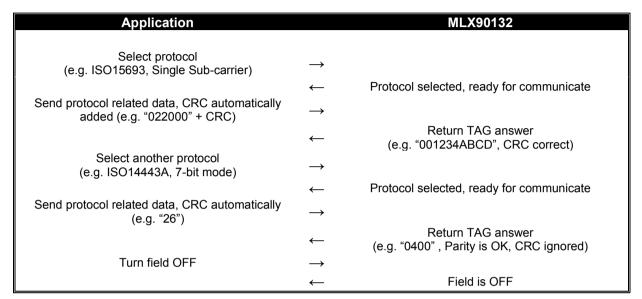


Figure 5: Example of communication with MLX90132

In order to start RFID communication, the application has to choose the protocol and specify some parameters, using the command <u>Protocol select command (0x02)</u>. When the protocol is selected, the application sends data and parses response until the next protocol is selected or a specific parameter is changed.

### **5.1 UART**

The default baud rate is 57.6kbps and the maximum allowed baud rate is 2 Mbps.

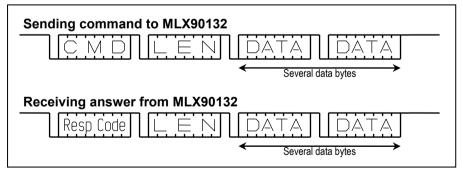


Figure 6: UART communication

#### Notes:

- Option "clock recovery" ("ClkRec" in <u>Table 11</u>) should not be used when UART interface is selected. Therefore the UART mode is not recommended for TAG emulation mode
- Length of data field can be zero, in this case no data is sent.

Warning: The UART communication is least significant bit (LSB) first.



#### 5.2 SPI

#### 5.2.1 Polling mode

In order to send commands and receive answers, the application software has to pass 3 stages:

- 1. Send the command to the MLX90132
- 2. Poll the MLX90132 until it is ready to transmit the response.
- 3. Read the response.

The application software should never read the MLX90132 without being sure that the MLX90132 is ready to send its response.

The maximum allowed communication speed is 2Mbps. Please note that the communication speed is limited to 1.5Mbps in case of TAG emulation mode with "clock recovery" option selected ("ClkRec" in <u>Table 11</u>, TAG/Card emulation mode).

A Control byte is used to specify the communication type and direction (see pictures below):

- 00: Send command to the MLX90132
- 11: Poll the MLX90132
- 10: Read data from the MLX90132
- 01: Reset the MLX90132

The SPI\_NSS line is used to select a device on the common SPI bus; the SPI\_NSS active level is LOW.

When the SPI\_NSS line is inactive, all data sent by the application will be ignored and the SPI\_MISO line will be set in high impedance state.

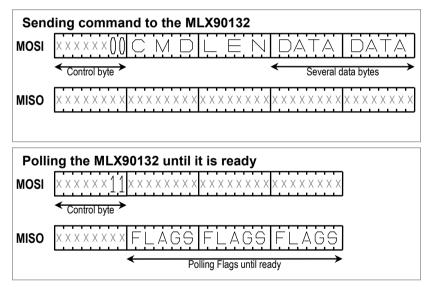


Figure 7: SPI communication, sending command & polling method

The following table shows the meaning of the flags returned by the MLX90132 device.

Bit	Description
[4:7]	RFU, will be set to "0000"
3	Data can be read from MLX90132 when set
2	Data can be sent to MLX90132 when set
[1:0]	MLX Reserved

**Table 4: Interpretation of SPI flags** 



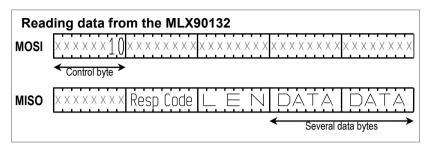


Figure 8: SPI communication, reading data from the MLX90132

Data must be sampled by the rising edge of the SPI\_SCK signal.

'Sending', 'Polling' and 'Reading' commands must be separated by a high level of the SPI\_NSS line.

For example, when the application needs to wait for data from the MLX90132, it sets to low the pin SPI\_NSS and issues a 'Polling' command. By keeping the SPI\_NSS "low", the application can continuously read the Flags waiting for the bit indicating that the MLX90132 is ready (the flags will be automatically updated, no need to send several polling commands). Then, the application has to set high the pin SPI\_NSS to finish the polling sequence. The application puts low again the pin SPI\_NSS to issue a 'Reading' command to read data. When all data is read, the application sets high the pin SPI\_NSS to terminate the communication.

The MLX90132 can issue as many 'Polling' commands as necessary.

For example, the application sets low the pin SPI\_NSS to issue a 'Polling' commands. If the MLX90132 is not ready, the application can put high the pin SPI\_NSS and continue its operations. Then, as soon as the application is ready again, it sets low the pin SPI\_NSS to issue a 'Polling' commands, to see if the MLX90132 is ready. These operations are not time critical which makes it easy to insert in the application flow.



Figure 9: SPI communication reset the MLX90132

Control byte 0x01 resets the MLX90132 and places the device in Power-up state. A wake-up sequence is then necessary to start again the communication with the MLX90132.

Warning: The SPI communication is most significant bit (MSB) first.

#### 5.2.2 IRQ mode

When the MLX90132 is configured to use the SPI serial interface, the pin IRQ\_OUT is used to give additional information to the application. When the MLX90132 is ready to send back a reply it sends an Interrupt request by setting a low level on pin IRQ\_OUT, which remains low until the application reads the data. The application can use the IRQ mode to skip the polling stage.



## 13.56MHz RFID / NFC Transceiver

### 6 Commands

#### 6.1 Command format

The structure of the command sent by the application is almost identical to the structure of the answer from the MLX90132, as shown below:

Command: [CMD] + [LEN] + [DATA]

[RESPCODE] + [LEN] + [DATA] Answer:

[CMD] = Command (1byte)

[LEN] = Length including only the field DATA, zero if no data sent (1byte) [RESPCODE] = Response code, depends on the command (1byte)

[DATA] = Data information, depends on the command (0 to 528bytes)

#### 6.2 List of commands

Code	Command	Description	
0x01	IDN	Requests short information about device and its FW version	
0x02	Protocol Select	Selects communication protocol and specifies some protocol-related parameters	
0x03	Poll field	Returns the current value of the field detector flag ("FieldDet")	
0x04	SendRecv	Sends data using previously selected protocol and receives the response of the TAG.	
0x05	Listen	Listens to the data using previously selected protocol.	
0x06	Send	Sends data using previously selected protocol.	
0x07	ldle	Switches device into Idle/Sleep/Hibernate mode and specifies which condition is used to exit from these modes	
0x0A	BaudRate	Sets UART baud rate	
0x0B	SubFreqRes	Gets the last value of sub-carrier frequency received during ISO/IEC18092 and NFC Tag Type 3 (Felica) communications	
0x0D	AC-Filter	Activates/deactivates anti-collision filter	
0x55	Echo	MLX90132 replies with an Echo of 0x55 to this command. In this specific case, the command format is not respected as the data is only 0x55	
Otl	her codes	MELEXIS reserved	

Table 5: MLX90132 list of commands

## 13.56MHz RFID / NFC Transceiver

### 6.3 IDN command (0x01)

The IDN command gives information about the MLX90132 and the internal firmware version

IDN <b>0x01</b>	IDN <b>0x01</b>					
Direction	Data	Comment	Example			
MCU – device	01	Command code	0100			
IVICO – device	00	Length of data	0100			
	00	Result code				
	<len></len>	Length of data				
	<device id=""></device>	Data in ASCII format	000F4E4643204653324A41535434002ACE:			
device - MCU	<rom crc=""></rom>	CRC calculated for ROM content	4E4643204653324A4153543400= Device ID 2ACE= CRC of internal ROM			

Table 6: "IDN" command description

**Note:** It takes about 6ms to calculate the CRC for the entire ROM. Application must allow sufficient time before waiting for an answer for this command.

### 6.4 Protocol select command (0x02)

The "Protocol Select" command automatically configures the internal registers of the MLX90132 for the best communication performances. It also prepares the MLX90132 by automatically setting the HF field ON (except in TAG emulation state). The field will be automatically switched OFF either by sending a "Protocol select" command with "Field OFF", or when the MLX90132 returns to "Idle" mode using the "Idle" command or by selecting TAG emulation.

Protocol Select	Protocol Select 0x02						
Direction	Data	Comment	Example				
	02	Command code					
	<len></len>	Length of data					
MCU – device	<protocol></protocol>	Protocol codes (Reader) 00 = Field OFF 01 = ISO/IEC15693 02 = ISO/IEC14443-A / NFC-A 03 = ISO/IEC14443-B / NFC-B 04 = ISO/IEC18092 (212,424Kbps) / NFC-F  Protocol codes (TAG) 12 = ISO/IEC14443-A/ NFC-A 13 = ISO/IEC14443-B / NFC-B 14 = ISO/IEC18092 (212,424kbps)/ NFC-F	Refer to examples in table: <u>Table 8,</u> below				
	<parameters></parameters>	Depends on protocol selected, refer to <u>Table 8</u>					
Device - MCU	00	Result code	0000-Protocol successfully selected				
DOVIGE - WIOO	00	Length of data	1 Total of Cadadasiany Sciented				
Device - MCU	82	Error code	8200- Invalid command length				
201.00 WOO	00	Length of data	5200 iii ana commana longii				
Device - MCU	83	Error code	8300 - Invalid protocol				
DOVIGE - WOO	00	Length of data	Traile protocol				

Table 7: "Protocol select" command description

Parameter list f	Parameter list for different protocols (Reader)						
Protocol	Code	Param	Parameters		Examples of commands		
(Reader)	Code	Byte	Bit	Function	Examples of commands		
Field OFF	00	0	7:0	RFU, set to '0'	02020000		
			7:6 5:4	RFU, set to '0'  00 – 26kbps  01 – 52kbps  10 – 6kbps	02020101 - Select ISO/IEC15693, SSC,		
ISO15693	01	0	3	11 – RFU 0 – Respect delay 312us 1 – Wait for SOF	26kbps, modulation of 100%, CRC automatically added		
			2	0 - 100% modulation 1 - 10% modulation	02020107 - Select ISO/IEC15693, DSC, 26kbps, modulation 10%, CRC automatically		
			1	0 – Single Sub-Carrier (SSC) 1 – Dual Sub-Carrier (DSC) 0 – No CRC added	added		
			0	1 – CRC auto. Added			
			7:6	Transmission data rate 00 – 106kbps 01 – 212kbps 10 – 424kbps 11 – 847kbps	02020200 – ISO/IEC14443A, 106kbps transmission & reception, Frame Delay Time (FDT) of 86/90μs  Frame Delay Time (FDT) definition: These 3 bytes are optional. When PP, MM and DD are not specified or set to 0x00, the default value corresponds to FDT of 86/90us, used during anti-collision process. Otherwise, the following formula applies: $FDT = \frac{2^{PP} \cdot (MM+1) \cdot (DD+128) \cdot 32}{13.56} [μs]$		
		0	5:4	Reception data rate 00 – 106Kbps 01 – 212Kbps 10 – 424Kbps 11 – 847Kbps			
			3:0	RFU, set to '0'			
ISO14443A NFC-A	02	1	7:0	PP (max 14, i.e. 0x0E)			
		2	7:0	MM (max 255, i.e. 0xFF)			
		3	7:0	DD (max 127, i.e. 0x7F)	If PP is defined, MM must be also set, but DD still remains optional		
		4	7:0	N <sub>EMD</sub>	Related to EMD algorithm, please refer to chapter Electromagnetic support (EMD)		
		5	7:0	N <sub>EMDRES</sub>	Related to EMD algorithm, please refer to chapter <u>Electromagnetic support (EMD)</u>		

Table 8: Parameter values for "Protocol select" command (Reader)

Parameter list f	Parameter list for different protocols ( <b>Reader</b> )						
Protocol	Code	Parameters			Examples of commands		
(Reader)	3000	Byte	Bit	Function	Examples of communities		
			7:6	Transmission data rate 00 – 106kbps 01 – 212kbps 10 – 424kbps 11 – 847kbps	<b>02020301</b> – ISO/IEC14443B, 106kbps		
		0	5:4	Reception data rate 00 – 106kbps 01 – 212kbps 10 – 424kbps 11 – 847kbps	transmission & reception, Frame Waiting Time (FWT) of 302µs, CRC automatically added  020403010400 — ISO/IEC14443B, 106kbps transmission & reception, Frame Waiting Time (FWT) of 4.8ms, CRC automatically added		
			3:1	RFU, set to '0'			
			0	0 – No CRC added 1 – CRC auto. added			
ISO14443B NFC-B	03	1	7:0	PP (max 14, i.e. 0x0E)	Frame Waiting Time (FWT) definition: These 2 bytes are optional. The default value corresponds to a FWT of 4949ms, answer to ATTRIB.		
		2	7:0	MM (max 255, i.e. 0xFF)	FWT = $\frac{2^{PP} \cdot (MM+1) \cdot (DD+128) \cdot 32}{13.56} [\mu s]$		
		3	7:0	DD (max 127, i.e. 0x7F)	If PP is defined, MM must be also set, but DD still remains optional		
		5:4	15:0	тттт	Timing: TR0 = TTTT/13.56 us Coded with LSB first, default value 1023 = 0x3FF		
		6	7:0	YY	Timing: Min_TR1 = 128 * YY / 13.56us. Default value: 0		
		7	7:0	ZZ	Timing: Max_TR1 = 128 * ZZ / 13.56us. Default value:26 , i.e. 0x1A		
		8	7:0	N <sub>EMD</sub>	Related to EMD algorithm, please refer to chapter <u>Electromagnetic support (EMD)</u>		
		9	7:0	N <sub>EMDRES</sub>	Related to EMD algorithm, please refer to chapter Electromagnetic support (EMD)		

Table 9: Parameter values for "Protocol select" command (Reader)

Parameter list f	Parameter list for different protocols (Reader)									
Protocol			eters		Examples of commands					
(Reader)	Code	Byte	Bit	Function	Examples of commands					
			7:6	Transmission data rate 00 – RFU 01 – 212kbps 10 – 424kbps 11 – RFU						
		0	5:4	Reception data rate 00 – RFU 01 – 212Kbps 10 – 424Kbps 11 – RFU	02020451 – ISO/IEC18092, 212kbps for transmission & reception, CRC automatically added					
			3:1	RFU, set to '0'	Parameter 'Slot counter' is optional, the					
			0	0 – No CRC added 1 – CRC auto. added	default value 00 (1 slot) will be used, if not present in the command.					
		04 1	7:5	RFU, set to '0'	For command SDD (Single Device Detection), the bit 4 must be set to 0, In this					
ISO18092 (212,424Kb) NFC-F	04		4	0 - RWT = 2.4ms 1 - RWT is specified by PP:MM	case RWT is 2.4ms for the 1 <sup>st</sup> slot and 1.2ms more for each following slot as specified in protocol ISO18092					
			3:0	Slot counter 0x0 - 1 slot 0x1 - 2 slots 0xF - 16 slots						
		2 7:0		PP (max 14, i.e. 0x0E)	Request Waiting Time (RWT) definition: These 3 bytes are optional. The default value corresponds to a RWT of 302µs.					
		3	7:0	MM (max 255, i.e. 0xFF)	RWT = $\frac{2^{PP} \cdot (MM+1) \cdot (DD+128) \cdot 32}{13.56} [\mu s]$					
		4	7:0	DD (max 127, i.e. 0x7F)	if PP is defined, then MM must be also defined while, DD remains optional					

Table 10: Parameter values for "Protocol select" command (Reader)



Parameter list for different protocols (TAG Emulation)							
		Parame		,	Examples of commands		
Protocol Code	Code	Byte	Bit	Function	Comments		
			7:6	Transmission data rate 00 – 106kbps 01 – 212kbps 1011 - RFU	. <b>02021200</b> – TAG/Card emulation		
ISO14443A NFC-A	12	0	5:4	Reception data rate 00 – 106kbps 01 – 212kbps 1011 – RFU	ISO/IEC14443A, 106kbps for transmission & reception, return error if no HF field detected, HFO used as master clock		
			3 <sup>1)</sup>	0 = Return an error, if no field 1 = Wait for field	0202120A – TAG/Card emulation		
			2	RFU, set to '0'	ISO/IEC14443A, 106kbps for		
			1	0 = HFO 1 = ClkRec	transmission & reception, wait for HF field, CLKREC use as master clock		
			0	RFU, set to '0'			
ISO14443B NFC-B	13	0	7:6 5:4	Transmission data rate 00 – 106kbps 01 – 212kbps 10 – 424kbps 11 – 847kbps  Reception data rate 00 – 106kbps 01 – 212kbps 10 – 424kbps 11 – 847kbps 0 = Return an error, if no field	02021300 – TAG/Card emulation ISO/IEC14443B, 106kbps for transmission & reception, return error if no HF field detected, HFO use as master clock, CRC automatically added  0202130A – TAG/Card emulation		
			1 0	1 = Wait for field RFU, set to '0' 0 = HFO 1 = ClkRec 0 - No CRC added 1 - CRC auto. added	ISO/IEC14443B, 106kbps for transmission & reception, wait for HF field, CLKREC use as master clock, CRC automatically added		
			7:4	RFU, set to '0'			
			3 <sup>1)</sup>	0 = Return an error, if no field 1 = Wait for field	<b>02021400</b> – TAG/Card emulation		
			2	RFU, set to '0'	ISO/IEC18092, return error if no HF field		
ISO18092 (212,424kb) NFC-F		0	1	0 = HFO 1 = ClkRec	detected, HFO use as master clock, CRC automatically added		
	14		0	0 – No CRC added 1 – CRC auto. added	Note that it is not necessary to select a data-rate for ISO18092card mode, Data-rate will be automatically detected and adjusted during reception (application can read this information by sending "SubfreqRecv" command).		

Table 11: Parameter values for "Protocol select" command (TAG Emulation)

 $<sup>^{1)}</sup>$  This option will be executed only after a "listen" command has been sent. Please refer to the chapter <u>Listen command (0x05)</u> for more information.

## 13.56MHz RFID / NFC Transceiver

### 6.5 PollField command (0x03)

The "PollField" command is used to detect the presence of an HF field by monitoring the flag "FieldDet". This command returns the current value of the flag "FieldDet". The parameters <Presc> and <Timer> can also be used to define a time during which the MLX90132 continuously scans for the presence of HFfield. The answer to the "PollField" command is available with the flag <FieldDet> updated accordingly, after the scanning period is terminated.

PollField0x03				
Direction	Data	Comment	Example	
	03	Command code	0300 - Check if Field is ON or OFF	
	<len></len>	Length of data	0303010FFF- Wait for field appearance	
	<flags></flags>	Timer flag (Optional) 01 – Wait for field appearance 00 – Wait for field disappearance	during(16*256)/13.56=302μs	
	<presc></presc>	Timer prescaler (Optional)	Parameters Flags, Presc and Timer are optional.	
MCU – device	<timer></timer>	Timer time-out (Optional)	They must be specified if application has to wait for field appearance or disappearance.   The time to wait is: $Time = \frac{(Presc + 1) \cdot (Timer + 1)}{13.56} [\mu s]$	
	00	Result code		
l	01	Length of data	000101 - HF field is detected	
Device - MCU	<fielddet></fielddet>	[7:1] – RFU [0] – 0 : No HF field detected 1 : HF field detected	The first is distributed	

Table 12: "PollField" command

**Note:** When the MLX90132 is selected in reader mode (protocol select command), the HF field will be automatically turned ON and the flag "FieldDet" will be set to '1' (the MLX90132 detects its own field). Consequently, the PollField command should be used in Tag/Card Emulation state or in Reader state with the HF field set OFF.



## 13.56MHz RFID / NFC Transceiver

### 6.6 SendRecv command (0x04)

This command is used to send specific protocol data and receives corresponding answer. Before sending this command, the application must select a protocol using the Protocol select command. If the response of the Transponder was successfully received and decoded, the field <Data> will contain additional information which is protocol specific. This is explained in the Table 14 below.

SendRecv0x04				
Direction	Data	Comment	Example	
	04	Command code	Depends on protocol previously selected!	
	<len></len>	Length of data		
MCU – device	<data></data>	Data to be sent	<b>10403022012</b> — Command "Read single block 12" (ISO/IEC15693 protocol)	
	<resultcode></resultcode>	Result code		
	<len></len>	Length of data	8008000000000077CF00 - The response of the TAG is successfully decoded. This is an example of response from an ISO15693 TAG.  The result code might contain additional information on the extended size of received data. Please refer to paragraph Support of extended frames below.	
Device - MCU	<data></data>	Data received. Interpretation depends on protocol		
	<errorcode></errorcode>	Error code		
Device - MCU	<errorbuflen></errorbuflen>	Length of Error Buffer stored during EMD algorithm	Please refer to the error code table summary in the chapter List of Error codes	
	<errorbuf></errorbuf>	Error Buffer stored during EMD algorithm	The Grapher <u>List of Liftor codes</u>	

Table 13: "SendRecv" command description

Data format for	Data format for transmission							
Protocol	Explanation	Response exan	nple	Comments				
ISO15693	Send example Command code Length of entire data Data	04 03 022000 a field		If length of data is Zero, only EOF will be sent. This can be used for anti-collision procedure				
ISO14443A NFC-A	Send example Command code Length of entire data Data  Transmission flags: 7 - 0 : ISO14443A 1: Topaz format SOF at the begi pause between I 6 - SplitFrame if set 5 - append CRC if s 4 - Auto. add the pa 3:0 - number of sigr	(use EOF instea nning of each by bytes, assume 1 <sup>st</sup> et rity bit in if set to	rte, make st byte as 7-bit)	For bit oriented protocol, frames could be split by setting the bit <b>SplitFrame</b> to one. In this case, the MLX90132 will send the last byte of the command with none integer number of bits, according to the field <b>number of significant bits in last byte</b> . In reception, the MLX90132 expects to receive the complement (8 – "number of significant bits in last byte").  This option is used during anti-collision procedure.				
ISO14443B NFC-B	Send example Command code Length of entire data Data	04 03 050000 a field						
ISO18092 (212,424Kb) NFC-F	Send example Command code Length of entire data Data	04 05 00FFFF a field	0000					

Table 14: Parameter values for "SendRecv" command



## 13.56MHz RFID / NFC Transceiver

<sup>1)</sup>The process of automatically calculating and adding the parity bit by the MLX90132 can be disabled by setting the bit 4 of the flags to '1'. In this case, the application must add one byte to the data with the most significant bit corresponding to the parity bit. The other bits of these additional bytes are not considered and can be set to '0' or '1'. The datastream will then look like: <DataByte><Parity><DataByte><Parity>.

Interpretation	of <data> field for different protocols</data>	
Protocol	Explanation Response example	Comments
ISO15693	Response example 80 08 0000000000 77CF 00  Result code Length of entire data field  Data received from TAG  Original (received) value of CRC  7:2 - RFU 1 - CRC error if set 0 - Collision is detected if set	00000000077CF- this is a response on Read Single Block command for Iso15693 TAG. Other fields are added by the device
ISO14443A NFC-A	Response example 80 09 80B30B8DB500 00 00 00  Result code Length of entire data field Data received from TAG 7 - Collision is detected 6 - RFU 5 - CRC error 4 - parity error 3:0 - shows how many significant bits are there in the first byte 7:0 - Index of the first byte where collision is detected  7:4 - RFU 3:0 - Index of the first bit where collision is detected	ISO/IEC14443A is bit oriented protocol, and non-integer amount of bytes can be received. Number of significant bits in the 1st byte is the same as indicated in Send command.  To calculate a position of a collision, application has to take index of byte first. Index of bit indicates a position inside this byte. Note that both indices start from 0 and bit index can be 8, meaning that collision could also affect the parity bit.  Note that collision information is only present when protocol ISO/IEC14443A with a data rate of 106kbps for transmission and reception is selected. When others protocols are selected, the two additional bytes are not transmitted.
ISO14443B NFC-B	Response example 80 0F 5092036A8D0000000007171 3411  Result code Length of entire data field  Data received from TAG  Original (received) value of CRC  7:2 - RFU 1 - CRC error if set 0 - RFU	
ISO18092 (212,424Kb) NFC-F	Response example 80 12 01010105017B0694193FF 00  Result code Length of entire data field  Data received from TAG  7:2 - RFU 1 - CRC error if set 0 - RFU	801201010105017B06941004014B024F4 993FF00 – typical answer with no error detected

Table 15: "SendRecv" command, interpretation of <data> field for different protocol

## 13.56MHz RFID / NFC Transceiver

### 6.6.1 Support of extended frames

In reader mode it is possible to receive up to 528 bytes of frame data. The extended size is included in the command code as follows:

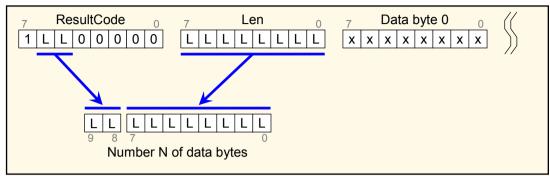


Figure 10: Coding of Length of extended frames

Consequently, the *ResultCode* returned depends on the length of the decoded frame received by the MLX90132.

Direction	Result Code	Length (LEN)	Effective length of received data	Comment
	0x80		0 – 255 bytes	
	0xA0		256 – 511 bytes	
MCU - device	0xC0	0x00 – 0xFF	512 – 528 bytes	
WCO - device	0x90	0X00 – 0XFF	0 – 255 bytes	In ISO/IEC14443A only in case of none integer number of bytes
	0xB0		256 – 511 bytes	
-	0xD0		512 – 528 bytes	gg.

Table 16: Coding of Length of extended frames



## 13.56MHz RFID / NFC Transceiver

### 6.6.2 List of Error codes

The error code returned in the case of a "SendRecv" command includes the last error raised by the device in the field ErrorCode But, it could also include a buffer of error if the EMD algorithm is enabled. This list of errors is stored into the dedicated buffer of maximum 8-bytes ErrorBuf with its length indicated in the error buffer length value ErrorBufLen. The list of error codes which could be returned after a "SendRecv" command is shown in the table below. The error codes marked with a \* could be raised during the EMD process and stored in the Error buffer. For more information related to the EMD algorithm, please refer to the chapter Electromagnetic support (EMD) below.

Direction	Error Code	Definition						
	0x61*	SOF error during the EMD process						
	0x62*	CRC error during the EMD process						
	0x63*	SOF error in ISO14443B occurs during high part (duration of 2 to 3 Elementary Unit Time, ETU)						
	0x65*	SOF error in ISO14443B occurs during low part (duration of 10 to 11 Elementary Unit Time, ETU)						
	0x66*	Extra Guard Time (EGT) error in ISO14443B						
	0x67*	TR1 set by card too long in case of protocol ISO14443B						
	0x68*	TR1 set by card too short in case of protocol ISO14443B						
	0x86	Hardware Communication error						
	0x82	Invalid command Length						
Davies MOU	0x83	Invalid Protocol						
Device - MCU	0x87	Frame waiting timeout (no valid reception) or no TAG						
	0x88	Invalid SOF						
	0x89	Receive buffer overflow (too many bytes received)						
	0x8A	Protocol Framing error as follows:  ISO14443A & ISO18092 (106kbps): Modified Miller, wrong symbol sequence  ISO14443B: Start/Stop bit polarity  ISO18092 (212,424kbps): SYNC ≠ 0xB24D						
	0x8B	EGT time out (ISO14443B)						
	0x8C	Invalid length received during ISO18092 (212,424kbps) communication (2 < Length < 255)						
	0x8D	CRC error in case of protocollSO18092 (212,424kbps)						
	0x8E	Reception lost without EOF received						

Table 17: List of error codes for "SendRecy" command

## 13.56MHz RFID / NFC Transceiver

### 6.7 Listen command (0x05)

This command is used with the MLX90132 in Tag emulation state to listen for the command from the reader. Before sending this command the application has to select a protocol using "Protocol Select" command with the related options.

Listen0x05			
Direction	Data	Comments	Example
MCU – device	05	Command code	0500 – Listen for a request from reader
IVICO – device	00	Length of data	0500 – Listeri for a request from reader
Device - MCU	00	Result code	0000- No error. Confirmation that device now is in listening mode
Device - IVICU	00	Length of data	0000- No error. Committation that device now is in listening mode
Davies MCII		Error code	8200 - Invalid command length
Device - MCU	00	Length of data	8200 - Invalid Command length
83		Error code	
Device - MCU	00	Length of data	8300 - Invalid protocol or protocol is not supported.
Device -MCU	85	Error code	8500 - Canceled by user using "Echo" command
Device -MCO	00 Length		0300 - Canceled by user using ECHO Command
Device - MCU	8F	Error code	8F00 - No HF field detected, command cannot be executed
Device - MCO	00	Length of data	or ou - No Fil Heid detected, command cannot be executed

Table 18: "Listen" command description

When the "listen" command is executed and the option "Waits for field" is activated, the MLX90132 waits for the HF field activation and corresponding request coming from an RFID reader.

If the option "Return an error if no field" is activated, the MLX90132 directly returns an error if no HF field is detected.

If the HF field is interrupted by the reader while the MLX90132 is waiting for the request, it will leave the listen command and return the error code 0x8F00.To wait for new request, the application must issue a new "listen" command

The user can cancel the "listen" mode by issuing an "echo" command 0x55. When cancelled, the MLX90132 replies with a code 0x55 (as a sync reply) plus "Cancelled by user" message corresponding to 0x85, 0x00. To cancel the "listen" mode, the following procedure should be followed:

- Send the ECHO command 0x55 to cancel the "listen" mode
- Set the pin SPI\_NSS to low, to read back the buffer content
- Read the sync reply 0x55
- By keeping SPI\_NSS low, read the rest of the buffer (could be cancelled by user 0x8500 message or correct data information 0x80<LEN><DATA>)
- Set the pin SPI\_NSS high to continue the operation



Possible return codes are listed in the table below.

Respond codes	Respond codes from the device in Listen mode						
Direction	Data	Comments	Example				
	80	Result code	800605000071FF00 - The request from the Reader is				
Device - MCU	<len></len>	Length of data	decoded. This is an example of Request in Iso14443-B				
Device - MCO	<data></data>	Data received. Interpretation depends on protocol	protocol				
Davies MCII	86	Error code	9600 Communication array				
Device - MCU	00	Length of data	8600 - Communication error				
Device - MCU	87	Error code	9700 Listoning mode was cancelled by the application				
Device - IVICO	00	Length of data	8700 - Listening mode was cancelled by the application				
Device - MCU	88	Error code	8800 - Invalid SOF				
	00	Length of data	Thrana Gor				
Device – MCU	89	Error code	8900 - Receive buffer overflow				
DCVICC - IVIOO	00	Length of data	1 TOOLIVE BUILD OVERHOW				
	8A	Error code	8A00 - Protocol Framing error:				
Device – MCU	00	Length of data	<ul> <li>ISO14443A &amp; ISO18092 (106kbps): Mod. Miller, wrong symbol sequence</li> <li>ISO14443B: Start/Stop bit polarity</li> <li>ISO18092 (212,424kbps): SYNC ≠ 0xB24D</li> </ul>				
Device – MCU	8B	Error code	8B00 - EGT time out (ISO14443B)				
Device – MCO	00	Length of data	0000 - EOT tillic out (10017440b)				
Davisa MCII	8E	Error code	9500 Recention lest without EOE received				
Device - MCU	00	Length of data	8E00 - Reception lost without EOF received				

Table 19: "Listen" command, possible return codes

If the request from the Reader was successfully received and decoded, the MLX90132 will send data back to the application, as shown in the following table.

Data format sent to the application in 'Listen' mode									
Protocol	Explanation Response example						Comments		
ISO14443A NFC-A	Request example Result code Length of entire da Data received from Received value of I Received value of I 7 – RFU 6 – RFU 5 – CRC error 4 – Parity error 3:0 – number of sic	ta fie read BCC CRC	eld der (if a	any) any)			4E01	08	The anti-collision filter could be activated with the command "AcFilter". In this case, the complete anti-collision process is supported by the MLX90132 as soon as a "Listen" command is initiated. The information will be automatically sent by the MLX90132
ISO14443B NFC-B	3:0 – number of significant bits in last byte  Request example   80   06   050000   71FF   00    Result code  Length of entire data field  Data received from Reader  Original (received) value of CRC  7:2 – RFU 1 – CRC error if set 0 – RFU								
ISO18092 (212, 424kbp) NFC-F	Request example Result code Length of entire da Data received from 7:2 - RFU 1 - CRC error if s 0 - RFU	ta fie	eld	00FFF00	000 (	00			

Table 20: Data format sent to the application in "Listen" mode



## 13.56MHz RFID / NFC Transceiver

## 6.8 Send command (0x06)

This command is used with the MLX90132 in TAG emulation state, to send data back to the reader. This command sends specific protocol data without waiting for an answer.

Send 0x06	Send <b>0x06</b>							
Direction	Data	Comments	Example					
	06	Command code	Depends on protocol previously selected!					
MCU – device	<len></len>	Length of data						
<data></data>		Data to be sent	<b>040C50920E99750000000B37171</b> – Emulation of TAG response in ISO14443-B protocol					
Device - MCU	00	Result code	0000 - Data was successfully sent					
Device - MCO	00	Length of data	- Data was successfully sent					
Davisa MCII	82	Error code	9200 Invalid langth					
Device - MCU 00		Length of data	8200 - Invalid length					
Device - MCU	83	Error code	9300 Invalid protocol proviously colocted by Coloct Protocol command					
Device - MCO	00	Length of data	8300 - Invalid protocol previously selected by Select Protocol command					

Table 21: "Send" command description

Format of data to be sent using 'Send' command					
Protocol	Explanation	Response example	Comments		
ISO14443A NFC-A	Send example Command code Length of entire data Data 7:6 - RFU 5 - Append CRC 4 - RFU 3:0 - number of sign bits in first byte	ificant	The anti-collision filter could be activated with the command "AcFilter". In this case, the complete anti-collision process is supported by the MLX90132 as soon as a "Listen" command is initiated. The information will be automatically sent by the MLX90132		
ISO14443B NFC-B	Send example Command code Length of entire data Data	06 04 01020304			
ISO18092 (212,424Kb) NFC-F	Send example Command code Length of entire data Data  Slot number (in which		The number of slot in which to reply is entered by the application in the field <slot number="">. In this case, the MLX90132 automatically manages the related timings defined by the protocol, to answer to the corresponding slot. This parameter is used for the Single Device Detection (SDD) process, For other commands, the field <slot number=""> should simply be set to zero.</slot></slot>		

Table 22: Format of data to be sent using "Send" command

# 13.56MHz RFID / NFC Transceiver

## 6.9 Idle command (0x07)

This command is used to switch the MLX90132 into low-power mode. Several sub-modes or states could be selected as shown in the table below. Please note that except when an error occurs (the answer is then directly sent), the response to an Idle command is sent only when the MLX90132 exits the low-power mode.

Idle0x07				
Direction	Data	Comments	Example	
	07	Command code		
	0E	Length of data		
	<wuflags></wuflags>	Specifies wake-up sources and LFO frequency. Refer to <u>Table 24</u>		
	<enterctrll></enterctrll>	2 bytes: Settings to enter Idle mode, refer to		
	<enterctrlh></enterctrlh>	Table 25 below		
	<wuctrll></wuctrll>	2 bytes: Settings to wake-up from Idle mode (recommended value = 0x3800), refer to		
	<wuctrlh></wuctrlh>	Table 25 below		
	<leavectrll></leavectrll>	2 bytes: Settings to leave Idle mode (recommended value = 0x1800), refer to	0x070E <mark>0A</mark> 210038011800086060	
	<leavectrlh></leavectrlh>	Table 25 below	<b>54603F00</b> - Tag detector with	
	<wuperiod></wuperiod>	Period of time between two TAG detection bursts. Also used to specify the duration before timeout. Refer to Equation 1	LFO set at 32kHz. Possibility to WU on low level IRQ <sub>IN</sub> 0x070ECB210038011800086060  54603F10 — Tag detector with LFO set at 4kHz. Possibility to WU on low level IRQ <sub>IN</sub> and timeout (MaxSleep set to 0x10)	
MCU – device	<oscstart></oscstart>	Waiting time for the HFO to stabilize (based time: LFO), <b>recommended value = 0x60</b>		
	<dacstart></dacstart>	Waiting time for the DAC to stabilize (based time: LFO), recommended value = 0x60		
	<dacdatal></dacdatal>	Lower compare value for TAG detection. Note: Only the <b>6 MSB bits</b> are available		
	<dacdatah></dacdatah>	Higher compare value for TAG detection. Note: Only the <b>6 MSB bits</b> are available		
	<swingscnt></swingscnt>	Number of HF periods during TAG detection. Refer to Equation 2.		
	<maxsleep4:0></maxsleep4:0>	Maximal number of TAG detection trials before timeout. Value set to 0 during TAG detection calibration.  0x00 <maxsleep< (bit="" 0)="" 0x1f="" 3.<="" 5="" 7="" also="" and="" are="" be="" before="" duration="" equation="" must="" refer="" rfu="" set="" specify="" td="" timeout,="" to="" used=""><td></td></maxsleep<>		
	0x00	Result code	0x0001XX - Here XX is a value of	
Device- MCU	0x01	Length of data	WUFlags, please note that this	
Device- MCU	<wuflags></wuflags>	Content of WUFlags, please refer to Table 24 below	response is sent only when device exits idle mode	
Dovice MCII	0x82	Error code	0x8200 — Invalid command length	
Device – MCU	0x00	Length of data	0x8200 – Invalid command length	

Table 23: "Idle" command description

## 13.56MHz RFID / NFC Transceiver

Mea	Meaning of Wake-up settings < WUFlags>			
Α	Register	Bit	Function	
		7:6 – LfoPresc	LFO prescaler. Divides LFO for state machine.  00 – 32 KHz  01 – 16 KHz  10 – 8 KHz  11 – 4 KHz	
		5 – RFU, set to '0'		
2	WUFlags		Specifies the possible source on which to exit from idle mode, incase SLEEP state is selected. Each bit corresponds to one wake-up source which is updated and returned when the MLX90132 leaves the Idle routine without error	
		4:0 – WUFlags	bit4 - Low level on SPI_NSS bit3 - Low level on IRQ_IN, must be set to '1' bit2 - Field Detector bit1 - TAG Detector bit0 - WakeUp(WU at the end of MaxSleep cycles even if no event detected)	

Table 24: Field <WUFlags> definition in "Idle" command

Mea	Meaning of power settings <enterctrlh:enterctrll>, <wuctrlh:wuctrll> and <leavectrlh:leavectrll></leavectrlh:leavectrll></wuctrlh:wuctrll></enterctrlh:enterctrll>			
Α	Register	Comment		
0	CtrlL	7 – Initial DAC compare index ('0' = DacDataL, '1' = DacDataH used for the 1 <sup>st</sup> comparison) 6 – RFU, must be set to '0' 5 – LFO enable(needs to be set to '1' in WUCtrl) 4 – HFO enable (needs to be set to '1' in WUCtrl) 3 – VDDA enable (needs to be set to use HFO, see recommended values in Table 23 above) 2 – Hibernate state enable 1 – RFU 0 – Sleep state enable		
1	CtrlH	7:2 – RFU, must be set to '0' 1 – Field detector enable 0 – IREF (needs to be set to '1' in WUCtrl, otherwise must be put to '0')		

Table 25: Fields <EnterCtrl>, <WUCtrl> and <LeaveCtrl> definition in "Idle" command

#### Notes:

- The bytes <EnterCtrl> define the configuration when entering the IDLE mode. The bytes <WUCtrl> define the configuration when the device wakes-up from the IDLE mode (recommended value 0x3801). The bytes <LeaveCtrl> define the configuration when leaving the IDLE mode, after wake-up.
- The Hibernate state is entered by setting the "Hibernate state enable" flag to '1' and the Sleep state is entered by setting the "sleep state enable" flag to '1', both in the WUFlags register.

Equation 1: Sleep period  $t_{Sleep TagDet} = 256 \cdot t_L \cdot (WUPeriod + 2)[s]$ 

Equation 2: HF ON period  $t_{HFon\_TagDet} = \frac{SwingCnt}{f_{carrier}} [s]$ 

 $\textbf{Equation 3: Duration before Timeout} \qquad \quad t_{MaxSleep\_TagDet} = (t_{HFon_{TagDet}} + t_{Sleep_{TagDet}}) \cdot (MaxSleep + 1)[s]$ 

With:  $t_L = \frac{1}{f_{LFO}}[s] \qquad \text{and} \qquad t_{carrier} = \frac{1}{f_{HFO}}[s]$ 

## 13.56MHz RFID / NFC Transceiver

### 6.10 BaudRate command (0x0A)

This command is used to change the UART baud rate.

Set UART baud	Set UART baud rate <b>0x0A</b>				
Direction	Data	Comments	Example		
	0A	Command code			
	01	Length of data			
MCU – device	<br_ratio></br_ratio>	New BR ratio = <br_ratio>*2+2 See following table: Baud rate ratio 255 - 13.56/512 ~26.48kbps 254 - 13.56/510 ~26.59kbps 253 - 13.56/508 ~26.7kbps 117 - 13.56/236 ~57.7kbps (default value) 2 - 13.56/6 ~2.26Mbps 1:0 - Not used</br_ratio>			
Device - MCU	55	"Echo" code of 0x55	55 - New baud rate is used to reply		

Table 26: "Baudrate" command description

### 6.11 SubFregRes command (0x0B)

This command returns the last sub-carrier frequency measured during communication. It is used to measure the data-rate for protocols ISO/IEC18092 (212,424Kbps) / NFC-F. Please note that this operation is automatically performed by the MLX90132 when configured in Tag emulation mode, ISO/IEC18092 & NFC-F.

SubFreqRes0x0	SubFreqRes <b>0x0B</b>			
Direction	Data	Comments	Example	
MCU – device	0B	Command code	0B00	
MCO – device	00	Length of data		
	00	Result code		
	01	Length of data	00010E Hara 0E is a frequency divider Use	
Device - MCU	<freqsc_ratio></freqsc_ratio>	Ratio of measured sub-carrier frequency, refer to Equation 4	<b>00010F -</b> Here 0F is a frequency divider. Use this value to configure the MLX90132	

Table 27: "SubFreqRes" command description

SubFreqRes reports the frequency divider. To calculate the real frequency use this formula

Equation 4: Byte FreqSc\_Ratio calculation: 
$$f_S = \frac{f_{carrier}}{2 \cdot (FreqSc_Ratio + 1)} [Hz]$$

## 13.56MHz RFID / NFC Transceiver

### 6.12 AcFilter command (0x0D)

This command is used with the MLX90132 in TAG emulation, ISO/IEC14443-A. If activated, it autonomously handles the anti-collision algorithm. If not activated, all received commands will be sent to the application.

If the filter is activated, the MLX90132 will interpret the ISO/IEC14443-A commands sent by the reader and performs the anti-collision procedure. In this case, data will be sent to the external microcontroller only when the anti-collision procedure is finished.

Activate/deactivate anti-collision filter 0x0D				
Direction	Data	Comments	Example	
	0D	Command code	0D0B4400AA8804485BA1120000 -	
	<len></len>	Length of data	Activate filter for 2-cascade anti-collision	
	<atqa> (2bytes, LSByte 1st)</atqa>	Coding of ATQA, answer to REQA command (refer to ISO/IEC14443A standard)	Note that length can be 7 – for 1-cascade level filter	
MCU – device	<sak></sak>	Coding of SAK, select acknowledgement (refer to ISO/IEC14443A standard)	11 – for 2-cascade levels filter 15 – for 3-cascade levels filter All other values will cause 'Invalid command	
ivico – device	<uid 1="" part=""> (4bytes, LSByte 1st) <uid 2="" part=""></uid></uid>	UID for cascade level 1 (Mandatory) UID for cascade level 2	length' error.  OD00 – Return AC state and deactivate AC filter	
	<ul><li>(4bytes, LSByte 1st)</li><li><uid 3="" part=""></uid></li><li>(4bytes, LSByte 1st)</li></ul>	(Optional)  UID for cascade level 3 (Optional)	OD01XX – Force AC state to XX value  OD020000 – Returns AC state without deactivating filter	
Device - MCU	00	Result code	0000 - Filter is successfully	
Device - MCO	00	Length of data = 0	activated/deactivated	
Device - MCU	82	Error code	9200 Invalid command longth	
Device - MCO	00	Length of data	8200 - Invalid command length	
Device - MCU	83	Error code	8300 - Invalid protocol	
Device - IVICU	00	Length of data	- mvalid protocol	

Table 28: "AcFilter" command description

The MLX90132 is able to interpret and respond to the following commands:

Anti-collision commands supported by the MLX90132			
Command	Code	Definition	
REQA	26 (7-bit)	Sense request	
WUPA	52 (7-bit)	WU all request	
ANTICOLL	93, 95, 97	Single device detection request	
SELECT	9370, 9570, 9770	Select request	

Table 29: ISO/IEC14443-A anti-collision commands supported by the MLX90132

#### Notes:

- The current anti-collision state can be forced using the command 0x0D01XX, with XX selected according to <u>Table 30</u> below.
- Command 0x0D020000 can be used to return the current anti-collision state without deactivating the anticollision filter. Please refer to <u>Table 30</u> below for the anti-collision state.
- The command 0x0D00 will be used to return the current anti-collision state and deactivate the anti-collision filter.
- UID part 2 and 3 are optional and may not be included in the command. The UID size, as defined in the ISO/IEC14443A standard (part of the ATQA), will be updated automatically by the MLX90132 according to the UID length.



## 13.56MHz RFID / NFC Transceiver

0x0123

Actual state	returned by the MLX90132	
Value	State	Comment
0x00	IDLE	IDLE state
0x01	READY_1	READY state after 1 <sup>st</sup> part of UID is verified
0x02	READY_2	READY state after 2 <sup>nd</sup> part of UID is verified
0x03	READY_3	READY state after 3 <sup>rd</sup> part of UID is verified
0x04	ACTIVE	ACTIVE state
0x80	HALT	HALT state
0x81	READY*_1	READY* state after 1 <sup>st</sup> part of UID is verified
0x82	READY*_2	READY* state after 2 <sup>nd</sup> part of UID is verified
0x83	READY*_3	READY* state after 3 <sup>rd</sup> part of UID is verified
0x84	ACTIVE*	ACTIVE* state

Table 30: Current state returned by the MLX90132 (as defined in ISO/IEC14443-A standard)

## 7 Modifying internal settings for optimal performances

### 7.1.1 Example: How to modify the ARC\_B register

MLX90132 reply:

The internal registers of the MLX90132 are automatically set when the protocol is selected with the command Protocol select command (0x02). To get optimal performance, the internal register ARC\_B containing the modulation index of the RFID request and the analog gain for the reception chain in reader mode can be modified. The following example shows the specific commands to be sent to read/write the register ARC\_B:

#### Use the "Protocol Select" command (0x02) to select the appropriate communication protocol.

occurrent increase control communica (executive control appropriate comm	namounon protocon
<ul> <li>Send Protocol Select command (for example ISO/IEC14443A):</li> </ul>	0x02020200
<ul> <li>MLX90132 reply:</li> </ul>	0x0000
Read Analog Configuration register (ARC_B) value	
<ul> <li>Write the ARC_B register index to 0x01:</li> </ul>	0x0903680001
MLX90132 reply:	0x0000
Read the ARC_B register value:	0x0803690100
MLX90132 reply:	0x01DF <sup>(1)</sup>
Modify the value of Analog Register Configuration (ARC_B) to 0x23	
<ul> <li>Write the ARC_B register:</li> </ul>	0x090468010123
<ul> <li>MLX90132 reply:</li> </ul>	0x0000
Read back the Analog Configuration register (ARC_B) value	
<ul> <li>Write the ARC_B register index to 0x01:</li> </ul>	0x0903680001
<ul> <li>MLX90132 reply:</li> </ul>	0x0000
Read the ARC_B register value:	0x0803690100
*# \/aa / aa	0.0400

<sup>(1)</sup>In this example, the ARC\_B register = 0xDF with 'D' = Modulation Index & 'F' = Rx amplifier gain.

## 13.56MHz RFID / NFC Transceiver

The content of the register ARC\_B is shown in Table 31 below with the default values in Table 32:

ARC_	ARC_B register of the MLX90132			
Α	Register	Bit	Function	
69	ARC_B	7:4 Modldx <sup>(1)</sup>	ASK Modulation Index : Code 1 = 10% Code 2 = 14% Code 3 = 18% Code 4 = 21% Code 5 = 24% Code 6 = 26% Code 7 = 30% Code 8 = 35% Code 9 = 39% Code A = 40% Code B = 43% Code C = 45% Code D = 96%	
		3:0 Rx Gain <sup>(2)</sup>	Reception chain amplifier Gain: Code 0 = 34dB Code 1 = 32dB Code 3 = 27dB Code 7 = 20dB Code F = 8dB	

Table 31: Register ARC\_B description

- (1) Characterized using ISO/IEC10373-6 setup and DVK90132 antenna matching
- (2) Defined by design simulations

Communication protocol	Default value
ISO/IEC14443 Type A	0xDF
ISO/IEC14443 Type B	0x20
ISO/IEC18092 (Felica)	0x50
ISO/IEC 15693 – 10%	0x53
ISO/IEC15693 - 100%	0xD3

Table 32: Default value of ARC\_B per protocol (Reader mode)

### 7.1.2 Example how to read back WUFlags content

WUFlags byte (refer to <u>Table 24</u>) is automatically updated after the MLX90132 wakes-up from an Idle command. In SPI mode, this byte is available to read in the FIFO register. In UART mode, this byte is asynchronously sent after wake-up. In some cases, it is useful to be able to check the WUFlags separately; the example below shows how to do it:

#### Read WUFlags register value

- Read the WUFlags register value:
- MLX90132 reply:

0x0803620100 0x0001XX<sup>(1)</sup>

<sup>&</sup>lt;sup>(1)</sup> XX equal the WUFlags register value



## 8 Tag Detector

### 8.1 Operating Principle

The objective of the TAG detector function is to be able to detect the presence of an RFID label/tag or an NFC device in front of the reader's antenna, with reduced power consumption.

The TAG detector function is based on the detection of any variation of the HF field. If an RFID transponder or an NFC device approaches the reader's antenna, it influences the amplitude of the generated HF by a loading effect. This variation can be monitored by the MLX90132 to inform the external host microcontroller that an RFID transponder or an NFC device is approaching the antenna.

When set in TAG detector state, the MLX90132 periodically generates a few periods (pulses) of HF carrier frequency and measures the amplitude's field. This value is then compared to reference levels DacDataH[7:0] and DacDataL[7:0] defined by the user.

If the measured level is above DacDataH[7:0] or below DacDataL[7:0], - i.e. a change in the amplitude of the HF field occurs - the MLX90132 automatically informs the external application MCU by: either generating an IRQ on the pin IRQOUT (SPI interface), or directly sending the WUFlag register value (UART interface). In the same time it enters to Ready state and waits for a <u>Protocol select command (0x02)</u> command. Therefore, either the application MCU takes the control of the MLX90132 by sending a command <u>Protocol select command (0x02)</u> and can decide to start communicating with the TAG, or the MLX90132 goes back in idle (tag detector) mode. This mechanism is repeated until a new object is detected in the field or another kind of event appears (e.g. max number of trials reached, wake-up from host MCU ...).

Before using this feature it is necessary to perform a calibration by using the MCU

The TAG detector state is entered using the <u>Idle command (0x07)</u> command. The values of DacDataH/DacDataL[7:0] are defined in this command, as well as the number of HF pulses and the time between two HF bursts with respectively the bytes SwingsCnt[7:0] and WUPeriod[7:0]. The MLX90132 can be forced to wake-up after a certain number of trials, even if no TAG has been detected. This number of trials is set using the bits MaxSleep[4:0].

The bit "initial DAC compare index" in register EnterCtrlL is used to select the first comparison to be performed when starting the TAG detector state. When set to '0', the TAG detector feature is started with a comparison to DacDataL[7:0]. If set to '1', the TAG detector feature is started with a comparison to DacDataH[7:0]. Please note that the IREF bit in EnterCtrlH byte has to be set to allow a proper functionality of the TAG detector feature.

The following picture illustrates the TAG detector operation described above.

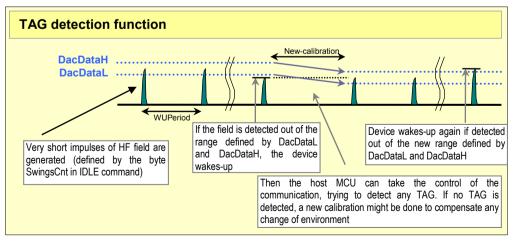


Figure 11: MLX90132 TAG detection principle



## 13.56MHz RFID / NFC Transceiver

### 8.2 Calibration procedure

The calibration process should be performed with no tag in the environment. It consists of executing a successive tag detection sequence using a well-known configuration. This to determine the two specific reference thresholds: DacDataL and DacDataH which will be programmed in the device before entering Tag Detector Mode. Both thresholds are coded in 6 bits.

During the calibration process, DacDataH value is fixed to 0xFCand the software will vary the DacDataL value from its minimum value (0x00) to its maximum value (0xFC). At each step, the WUflags byte is read to know if the HF level is above or below the low threshold ("tag detected flag" set or not).

At the end of the calibration process, the reference level DacDataRef is found and corresponds to the value of DacDataL for which the wake-up event switches from "WakeUp at the end of MaxSleep cycles" (no tag in the RF field) to "tag detected".

To avoid too much sensitivity in the tag detection process, the use of a guard band is recommended. This value should correspond to at least 2 DAC steps.

Final recommended values with guard band:

- DacDataL= DacDataRef

   Guard
- DacDataH= DacDataRef+ Guard

The parameters used to define the tag detection calibration sequence (clocking, set-up time, burst duration, etc.) must be the same as those used for the future tag detection sequences. MaxSleep has to be set to '0' for the calibration

Another and faster way (binary search: 6 steps) to calibrate the Tag Detector is described in the application note AN2\_MLX90130\_32\_TagDetector.

### 9 Field Detector

The MLX90132 embeds a field detector block to measure the field level of an external HF RFID reader. This is used to be able to monitor the availability of the channel and perform the collision avoidance feature before switching ON the HF field.

The command "Poll field" can be used to monitor the HF field, the device directly returns a bit indicating that an HF field has been detected or not. The field detector can also be configured as an option to wake-up from "Idle" mode, in order to reduce the power consumption as much as possible.



## 13.56MHz RFID / NFC Transceiver

## 10 Electromagnetic support (EMD)

The electromagnetic disturbance results in the noise that a passive/active TAG or NFC device generates before answering to a corresponding request. This disturbance is generally due to the digital processing of the passive/active TAG or NFC device which appears just before sending back the response.

The MLX90132 device supports a specific algorithm to filter EMD disturbances to successfully receive the frame from a passive/active TAG or NFC device. This algorithm is supported within the MLX90132 in Reader modes ISO14443 type-A and type-B.

The following flow-charts illustrate the algorithm which is implemented in the MLX90132 device for these 2 modes of operation. The corresponding EMD algorithm is selected with the <u>Protocol select command (0x02)</u> by configuring the parameter  $\langle N_{EMD} \rangle$  with a non-null value. The definition of the two values  $\langle N_{EMD} \rangle$  and  $\langle N_{EMD,RES} \rangle$  used in the algorithm are defined below:

- <N<sub>EMD</sub>>: Maximum Number of non-valid Bytes received, before the system leaves the EMD algorithm
  routines with an error message. Typically, this value is set to 3 or 4, meaning that failing reception with
  less than 3 or 4 Bytes will be considered as EMD disturbance by the algorithm without interrupting the
  reception process.
- <N<sub>EMD,RES</sub>>: Maximum Number of non-valid and non-Integer Bytes received, before the system leaves the EMD algorithm routines with an error message. Typically, this value is set identical to the N<sub>EMD</sub> value.

When processing the EMD algorithm, the MLX90132 is in kind of "standalone" mode, waiting for the presence of a valid <Start Of Frame> coming for the passive/active TAG or NFC device. This "standalone" mode only terminates with the following conditions:

- 1) At the end of a valid reception
- 2) In case a timeout error occurs (FDT/FWT time reached without valid SOF)
- 3) In case the identified error could be assimilated as a protocol error and not to EMD

During the whole EMD process, the MLX90132 is buffering the incoming errors which will be returned to the host application in case one of the conditions 2) or 3) above is reached. In this case, the error code returned will be as follows:

#### <ErrorCode> + <ErrorBufLen> + <ErrorBuf> with

- <ErrorCode>: Last error code raised during the EMD algorithm
- <ErrorBufLen>: Length of the following Buffer of Errors (max. 8 bytes)
- <ErrorBuf>: Buffer of Errors stored during the EMD algorithm (max. 8 bytes)

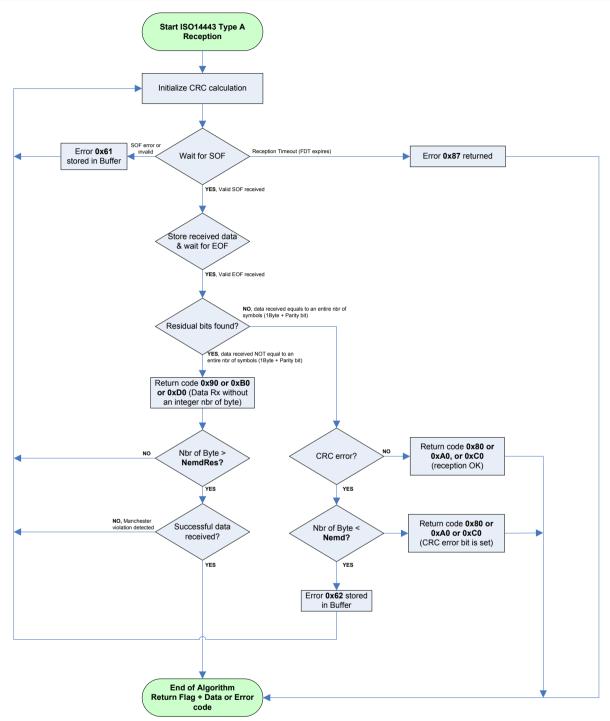


Figure 12: MLX90132 EMD Algorithm Reader/Writer ISO14443 Type A

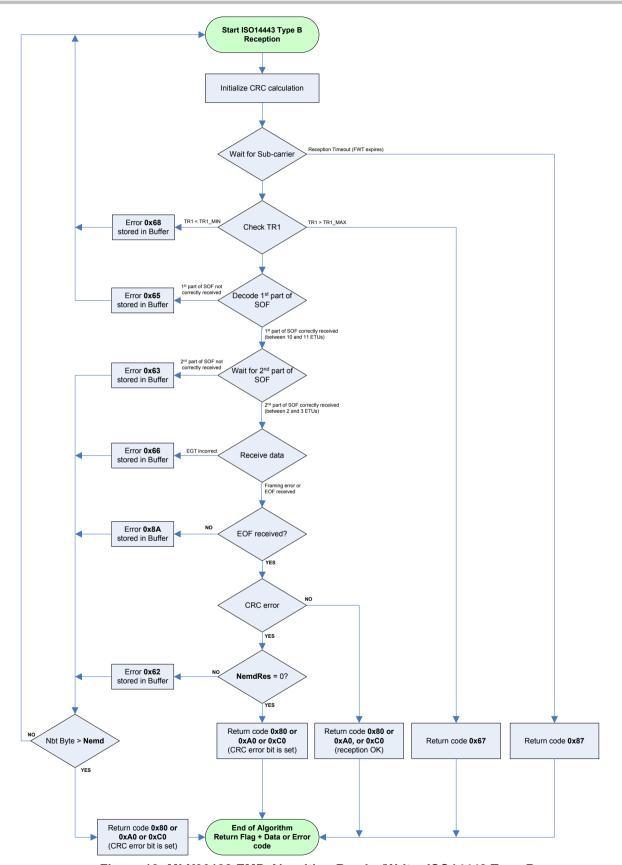


Figure 13: MLX90132 EMD Algorithm Reader/Writer ISO14443 Type B



## 11 Application Information

#### 11.1 External Antenna network

RF communication performance depends on the external system antenna network and resonance conditions.

The antenna matching of the MLX90132 is reduced to a minimal component count, composed of two serial capacitors Cs and one parallel capacitor Cp. A parallel resistor Rp can also be added to adjust the antenna damping thus reducing detuning effect provoked by the presence of TAGs or Readers in front of the MLX90132. Two serial resistors  $R_{RX}$  have to be adjusted in order to avoid entering the clamping region (see Table 36 below). Finally, depending on EMC constraints, an EMI filter can be added to reduce the emission of harmonics generated by the square wave at the outputs TX1 and TX2.

Figure below gives an example of the external matching network to connect the antenna. For more information, please refer to the application note <a href="MLX90130-32">AN1 MLX90130-32</a> AntennaDesignGuidelines available on the Melexis website.

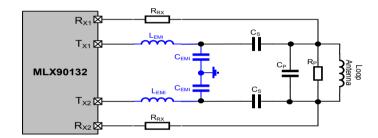


Figure 14: External antenna matching network example

## 11.2 Application schematic

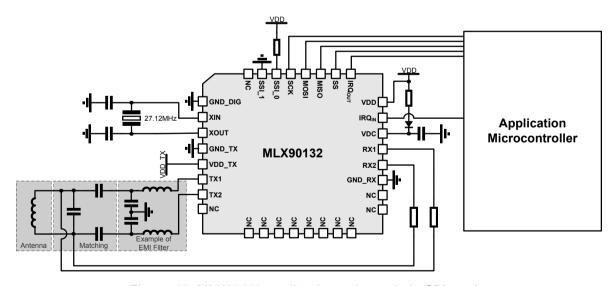


Figure 15: MLX90132 application schematic in SPI mode

## 13.56MHz RFID / NFC Transceiver

## 12 Electrical Specifications

### 12.1 Absolute Maximum Ratings

Parameter	Symbol	Value	Units
Supply Voltage	$V_{DD}$	-0.3 to 7.0	V
Supply Voltage	$V_{DD\_TX}$	-0.3 to 7.0	V
Input or Output voltage relative to Ground	VIO	-0.3 to VDD+0.3	V
Operating Temperature Range	T <sub>A</sub>	-40 to 105	°C
Storage Temperature Range	T <sub>S</sub>	-40 to 150	°C
Electrostatic discharge according to AEC-Q100- 002 Human Body Model	V <sub>ESD_</sub> HBM	2	kV

Table 33: Absolute maximum ratings

Note: Exceeding the absolute maximum ratings may cause permanent damage. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

### 12.2 DC Characteristics

Operating Parameters  $T_A = -40^{\circ}$ C to  $105^{\circ}$ C

Parameter	Symbol	Conditions	Min	Тур	Max	Units
Supply voltage	$V_{DD}$		2.7	5	5.5	٧
Supply voltage of TX driver	$V_{DD\ TX}$		2.7	5	5.5	V

**Table 34: DC characteristics** 

### 12.3 Power Consumption Characteristics

Operating Parameters  $T_{\star} = -40^{\circ}\text{C}$  to  $105^{\circ}\text{C}/2.7 < \text{VDD/VDD}$  TX <5.5V)

Parameter	Symbol	Conditions	Min	Тур	Max	Units
Supply current in Hibernate state	Icc <sub>Hibernate</sub>			1	8	μA
Supply current in Sleep state	Icc <sub>Sleep</sub>			20	30	μA
Supply current in Ready state	Icc <sub>Ready</sub>			2.5	3	mA
Supply current in RF Reader ON	ICC <sub>RF Reader ON</sub>			100 <sup>(1)</sup>		mA
Supply current in Card Emulation state	Icc <sub>Card Em</sub>			1	3	mA
Supply current in Tag Detection state	Icc <sub>Tag Det</sub>			45 <sup>(1,2)</sup>		μΑ

**Table 35: Power consumption characteristics** 

Parameter measured at applicative level only, using recommended output matching network Following specific conditions for TAG detection:  $T_A = 25$ °C, WUPeriod = 0x1A (4x per seconds), OscStart= 0x60, DACStart= 0x60, SwingCnt = 0x3F

## 13.56MHz RFID / NFC Transceiver

## 12.4 RF Characteristics

Operating Parameters  $T_A = -40^{\circ}C$  to  $105^{\circ}C$  (2.7 < VDD/VDD TX<5.5V)

Symbol	Parameter	Min	Тур	Max	Units
f <sub>C</sub>	Frequency of operating field (carrier frequency)	13.553	13.56	13.567	MHz
	ISO/IEC14443A			100	
Carrier modulation	ISO/IEC14443B	8		14	
index <sup>(3)</sup>	ISO/IEC18092	8		14	%
"I'dex	ISO/IEC15693 (10% modulation)	10		30	
	ISO/IEC15693 (100% modulation)	80		100	
Transmitter specifica	tions				
R <sub>ON_3V</sub>	Equivalent resistor of driver output TXn <sup>(2)</sup>		13		Ω
R <sub>ON_5V</sub>	Equivalent resistor of driver output TXn <sup>(2)</sup>		8		Ω
P <sub>OUT_3V</sub>	Output power for 3V operation (2)		70		mW
P <sub>OUT_5V</sub>	Output power for 5V operation (2)		317		mW
Receiver specificatio	ns				
Z <sub>OUT</sub>	Differential. input resistance between RX1/RX2 <sup>(2)</sup>		80		kΩ
C <sub>INPUT</sub>	Differential. input capacitance between RX1/RX2 <sup>(2)</sup>		22		pF
V <sub>SENS</sub>	Sensitivity <sup>(3)</sup>		6		mVp
V <sub>RXMAX</sub>	Clamping voltage on RX1 (RX2) relative to Ground <sup>(2)</sup>	9.5	11	13.2	Vp

Table 36: Reader characteristics

Symbol	Parameter	Min	Тур	Max	Units
H <sub>Threshold</sub>	HF field level of detection <sup>(2,3)</sup>	0.1875			A/m

**Table 37: Field detection characteristics** 

- Parameter measured using recommended output matching network Value based on design simulation and/or characterization results, and not tested in production
- Based on ISO/IEC 10373-6 & 22536 protocol measurements



### 12.5 SPI Characteristics

Symbol	Parameter	Min	Тур	Max	Units
f <sub>SCK</sub>	SPI clock frequency			2	MHz
V <sub>IL</sub>	Input low voltage			0.3*V <sub>DD</sub>	
V <sub>IH</sub>	Input high voltage	0.7*V <sub>DD</sub>			V
V <sub>OL</sub>	Output low voltage			0.4*V <sub>DD</sub>	V
V <sub>OH</sub>	Output high voltage	0.7*V <sub>DD</sub>			
t <sub>SU(NSS)</sub> <sup>(1)</sup>	NSS setup time		70		
t <sub>h(NSS)</sub> (1)	NSS hold time		0		
t <sub>CH(SCKL)</sub> (1)	Clock low time		200		
t <sub>CH(SCKH)</sub> (1)	Clock high time		200		
t <sub>SU(SI)</sub> (1)	Data slave Input setup time		20		ns
t <sub>h(SI)</sub> (1)	Data slave Input hold time			80	
t <sub>v(SO)</sub> (1)	Data slave output valid time		150		
t <sub>h(SO)</sub> (1)	Data slave output hold time		280		
C <sub>b_SPI_IN</sub>	Capacitive load for input pins NSS, CLK, MOSI			3	C
C <sub>b_SPI_OUT</sub>	Capacitive load for input pins MOSI			20	pF

**Table 38: SPI interface characteristics** 

1. Values based on design simulation and/or characterization results, not tested in production

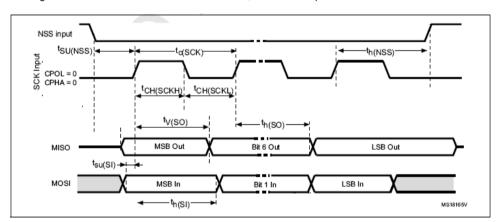


Figure 16: SPI timing diagram (Slave mode and CPOL = 0, CPHA = 0)

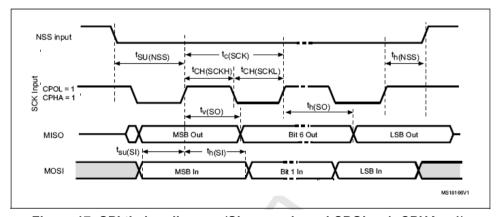


Figure 17: SPI timing diagram (Slave mode and CPOL = 1, CPHA = 1)

3901090132 Page 40 of 44 Jan-2014 Rev. 009



#### 12.6 Oscillator Characteristics

Symbol	Parameter	Conditions	Min	Тур	Max	Units			
Low Frequency Oscillator (LFO)									
f <sub>LFO</sub>	Low-frequency oscillator (LFO)		20	32	43	kHz			
XTAL Oscilla	ator								
f <sub>XTAL</sub>	XTAL Oscillator frequency			27.12		MHz			
R <sub>F</sub>	Feedback resistor			2		МΩ			
C <sub>L</sub>	Recommended load capacitance versus equivalent serial resistance of the crystal (RS) <sup>(3)</sup>	Rs = 30Ω		12		pF			
l <sub>2</sub>	XTAL driving current <sup>(2)</sup>	VDD = 3.3V with 12pF load		600	750	μA			
g <sub>m</sub>	Oscillator transconductance <sup>(2)</sup>	Start-up	0.04	0.32	1.41	mA/V			
t <sub>SU(HFO)</sub> <sup>(4)</sup>	Oscillator start-up time	VDD is stabilized		2		ms			

Table 39: Oscillator characteristics (1) (2)

- 1. Resonator characteristics given by the crystal/ceramic resonator manufacturer.
- 2. Based on characterization, not tested in production.
- 3. The relatively low value of the RF resistor offers good protection against issues resulting from use in a humid environment, due to the induced leakage and the bias condition change. However, it is recommended to take this point into account if the application is used in severe humidity conditions.
- 4. tSU (HFO) is the startup time measured from the moment it is enabled (by software) until a stabilized 27.12MHz oscillation is reached. This value is measured for a standard crystal resonator and it can vary significantly with the crystal manufacturer.

For  $C_{L1}$  and  $C_{L2}$ , it is recommended to use high-quality external ceramic capacitors in the 10 pF to 20 pF range, designed for high-frequency applications, and selected to match the requirements of the crystal or resonator (see Figure 18).  $C_{L1}$  and  $C_{L2}$  are usually the same size. The crystal manufacturer typically specifies a load capacitance which is the series combination of  $C_{L1}$  and  $C_{L2}$ .

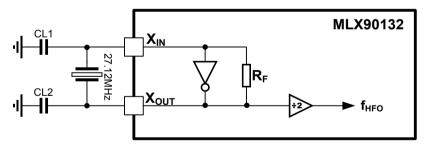


Figure 18: Typical application with a 27.12MHz crystal



### 13.56MHz RFID / NFC Transceiver

### 14 ESD Precautions

Electronic semiconductor products are sensitive to Electro Static Discharge (ESD).

Always observe Electro Static Discharge control procedures whenever handling semiconductor products.

# 15 Standard information regarding manufacturability of Melexis products with different soldering processes

Our products are classified and qualified regarding soldering technology, solderability and moisture sensitivity level according to following test methods:

### Reflow Soldering SMD's (Surface MountDevices)

- IPC/JEDEC J-STD-020
   Moisture/Reflow Sensitivity Classification for Nonhermetic Solid State Surface MountDevices (classification reflow profiles according to table 5-2)
- EIA/JEDEC JESD22-A113
   Preconditioning of Nonhermetic Surface MountDevices Prior to Reliability Testing (reflow profiles according to table 2)

#### Wave Soldering SMD's (Surface MountDevices) and THD's (Through Hole Devices)

- EN60749-20
   Resistance of plastic- encapsulated SMD's to combined effect of moisture and soldering heat
- EIA/JEDEC JESD22-B106 and EN60749-15
   Resistance to soldering temperature for through-hole mounted devices

#### Iron Soldering THD's (Through Hole Devices)

EN60749-15
 Resistance to soldering temperature for through-hole mounted devices

#### Solderability SMD's (Surface MountDevices) and THD's (Through Hole Devices)

 EIA/JEDEC JESD22-B102 and EN60749-21 Solderability

For all soldering technologies deviating from above mentioned standard conditions (regarding peak temperature, temperature gradient, temperature profile etc) additional classification and qualification tests have to be agreed upon with Melexis.


The application of Wave Soldering for SMD's is allowed only after consulting Melexis regarding assurance of adhesive strength between device and board.

Melexis recommends reviewing on our web site the General Guidelines <u>soldering recommendation</u> (<a href="http://www.melexis.com/Quality\_soldering.aspx">http://www.melexis.com/Quality\_soldering.aspx</a>) as well as <u>trim&form recommendations</u> (<a href="http://www.melexis.com/Assets/Trim-and-form-recommendations-5565.aspx">http://www.melexis.com/Assets/Trim-and-form-recommendations-5565.aspx</a>).

Melexis is contributing to global environmental conservation by promoting **lead free** solutions. For more information on qualifications of **RoHS** compliant products (RoHS = European directive on the Restriction Of the use of certain Hazardous Substances) please visit the quality page on our website: <a href="http://www.melexis.com/quality.aspx">http://www.melexis.com/quality.aspx</a>



# 16 Package Information

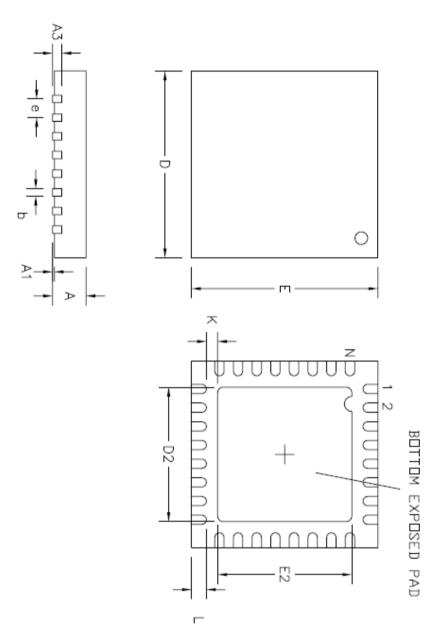

Moisture Sensitivity Level is MSL3, according as per IPC/JEDEC J-STD-20.

This table in mm

Туре	DxE	N	е		Α	A1	А3	D2	E2	L	K	b
quad	5 x 5	32	0.50	min	0.80	0.00	0.20	3.00	3.00	0.35	0.20	0.18
quau	OXO	(Opt B)	0.00	max	1.00	0.05	REF	3.20	3.20	0.45	_	0.30

Tolerance of D, E: +/- 0.1mm



### 13.56MHz RFID / NFC Transceiver

### 17 Disclaimer

Devices sold by Melexis are covered by the warranty and patent indemnification provisions appearing in its Term of Sale. Melexis makes no warranty, express, statutory, implied, or by description regarding the information set forth herein or regarding the freedom of the described devices from patent infringement. Melexis reserves the right to change specifications and prices at any time and without notice. Therefore, prior to designing this product into a system, it is necessary to check with Melexis for current information. This product is intended for use in normal commercial applications. Applications requiring extended temperature range, unusual environmental requirements, or high reliability applications, such as military, medical life-support or life-sustaining equipment are specifically not recommended without additional processing by Melexis for each application.

The information furnished by Melexis is believed to be correct and accurate. However, Melexis shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interrupt of business or indirect, special incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of Melexis' rendering of technical or other services.

© 2012 Melexis NV. All rights reserved.

### 18 Contact Information

For the latest version of this document, go to our website at: www.melexis.com

Or for additional information contact Melexis Direct:

Europe, Africa, Asia:	Americas:
Phone: +32 1367 0495	Phone: +1 248-306-5400
E-mail: sales europe@melexis.com	E-mail: sales usa@melexis.com

ISO/TS 16949 and ISO14001 Certified