



## **SPECIFICATIONS**

Model	Stroke mm	Max Energy Absorption J(kgf⋅m)	Max Equiv. Mass kg(kgf)	Range of Impact Rate m/s	Orifice Type
FWM-S1410RBD-C	10	5.88(0.6)	35(35)	0.3~2	Multiple- varying orifice type

## **COMMON SPECIFICATIONS**

Max Drag N(kgf)	Max Cycle Rate cycle/min	Max Energy Absorption per min. J/min(kgf·m/min)	Extension Force N(kgf)	Operating Temp. C°	Mass g
1813(185)	60	147(15)	9.8(1.0) or lower	-5~70	73

## **PRECAUTIONS FOR USE**

- Do not use this product in places where it may come in contact with oil as it does not have a liquid-proof structure.
- Please contact our sales department when the use of optional parts is planned.
- Although the dimensions are identical to those of the FA series standard products (adjustable), the FWM-S2016 series has a longer overall length.

## **ADJUSTMENT METHOD**

- Please peruse the operation manual carefully before use.
- Do not operate without sufficient mounting strength.
- Do not operate without an external stopper.
- Note that Products specification might be changed without notice.


## **ABSORPTION CHARACTERISTICS**

 
Orifice type	Multiple-orifice type	Absorption characteristics		
Model number	FWM-S1410RBD Series	Resistance		
Application	For medium speed, in particular with a pneumatic cylinder	Stroke		

#### **OPTIONAL PARTS**

#### **Eccentric angle adaptor OP-010RB**

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until it is secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is ±10°.
- The caps and the guides for inclined use are not unbundled.

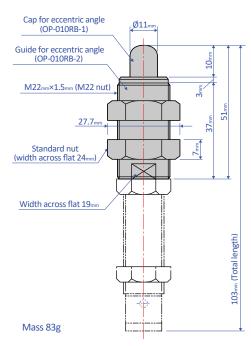





Note: Material of cap for eccentric angle: POM

#### **Stopper nut OP-020RB**

  Adjust so that it stops 1 mm before the stroke end, and fasten with the main unit's nut until secured.

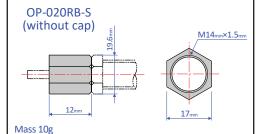




Mass 17g

Note: When attaching, make sure that the side without a bearing chamfer is the impact surface.

Standard nuts are sold separately as well - M14 Nut


## Liquid-proof cap FWM-1410RBD-C-060

- Ideal for use in environments where oil splatter poses a problem.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.

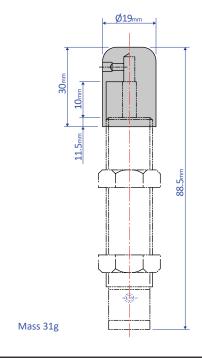

#### **Square flange OP-040RB**

Once the attachment site is determined, use the main unit's nut to securely fasten in place.

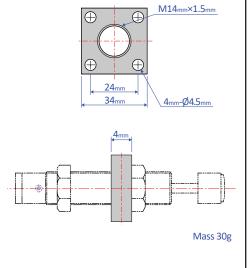

# Holder with a switch OP-030RB-2 (with a stopper function)

Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.

