
Technical Data Sheet

Rosenberger

Cable assembly
RPC-1.00 Plug – RTK 047-F – RPC-1.00 Jack

L70-287-XXX

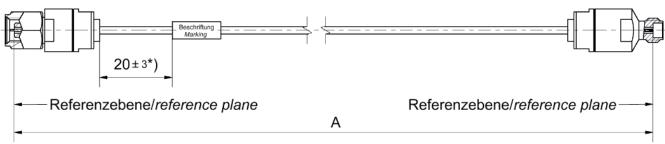

All dimensions are in mm; tolerances: \pm 3mm for A \leq 300 mm; \pm 1% for A > 300 mm *) If length "A" \leq 90 mm marking is mount centric \pm 5mm

Available variants

Туре	max. Insertion loss	Marking		Weight (g) / pce	
L70-287-XXX	~ (0 0000 (FCII 1 0 00000 (FCII 1)	ROSENBERGER L70-287-XXX	YYYY-WW sssss	$0.0056 \frac{g}{mm} * A[mm] + 6.20g$	

XXX – length in mm = A Maximum possible length = 6000mm WW – week YYYY – year sssss – serial no.

Note: Weight

First constant = Cable weight per mm; Second Constant = Connector left and Connector right weight per pce

Assembly parts

Connector left RPC-1.00 Plug
Connector right RPC-1.00 Jack
Cable RTK 047-F
Armour none

Electrical data

Impedance 50 Ω

Frequency DC to 110 GHz

Return loss¹ \geq 17 dB, DC to 50 GHz \geq 14 dB, 50 to 110 GHz Insertion loss¹ see table available variants

Individual testing and documentation:

Measurement plot with all 4 S – Parameters (S11; S22; S21; S12) is included with the cable assembly and on the backside the care and handling instruction is printed.

Mechanical data

Minimum bend radius static 7.0 mm
Minimum bend radius dynamic 14.0 mm

Environmental data

Temperature range - 40 °C to +125 °C RoHS compliant

While the information has been carefully compiled to the best of our knowledge, nothing is intended as representation or warranty on our part and no statement herein shall be construed as recommendation to infringe existing patents. In the effort to improve our products, we reserve the right to make changes judged to be necessary.

For the installation of the electrotechnical equipment, particular electrotechnical expertise is required.



Draft	Date	Approved	Date	Rev.	Engineering change number	Name	Date
Martin Moder	10.06.15	Ronny Mark	14.12.22	d00	22-2195	Marion Striegler	14.12.22

Rosenberger Hochfrequenztechnik GmbH & Co. KG P.O.Box 1260 D-84526 Tittmoning Germany www.rosenberger.com

Tel.: +49 8684 18-0 Email: info@rosenberger.com Page

1 / 1

¹ Return Loss and Insertion Loss includes the measurement adaptor