



NOTES:

1. OPERATION

- 1. GENTLY LIFT LATCH AT SIDE OF CONNECTOR.
- 2. SWING COVER OFF OF CONTACTS.
- 3. SLIDE THE FLEX TAPE INTO THE CONNECTOR PLACING THE EDGE OF THE FLEX TAPE UNDER 2 HOLD DOWN TABS. MAKE SURE THE POLARITY IS MATCHED BETWEEN THE FLEX TAPE AND THE CONNECTOR COVER.
- 4. FOLD OVER THE COVER AND PRESS IN PLACE UNTIL THE LATCH IS FULLY ENGAGED.
- 2. LIMIT CURRENT TO A MAXIMUM OF 5 AMPS.

JKL PART NO.: ZFS-CH140-8I

			METRIC	DIMENSIONS ARE IN mm (INCHES) TOLERANCE UNLESS		JKL COMPONENTS CORPORATION						
			4 7	OTHERWISE SPECIFIED 1 PL +/- REF.		TITLE	NO SOLDER 8MM FLEX TAPE					
			THIRD ANGLE PROJECTION	2 PL +/- REF. ANGLE +/-		INPUT CONNECTOR						
			DRAWN BY L. WENGSTROM	APPV'D BY	DATE 3/5/13	SIZE		DRAWING NO.	ZFS-CH140-8I			
REV.	RELEASE & CANCEL PL-1301-03 DESCRIPTION/ECO	3/5/13 APPV'D	- CAD D		SCALE		RELEASED	REVISION	REV.	SHEET		
NO.	NUMBER	DATE	MANUAL REVISIONS NOT PERMITTED				NONE	DATE 3/5/13	DATE	NO.	1 of 1	