





SPECIFICATIONS

| COSTONIER : | |
|-------------|--------------------|
| MODEL NO. : | GFR128032CA-BNFA02 |
| VERSION : | В |
| | |

DATE : 2022.05.31

CERTIFICATION : ROHS

| Customer Sign | Approved By | Prepared By | Prepared By |
|---------------|---------------------------------|--------------------------------|--------------------------------|
| | GIF A R 2022.05.31 Sidney | GIF A R 2022.05,31 Roger | GIF A R 2022.05.31 Hazel |

晶 發 科 技 股 份 有 限 公 司 GI FAR TECHNOLOGY CO.,LTD

新北市樹林區東豐街81號

No. 81, Dongfeng St, Shulin District, 238034, New Taipei City, Taiwan, R.O.C. TEL: +886-2-8684-1188 FAX: +886-2-8684-8532

PAGE 1/23 P-18-09B



晶 發 科 技 股 份 有 限 公 司 GI FAR TECHNOLOGY CO., LTD. No. 81, Dongfeng St, Shulin District, 238034, New Taipei City, Taiwan, R.O.C.







Revision Record

| Data(y/m/d) | Ver. | Description | Note | page |
|-------------|------|---|------|-------------------------|
| 2018.03.12 | A | New | | |
| 2022.05.31 | В | 1.Modify command description LCD12232 → LCD12832. 122 (0x7A) → 128 (0x80). 2.增加晶發信賴性測試標準 8.Reliability | | 6 · 9 · 12 · 16 · 20 |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

PAGE 2/23 P-18-09B



晶 發 科 技 股 份 有 限 公 司 GI FAR TECHNOLOGY CO., LTD.


No. 81, Dongfeng St, Shulin District, 238034, New Taipei City, Taiwan, R.O.C.







OUTLINE DRAWING

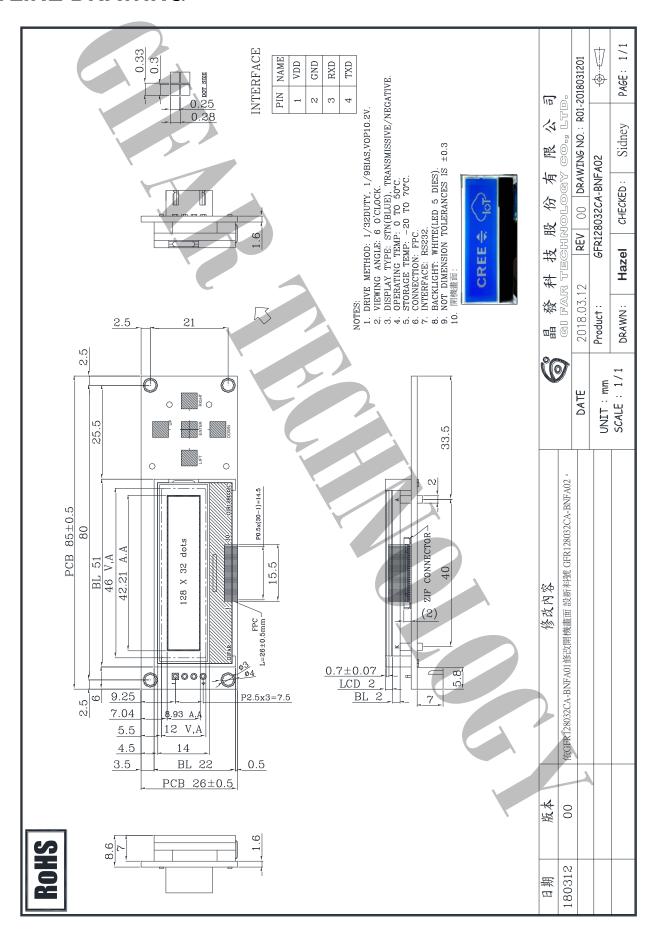

PAGE 3/23 P-18-09B











| 1.Introduction | |
|--|-----|
| 1.1.Introduction | 5 |
| 1.2.Features | . 5 |
| 1.3.Startup screen | . 5 |
| 2.Module Programming | . 6 |
| 2.1.Command Sending | . 6 |
| 2.2.Flowchart | . 6 |
| 3.Text Mode | |
| 3.1.Built in Characters | 7 |
| 3.2.Writing Text to GFR128032CA-BNFA02 | |
| 3.3.Text Commands | . 8 |
| 4.Bar Charts, User Defined Characters and Graphics | 9 |
| 4.1.Introduction | 9 |
| 4.2.Command List | . 9 |
| 5.Miscellaneous Commands | 12 |
| 5.1.General Command List | 12 |
| 5.2.Backlight Command List | 13 |
| 5.3.Keypad Command List | 13 |
| 5.4.Non-Volatile Memory Command List | 14 |
| 6.Command Summary | 15 |
| 6.1.Text Command Summary | 15 |
| 6.2.Bar Charts and Graphic Command Summary | 16 |
| 6.3.Miscellaneous Command Summary | 17 |
| 6.4.Text Mode Coordinates | |
| 7.LCD Specifications | 19 |
| 7.1.Features | |
| 7.2.Mechanical Specifications | 19 |
| 7.3.Absolute Maximum Ratings | 19 |
| 7.4.Luminance | 19 |
| | 20 |
| 9. Package information | 21 |
| 10. Notes | |
| 11. Operation Precautions | 22 |
| Chapter 8 Appendix | 23 |

Appendix : Inspection Standard











1. Introduction

1.1. Introduction

The GFR128032CA-BNFA02 is a graphical LCD which user can show both text and graphics at the same time via a connection of a computer/appliance/server. The module includes a set of simple commands that allows user to develop his own LCD environment easily.

1.2. Features

- 21 columns × 4 lines text display
- 128 × 32 dots graphic display
- Text wrap, scroll and inverse capability
- Built in characters plus 16 user defined characters
- Communicate over RS232 interface
- Baud rate speed selection between 9600 and 19200 bps
- Programmable on/off and brightness of the LED backlight
- Horizontal and vertical bar charts
- 32 bytes reserved non-volatile memory spaces for user settings
- 5 buttons keypad
- Fit in a standard 3.5" floppy drive bay

1.3. startup screen



PAGE 5/23 P-18-09B








2. Module Programming

2.1. Command Sending

Commands are sent via the RS232 port together with 2 other numbers, the command starts with [254] and ends at [253]. For example, in PC, user will need to write the following lines in order to send a complete command to LCD12832.

2.2. Flowchart

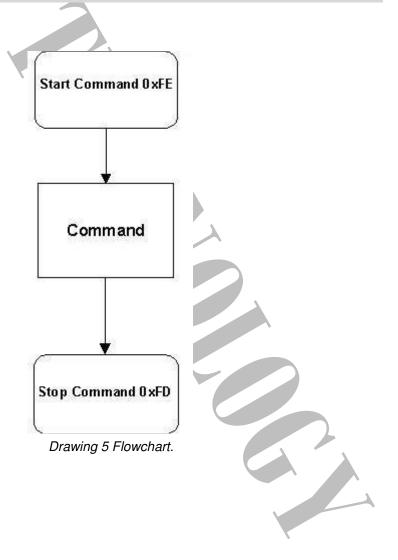

PAGE 6/23 P-18-09B



晶 發 科 技 股 份 有 限 公 司 GI FAR TECHNOLOGY CO., LTD.

No. 81, Dongfeng St, Shulin District, 238034, New Taipei City, Taiwan, R.O.C.







3. Text Mode

3.1. Built in Characters

Size of all built in characters is defined by a 6 x 8 dot matrix. User is required to send the ASCII code of the corresponding character in order to display it. Details of the ASCII information of each character are listed as the following table. A font table is available in the appendix of this manual. Note: UD stands for User Defined.

| ASCII | Character | ASCII | Character | ASCII | Character | ASCII | Character |
|-------|-----------|-------|-----------|-------|-----------|-------|-----------|
| 1 | UD | 44 | , | 72 | н | 100 | d |
| 2 | UD | 45 | - | 73 | ı | 101 | e |
| 3 | UD | 46 | | 74 | J | 102 | f |
| 4 | UD | 47 | 1 | 75 | к | 103 | g |
| 5 | UD | 48 | 0 | 76 | L | 104 | h |
| 6 | UD | 49 | 1 | 77 | М | 105 | i |
| 7 | UD | 50 | 2 | 78 | N | 106 | j |
| 8 | UD | 51 | 3 | 79 | 0 | 107 | k |
| 9 | UD | 52 | 4 | 80 | Р | 108 | I |
| 10 | UD | 53 | 5 | 81 | Q | 109 | m |
| 11 | UD | 54 | 6 | 82 | R | 110 | n |
| 12 | UD | 55 | 7 | 83 | s | 111 | o |
| 13 | UD | 56 | 8 | 84 | Т | 112 | р |
| 14 | UD | 57 | 9 | 85 | U | 113 | q |
| 15 | UD | 58 | : | 86 | v | 114 | r |
| 16 | UD | 59 | ; | 87 | w | 115 | s |
| 32 | [space] | 60 | < | 88 | x | 116 | t |
| 33 | ! | 61 | = | 89 | Y | 117 | u |
| 34 | 66 | 62 | > | 90 | z | 118 | v |
| 35 | # | 63 | ? | 91 |] | 119 | w |
| 36 | \$ | 64 | @ | 92 | 1 | 120 | x |
| 37 | % | 65 | Α | 93 |] | 121 | у |
| 38 | & | 66 | В | 94 | ^ | 122 | z |
| 39 | | 67 | С | 95 | _ | 123 | { |
| 40 | (| 68 | D | 96 | ` | 124 | I |
| 41 |) | 69 | E | 97 | a | 125 | } |
| 42 | * | 70 | F | 98 | b | 126 | ~ |
| 43 | + | 71 | G | 99 | С | | |

Table 1 Characters table

Apart from the built in characters listed in the above table, user can define his own characters in spaces from [0x01] to [0x10]. Details of how to define a character may refer to section 4.2.7.

PAGE 7/23 P-18-09B







No. 81, Dongfeng St, Shulin District, 238034, New Taipei City, Taiwan, R.O.C.

3.2. Writing Text to GFR128032CA-BNFA02

When user sends a character to GFR128032CA-BNFA02, it displays at location which specified before. The next character will automatically display at the location next to the previous character. Characters which are drawn please refer to the built in characters table showed above. User is required to define his own character sets before he can show it.

3.3. Text Commands

User may use the following commands to program GFR128032CA-BNFA02. It is recommended to read chapter 2 to have better knowledge of how to send these commands accordingly. The numbers showed below are measured in decimal. A summary of different kinds of number system is shown in chapter 6.

3.3.1. Auto Line Wrap ON (254 67 253)

This command enables word wraps to next line when character reaches the end of a line. Default is OFF.

3.3.2. Auto Line Wrap OFF (254 68 253)

Disables line wrap. Character will return to the first position of the original line if it reaches the end of a line. Default is OFF.

3.3.3. Auto Scroll ON (254 81 253)

This command allows GFR128032CA-BNFA02 to shift the entire screen one line up if character reaches the last character position of the fourth line. Default is OFF.

3.3.4. Auto Scroll OFF (254 82 253)

Character will wrap up to the first character position of the first line if the character reaches the last character position of the fourth line. Default is OFF.

3.3.5. Text Insertion Point (254 71 [column] [row] 253)

This command moves the text insertion point to the location which specified by [column] and [row]. Column has the value ranging from 0 (0x00) to 19 (0x13) and row has the value ranging from 0 (0x00) to 3 (0x03).

3.3.6. Set Text Insertion Point to Top Left (254 72 253)

This command sets the text insertion point to top left of the LCD. ie. [column] = 0 and [row] = 0.

3.3.7. Turn On Underline Cursor (254 74 [column] [row] 253)

Turn on the underline cursor at position [column] and [row]. Default is OFF.

3.3.8. Turn Off Underline Cursor (254 75 253)

Turn off the underline cursor. Default is OFF.

3.3.9. Move Cursor Left (254 76 253)

Move the underline cursor to left.

3.3.10. Move Cursor Right (254 77 253)

Move the underline cursor to right.

3.3.11. Turn On Text Inverse (254 102 253)

Turn on text inverse mode. Color of character displayed will be inversed if this option is enabled. That is, dots which are originally ON will be OFF and dots which are originally OFF will be ON. Notice the command will only valid from ASCII character 32 to 126. It has no effect on user defined characters. Default is OFF.

3.3.12. Turn Off Text Inverse (254 103 253)

Turn off text inverse mode. Default is OFF.

P-18-09B PAGE 8/23



EN/AS/JISQ 9100
Aerospace Au
Afnor certification Afnor





4. Bar Charts, User Defined Characters and Graphics

4.1. Introduction

The GFR128032CA-BNFA02 offers the ability of drawing horizontal graphs, vertical graph and text simultaneously on the same screen. Details of how to draw the graphs are described as the followings.

4.2. Command List

4.2.1. Initialize Wide Vertical Bar Graph (254 118 253)

This command defines the width of the vertical bar to 5 pixels. Default is ON.

4.2.2. Initialize Narrow Vertical Bar Graph (254 115 253)

This command defines the width of the vertical bar to 2 pixels. Default is OFF.

4.2.3. Draw Vertical Bar Graph (254 61 [column] [height] 253)

The vertical bar graph is drawn at position [column] and row = 3 (bottom of the screen) with the height [height] specified. The height can be ranging from 0 (0x00) to 32 (0x20).

4.2.4. Erase Vertical Bar Graph (254 45 [column] [height] 253)

The vertical bar graph is erased at position [column] and row = 3 (bottom of the screen) with the height [height] specified. The height can be ranging from 0 (0x00) to 32 (0x20).

4.2.5. Draw Horizontal Bar Graph (254 124 [column] [row] [length] 253)

The horizontal bar graph is drawn at position [column] and [row] with length [length] and goes from left to right. The length can be ranging from 0 (0x00) to 128 (0x80)

4.2.6. Erase Horizontal Bar Graph (254 43 [column] [row] [length] 253)

The horizontal bar graph is erased at position [column] and [row] with length [length] and goes from left to right. The length can be ranging from 0 (0x00) to 128 (0x80)

4.2.7. Define Custom character (254 78 [cc] [6 bytes] 253)

The GFR128032CA-BNFA02 allows user to define 16 extra characters by himself. These defined characters are stored in location starting from [0x01] to [0x10] with the ASCII value listed in Table 1.

PAGE 9/23 P-18-09B



晶 發 科 技 股 份 有 限 公 司 GI FAR TECHNOLOGY CO., LTD.








No. 81, Dongfeng St, Shulin District, 238034, New Taipei City, Taiwan, R.O.C.

The characters are defined by sending the command 254 78 [cc] followed by 6 bytes. [cc] is the character number starting from [0x01] to [0x10]. The 6 bytes are mapped as the following table.

| | A 1 | | | | | |
|-----------|-----|----|----|----|----|----|
| Data Byte | 1 | 2 | 3 | 4 | 5 | 6 |
| LSB | 1 | 9 | 17 | 25 | 33 | 41 |
| | 2 | 10 | 18 | 26 | 34 | 42 |
| | 3 | 11 | 19 | 27 | 35 | 43 |
| | 4 | 12 | 20 | 28 | 36 | 44 |
| | 5 | 13 | 21 | 29 | 37 | 45 |
| | 6 | 14 | 22 | 30 | 38 | 46 |
| | 7 | 15 | 23 | 31 | 39 | 47 |
| MSB | 8 | 16 | 24 | 32 | 40 | 48 |
| | | | | | | |

Table 2 User defined characters bit mapping.

A "1" bit represents an **ON** (Dark) pixel while a "0" represents an **OFF** (Clear) pixel. For instance, if user wants to define the following heart in the character space 0x01, he may need to send the following bytes to GFR128032CA-BNFA02.

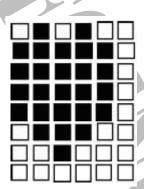

Oxfe [start byte],

0x4e [command byte],

0x01 [character location],

0x1e, 0x3f, 0x7e, 0x3f, 0x1e, 0x00 [6 bytes],

0xfd[stop byte]

Once defined, a character can be displayed simply by sending a value within [0x01] and [0x10], which is corresponding to the character number.

PAGE 10/23 P-18-09B




晶 發 科 技 股 份 有 限 公 司GI FAR TECHNOLOGY CO., LTD.








No. 81, Dongfeng St, Shulin District, 238034, New Taipei City, Taiwan, R.O.C.

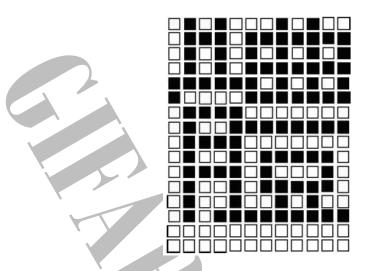

User may also define 4 characters as 1 Chinese character, see the example below,

The above Chinese character composes 4 general character spaces. So, user may simply define 4 characters starting from [cc] = 0x01 to 0x04. And, display the 4 characters accordingly onto the display.

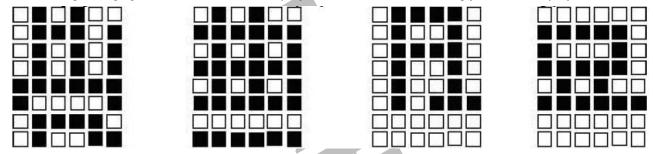

Say, if user wants to display this Chinese character in position [0,0], then set the following commands, Configure the 4 characters accordingly as above.

Set text insertion point to top left (254 72 253)

0x01

0x02

Set text insertion point to the first position of the 2nd row (254 71 [0x00] [0x01] 253)

0x03

0x04

4.2.8. Put Pixel (254 112 [x] [y] 253)

This command draws a pixel (turns on the pixel) at location (x, y). x is ranging from 0 (0x00) to 121 (0x79) and y is ranging from 0 (0x00) to 31 (0x1F).

4.2.9. Clear Pixel (254 113 [x] [y] 253)

This command clears the pixel (turns off the pixel) at location (x, y). x is ranging from 0 (0x00) to 121 (0x79) and y is ranging from 0 (0x00) to 31 (0x1F).

4.2.10. Draw Byte (254 62 [x] [row] [byte] [4 dummy bytes] 253)

This command allows user to draw a single byte on GFR128032CA-BNFA02 at location specified by [x] and [row]. [x] ranges from 0 to 121 and [row] ranges from 0 to 3. For this command, 4 dummy bytes are required to send and these 4 bytes are "DON'T CARE" for the GFR128032CA-BNFA02.

PAGE 11/23 P-18-09B







5. Miscellaneous Commands

5.1. General Command List

5.1.1. Read Model Number (254 48 253)

This command enables user to read back the model number of GFR128032CA-BNFA02. 2 bytes 128 [0x80] and 32 [0x20], which represent matrix size, will be sent accordingly from GFR128032CA-BNFA02 to the host after this request command is sent.

5.1.2. Read Firmware Version (254 49 253)

This command enables user to read back the firmware version of GFR128032CA-BNFA02. For example, 2 bytes 0x01 and 0x00, which represent version V1.0, will be sent accordingly from GFR128032CA-BNFA02 to the host after this request command is sent.

5.1.3. Soft Reset (254 86 253)

This command resets the GFR128032CA-BNFA02. Everything will start from startup screen again.

5.1.4. Clear Display (254 88 253)

This command clears the entire screen and set the text insertion point to top left. ie. [Column] = 0 and [Row] = 0.

5.1.5. Set Display Contrast (254 104 [contrast] 253)

This command sets the contrast of the display. Contrast values are ranged from 0x00 to 0x1C. 0x1C being the brightest.

5.1.6. Set RS232 port speed (254 57 [speed] 253)

This command sets the RS232 port speed specified by [speed]. [speed] is a single byte which specifies a desired port speed. Details of [speed] can refer to the following table.

| Speed Byte | Baud Rate |
|------------|-----------|
| 0x20 | 9600 |
| 0x0F | 19200 |

Table 3 Baud rate table. Default is 19200.

5.1.7. Save screen as boot-up logo(254 106 253)

This command stores whatever shows on the current screen to the non-volatile memory as the boot-up logo.

One way to define your own boot up logo is to draw your own boot up logo on the screen using the Draw Byte command. After verifying the screen is displaying the correct graphics, issue the "save screen as bootup logo".

254 106 253

The graphics currently displayed on the screen is saved to the non-volatile memory as the boot-up logo.

5.1.8. Display boot-up logo(254 105 253)

This command displays the boot-up logo on the screen.

5.1.9. Restore factory default boot-up logo(254 107 253)

This command erases the user-defined boot-up logo, and restores the factory default boot-up logo.

PAGE 12/23 P-18-09B



EN/AS/JISQ9100
Aerospace
AFNOR CERTIFICATION





5.2. Backlight Command List

5.2.1. Backlight On (254 66 253)

This command turns on the LED backlight of the LCD with maximum brightness. Default is ON.

5.2.2. Backlight Off (254 70 253)

This command turns off the LED backlight of the LCD. Default is OFF.

5.2.3. Backlight Brightness (254 65 [brightness] 253)

User can adjust the brightness of the backlight LED by sending this command with 7 levels of brightness. [brightness] ranges from 1 to 7 and 7 is the maximum while 1 is the minimum. Please notice the maximum brightness can be obtained by the backlight on command and minimum brightness is obtained by the backlight off command.

5.3. Keypad Command List

5.3.1. Auto Key Hold On (254 50 253)

This command enables the GFR128032CA-BNFA02 to send a character back continuously for every 0.5s if one of the keys on the keypad is continuously hold down. **Default is OFF.**

5.3.2. Auto Key Hold Off (254 51 253)

This command makes the GFR128032CA-BNFA02 only to send a single character back when one of the keys on the keypad is pressed or continuously hold down. **Default is OFF.**

5.3.3. Keypad Mapping

GFR128032CA-BNFA02 produces a single ASCII character while anyone of the keys is pressed. The single bay panel buttons will produce the following characters. Notice all buttons have no direct effect on the display.

Characters are only sent to PC's serial input. User must provide a control program in PC such that correlates the button pressed to the desire function.

| Key | Character Return |
|---------|---------------------|
| Up | "A" (Dec 65, 0x41h) |
| Down | "B" (Dec 66, 0x42h) |
| Left | "C" (Dec 67, 0x43h) |
| Right | "D" (Dec 68, 0x44h) |
| Confirm | "E" (Dec 69, 0x45h) |

Table 4 Keypad character return.

PAGE 13/23 P-18-09B









5.4. Non-Volatile Memory Command List

5.4.1. Save User Defined Character in Non-Volatile Memory (254 79 [cc] 253)

User can save his predefined characters in the non-volatile memory and this will save much time in redefining it again after the power of GFR128032CA-BNFA02 is switched off and on. [cc] is the character number starting from [0x01] to [0x10].

5.4.2. Load User Defined Character in System RAM (254 80 [cc] 253)

During power up, user can load his predefined characters from non-volatile memory into the system RAM by sending this command to GFR128032CA-BNFA02. [cc] is the character number starting from [0x01] to [0x10].

5.4.3. Save User Settings in Non-Volatile Memory (254 83 [ud] [4 bytes] [2 dummy bytes] 253)

The GFR128032CA-BNFA02 reserves 32 bytes of non-volatile memory for arbitrary use by the host. This memory could be used to store a serial number, IP address, gateway address, netmask or any other data required.

[ud], which starts from 1 [0x01] to 8 [0x08], is the location of a data.

5.4.4. Read User Settings from Non-Volatile Memory (254 84 [ud] 253)

User predefined settings can be retrieved by sending this command to GFR128032CA-BNFA02. [ud] is the location

of the data. 4 bytes will be sent from GFR128032CA-BNFA02 to the host right after the command is sent.

PAGE 14/23 P-18-09B



晶 發 科 技 股 份 有 限 公 司 GI FAR TECHNOLOGY CO., LTD. No. 81, Dongfeng St, Shulin District, 238034, New Taipei City, Taiwan, R.O.C.

AFAQ EN/AS/JISQ 9100 Aerospace AFNOR CERTIFICATION AF





6. Command Summary

6.1. Text Command Summary

| Command | Syntax | Default | Description |
|---|-------------------------|---------|---|
| Auto line wrap on | FE 43 FD | off | Enables line wrapping. |
| | 254 67 253 | | Character will wrap to first position of next line if |
| | 254 'C' 253 | | it reaches the end of a line. |
| Auto line wrap off | FE 44 FD | off | Disables line wrapping. |
| | 254 68 253 | 7 | Character will go to the first position of the |
| | 254 'D' 253 | | original line if it reaches the end of a line. |
| Auto scroll on | FE 51 FD | off | Enables line scrolling. |
| | 254 81 253 | | Shift entire screen up by 1 line to make room for |
| | 254 'Q' 253 | | the last row. |
| Auto scroll off | FE 52 FD | off | Disables line scrolling |
| Lo Balderie Vice (1995 B. Petronia I. Vice (1995) | 254 82 253 | | |
| | 254 'R' 253 | | |
| Set text insertion point | FE 47 [col] [row] FD | N/A | Sets the text insertion point to [col] and [row]. |
| | 254 71 253 | | |
| | 254 'G' 253 | | |
| Set text insertion point home | FE 48 FD | N/A | Sets the text insertion point to [0] and [0]. |
| • | 254 72 253 | 7 | |
| | 254 'H' 253 | 1 | |
| Underline cursor on | FE 4A [col] [row] FD | off | Turns on the underline cursor and sets it at |
| | 254 74 [col] [row] 253 | | [col] and [row]. |
| | 254 'J' [col] [row] 253 | | |
| Underline cursor off | FE 4B FD | off | Turns off the underline cursor. |
| | 254 75 253 | | |
| | 254 'K' 253 | 7 | |
| Cursor left | FE 4C FD | N/A | Moves the underline cursor to left. It will move to |
| | 254 76 253 | | the end of the same line if it reaches the |
| | 254 'L' 253 | 3 | beginning of a line. |
| Cursor right | FE 4D FD | N/A | Moves the underline cursor to right. It will move |
| | 254 77 253 | 4 | to the beginning of the same line if it reaches the |
| | 254 'M' 253 | | end of a line. |
| Inverse text on | FE 66 FD | off | Text inverse on. |
| | 254 102 253 | | |
| | 254 'f' 253 | | |
| Inverse text off | FE 67 FD | off | Text inverse off. |
| | 254 103 253 | | |
| | 254 'g' 253 | | |

Table 5 Summary for text commands

PAGE 15/23 P-18-09B



晶 發 科 技 股 份 有 限 公 司 GI FAR TECHNOLOGY CO., LTD. No. 81, Dongfeng St, Shulin District, 238034, New Taipei City, Taiwan, R.O.C.







6.2. Bar Charts and Graphic Command Summary

| Command | Syntax | Default | Description |
|----------------------------------|-----------------------------------|---------|--|
| Initial thick vertical bar graph | FE 76 FD | on | Initializes 5 pixels width as the vertical bar. |
| | 254 118 253 | | |
| | 254 'V' 253 | | |
| Initial thin vertical bar graph | FE 73 FD | off | Initializes 2 pixels width as the vertical bar. |
| | 254 115 253 | | |
| | 254 's' 253 | | |
| Define custom character | FE 4E [cc] [6 bytes] FD | N/A | Defines custom character. [cc] goes from [|
| | 254 104 [cc] [6 bytes] 253 | | [0x01] to 0x10]. The other 6 bytes are |
| | 254 'N' [cc] [6 bytes] 253 | | described in section 4.2.7 |
| Draw vertical bar graph | FE 3D [col] [height] FD | N/A | Draws vertical bar at position [col] of the last |
| | 254 61 [col] [height] 253 | | row with height [height]. [height] ranges from |
| | 254 '=' [col] [height] 253 | | [0x00] to [0x20]. |
| Erase vertical bar graph | FE 2D [col] [height] FD | N/A | Erases vertical bar at position [col] of the last row with |
| | 254 45 [col] [height] 253 | | height [height]. [height] ranges from [0x00] to |
| | 254 '-' (col) [height] 253 | | [0x20]. |
| Draw horizontal bar graph | FE 7C [col] [row] [len] FD | N/A | Draws horizontal bar at position [col] and [row] |
| | 254 124 [col] [row] [len] 253 | | With length [length]. [length] ranges from |
| | 254 ' ' [col] [row] [len] 253 | | [[0x00] to[0x80]]. |
| Erase horizontal bar graph | FE 2B [col] [row] [len] FD | N/A | Erases horizontal bar at position [col] and [row] with |
| | 254 43 [col] [row] [len] 253 | | length [length]. [length] ranges from [0x00] to |
| | 254 '+' [col] [row] [len] 253 | | [0x80]. |
| Put pixel | FE 70 [x] [y] FD | N/A | Draws a pixel at location (x,y). x ranges from 0 |
| | 254 112 [x] [y] 253 | | to 121 and y ranges from 0 to 31. |
| | 254 'p' [x] [y] 253 | | |
| Clear pixel | FE 71 [x] [y] FD | N/A | Clears a pixel at location (x, y). x ranges from |
| | 254 113 [x] [y] 253 | | 0 to 121 and y ranges from 0 to 31. |
| | 254 'q' [x] [y] 253 | | |
| Draw byte | FE 3E [x] [row] [byte] [4 dummy | N/A | Draws a byte at location (x, row). x ranges |
| | bytes] FD | | |
| | 254 62 [x] [row] [byte] [4 dummy | | from 0 to 121 and row ranges from 0 to 3. |
| | bytes] 253 | | |
| | 254 '>" [x] [row] [byte] [4 dummy | | |
| | bytes] 253 | | |

Table 6 Summary for graphic commands



PAGE 16/23 P-18-09B



晶 發 科 技 股 份 有 限 公 司 GI FAR TECHNOLOGY CO., LTD. No. 81, Dongfeng St, Shulin District, 238034, New Taipei City, Taiwan, R.O.C.

EN/AS/JISQ 9100
Aerospace
AFNOR CERTIFICATION
AF





6.3. Miscellaneous Command Summary

| Command | Syntax | Default | Description |
|------------------------------|--------------------------|---------|---|
| Read Model Number | FE 30 FD | N/A | Reads 2 bytes back from LCD |
| | 254 48 253 | | |
| | 254 '0' 253 | | |
| Read Firmware Version | FE 31 FD | N/A | Reads 2 bytes back from LCD |
| | 254 49 253 | | |
| | 254 '1" 253 | | |
| Soft Reset | FE 56 FD | N/A | Resets GFR128032CA-BNFA02 |
| | 254 86 253 | | |
| | 254 'V' 253 | | |
| Clear display | FE 58 FD | off | Clears screen of LCD and places the text |
| | 254 88 253 | | insertion point to top left. |
| | 254 'X' 253 | | |
| Backlight on | FE 42 FD | on | Turns on the backlight. |
| | 254 66 253 | | |
| | 254 'B' 253 | | |
| Backlight off | FE 46 FD | off | Turns off the backlight. |
| | 254 70 253 | | |
| | 254 'F' 253 | | |
| Backlight brightness | FE 41 [brightness] FD | N/A | Adjust LED brightness. [brightness] ranges from |
| | 254 64 [brightness] 253 | | 1 to 7. |
| | 254 'A' [brightness] 253 | | |
| Auto key hole on | FE 32 FD | off | Auto key hold on. |
| | 254 50 253 | | |
| | 254 '2' 253 | | |
| Auto key hold off | FE 33 FD | off | Auto key hold off. |
| | 254 51 253 | | |
| | 254 '3' 253 | | |
| Set RS232 port speed | FE 39 [speed] FD | 19200 | Sets RS232 port speed. Refer to section 5.1.6 |
| | 254 57 [speed] 253 | | for details. |
| | 254 '9' [speed] 253 | | |
| Save user defined characters | FE 4F [cc] FD | N/A | Save user defined characters. [cc] ranges from |
| | 254 79 [cc] 253 | | 1 to 16. |
| | 254 'O' [cc] 253 | | |
| Load user defined characters | FE 50 [cc] FD | N/A | Load user defined characters. [cc] ranges from |
| | 254 80 [cc] 253 | | 1 to 16. |
| | 254 'P' [cc] 253 | | |



PAGE 17/23 P-18-09B



晶發科技股份有限公司 GI FAR TECHNOLOGY CO., LTD. No. 81, Dongfeng St, Shulin District, 238034, New Taipei City, Taiwan, R.O.C.








| Save user settings | FE 53 [ud] [4 bytes] [2 dummy bytes] FD | N/A | Save user settings. User is required to save 4 bytes at a time. |
|------------------------------|---|-----|---|
| | 254 83 [ud] [4 bytes] [2 dummy bytes] 253 | | [ud] ranges from 1 to 8. |
| | 254 'S' [ud] [4 bytes] [2 dummy bytes] 253 | | |
| Read user settings | FE 54 [ud] FD | N/A | Read user settings. 4 bytes are returned at |
| | 254 84 [ud] 253 | | each time. |
| | 254 'T' [ud] 253 | | |
| Set Contrast | FE 68 [contrast] FD | N/A | Set display contrast, range 0x00 - 0x1C |
| | 254 104 253 | | |
| | 254 'h' 253 | | |
| Save boot-up logo | FE 6A FD | N/A | Save current screen as boot-up logo |
| | 254 105 253 | | |
| | 254 'i' 253 | | |
| Display boot-up logo | FE 69 FD | N/A | Draw the boot-up logo on display |
| | 254 106 253 | | |
| | 254 'j' 253 | | |
| Restore factory default logo | FE 6B FD | N/A | Restore factory default boot-up logo. |
| | 254 107 253 | | |
| 9 | 254 'k' 253 | | |

Table 7 Summary for miscellaneous commands

Connector CN1

| No | Signal |
|----|--------|
| 1 | DC 5V |
| 2 | GND |
| 3 | RXD |
| 4 | TXD |

6.4. Text Mode Coordinates

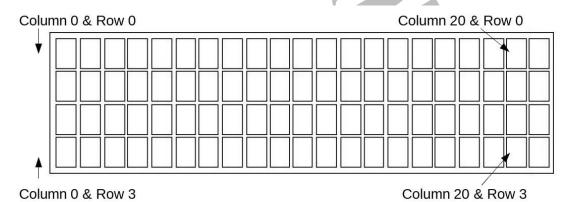

P-18-09B PAGE 18/23



晶 發 科 技 股 份 有 限 公 司 GI FAR TECHNOLOGY CO., LTD.







No. 81, Dongfeng St, Shulin District, 238034, New Taipei City, Taiwan, R.O.C.

7. LCD Specifications

7.1. Features

- Full dot-matrix structure with 128 x 32 dots
- 1/64 Duty, 1/9 bias
- STN LCD, Negative, BLUE
- Transmissive LCD
- 6 o' clock viewing angle
- Built-in LED backlight

7.2. Mechanical Specifications

| Item | Detail | Unit |
|--------------|--------------|------|
| Viewing area | 46.0 x 12 | mm |
| Active area | 42.21 x 8.93 | mm |

Table 8 Mechanical Specifications

7.3. Absolute Maximum Ratings


| Item | Min. | Typ | Max. | Unit |
|-------------------------|------|------|------|-------|
| | | Тур. | | Offic |
| Supply voltage | 4.5 | 5 | 5.5 | V |
| Supply current (BL off) | _ | 20 | 22 | mA |
| Supply current (BL on) | | 50 | 55 | mA |
| Operating temperature | | 0 | 50 | οС |
| Storage temperature | | -20 | 70 | οС |
| Humidity | | | 90 | %RH |

Table 9 Absolute Maximum Ratings

7.4. Luminance

| Item | Min. | Тур. | Unit |
|-----------|------|------|-------------------|
| Luminance | 160 | 254 | cd/m ² |

Table 10 Luminance

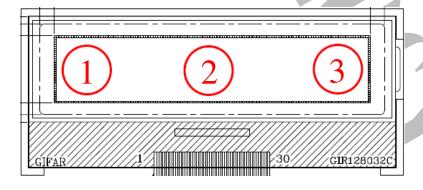

[亮度取3點平均]

PAGE 19/23 P-18-09B



晶 發 科 技 股 份 有 限 公 司 GI FAR TECHNOLOGY CO., LTD. No. 81, Dongfeng St, Shulin District, 238034, New Taipei City, Taiwan, R.O.C.







8. Reliability

| NO. | ITEM | CONE | DITION | STANDARD | NOTE | | | |
|-----|------------------------------------|----------------|-------------------------|------------------------------|-----------|--|--|--|
| 1 | High Temp. Storage | 70℃ | 120 hrs | Appearance Without defect | | | | |
| 2 | Low Temp. Storage | -20°C | 120 hrs | Appearance Without defect | | | | |
| 3 | High Temp. & High Humi. Storage | 40°C 90% RH | 120 hrs | Appearance Without defect | | | | |
| 4 | High Temp. Operating Display | 50℃ | 120 hrs | Appearance Without defect | | | | |
| 5 | Low Temp. Operating Display | 0℃ | 120 hrs | Appearance Without defect | | | | |
| 6 | Thermal Shock | A | → 50°C ,30min. vcle) | Appearance Without defect | 10 cycles | | | |

^{**} Dissipation current, contrast and display functions

PAGE 20/23 P-18-09B

^{**} Polarizing filter deterioration, other appearance defects

^{**} The function test shall be conducted after 4hours storage at the normal temperature and humidity after remove from the test chamber.




晶發科技股份有限公司 GI FAR TECHNOLOGY CO., LTD. No. 81, Dongfeng St, Shulin District, 238034, New Taipei City, Taiwan, R.O.C.







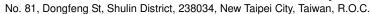

9. PACKAGE INFORMATION

| 1 | 1 Tray : | 20 pcs (modules) |
|---|-----------------------|--|
| 2 | 1 stack : | 8 tray +1 Cover tray |
| 3 | 1 Carton : | (1 Cover tray + 8 tray)x 2 stack |
| 4 | Total pcs : | 1 Carton (20pcs*8tray * 2 stack) = 320 pcs |
| 5 | Carton size = NO. 17: | 495*315*435mm |
| 7 | Net weight : | TBD KG |
| 8 | Gross weight : | TBD KG |

- 包裝示意圖片
- 一個 tray 盤 可放 20PCS 模組



8 盤+1 空盤=1 疊, 一箱可放入 2 疊, 每層 TRAY 盤上,下需交錯堆疊放置



使用 17 號箱,可放入 2 疊,並使用防震材將旁邊空隙填滿





PAGE 21/23 P-18-09B







10. NOTES

Safety

• If the LCD panel breaks, be careful not to get the liquid crystal in your mouth. If the liquid crystal touches your skin or clothes, wash it off immediately using soap and plenty of water.

Handling

- Avoid static electricity as this can damage the CMOS LSI.
- The LCD panel is plate glass; do not hit or crush it.
- Do not remove the panel or frame from the module.
- The polarizing plate of the display is very fragile; handle it very carefully

Mounting and Design

- Mount the module by using the specified mounting part and holes.
- To protect the module from external pressure, leave a small gap by placing transparent plates
 (e.g. acrylic or glass) on the display surface, frame, and polarizing plate
- Design the system so that no input signal is given unless the power-supply voltage is applied.
- Keep the module dry. Avoid condensation, otherwise the transparent electrodes may break.

<u>Storage</u>

- Store the module in a dark place where the temperature is 25 °C±10 °C and the humidity below 65% RH.
- Do not store the module near organic solvents or corrosive gases.
- Do not crush, shake, or jolt the module (including accessories).

Cleaning

- Do not wipe the polarizing plate with a dry cloth, as it may scratch the surface.
- Wipe the module gently with soft cloth soaked with a petroleum benzine.
- Do not use ketonic solvents (ketone and acetoe) or aromatic solvents (toluene and xylene), as they may damage the polarizing plate.

11. OPERATION PRECAUTIONS

Any changes that need to be made in this specification or any problems arising from it will be dealt with quickly by discussion between both companies.

Quality warranty period: Within one year after shipment date (excluding abnormal usage way and abnormal environments.)

PAGE 22/23 P-18-09B










Chapter 8. Appendix

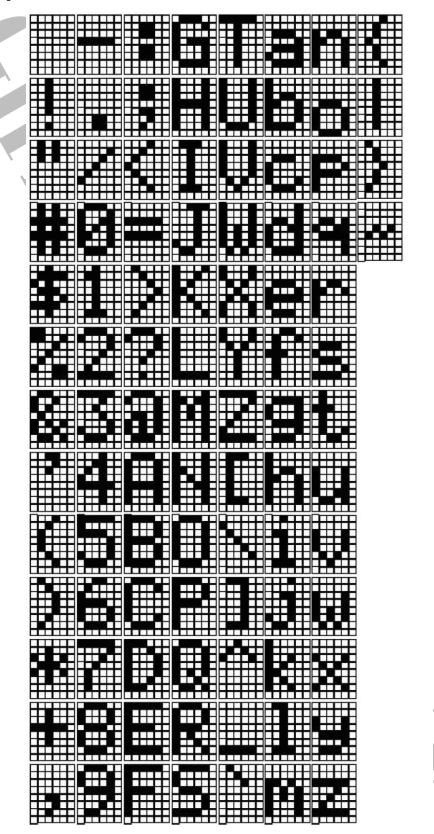

Drawing 7 Default characters.

PAGE 23/23 P-18-09B

出貨檢驗標準書 Shipping inspection standard

| 核准 | 審核 | 作成 |
|-------------|------------|---------|
| Approved by | Checked by | Made by |
| ANDY | JACKY | RUBY |

1.目的 Purpose:

規範出貨產品之檢驗項目及判斷標準,確保產品出貨能滿足客戶要求。

Standardize the inspection items and judgment standards to ensure the products that shipped out can meet customer's requirements.

2. 範圍 Area:

適用於出廠之所有產品。

Applicable to all products shipped from the factory.


- 3.名詞解釋 Explanation of terms:
 - 3-1 主要缺陷:亦會造成功能缺失或嚴重外觀缺陷。
 Major Defects: It also causes loss of function or serious appearance defects.
 - 3-2 次要缺陷:稍有缺陷但不影響客戶使用。
 Minor defect: Slightly defective but does not affect customer use.
- 4.檢驗體制 Inspection system:
 - 4-1 抽樣計劃:依 ANSI/ASQ Z1.4 一般檢驗水準Ⅱ 之 正常檢驗一次抽驗方案。
 Sampling plan: According to ANSI/ASQ Z1.4 general inspection level Ⅱ the normal inspection one-time sampling plan.
 - 4-2 允收水準 Acceptable Level:(AQL) 主要缺陷 Major defect:0.4%

次要缺陷 Minor defect: 0.65%


- 5.檢驗條件 Inspection conditions:
 - 5-1 使用相關之檢測儀器及測試、量測工具。
 Use relevant testing instrument, testing and measuring tools.
 - 5-2 環境要求:其條件需控制在常溫下 23℃±3℃及溼度 70%RH 以下。
 Environmental requirements: The conditions should be controlled at room temperature 23℃±3℃ and humidity below 70%RH.
 - 5-3 外觀檢驗:須在 380±20% LUX 的白色日光燈下,其目視距離需於產品離 30±5 cm 檢驗。 Appearance inspection: Under the white fluorescent lamp of 380±20% LUX, the visual distance shall be checked above the product 30±5 cm.
 - 5-4 電性測試 Electrical Testing:
 - 5-4-1 有背光之產品需關燈並在 5~300Lux±3%下檢驗。
 The products with backlight should be tested at 5~300±3% Lux.
 - 5-4-2 無背光之產品需開燈並在 60~300Lux±3%白色日光燈下檢驗。
 Products without backlight need to be turned on and tested under 60~300 ± 3% LUX white fluorescent lamps.
 - 5-5 檢查視角依產品視角方向。

Check the viewing angle according to the product viewing angle.

5-6 其不良現象檢視區域 Bad phenomenon View area 5-6-1 適用種類 Applicable category: COB、TFT

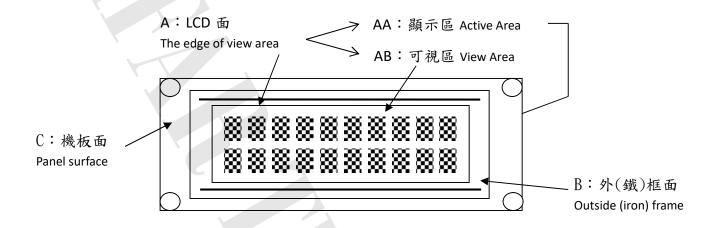

5-6-2 適用種類 Applicable category: COG、TAB、TN

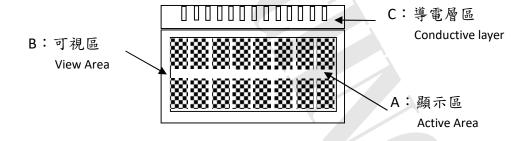

| 任业 | | | | | | | COG |
|-----|------------|--|--|-----------------------------|------|------------|-------------|
| | Category | | CC |)G | | | |
| 編號 | 檢驗項目 | 檢驗內容及判定標準 | | | 區域 | 類別 | 缺陷等級 |
| No. | Item | | Content & Standard | | Zone | Category | Level |
| | | 黑點、刺傷…等圓狀 Black dot、Stab…and other | 兩點距離須超過 5 mm Two points have to be ≧ 5 mm | | | | |
| | | round shape | | - 允 收數 | | | |
| | 四上米五/ 一】 | $\sigma \omega = \frac{(X + Y)\omega}{2\omega}$ | φ (mm) | Acceptance Qty | _ | Al dea | 次要 |
| 1 | 點類(一) | XeJ | ф ≦ 0.1 | 無視 Ignore | A | 外觀 | Minor |
| | Dot(1) | | 0.1 < φ ≤ 0.25 | 3 | В | Appearance | AQL0.65% |
| | | | 0.25 < ¢ ≤ 0.3 | 1 | | | |
| | | | ф > 0.3 | 0 | | | |
| | | 氣泡、凹凸點 | 兩點距離須超過 5 | mm | | | |
| | | Bubble · Uneven dots | Two points have to be | | | | |
| | 點類(二) | $\frac{\partial}{\partial \omega} = \frac{(X + Y) + (X + Y)}{2}$ | φ (mm) | 允收數 | _ | 外觀 | 次要 Minor |
| 2 | | X- | | Acceptance Qty | A | | |
| | Dot(2) | | $\phi \leq 0.2$ | 無視 Ignore | В | Appearance | AQL0.65% |
| | ⇒ = | $0.2 < \varphi \leq 0.5$ | 2 | | | | |
| | | — | φ > 0.5 | φ > 0.5 | | | |
| | Scilin | 刮傷、毛屑等線狀 | | | | | |
| | | Scratch • Fiber and other | L (mm) W (mm) | 允收數 | | | |
| | | linear shape. | | Acceptance Qty 12 無視 Ignore | | 11 45- | 次要 |
| 3 | 線類 Line | | W ≤ 0.0 | | Α | 外觀 | Minor |
| | Lille | | | | В | Appearance | AQL0.65% |
| | | | $L \leq 3 W \leq 0.0$ |)5 2 | | | |
| | | | L > 5 W > 0.05 | 0 | | | |
| | ٠ ـ ـ ـ | 同批供貨不能有明顯色 | | | | | |
| | 底色 . | No obvious color difference | | nent. | | 外觀 | 次要 |
| 4 | Background | (必要 | 時與客端制定限度 | 端制定限度樣) | | Appearance | Minor |
| | color | | ording to the gold samp | | | Appearance | AQL0.65% |
| | | ※ FPC 上刺傷導致線路 | 無法導通 拒收 | | | | |
| | | Stabbing on the FPC cau | | onduct | | | |
| | | | | Reject | | / | |
| | FPC 外觀 | ※ FPC 上髒污或是殘留 | 異物以致線路無法導 | 事通 拒收 | | 外觀 | 主要 |
| 5 | FPC | Dirty or residual foreign | matter on the FPC ma | kes the circuit | C | Appearance | Major |
| | Appearance | unable to conduct | | | | 7773.330 | AQL 0.4% |
| | | \\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\ | l- 1/ | Reject | | | |
| | | ※ FPC 直角折痕、斷裂 | | 5 | | | |
| | | FPC right-angle crease a | and tracture | Reject | | | |

COG

| | | | | | COG |
|----|-----------------------------|---|---|-------------------|-------------------------|
| 6 | 點、線類 (三) Dot、Line (3) | ※ 於全黑、白畫面下看見之區塊狀或線狀不良 拒收 There is a block or linear in the view area under the screen is whole black or white. | Α | 電訊 Electronics | 次要 Minor AQL0.65% |
| 7 | 點、線類 (四) Dot、Line (4) | 畫面中顯示出現黑、白、亮、異色點或線狀 There is a black, white, bright or other dot or lines showing in the view area. ※ 依編號 1、3 之判定標準 According to the inspection standard: No. 1 and 3. | А | 電訊 Electronics | 次要 Minor AQL0.65% |
| 8 | 缺字 Lack of characters | 顯示時畫面缺少部份字元 拒收 Lacking part of characters in the view area. Reject | А | 電訊 Electronics | 主要 Major AQL 0.4% |
| 9 | 無動作 No reaction | 顯示畫面一直處於起始畫面而無法進行切換 拒收 The display (view area) always show in the initial screen and can't be switched to others. Reject | Α | 電訊 Electronics | 主要 Major AQL 0.4% |
| 10 | 無畫面 No display | 通電後,完全無任何畫面顯示 拒收 After connecting to the power, there is no image. Reject | Α | 電訊 Electronics | 主要 Major AQL 0.4% |
| 11 | 斷線 Broken line | 顯示畫面中少直、橫線 拒收 There is a lack of vertical or horizontal lines in the view area. Reject | A | 電訊 Electronics | 主要 Major AQL 0.4% |
| 12 | CROSS TALK | 顯示畫面時有局部之條紋或拖影 There are some stripes or shadow/smear showing in the view area. 拒收或與客端簽訂限度樣 Reject or inspect according to the golden sample | A | 電訊 Electronics | 次要 Minor AQL0.65% |
| 13 | I CON | 顯示畫面缺少部份顯示圖案 拒收 Lack of partial ICON in the view area. Reject | A | 電訊 Electronics | 主要 Major AQL 0.4% |

| | | | | | | COG |
|----|---------------------------------------|--|--|---|-------------------|-------------------------|
| 14 | 深淺不一 Color difference | 值判定 The color contrast of others and according specification. | 比其他顯示深或淺並依電氣規格(VOP) display is obviously lighter or darker than to the VOP value in the electronics 收或與客端簽訂限度樣 ect or inspect according to the golden sample | А | 電訊 Electronics | 次要 Minor AQL0.65% |
| 15 | 畫面異常 Abnormal screen | | 定義之電訊不良現象 拒收 he power, there is an undefined electronics in the view area. Reject | А | 電訊 Electronics | 主要 Major AQL 0.4% |
| 16 | 背光色不均 Uneven color of backlight | After lighting LED determined acco ※ 點亮後 LED 色 | 明暗不均現象依其均勻度判定 拒收 be have brightness and darkness uneven the rding to its uniformity. Reject 澤不一致 拒收 assistent after lighting. Reject | A | 電訊 Electronics | 次要 Minor AQL0.65% |
| 17 | 亮度不足 Lack of brightness | | 度與圖面標示定義不符 拒收 tic coordinates, brightness don't correspond ne drawing. Reject | А | 電訊 Electronics | 主要 Major AQL 0.4% |
| 18 | 背光腳柱 Backlit foot post | 斷裂、長度不一 Fracture, different le | | | 外觀 Appearance | 次要 Minor AQL0.65% |
| 19 | 破損 Damaged | | Y:破損寬 X:破損長 Y: Damaged width X: Damaged length Y X 判定 Determination Y ≦1.0 允收 Acceptance 未進入可視區 ≦1/8 玻璃該邊長 Did not enter the viewing area of the glass 進入可視區 Enter the viewing area 正八可視區 Enter the viewing area | В | 外觀 Appearance | 次要 Minor AQL0.65% |

| • | |
|---|--|
| | |

| | | | | | | | | COG |
|----|--|---|---|--|---------------------|------------|-------------------------|-------------------------|
| | | | Y:破損寬 X:破損長 Y: Damaged width X: Damaged length | | | | | |
| | 角崩 | | Y | Х | 判定 Determination | | 外觀 Appearance | 次要 |
| 20 | Corner | | ≦1/3D | | 允收 Acceptance | С | | Minor AQL0.65% |
| | collapse | collapse | | ≦1/8 玻璃邊長 ≦1/8 The side length of the glass | 允收 Acceptance | | | AQL0.0370 |
| | | | > D | | 拒收 Reject | | | |
| | 尺寸量測 | 未依圖面上標示 | 拒收 | | | | 41 45n | 主要 |
| 21 | Size | No correspond to the indication on the drawing. | | | | ALL | 外觀 | Major |
| | Measurement | Reject | | | | Appearance | AQL 0.4% | |
| 22 | 如發現有上述未定義之不良則與客端簽訂限度樣 其他 Other If there is another undefined defective situation. It will be listed a others. The inspection standard is according to the golden sample | | | | | ALL | 電訊 Electronics 外觀 | 次要 Minor AQL0.65% |
| | | | | | | Appearance | - | |