# FWM-S2725FBD-S SHOCK ABSORBER - ADJUSTABLE

# Bansbach easylift



SPECIFICATIONS									
Model		Stroke mm	Max Energy Absorption J(kgf·m)	Max Equiv. Mass kg(kgf)		Range of Impact Rate m/s		Orifice Type	
FWM-S2725FBD-S		25	79.3(8.1)	45	50(450)	0.3~2		Multiple- varying orifice type	
COMMON SPECIFICATIONS									
Max Drag N(kgf)		x Cycle Rate Ie/min	Max Energy Absorption per n J/min(kgf∙m/mi		Extension Force N(kgf)		Operating Temp. C°		Mass g
6370(650)		60	539(55)			2.78) ower	-5~70		411


# **PRECAUTIONS FOR USE**

- Do not use this product in places where it may come in contact with oil as it does not have a liquid-proof structure.
- Please contact our sales department when the use of optional parts is planned.
- Although the dimensions are identical to those of the FA series standard products (adjustable), the FWM-S2016 series has a longer overall length.

## **ADJUSTMENT METHOD**

- Please peruse the operation manual carefully before use.
- Do not operate without sufficient mounting strength.
- Do not operate without an external stopper.
- Note that Products specification might be changed without notice.


# ABSORPTION CHARACTERISTICS

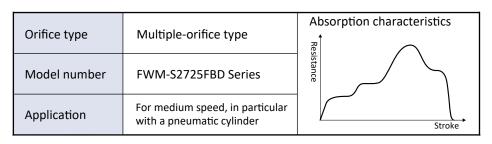



# **OPTIONAL PARTS**

#### Eccentric angle adaptor OP-010FB

  - Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until it is secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is ±10°.
- The caps and the guides for inclined use are not unbundled.

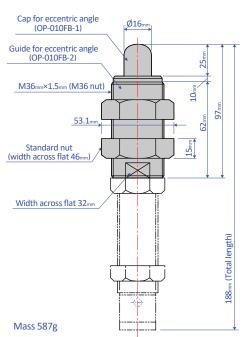







#### Stopper nut OP-020FB

  Adjust so that it stops 1 mm before the stroke end, and fasten with the main unit's nut until secured.

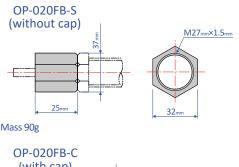




#### Mass 137g


Note: When attaching, make sure that the side without a bearing chamfer is the impact surface.

#### Standard nuts are sold separately as well - M27 Nut

#### Square flange OP-040FB

  Once the attachment site is determined, use the main unit's nut to securely fasten in place.

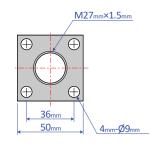




Mass 157g

### Liquid-proof cap FWM-2725FBD-C-060

- A drip proof cap is fitted on the unit on delivery.
- Liquid-proof caps are not sold separately.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.

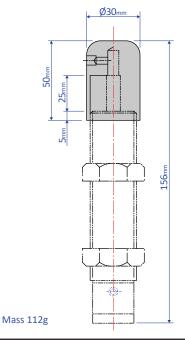

#### Holder with a switch OP-030FB

Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.

