



Quick Start Guide


HERO

For more information, please visit:
<http://hero.terasic.com>

Hero Connector Layout

FPGA

CPU

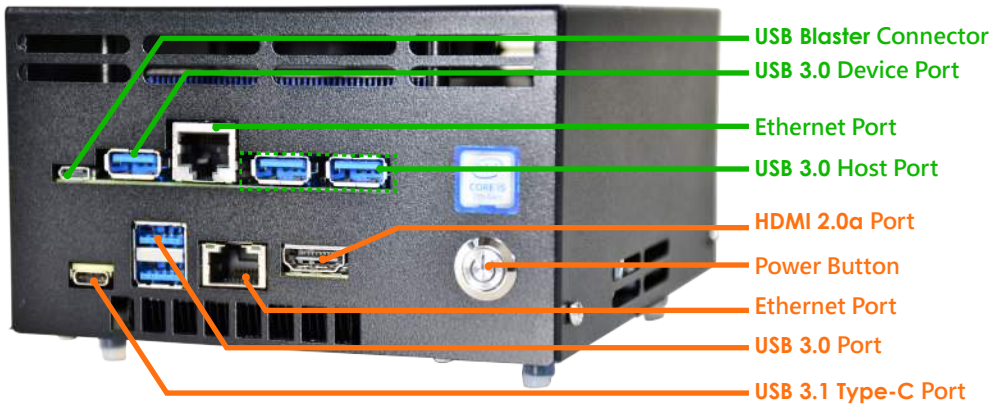

Package Content



B boot test

Please perform the boot test in the following order. Make sure the FPGA board power-on procedure is done before the CPU board is turn on.

- 1 Connect HDMI display
- 2 Connect a USB keyboard and mouse



- 3 Connect the 12V DC power supply
- 4 Power on the FPGA board (rear switch)
- 5 Turn on the power of the CPU board (front switch)
- 6 Set up the Linux Desktop on the display monitor (Username: robot Password: intel123)

- 7 Perform FPGA OpenCL DDR4 read and write tests:

- a. Open Linux Terminal
- b. Execute "cd ~/data"
- c. Execute "source altera_rte.sh"
- d. Execute "aocl diagnose all"
- e. Observe the DDR4 test results, as shown on the left

```
robot@hero:~/data
67168864 3088.45 3131.91 2959.22 3007.50
134217728 3112.60 3221.57 3010.76 3112.25
268435456 3101.43 3101.43 3101.43 3101.43

Reading 262144 KBs with block size (in bytes) below:

Block Size Avg Max Min End-End (MB/s)
 524288 1910.08 2352.42 711.63 1820.29
1048576 1887.27 2074.01 1378.07 1817.74
2097152 2289.52 2460.08 1962.77 2252.79
4194304 3057.32 3086.99 3002.06 3046.87
8388608 3083.06 3199.87 2731.07 3080.55
16777216 3083.10 3222.30 2848.83 3078.29
33554432 3075.25 3210.56 2922.92 3073.75
67168864 3036.61 3177.22 2926.15 3035.51
134217728 3239.44 3243.17 3235.72 3239.12
268435456 3208.39 3208.39 3208.39 3208.39

Write top speed = 3221.57 MB/s
Read top speed = 3243.17 MB/s
Throughput = 3232.37 MB/s

DIAGNOSTIC_PASSED
robot@hero:~/data$
```

D Design Resource Download Link

For more information please visit:
<http://hero.terasic.com>