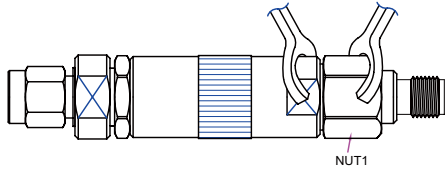
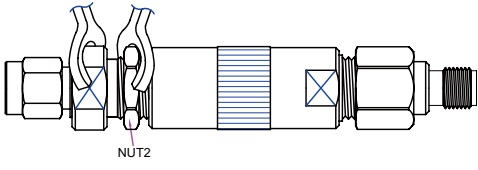
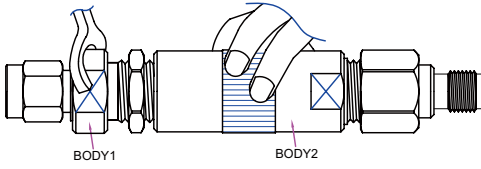
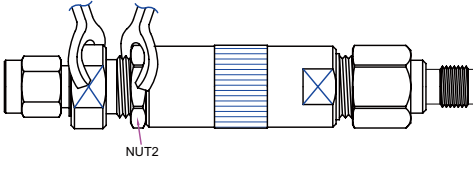
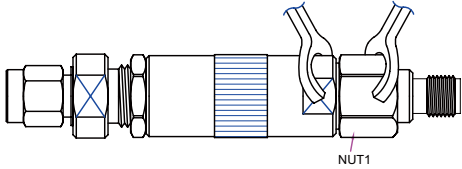


## PHASE TRIMMER INSTRUCTION

KAD178922

Konnect RF LLC



DIAGRAM	PHASE TRIMMER INSTRUCTIONS
 <p style="text-align: center;">NUT1</p>	<p>Step 1: LOOSEN NUT1 BEFORE ADJUSTING PHASE. USE KTL177008</p>
 <p style="text-align: center;">NUT2</p>	<p>Step 2: LOOSEN NUT2 BEFORE ADJUSTING PHASE. USE KTL177008.</p>
 <p style="text-align: center;">BODY1      BODY2</p>	<p>Step 3: ADJUST TO THE REQUIRED PHASE: KEEP BODY1 IN A FIXED POSITION AND ADJUST PHASE BY MANUALLY TURNING BODY2.</p>
 <p style="text-align: center;">NUT2</p>	<p>Step 4: TIGHTEN NUT2 AFTER ADJUSTING PHASE. USE KTL177008.</p>
 <p style="text-align: center;">NUT1</p>	<p>Step 5: TIGHTEN NUT1 AFTER ADJUSTING PHASE. USE KTL177008.</p>

This part number complies with RoHS.