

## Evaluating the **ADGS1408/ADGS1409** SPI Interface, $4 \Omega R_{ON}$ , $\pm 15 \text{ V}/+12 \text{ V}/\pm 5 \text{ V}$ , $1.8 \text{ V}$ Logic Control, 8:1/Dual 4:1 Muxes

### FEATURES

**SPI interface with error detection**

**Includes CRC error detection, invalid read/write address detection, and SCLK count error detection**

**Analog supply voltages**

**Dual supply:  $\pm 15 \text{ V}$**

**Single supply:  $12 \text{ V}$**

**PC control in conjunction with evaluation software**

### EVALUATION KIT CONTENTS

**EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ**

### EQUIPMENT NEEDED

**SDP-B controller board (EVAL-SDP-CB1Z)**

**ACE software with EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ plug-in**

**DC voltage source**

**$\pm 15 \text{ V}$  for dual supply**

**$12 \text{ V}$  for single supply**

**Optional digital logic supply:  $3.3 \text{ V}$**

**Analog signal source**

**Digital multimeter**

### DOCUMENTS NEEDED

**ADGS1408/ADGS1409 data sheet**

### GENERAL DESCRIPTION

The EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ are the evaluation boards for the **ADGS1408/ADGS1409**. The **ADGS1408/ADGS1409** are low  $R_{ON}$ , 8:1/dual 4:1 multiplexers controlled by a serial peripheral interface (SPI). The SPI has robust error detection features, including cyclic redundancy check (CRC) error detection, invalid read/write address detection, and serial clock (SCLK) count error detection. It is possible to daisy-chain multiple **ADGS1408/ADGS1409** devices together to enable the configuration of multiple devices with a minimal amount of digital lines. The **ADGS1408/ADGS1409** also support burst mode, which decreases the time between SPI commands.

Figure 1 and Figure 2 shows the EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ board photographs. The EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ are controlled by the **EVAL-SDP-CB1Z** system demonstration platform (SDP), which connects to a PC via a USB port. The **ADGS1408/ADGS1409** is on the center of the evaluation board, and wire screw terminals are provided to connect to each of the source and drain pins. Three screw terminals power the device and, if required, a fourth terminal provides users with a defined digital logic supply voltage. Alternatively, the digital logic supply voltage can be supplied from the **SDP-B** board.

Consult the **ADGS1408/ADGS1409** data sheet (available from Analog Devices, Inc.) in conjunction with this user guide when working with the evaluation board.

The evaluation board interfaces to the USB port of a PC via the **SDP-B** board. The **SDP-B** controller board (**EVAL-SDP-CB1Z**) is available for order at [www.analog.com/SDP-B](http://www.analog.com/SDP-B).

**TABLE OF CONTENTS**

Features .....	1	Digital Outputs .....	4
Evaluation Kit Contents.....	1	Link Options .....	4
Equipment Needed.....	1	Evaluation Board Software Quick Start Procedures.....	5
Documents Needed.....	1	Installing the Software .....	5
General Description .....	1	Initial Setup .....	5
Revision History .....	2	Block Diagram and Description.....	6
EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ Photographs ....	3	Memory Map .....	6
Evaluation Board Hardware.....	4	Evaluation Board Schematics and Artwork.....	8
Power Supplies .....	4	Ordering Information.....	18
Input Signals.....	4	Bill of Materials.....	18

**REVISION HISTORY**

**6/2018—Revision 0: Initial Version**

EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ PHOTOGRAPHS

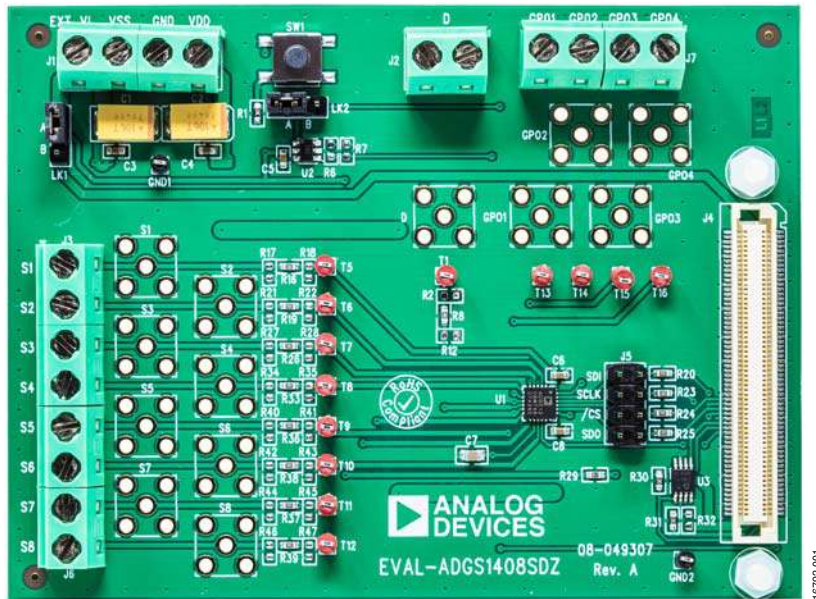


Figure 1. EVAL-ADGS1408SDZ Photograph

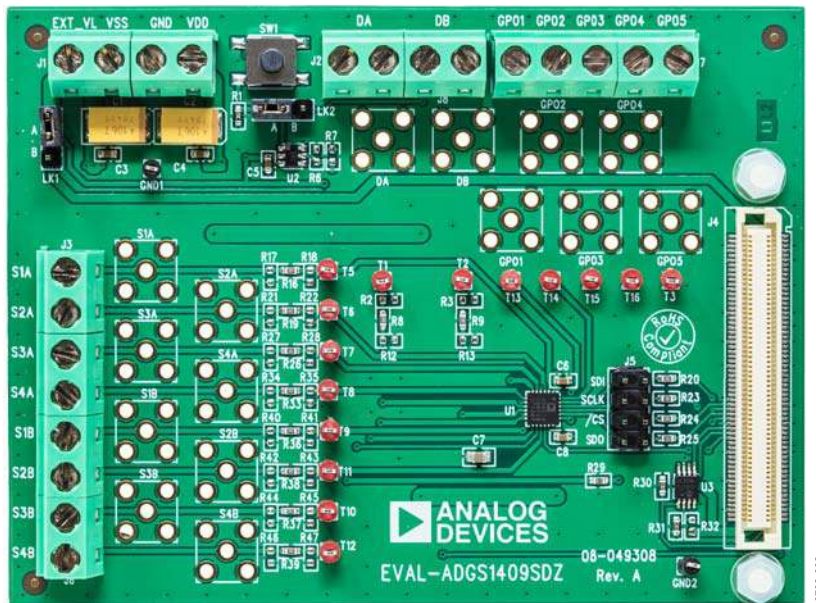


Figure 2. EVAL-ADGS1409SDZ Photograph

## EVALUATION BOARD HARDWARE

### POWER SUPPLIES

Connector J1 provides access to the supply pins of the [ADGS1408/ADGS1409](#). VDD, GND, and VSS on the J1 terminal block link to the appropriate pins on the [ADGS1408/ADGS1409](#). For dual-supply voltages, the evaluation board can be powered from  $\pm 15$  V. For single-supply voltages, the GND and VSS terminals must connect together and power the evaluation board from 12 V. Additionally, the SDP supplies 3.3 V to the RESET/V<sub>L</sub> pin of the [ADGS1408/ADGS1409](#) when Link LK1 is in Position B. When using a method other than the SDP to control the [ADGS1408/ADGS1409](#), supply between 2.7 V and 5.5 V to the RESET/V<sub>L</sub> pin of the [ADGS1408/ADGS1409](#) via the EXT\_VL screw terminal input on J1. LK1 must be in Position A.

### INPUT SIGNALS

Screw connectors (J2, J3, and J6) are provided to connect to both the source and drain pins of the [ADGS1408/ADGS1409](#). Additional Subminiature Version B (SMB) connector pads are available if extra connections are required.

Each trace on the source and drain pins includes two sets of 0603 pads, which place a load on the signal path to ground. A 0  $\Omega$  resistor is placed in the signal path and can be replaced with a user defined value. The resistor, combined with the 0603 pads, creates a simple resistor-capacitor filter.

**Table 2. Link Functions**

Link Number	Function
LK1	This link selects the source of the V <sub>L</sub> voltage supplied to the <a href="#">ADGS1408/ADGS1409</a> . Position A selects EXT_VL from J1. Position B selects the 3.3 V from the <a href="#">SDP-B</a> .
LK2	This link selects how a hardware reset is performed. Position A indicates the SW1 push-button can perform a hardware reset. Position B indicates the <a href="#">SDP-B</a> can perform a hardware reset.

### DIGITAL OUTPUTS

The GPOx digital output are accessible from the J7 screw connector, and there are additional SMB connector footprints available if extra connections are required.

### LINK OPTIONS

The EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ evaluation boards provide several link options that must be set at the required operating conditions before use.

Table 1 shows the positioning of the links necessary for controlling the evaluation board via the [SDP-B](#) board using a PC and external power supplies. Table 2 shows the functions of these link options.

LK1 must be in Position B to avoid damaging the [SDP-B](#) when using it in conjunction with the EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ.

**Table 1. Link Options for SDP Control (Default)**

Link Number	Option
LK1	B
LK2	B

## EVALUATION BOARD SOFTWARE QUICK START PROCEDURES

### INSTALLING THE SOFTWARE

The EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ evaluation boards use the Analog Devices [Analysis, Control, Evaluation \(ACE\)](#) software. ACE is a desktop software application that facilitates the control and evaluation of multiple evaluation systems.

ACE installs the required SDP drivers and .NET Framework 4 by default. Install ACE before connecting the SDP-B board to the PC. The ACE software and comprehensive instructions on its installation and use are available at [www.analog.com/ACE](http://www.analog.com/ACE).

After the installation is finished, the EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ evaluation board plug-ins appear when ACE is opened.

### INITIAL SETUP

To set up the EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ evaluation boards, complete the following steps:

1. Connect the EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ evaluation boards to the SDP-B board, and connect the SDP-B board to the PC via a USB cable.
2. Turn on the evaluation board as described in the Power Supplies section.

3. Run the ACE application. The EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ boards plug-ins appear in the attached hardware section of the **Start** tab.
4. Double-click the **ADGS1408/ADGS1409SDZ Board** plug-in to open the evaluation board view shown in Figure 3. This figure shows the basic functionality and main functions of the EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ evaluation boards.

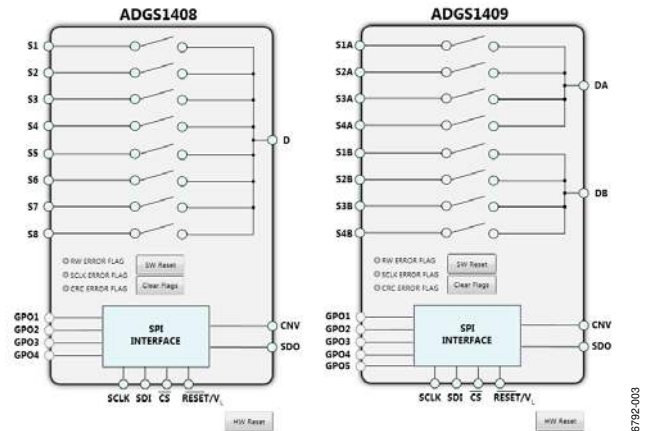


Figure 3. Evaluation Board View of the EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ

167392-003

## BLOCK DIAGRAM AND DESCRIPTION

The similar appearance of the EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ software to the functional block diagram of the [ADGS1408/ADGS1409](#) data sheet renders it easy to correlate the board functions of the EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ with the description of the functional block diagram in the data sheet. The [ADGS1408/ADGS1409](#) data sheet provides comprehensive descriptions for each function, block, register, and setting.

Table 3 describes the blocks and their functions pertaining to the evaluation board. The full screen block diagram shown in Figure 4 shows the functionality of each block.

## MEMORY MAP

Click **Memory Map** to access all the registers, which can be edited at the bit level (see Figure 5 and Figure 6). Bits shaded in dark gray are read only bits and inaccessible from **ACE**. All other bits are toggled. Click **Apply Changes** to transfer data modifications to the device.

All changes to the memory map correspond to the block diagram. For example, if the internal register bit is enabled, it displays as enabled on the block diagram. Bolded bits or registers represent modified values that have not been transferred to the evaluation board. After clicking **Apply Changes**, the data is transferred to the evaluation board and no longer appears as bolded.

Table 3. Block Diagram Functions (see Figure 4)

Label	Function
A	The switch icons configure which channel is selected.
B	The <b>Detect Invalid Read/Write</b> , <b>Detect Invalid SCLK Count</b> , and <b>Detect Invalid CRC</b> check boxes enable or disable the error detection features on the SPI interface.
C	The <b>Enable Burst Mode</b> check box enables or disables burst mode.
D	The <b>RW ERROR FLAG</b> , <b>SCLK ERROR FLAG</b> , and <b>CRC ERROR FLAG</b> indicators illuminate red when the relevant error flags are asserted in the error flags register.
E	The <b>Clear Flags</b> button clears the error flags register.
F	The <b>Apply Changes</b> button applies all modified values to the devices.
G	The <b>SW Reset</b> button causes the device to perform a software reset.
H	The <b>GPO1</b> , <b>GPO2</b> , <b>GPO3</b> , and <b>GPO4</b> buttons select whether the corresponding GPO is on or off.

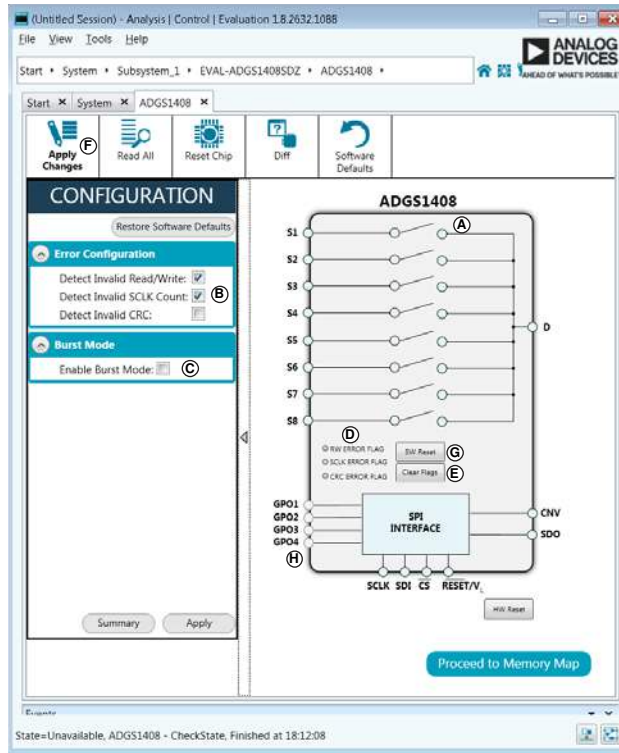


Figure 4. EVAL-ADGS1408SDZ/EVAL-ADGS1409SDZ Block Diagram with Labels

Registers

+/-	Address (Hex)	Name	Data (Hex)	Data (Binary)
+	0001	* SW_DATA	00	0 0 0 0 0 0 0 0 0 0
+	0002	ERR_CONFIG	06	0 0 0 0 0 0 1 1 1 0
+	0003	* ERR_FLAGS	00	0 0 0 0 0 0 0 0 0 0
+	0005	BURST_EN	00	0 0 0 0 0 0 0 0 0 0
+	0006	* ROUND_ROBIN_EN	00	0 0 0 0 0 0 0 0 0 0
+	0007	RROBIN_CHANNEL_CONFIG1	FF	1 1 1 1 1 1 1 1 1 1
+	0009	CNV_EDGE_SEL	00	0 0 0 0 0 0 0 0 0 0

Figure 5. ADGS1408/ADGS1409 Memory Map

Registers

+/-	Address (Hex)	Name	Data (Hex)	Data (Binary)
+	0001	* SW_DATA	00	0 0 0 0 0 0 0 0 0 0
+	0002	ERR_CONFIG	06	0 0 0 0 0 0 0 1 1 0
+	0003	* ERR_FLAGS	00	0 0 0 0 0 0 0 0 0 0
+	0005	BURST_EN	00	0 0 0 0 0 0 0 0 0 0
+	0006	* ROUND_ROBIN_EN	00	0 0 0 0 0 0 0 0 0 0
+	0007	RROBIN_CHANNEL_CONFIG1	FF	1 1 1 1 1 1 1 1 1 1
+	0009	CNV_EDGE_SEL	00	0 0 0 0 0 0 0 0 0 0

Figure 6. ADGS1408/ADGS1409 Memory Map with Unapplied Changes in the SW\_DATA Register

EVALUATION BOARD SCHEMATICS AND ARTWORK

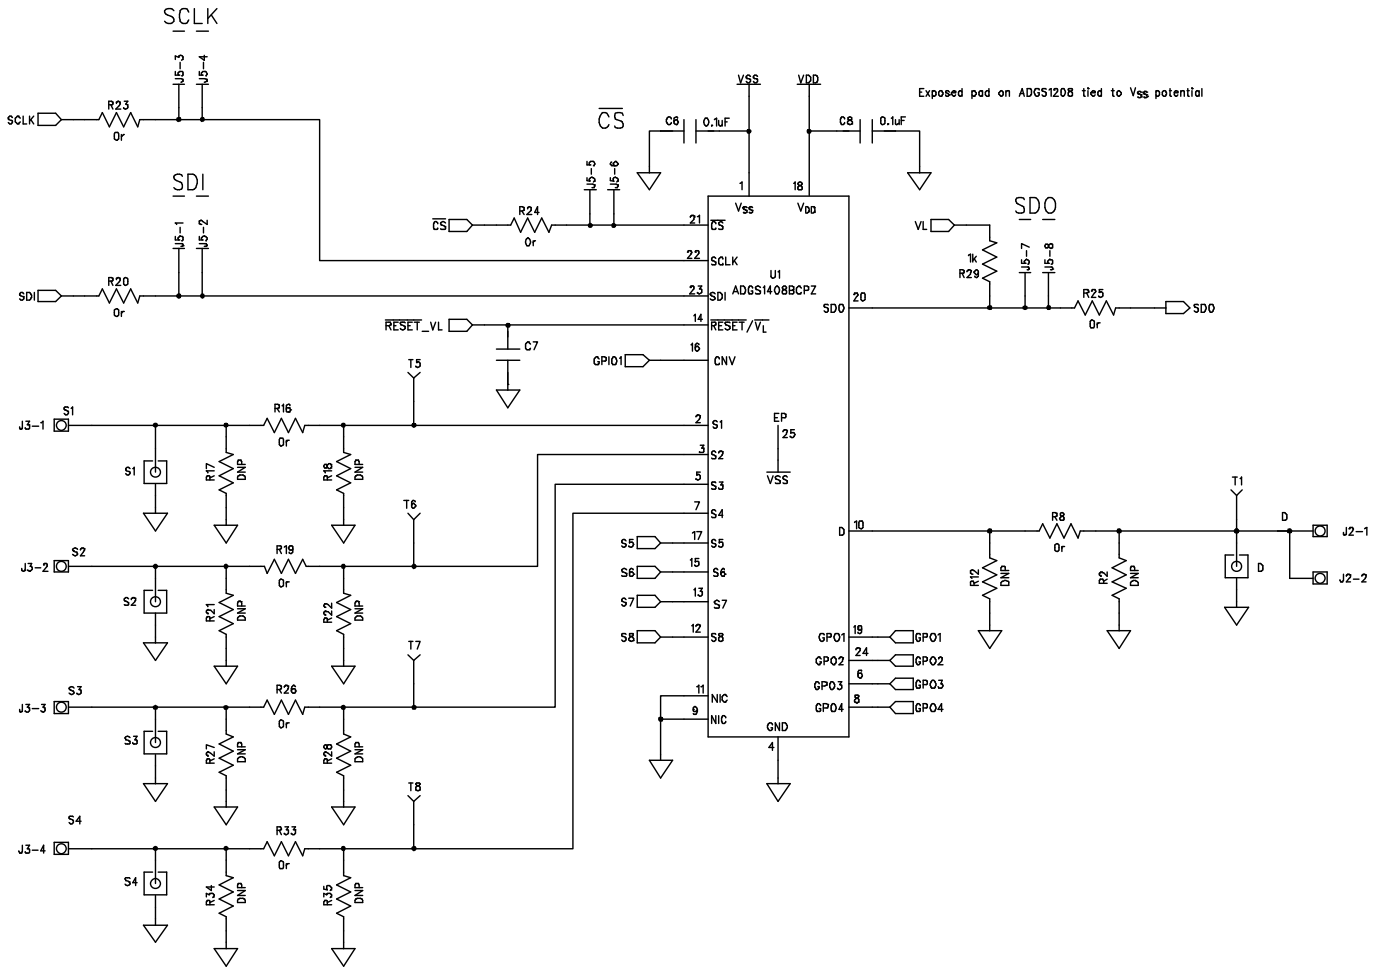


Figure 7. EVAL-ADGS1408SDZ Schematic—Main Device

16792-007



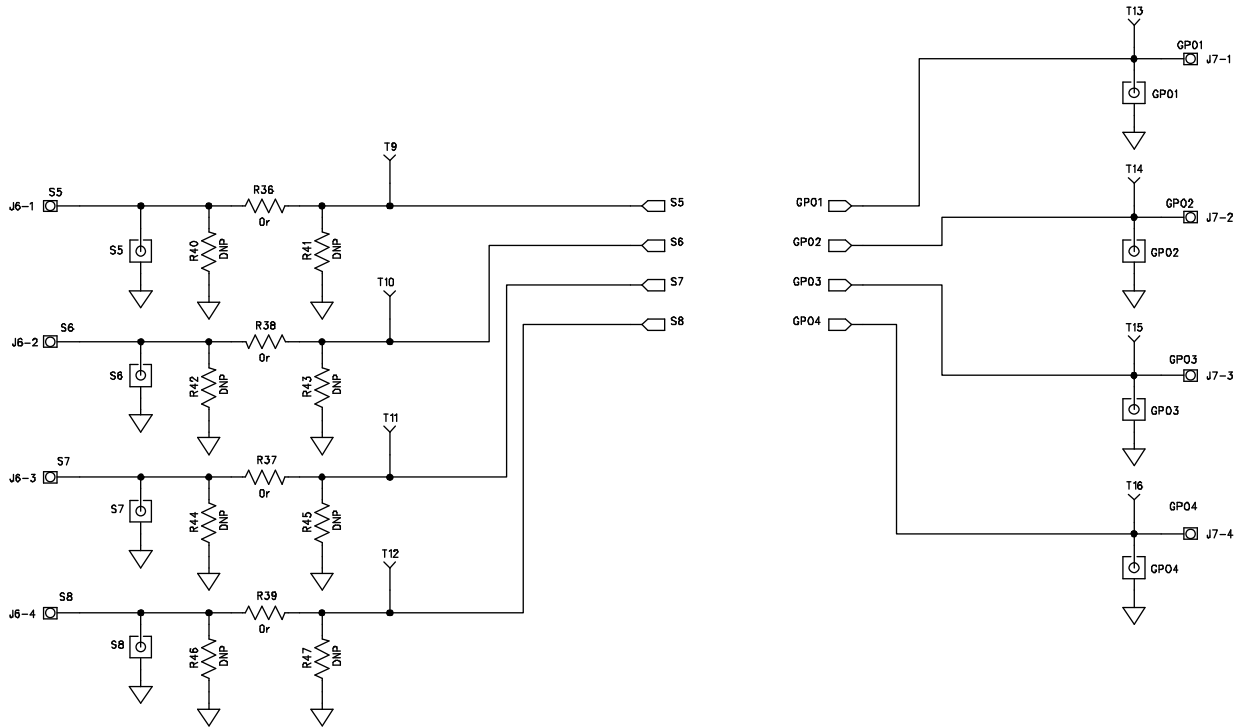


Figure 8. EVAL-ADGS1408SDZ—Main Device, Continued

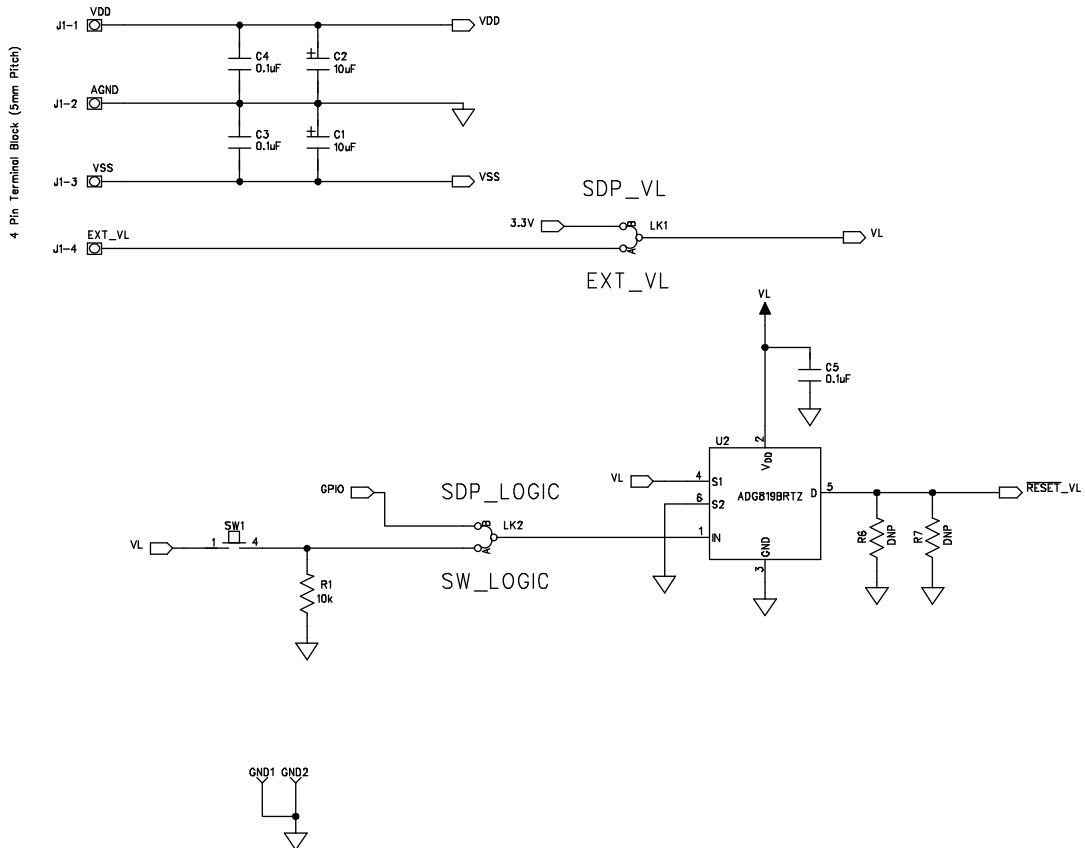


Figure 9. EVAL-ADGS1408SDZ—Power and Hardware Reset

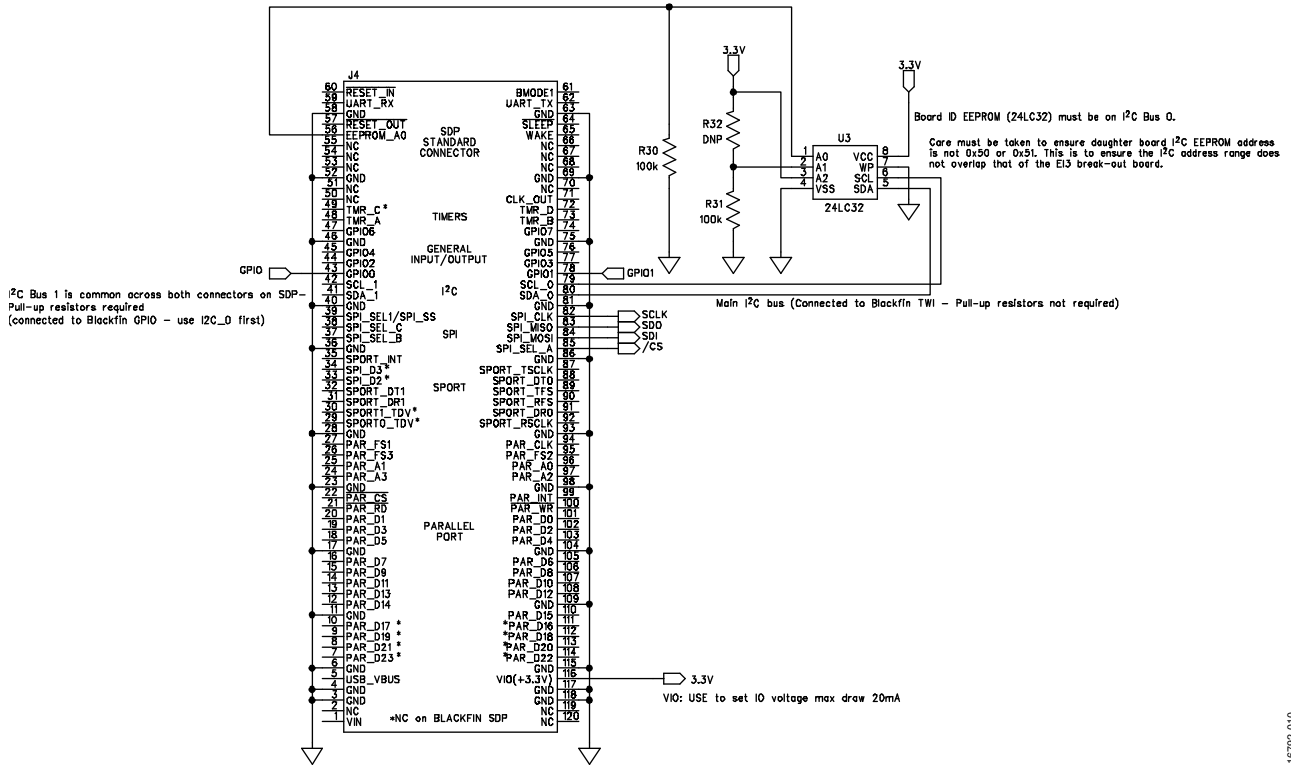


Figure 10. EVAL-ADGS1408SDZ—SDP Connector

16792-010

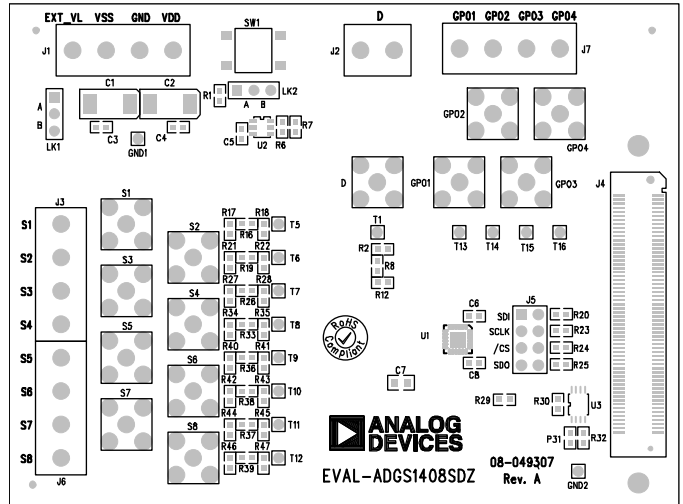


Figure 11. EVAL-ADGS1408SDZ Silk Screen

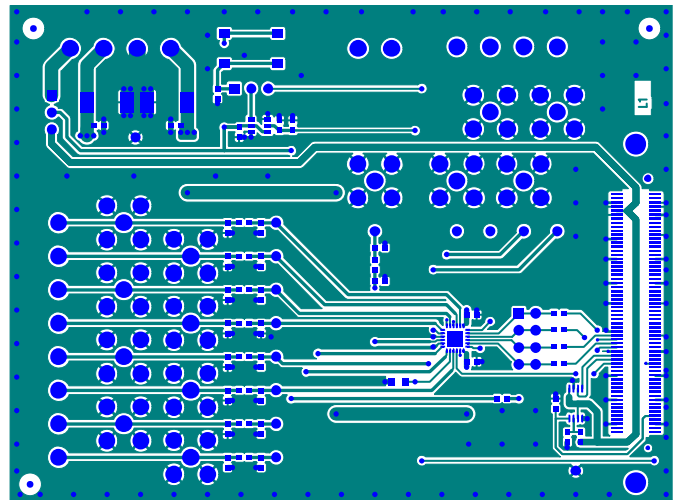


Figure 12. EVAL-ADGS1408SDZ Top Layer

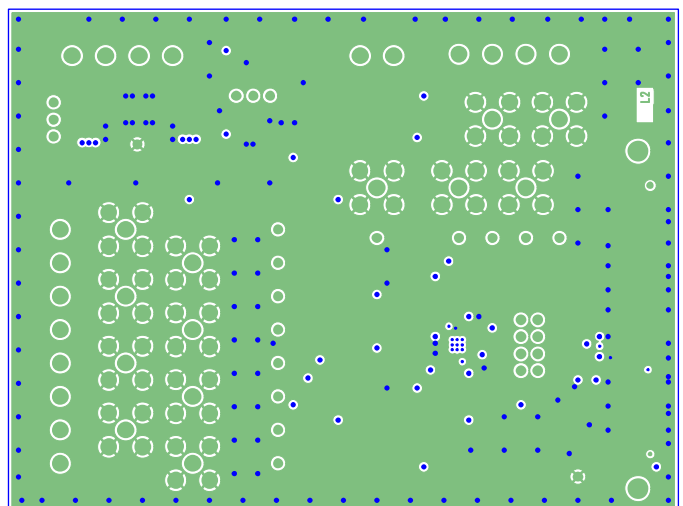


Figure 13. EVAL-ADGS1408SDZ Layer 2

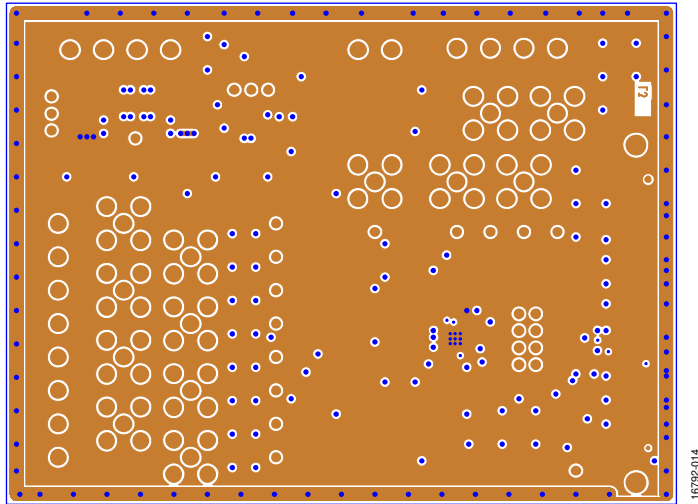


Figure 14. EVAL-ADGS1408SDZ Layer 3

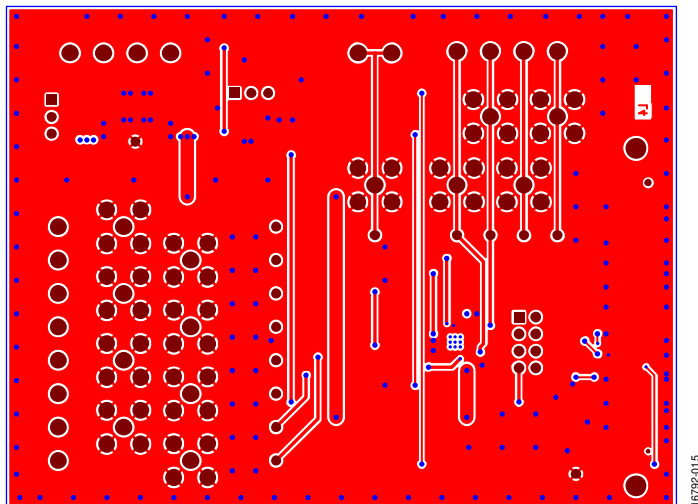


Figure 15. EVAL-ADGS1408SDZ Bottom Layer

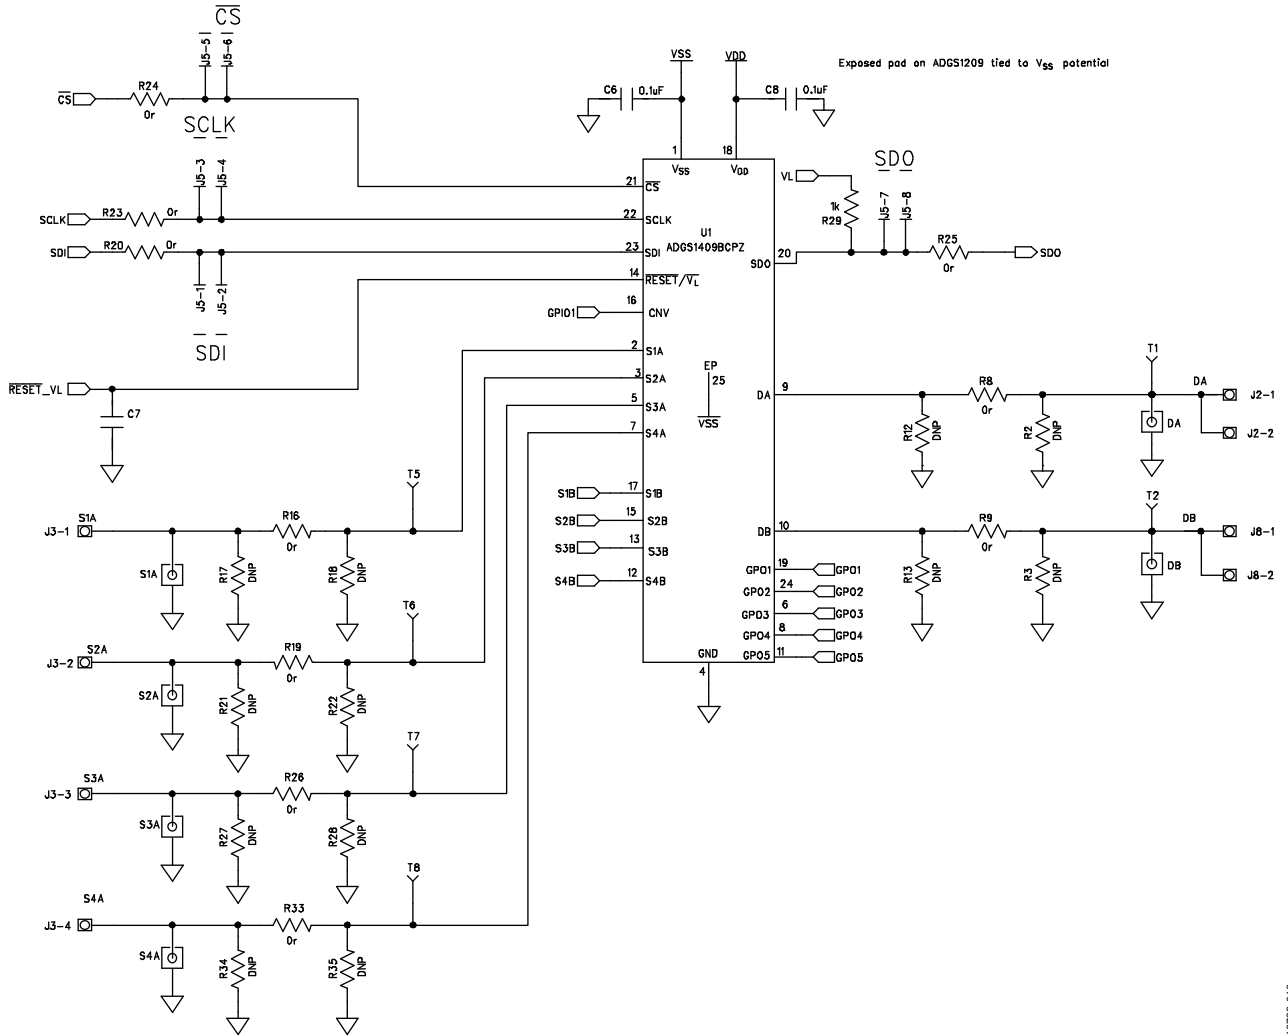


Figure 16. EVAL-ADGS1409SDZ—Main Device

16792-016

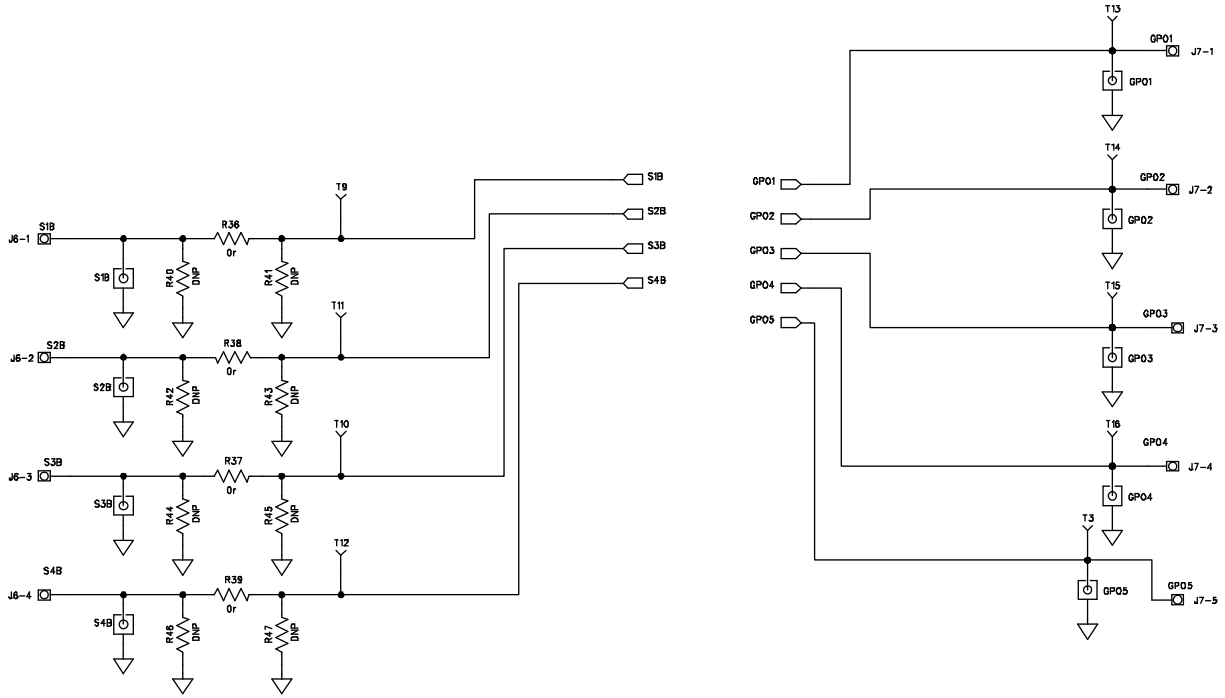


Figure 17. EVAL-ADGS1409SDZ—Main Device, Continued

16792-017

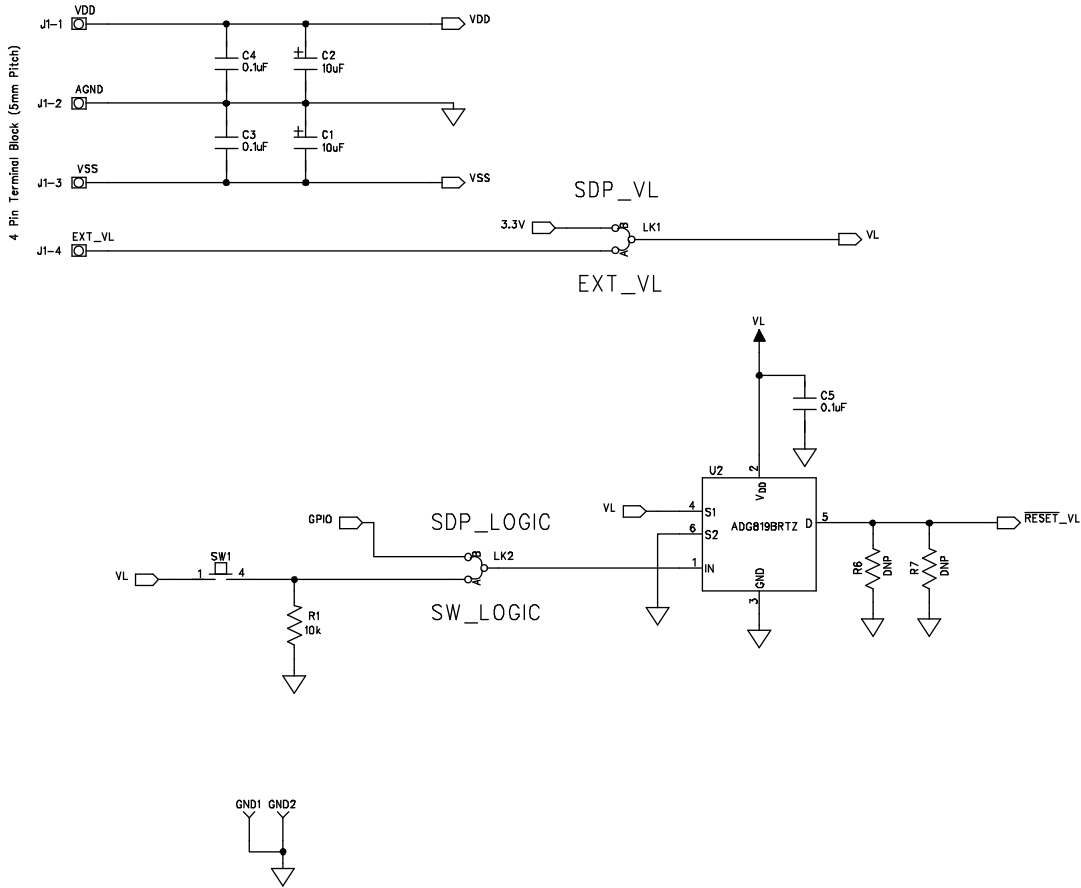


Figure 18. EVAL-ADGS1409SDZ—Power and Hardware Reset

16792-018

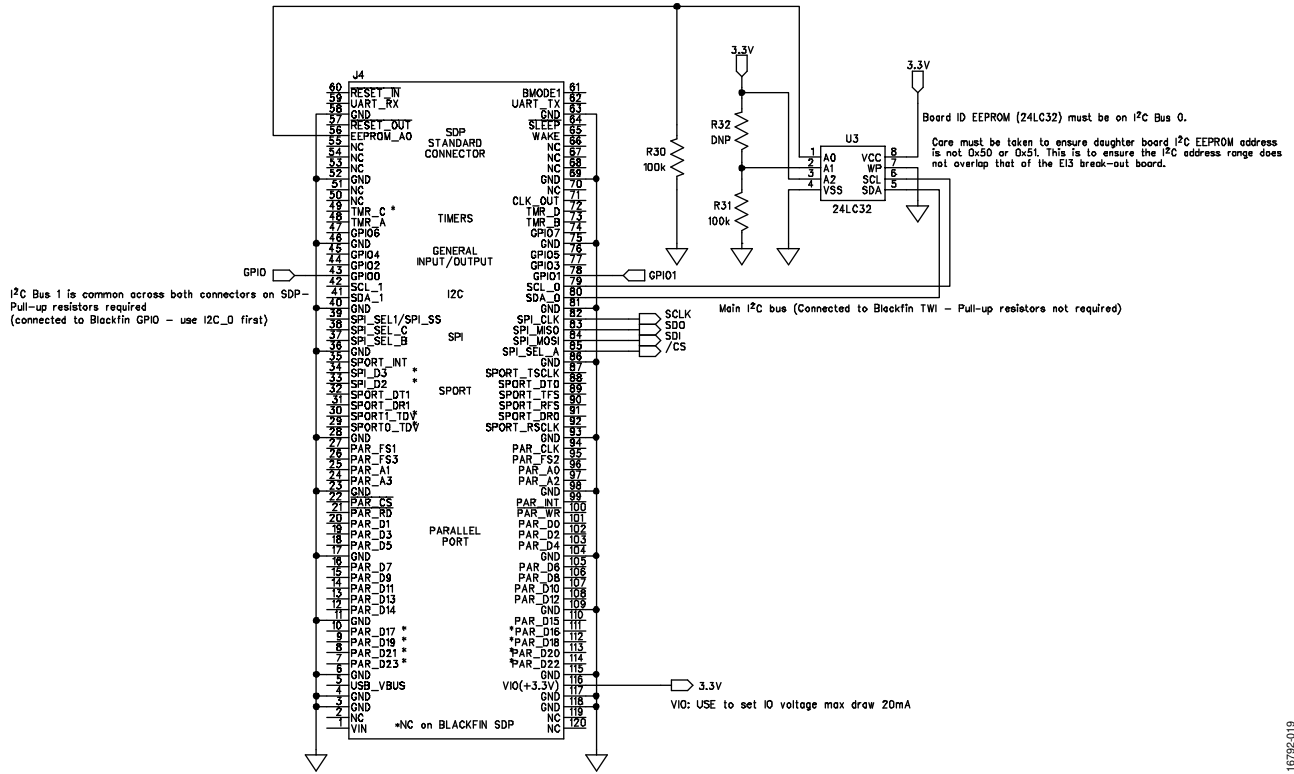


Figure 19. EVAL-ADGS1409SDZ—SDP Connector

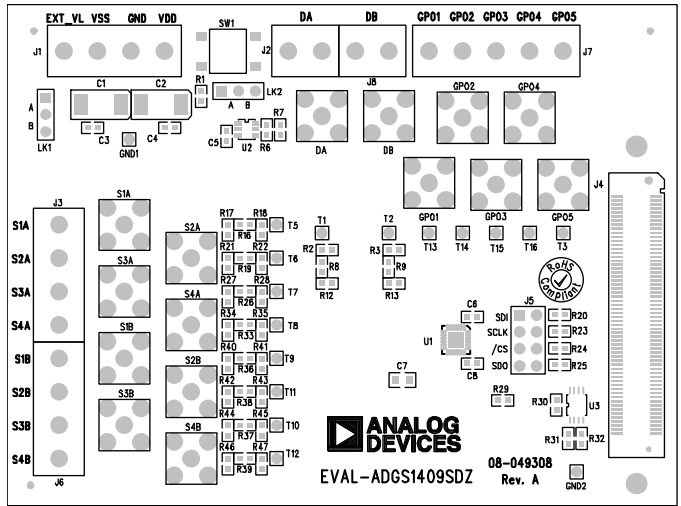


Figure 20. EVAL-ADGS1409SDZ Silk Screen

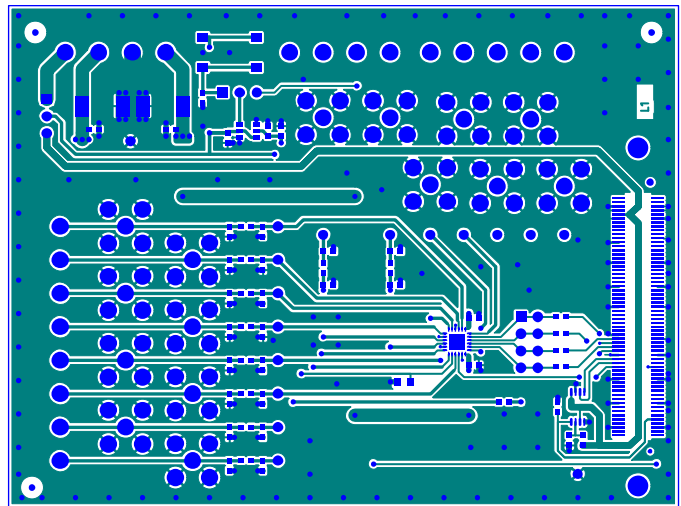


Figure 21. EVAL-ADGS1409SDZ Top Layer

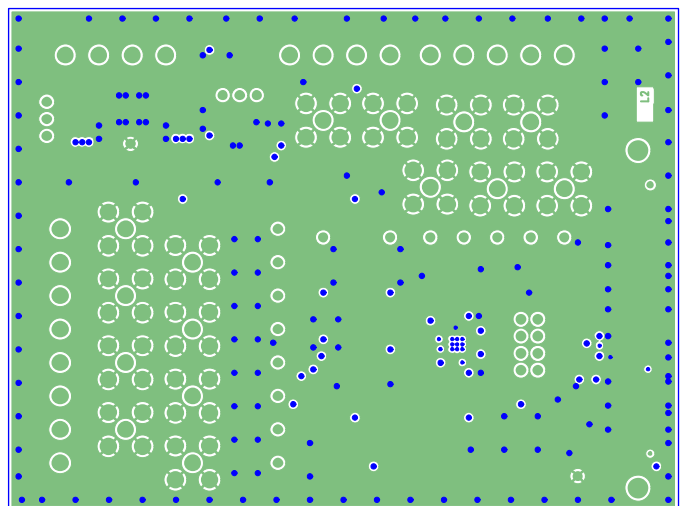


Figure 22. EVAL-ADGS1409SDZ Layer 2



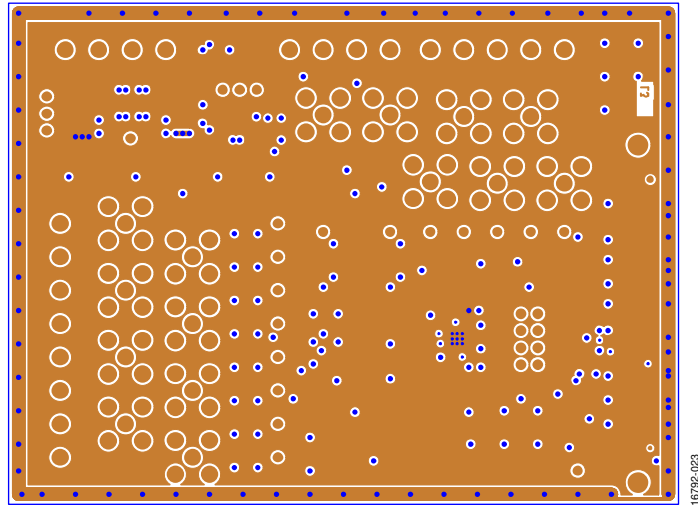


Figure 23. EVAL-ADGS1409SDZ Layer 3

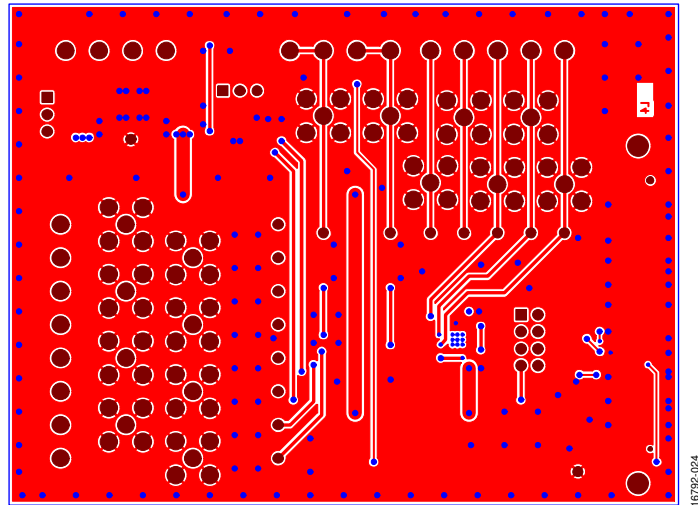


Figure 24. EVAL-ADGS1409SDZ Bottom Layer

## ORDERING INFORMATION

## BILL OF MATERIALS

Table 4.

Reference Designator	Description
C1 to C2	50 V tantalum capacitors, 10 $\mu$ F, D size
C3 to C6, C8	50 V, X7R multilayer ceramic capacitors, 0.1 $\mu$ F, 0603
C7	Capacitor, 10 $\mu$ F, 0805, 16 V
D or DA, DB	Not placed
S1 to S8 or S1A to S4A, S1B to S4B	Not placed
T1, T2, T5 to T16	Red test points
GND1, GND2	Black test points
J1 to J3, J6 to J8	4-pin terminal blocks, 5 mm pitch
J4	120-way connector, 0.6 mm pitch
J5	Through hole, header, 4 $\times$ 2, 2.54 mm
LK1, LK2	3-pin single inline (SIL) headers and shorting link
R2, R3, R6, R7, R12, R13, R17, R18, R21, R22, R27, R28, R32, R34, R35, R40 to R47	Not placed
R8, R9, R16, R19, R20, R23 to R26, R33, R36 to R39	Resistors, 0 $\Omega$ , 0603, 1%
R1	Resistor, 10 k $\Omega$ , 0.063 W, 1%, 0603
R29	Resistor, 1 k $\Omega$ , 0.063 W, 1%, 0603
R30, R31	Resistor, 100 k $\Omega$ , 0.063 W, 1%, 0603
SW1	Surface-mount device (SMD) push button switch
U1	ADGS1408/ADGS1409, SPI interface, 4 $\Omega$ R <sub>ON</sub> , $\pm$ 15 V/+12 V/ $\pm$ 5 V, 1.8 V logic control, 8:1/dual 4:1 muxes
U2	ADG819, 1.8 V to 5.5 V, 2:1 multiplexer and SPDT switch
U3	24LC32A-I/MS, 32 kbit, I <sup>2</sup> C serial EEPROM

**ESD Caution**

**ESD (electrostatic discharge) sensitive device.** Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

**Legal Terms and Conditions**

By using the evaluation board discussed herein (together with any tools, components documentation or support materials, the "Evaluation Board"), you are agreeing to be bound by the terms and conditions set forth below ("Agreement") unless you have purchased the Evaluation Board, in which case the Analog Devices Standard Terms and Conditions of Sale shall govern. Do not use the Evaluation Board until you have read and agreed to the Agreement. Your use of the Evaluation Board shall signify your acceptance of the Agreement. This Agreement is made by and between you ("Customer") and Analog Devices, Inc. ("ADI"), with its principal place of business at One Technology Way, Norwood, MA 02062, USA. Subject to the terms and conditions of the Agreement, ADI hereby grants to Customer a free, limited, personal, temporary, non-exclusive, non-sublicensable, non-transferable license to use the Evaluation Board FOR EVALUATION PURPOSES ONLY. Customer understands and agrees that the Evaluation Board is provided for the sole and exclusive purpose referenced above, and agrees not to use the Evaluation Board for any other purpose. Furthermore, the license granted is expressly made subject to the following additional limitations: Customer shall not (i) rent, lease, display, sell, transfer, assign, sublicense, or distribute the Evaluation Board; and (ii) permit any Third Party to access the Evaluation Board. As used herein, the term "Third Party" includes any entity other than ADI, Customer, their employees, affiliates and in-house consultants. The Evaluation Board is NOT sold to Customer; all rights not expressly granted herein, including ownership of the Evaluation Board, are reserved by ADI. CONFIDENTIALITY. This Agreement and the Evaluation Board shall all be considered the confidential and proprietary information of ADI. Customer may not disclose or transfer any portion of the Evaluation Board to any other party for any reason. Upon discontinuation of use of the Evaluation Board or termination of this Agreement, Customer agrees to promptly return the Evaluation Board to ADI. ADDITIONAL RESTRICTIONS. Customer may not disassemble, decompile or reverse engineer chips on the Evaluation Board. Customer shall inform ADI of any occurred damages or any modifications or alterations it makes to the Evaluation Board, including but not limited to soldering or any other activity that affects the material content of the Evaluation Board. Modifications to the Evaluation Board must comply with applicable law, including but not limited to the RoHS Directive. TERMINATION. ADI may terminate this Agreement at any time upon giving written notice to Customer. Customer agrees to return to ADI the Evaluation Board at that time. LIMITATION OF LIABILITY. THE EVALUATION BOARD PROVIDED HEREUNDER IS PROVIDED "AS IS" AND ADI MAKES NO WARRANTIES OR REPRESENTATIONS OF ANY KIND WITH RESPECT TO IT. ADI SPECIFICALLY DISCLAIMS ANY REPRESENTATIONS, ENDORSEMENTS, GUARANTEES, OR WARRANTIES, EXPRESS OR IMPLIED, RELATED TO THE EVALUATION BOARD INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, TITLE, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS. IN NO EVENT WILL ADI AND ITS LICENSORS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES RESULTING FROM CUSTOMER'S POSSESSION OR USE OF THE EVALUATION BOARD, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DELAY COSTS, LABOR COSTS OR LOSS OF GOODWILL. ADI'S TOTAL LIABILITY FROM ANY AND ALL CAUSES SHALL BE LIMITED TO THE AMOUNT OF ONE HUNDRED US DOLLARS (\$100.00). EXPORT. Customer agrees that it will not directly or indirectly export the Evaluation Board to another country, and that it will comply with all applicable United States federal laws and regulations relating to exports. GOVERNING LAW. This Agreement shall be governed by and construed in accordance with the substantive laws of the Commonwealth of Massachusetts (excluding conflict of law rules). Any legal action regarding this Agreement will be heard in the state or federal courts having jurisdiction in Suffolk County, Massachusetts, and Customer hereby submits to the personal jurisdiction and venue of such courts. The United Nations Convention on Contracts for the International Sale of Goods shall not apply to this Agreement and is expressly disclaimed.