



# Quick Start Guide

XBee-PRO® XSC RF Modem



## Welcome to your Digi product

**Get started:** This guide helps you with initial product setup. Need more? Find additional product support at [www.digi.com/support/XBeePROXSC-Modem](http://www.digi.com/support/XBeePROXSC-Modem). Or connect to the online documentation by scanning this code:



**Digi Technical Support:** Digi offers multiple support plans to help you get the most out of your product. For information on Technical Support plans and pricing, contact us at 877.912.3444 or visit [www.digi.com/support](http://www.digi.com/support).

 
**Documentation Feedback:** To provide feedback on this documentation, send your comments to [techcomm@digi.com](mailto:techcomm@digi.com).

## 1 Verify your components

### Included equipment




XSC RF modem




Phoenix connector  
(RS-485 variant only)




RPSMA antenna

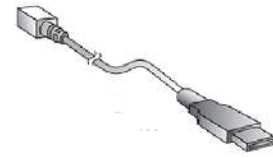


USB cable  
(USB variant only)

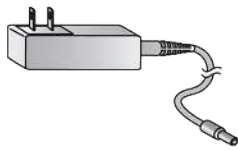

Power supply

 

 Mini USB cable  
(RS-232 and RS-485 variants only)



DB9 cable  
(RS-232 variant only)

Verify that you have all included equipment. If any item is missing or damaged, contact your supplier.

## 2 Symbols on the RF modem



Not applicable to XSC RF modem



Reset button



RS-232 serial port

A·T·R

I/O LEDs  
Red- Association  
Green- Transmit from host  
Yellow- Receive from host




Switch 1-Termination for 2-wire configuration  
Switch 2-Termination for 4-wire configuration



Not applicable to XSC RF modem



 Power supply (7-30 VDC)



RS-485 serial port



Antenna port



USB port

To get started with your kit, go to the Documentation tab at [www.digi.com/support/XBeePROXSC-Modem](http://www.digi.com/support/XBeePROXSC-Modem).