


820-2 Stroboscope

 
Quick Reference Guide


∆ Warning

To prevent possible injury read the "820 Safety Sheet" before you use this Product.

Go to **www.fluke.com** to register your product, download manuals, and find more information.

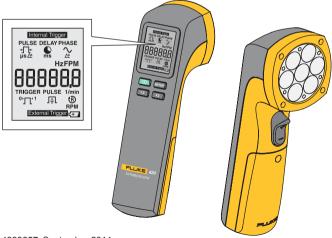



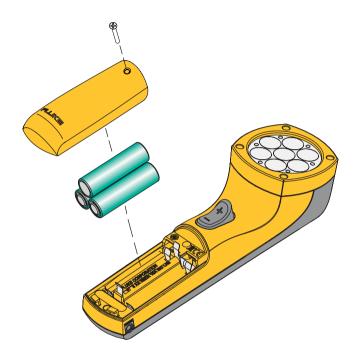

4±

Basic Operation 1 3 Internal Trigger 4 2000 ÷ 1800 Internal Trigger Internal Trigger 2000 Internal Trigger 5 ÷ FLUKE : 1776 Motor Nameplate Any reference RPM |]] 6 = FPM |]] 6 point on shaft. MODEL NO. RPM 1800 AMP ΗZ SFA 6 Internal Trigger BRGS 35<u>5</u>2 2 7 Internal Trigger 1776 FPM = Flashes/Minute RPM = Revolutions/Minute