

General Description

The DS33M30 demo kit (DK) is an easy-to-use evaluation board for the DS33M30 Ethernet-over-SONET/SDH devices. Maxim's ChipView software is provided with the demo kit, giving point-and-click access to configuration and status registers from a Windows®-based PC. On-board LEDs indicate receive loss-of-signal, queue overflow, Ethernet link, Tx/Rx, and interrupt status.

Windows is a registered trademark of Microsoft Corp.

Demo Kit Contents

DS33M30DK Board
 CD Including:
 ChipView Software
 DS33M30 Definition Files
 DS33M30DK Data Sheet
 DS33M30 Data Sheet

Features

- ◆ Demonstrates Key Functions of DS33M30 Ethernet Transport Chipset
- ◆ Includes Ethernet PHY Supporting Gigabit Mode
- ◆ Includes Optical SFP Module for SONET/SDH Interface
- ◆ Network Connectors, Transformers, and Termination Ease Connectivity
- ◆ Careful Layout Provides Signal Integrity
- ◆ On-Board Processor and ChipView Software Provide Point-and-Click Access to the DS33M30 Register Set
- ◆ All System Side and Overhead Pins are Easily Accessible for External Data Source/Sink
- ◆ Easy-to-Read Silkscreen Labels Identify the Signals Associated with All Connectors, Jumpers, and LEDs

Ordering Information

PART	TYPE
DS33M30DK	Demo Kit for DS33M30

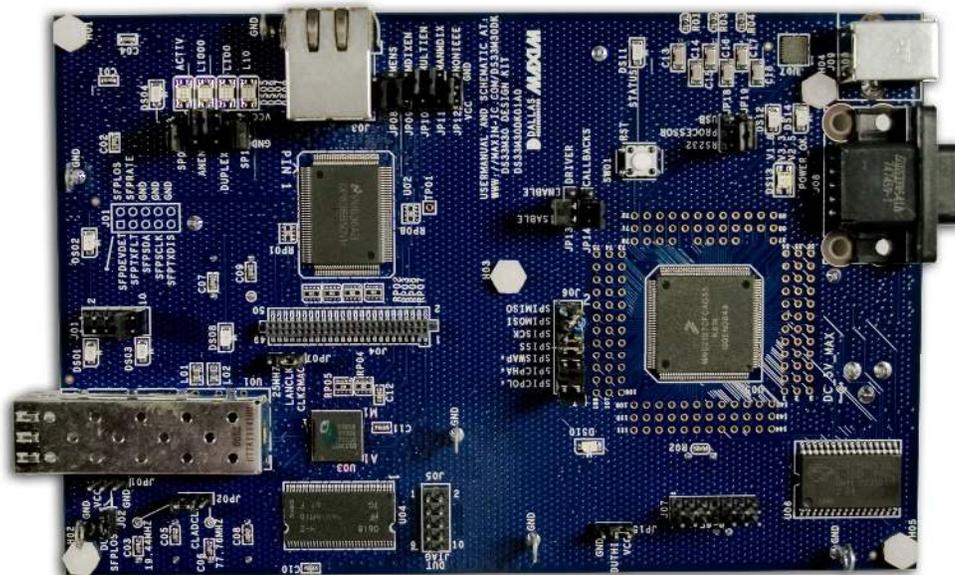


Table of Contents

1.	BOARD FLOORPLAN	3
2.	PCB ERRATA	3
3.	FILE LOCATIONS	4
4.	BASIC OPERATION	4
4.1	POWERING UP THE DEMO KIT	4
4.1.1	General	4
4.2	BASIC DS33M30 INITIALIZATION	4
4.2.1	Additional Configuration for DS33M30	5
4.3	MONITOR AND CAPTURE ETHERNET TRAFFIC	5
5.	JUMPERS AND CONNECTORS	5
6.	LINE-SIDE CONNECTIONS	7
7.	MICROCONTROLLER	7
8.	POWER-SUPPLY CONNECTORS	7
9.	CONNECTING TO A COMPUTER	7
10.	INSTALLING AND RUNNING THE SOFTWARE	8
11.	ADDRESS MAP	9
12.	ADDITIONAL INFORMATION/RESOURCES	9
12.1	DS33M30 INFORMATION	9
12.2	DS33M30DK INFORMATION	9
12.3	TECHNICAL SUPPORT	9
13.	COMPONENT LIST	10
14.	SCHEMATICS	14

List of Figures


Figure 1-1.	DS33M30DK Board Floorplan	3
Figure 14-1.	DS33M30 PCB Layout and Schematic Hierarchy Block Page Listing	14

List of Tables

Table 3-1.	Definition and Configuration Files	4
Table 5-1.	Jumpers and Connectors	5
Table 11-1.	Address Map	9

1. Board Floorplan

Figure 1-1. DS33M30DK Board Floorplan

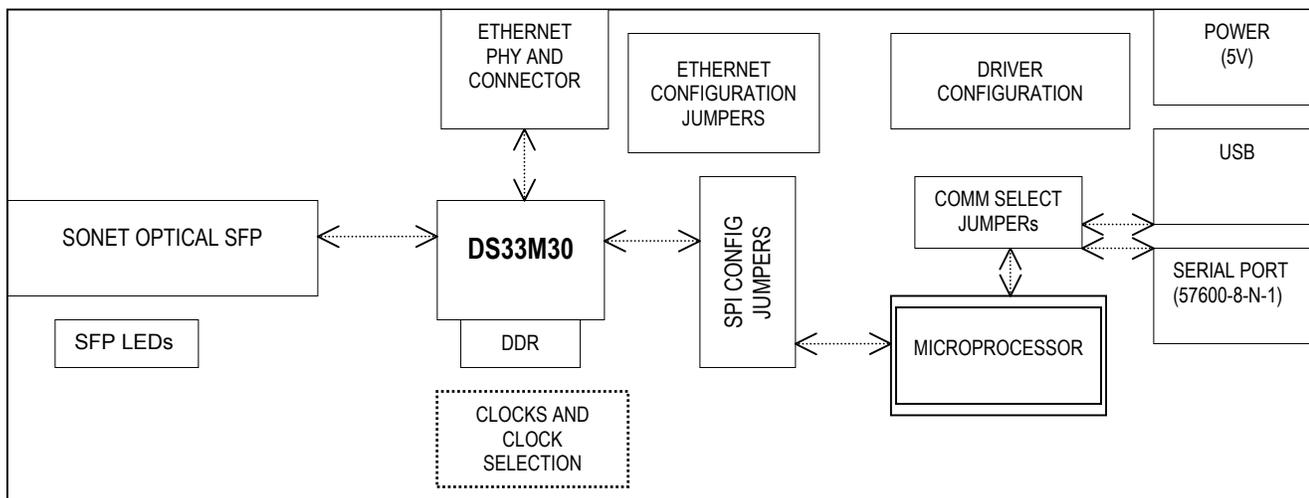

2. PCB Errata

DS33M30DK02A0 errata:

- ◆ Silkscreen for JP08 should designate the jumper function as Mac clock enable. Instead it designates the function as MDIX enable
- ◆ Silkscreen for JP09 should designate the jumper function as MDIX enable. Instead it designates the function as Mac clock enable.
- ◆ SRAM devices U06 and UB09 have been reworked to connect pin 1 and pin 2. On the PCB this appears as a solder bridge between pin 1 and pin 2. This has been done to allow either a 128K*8 or a 512k*8 SDRAM to be installed and used as a 128K*8 device.

3. File Locations

This demo kit relies upon several supporting files, which are provided on the CD and are available as a zip file from the Maxim website www.maxim-ic.com/DS33M30DK. All locations are given relative to the directory in the CD/zip file called “_def_ini_DS33M30”.

Table 3-1. Definition and Configuration Files

FILE NAME	FILE USAGE
._DS33M_GlobalSonet.def	Top level definition file to select in ChipView's register mode. This file will autoload the remaining definition files for the DS33M30 when parallel mode is used.
.\ds33M_BufferMan.def .\ds33M_EncapDecap.def .\ds33M_GlobalEth.def .\ds33M_group.def .\ds33M_LanSubscriber.def .\DS33M_serial_1234.def	DS33M30 dependent files. These are called by _DS33M_GlobalSonet.def file, which is listed above.
.\m30_rx_tx_simulation_19mhz.mfg .\m30_STS3c_bert_LoopTime.mfg .\m30_STS3c_SONET_Loopback.mfg ._m30_STS3c_Ethernet_Loopback.mfg ._m30_STS3c_GFPNull_NoScramble.mfg	Files for manually configuring the DS33M30.

4. Basic Operation

Note: In the following sections, software-related items are identified by bolding. Text in **bold** refers to items directly from the EV kit software. Text in **bold and underlined** refers to items from the Windows operating system.

4.1 Powering Up the Demo Kit

- Connect PCB power jack to the wall adapter.
- Connect RS-232 serial cable, or USB cable between the host PC and demo kit.
- Verify that the jumpers are configured as described in [Table 5-1](#).

4.1.1 General

- Upon power-up the power LEDs (DS13, DS12, DS14 green) will be lit.
- PHY LINK LED should be lit if an Ethernet cable is connected. Note that there are three link LEDs, as the DS33M30 is a Gigabit mode device. The L1000 LED should be lit the L100 and L10 LEDs should not be lit.

Following are several basic system initializations.

4.2 Basic DS33M30 Initialization

This section covers two basic methods for configuring the DS33M30.

1. Device Driver-Based Configuration: (Note: The DS33M3001A0 board revision does not come loaded with device drivers.) If the pins J20.1+J20.2 are jumpered, the device driver autoconfigures the DS33M30 upon power-up. This enables traffic to pass from the Ethernet port to the serial port. Consult the device driver documentation for further details. To load the GUI interface for the device drivers, go to the ChipView register mode **Tools** menu and select **Tools**→**Plugins**→**DS33M30/M33 Device Driver Demo**.
2. Register-Based Configuration: EoS VC3 with two ports assigned to VCG1.
 - a. Remove jumper J20.1+J20.2 to disable device drivers and reset the board.
 - b. Launch ChipView.exe and select **Register View**.

- c. When prompted for a definition file, pick the file named `_DS33M30_GlobalMicroport.def`. Several additional definition files will load.
- d. Go to the **File** menu and select **File**→**Memory Config File**→**Load .MFG file**. When prompted, select the file named `_m30_STS3c_GFPNull_NoScramble.mfg`.

4.2.1 Additional Configuration for DS33M30

- Using either a patch or crossover cable, connect the Ethernet connector to an ordinary PC or network test equipment. This should cause the link LED to turn on.
- Place a loopback connector at the SONET network side; the optical LOS LEDs should go out.
- At this point any packets sent to the DS33M30 are echoed back. Incoming packets (i.e., ping) should cause the Activity LED to blink.
- Note that ChipView.exe display settings can be changed using the **Options**→**Settings** menu.

4.3 Monitor and Capture Ethernet Traffic

- Although ping is mentioned, it is **not** the recommended frame source for testing. The ping command goes through the computer's TCPIP stack and sometimes is not sent out the PC's network connector (i.e., if the PC's ARP cache is out of date). Additionally, ping requires two PCs, as a Windows PC with only one adapter cannot ping itself (i.e., a local ping gets sent to 'local host' instead of out the connector). With that said, ping is still a valuable test once the prototyping stage is complete.
- Generation and capture of arbitrary (raw) packets can be accomplished using **CommView**. A full-featured demo is available at www.tamos.com/products/commview.
- Wireshark (formerly Ethereal) is a free packet capture utility. Download is available at www.wireshark.org.
- Adding additional Ethernet ports to a PC is rather simple when a USB-to-Ethernet adapter is used. This allows for end-to-end testing using a single PC. When using two adapters, the PC has a different IP address for each adapter. Test equipment allows selection of either adapter. Operating system-based network traffic is sent out the default adapter, which usually is the adapter that has recently had connection to a live network.

5. Jumpers and Connectors

Jumpers and connectors are listed in [Table 5-1](#). They are listed in order of appearance on the PCB from left to right, top to bottom (as viewed with SONET connector on the left side of the board).

Table 5-1. Jumpers and Connectors

SILKSCREEN REFERENCE	FUNCTION	BASIC SETTING	SCHEMATIC PAGE	DESCRIPTION
J03	Ethernet Connection	Connected	14	Connect to Gigabit Ethernet source.
JP06 + JP03	Bias PHY Speed1 + Speed0	Jumper P2+3(high) P2+1 (low)	14	If auto negotiation is enabled this setting advertises capability for 1000 speeds. If auto negotiation is disabled then this setting forces 1000Mb mode.
JP04	Bias PHY ANEN	Jumper P2+3 (high)	14	Jumper P2+3 to enable auto negotiation.
JP05	Bias PHY Duplex	Jumper P2+3 (high)	14	Jumper P2+3 to enable full duplex, Jumper P1.2 to force half duplex.
JP09	Bias PHY MdxEn	Jumper P2+1 (high)	14	P2+3 disables pair swap mode, P2+1 enables pair swap mode.
JP08	Bias PHY MacClkEn	Jumper P2+3 (low)	14	P2+3 PHY clock to mac output is disabled, P1+2 PHY clock to mac output is enabled. Mac clock only needs to be enabled in Gigabit mode.

SILKSCREEN REFERENCE	FUNCTION	BASIC SETTING	SCHEMATIC PAGE	DESCRIPTION
DS05	LED activity	--	14	Flashes for PHY Tx-Rx activity.
DS06 DS07 DS09	LED link speed	DS06 should be lit (when linked)	14	LED to indicate link speed: 1000, 100, or 10Mbps. Only DS06 should be lit since the DS33M30 is GMII only.
J04	PHY test points	--	12	PHY test points. The connector pinout is compatible with existing PHY cards, but cannot be used with U04 on the board.
JP13 JP14	Runtime options	NA	11	Currently the device drivers do not fit in flash, and are not loaded to the DK.
DS11	Status	—	11	LED kit status, not lit.
J03	USB	—	11	USB interface. See folder marked USBdrivers_CP210x for drivers.
J04	RS232 DB9 connector	—	11	RS-232 DB-9 connector, operates in ASCII mode at 57.6K,8,N,1.
JP18 JP19	Comm Port	Jumper P1+2 P1+2	11	Jumper pins 1+2 to select the RS232 transceiver. Jumper pins 2+3 to select the USB to serial converter.
SW01	Reset	—	7	System Reset button.
J06	SPI	All jumpered	6	SPI™ bias and data pins. Control by external processor is possible after removing CS, MISO, MOSI, and SCK
JP15	HIZ	Jumper P2+3	6	Dut three-state control.
J07	Software Debug	—	11	ONcE EBDI.
JP07	Clock select	Jumper P2+1	4	Clock selection for PHY and Ethernet side of DS33M30.
JP02	Clock select	Jumper P1+2	4	Clad clock selection, Jumper P1+2 to drive with 19.44MHz. Jumper P2+3 to drive with 77.76MHz clock.
DS08	DS33M30 Int	—	9	LED, lit when DS33M30 Interrupt is asserted.
J01	SFP test points	Jumper P9+10		Test points for SFP module.
DS01	SFP MOD0	—	2	Lit when a SFP module is installed.
DS03	SFP TXDISABLE	—	2	Lit when Tx is enabled.
DS02	SFP LOS	—	2	Lit when fiber optic cable is removed.
J02 JP01	SFP LOS/M33 LOS	Jumper	2	Jumper J02 to connect SFP LOS to DS33M30 LOS. If J02 is removed, then JP01 can be used to pull DS33M30 LOS high or low.
U01	SFP	Installed	2	SFP module.
J05	JTAG	—	6	DS33M30 JTAG.

SPI is a trademark of Motorola, Inc.

6. *Line-Side Connections*

The DS33M30DK has one optical port and one Ethernet port.

7. *Microcontroller*

The microcontroller has factory-installed firmware in on-chip nonvolatile memory. This firmware translates memory access requests from the RS-232 serial port into register accesses on the DS33M30 and the FPGAs.

8. *Power-Supply Connectors*

Connect a 5.0V wall adapter to the PCB power jack. LED DS1 provides indications that a 5.0V supply is connected properly. The board power supplies (3.3V, 2.5V, and 1.8V) are regulated to supply proper voltages to various circuits on the board.

9. *Connecting to a Computer*

Both USB and serial modes are supported.

To connect through a RS-232 serial port, set jumpers JP25 and JP26 jumpers to pins 1+2, identified in the silkscreen as RS232,PROCESSOR. Connect a standard DB-9 serial cable between the serial port on the DS33M30DK and an available serial port on the host computer. The host computer must be a Windows-based PC. Be sure the cable is a standard straight-through cable rather than a null-modem cable. Null-modem cables prevent proper operation.

To connect through USB, set jumpers JP25 and JP26 jumpers to pins 3+2, identified in the silkscreen as USB, PROCESSOR. Connect a USB cable between the DS33M30DK USB connector and the PC. The host computer must be a Windows-based PC, which should automatically recognize the device as a virtual com port and assign the device drivers. If drivers are not automatically assigned, direct the **New Hardware** wizard to the driver files on the CD in the folder marked **USBdrivers_CP210x**.

10. Installing and Running the Software

ChipView is a general-purpose program that supports a number of Maxim demo kits. To install the ChipView software, run Chipview.msi from the disk included in the DS33M30DK box or from the zip file downloadable on our website at www.maxim-ic.com/DS33M30DK.

After installation, run the ChipView program with the DS33M30DK board powered up and connected to the PC. If the default installation options were used, one easy way to run ChipView is to click the **Start** button on the Windows toolbar and select **Programs**→**ChipView**→**ChipView**. In the opening screen, click the **Register View** button. Select the correct serial port in the **Port Selection** dialog box, then click **OK**.

Next, the **Definition File Assignment** window appears. This window has subwindows to select definition files for up to four separate boards on other Maxim evaluation platforms. In the active subwindow, select the `_DS33M_GlobalSonet.def` definition file from the list shown, or browse to find it in another directory. Press the **Continue** button.

After selecting the definition file, the main part of the ChipView window displays the DS33M30's register map. To select a register, click on it in the register map. When a register is selected, the full name of the register and its bit map are displayed at the bottom of the ChipView window. Bits that are logic 0 are displayed in white, while bits that are logic 1 are displayed in green.

The ChipView software supports the following actions:

- **Toggle a bit.** Select the register in the register map and then click the bit in the bit map.
- **Write a register.** Select the register, click the **Write** button, and enter the value to be written.
- **Write all registers.** Click the **Write All** button and enter the value to be written.
- **Read a register.** Select the register in the register map and click the **Read** button.
- **Read all registers.** Click the **Read All** button.

11. Address Map

SPI mode address space begins at 0x0.

Table 11-1. Address Map

OFFSET	DEVICE	DESCRIPTION
0X0000	DS33M30	DS33M30 registers

12. Additional Information/Resources

12.1 DS33M30 Information

For more information about the DS33M30, refer to the DS33M30 data sheet at www.maxim-ic.com/DS33M30.

12.2 DS33M30DK Information

For more information about the DS33M30DK, refer to the DS33M30DK Quick View page at www.maxim-ic.com/DS33M30DK.

12.3 Technical Support

For additional technical support, submit your questions at www.maxim-ic.com/support.

13. Component List

DESIGNATION	DESCRIPTION	SUPPLIER	PART
C01, C03, C05, C06, C09, C11, CB11, CB12, CB15, CB16, CB17, CB19, CB20, CB24, CB39, CB44, CB45, CB48, CB56, CB57, CB60, CB66, CB71, CB74, CB75, CB88, CB97, CB101, CB112	L_0603 CERAM .1uF 16V 20% X7R	AVX	0603YC104MAT
Component listing on next line, begins with C02	0603 CERAM 4.7uF 6.3V MULTILAYER	Digi-Key	ECJ-1VB0J475M
C02, C04, C07, CB05, CB07, CB18, CB21, CB22, CB25, CB31, CB32, CB33, CB35, CB38, CB42, CB43, CB46, CB47, CB49, CB50, CB51, CB53, CB55, CB61, CB62, CB63, CB64, CB67, CB68, CB70, CB72, CB73, CB76, CB77, CB78, CB79, CB80, CB81, CB83, CB84, CB86, CB89, CB90, CB94, CB95, CB103, CB105, CB109, CB110, CB116, CB121			
C08, C10, C12, CB04, CB08, CB09, CB10, CB14, CB30, CB40, CB65, CB85, CB107	L_0603 CERAM .01uF 50V 10% X7R	AVX	06035C103KAT
C1, C13, C14, C15, C16, C17, C18, CB120, CB23, CB27, CB28, CB29, CB41, CB87, CB98, CB106	1206 CERAM 10uF 10V 20%	Panasonic	ECJ-3YB1A106M
CB01, CB02, CB03, CB13, CB111	D CASE TANT 470uF 6.3V 20%	KEM	T491D477M006AS
CB06, CB26, CB34, CB36, CB37, CB52, CB54, CB58, CB59, CB69, CB82, CB91, CB92, CB93, CB96, CB102, CB108, CB114, CB115	0603 CERAM .1uF 16V 10%	Panasonic	ECJ-1VB1C104K
CB104, CB117	L_1206 CERAM 1uF 16V 10%	Panasonic	ECJ-3YB1C105K
CB113	1206 CERAM 4.7uF 25V 10% X5R	Panasonic	ECJ-3YB1E475K
CB99, CB100, CB118, CB119	L_D CASE TANT 68uF 16V 20%	Panasonic	ECS-T1CD686R
DB01	SCHOTTKY DIODE, 1 AMP 40 VOLT	International Rectifier	10BQ040
DS01, DS03, DS11, DS04, DS12, DS14	L_LED, GREEN, SMD	Panasonic	LN1351C
DS02, DS08, DS10	L_LED, RED, SMD	Panasonic	LN1251C
DS05, DS06, DS07, DS09	LED, GREEN/GREEN, SMD	LUMEX	67-1362-1-ND
DS13	LED, RED/GREEN, SMD	LITEON	160-1172-1-ND
GND_TP01, GND_TP02, GND_TP03, GND_TP04, GND_TP05, GND_TP06, GND_TPB01, GND_TPB02, GND_TPB03	STANDARD GROUND CLIP	KEYSTONE	4954
H01, H02, H03, H04, H05, H08	KIT, 4-40 HARDWARE, .50 NYLON STANDOFF AND NYLON HEX-NUT	Labstock	4-40KIT4
J01	TERMINAL STRIP, 10 PIN, DUAL ROW, VERT	Digi-Key	S2012-05-ND
J02, JB01	100 MIL 2 POS JUMPER	Labstock	NA
J03	CONNECTOR, SINGLE LEVEL, GIGABIT RJ-45, 10 PIN	Halo Electronics	HFJ11-1G02E

J04	PLUG, SMD, 50 PIN, 2 ROW VERTICAL	Samtec	SFM-125-L2-S-D-LC
J05	L_TERMINAL STRIP, 10 PIN, DUAL ROW, VERT	Samtec	TSW-105-07-T-D
J06	HEADER, 14 PIN, DUAL ROW, VERT	Samtec	HDR-TSW-107-14-T-D
J07	100 MIL 2*7 POS JUMPER	Labstock	NA
J08	L_CONN, DB9 RA, LONG CASE	AMP	747459-1
J09	TYPE B SINGLE RT ANGLE, BLACK	Digi-Key	WM17108-ND
JB02	CONN 2.1MM/5.5MM PWRJACK RT ANGLE PCB, closed frame, high current 24VDC@5A also requires 5V ACDC adapter INPUT 100-240VAC 50-60HZ 0.6A OUTPUT DC 5V 2.6A. PN DMS050260-P5P-SZ. MODEL 3Z-161WP05	CUI, INC	PJ-002AH
JP01, JP02, JP03, JP04, JP05, JP06, JP07, JP08, JP09, JP13, JP14, JP15, JP18, JP19	100 MIL 3 POS JUMPER	Labstock	NA
L01, L02	1uH ±10% 0805 Multilayer Ceramic 400 mA	TDK	GLF2012T1R0M
L1	FERRITE 3A 100 OHM AT 100 MHZ 1206 SMD	Steward	HI1206N101R-10
R01, R03, R04, RB19	RES 0603 0.0 Ohm 1/16W 5%	Panasonic	ERJ-3GEY0R00V
R02	RES 0603 1.0M Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ105V
RB01, RB18 , RB03, RB20, RB22	RES 0603 330 Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ331V
RB02, RB04, RB12, RB13, RB14	RES 0603 30 Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ300V
RB05	RES 0603 2.2K Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ222V
RB06, RB07, RB16	RES 0603 2.0K Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ202V
RB08	RES 0603 100 Ohm 1/16W 1%	Panasonic	ERJ-3EKF1000V
RB09, RB11	RES 0603 1.00K Ohm 1/16W 1%	Panasonic	ERJ-3EKF1001V
RB15	RES 0603 9.76K Ohm 1/16W 1%	Panasonic	ERJ-3EKF9761V
RB17, RB21	L_RES 0603 10K Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ103V
RP01, RP02, RP03, RP04, RP05, RP06, RP07, RP08, RPB12	RESISTOR, 4 PACK, 30 OHM 5PCT QUAD 0603	Panasonic	EXB-V8V300JX
RPB01, RPB07, RPB20, RPB24	RESISTOR, 4 PACK, 330 OHM 5PCT QUAD 0603	Panasonic	EXB-V8V331JX

RPB02, RPB08, RPB11, RPB17, RPB19	RESISTOR, 4 PACK, 1K OHM 5PCT QUAD 0603	Panasonic	EXB-V8V102JX
RPB03, RPB04, RPB13, RPB15, RPB18, RPB21, RPB22, RPB23, RPB25, RPB26, RPB27, RPB28, RPB29	RESISTOR, 4 PACK, 10K OHM 5PCT QUAD 0603	Panasonic	EXB-V8V103JX
RPB05, RPB06, RPB14	RESISTOR, 4 PACK, 2.2K OHM 5PCT QUAD 0603	Panasonic	EXB-V8V222JX
RPB09, RPB10	RESISTOR, 4 PACK, 50 OHM 2PCT QUAD 0603	KOA	CN1J4TTD500G
SW01	SWITCH MOM 4PIN SINGLE POLE	Panasonic	EVQPAE04M
TP01	TEST POINT, 1 PLATED HOLE, DO NOT STUFF	Labstock	NA
U01	SFP host / receptacle	PARTS_KIT	SFP_HOST-TYCO
U02	GIG PHYTER V, 10/100/1000 ETHERNET PHYSICAL LAYER, 128 PIN QFP	National Semiconductor	DP83865DVH
U03	ETHERNET EXTENSION DEVICE	Dallas Semiconductor	DS33M30
U04	DOUBLE DATA RATE (DDR) SDRAM 2-2-2 TIMING 256MBITX16 TSSOP	MICRON	MT46V16M16TG-75E
U05	MMC2107 PROCESSOR	Motorola	MMC2107
U06, UB09	CYPRESS SRAM, LAB STOCK	Labstock	NA
U07	IC, SINGLE-CHIP USB TO UART BRIDGE, 28 PIN QFN	SIL	CP2101
U1	SPI SERIAL EEPROM 8M 8 PIN SOIC 3.3V	Atmel	AT26DF081A
UB01	IC, LINEAR REG 1.5W, 2.5V or Adj, 1A, 16TSSOP-EP	Maxim	MAX1793EUE-25
UB02	IC, LINEAR REG 1.5W, 1.8V or Adj, 1A, 16TSSOP-EP	Maxim	MAX1793EUE-18
UB03	MICROPROCESSOR VOLTAGE MONITOR, 3.08V RESET, 4PIN SOT143	Maxim	MAX811TEUS-T
UB04, UB05, UB07	IC, LINEAR REG 1.5W, 3.3V or Adj, 1A, 16TSSOP-EP	Maxim	MAX1793EUE-33
UB06	HIGH SPEED BUFFER	FAIRCHILD	NC7SZ86
UB08	Dual RS-232 transceivers with 3.3V/5V internal capacitors	MAXIM	MAX3233E
XB01	XTAL LOW PROFILE 8.0MHZ	ECL	EC1-8.000M
YB01	OSCILLATOR, CRYSTAL CLOCK, 3.3V - 19.44 MHZ	SaRonix	SOCKET+NTH089A3-19.44


YB02	SOCKETED OSCILLATOR, CRYSTAL CLOCK, 3.3V - 25.000 MHZ	SaRonix	NTH089AA3- 25.000+SOCKET
YB03	OSCILLATOR, CRYSTAL CLOCK, 3.3V - 77.76 MHZ	SaRonix	SOCKET+NTH089A3- 77.7600

14. Schematics

The DS33M30DK schematics are featured in the following pages. The schematic contains three hierarchal blocks: Microcontroller, Ethernet PHY, and Ethernet Test Points.




All signals inside a hierarchy block are local, with exception for V_{CC} and ground. In-port and out-port connectors are used to allow signals inside a hierarchy block to become accessible as pins on the hierarchy blocks symbol. From here blocks are wired together as if they were ordinary components. [Figure 14-1](#) shows the system diagram in terms of hierarchal blocks with schematic page numbers given for each functional block.

Figure 14-1. DS33M30 PCB Layout and Schematic Hierarchy Block Page Listing

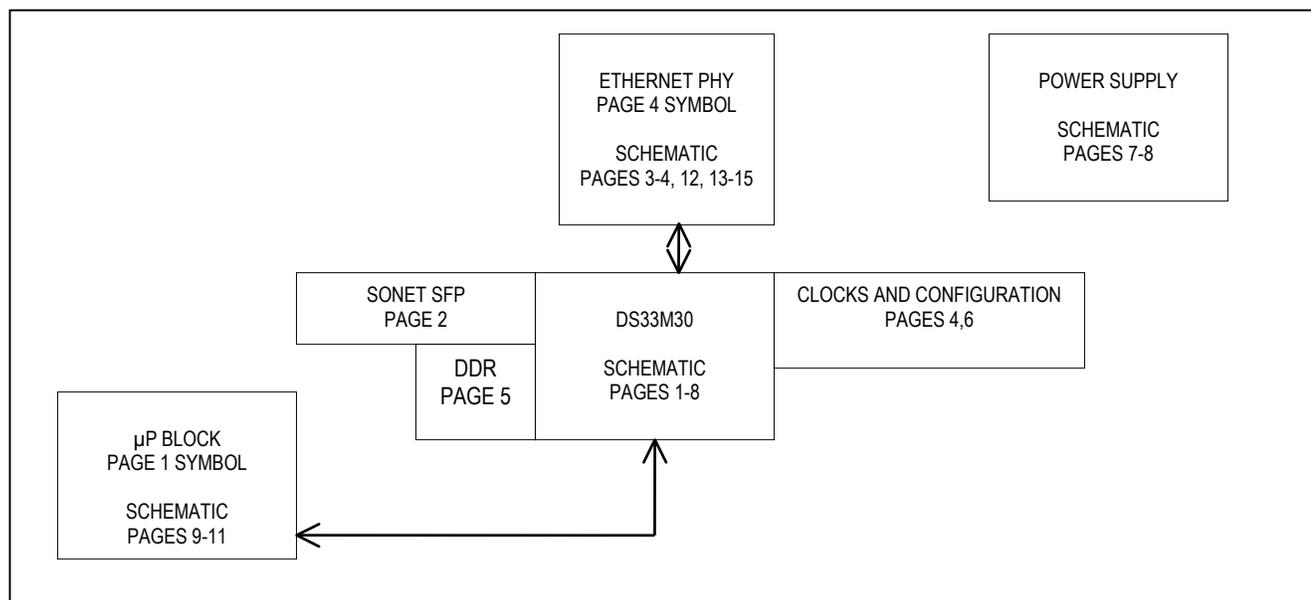

DS33M30DK CONTENTS / INDEX

MICROPORT. P.1,9-11
 SERDES. P.2
 ETHERNET. P.3-4,12,13-15
 OSCILLATORS. P.4
 DDR MEMORY. P.5
 BIAS+CONFIG. P.6
 POWER. P.7-8

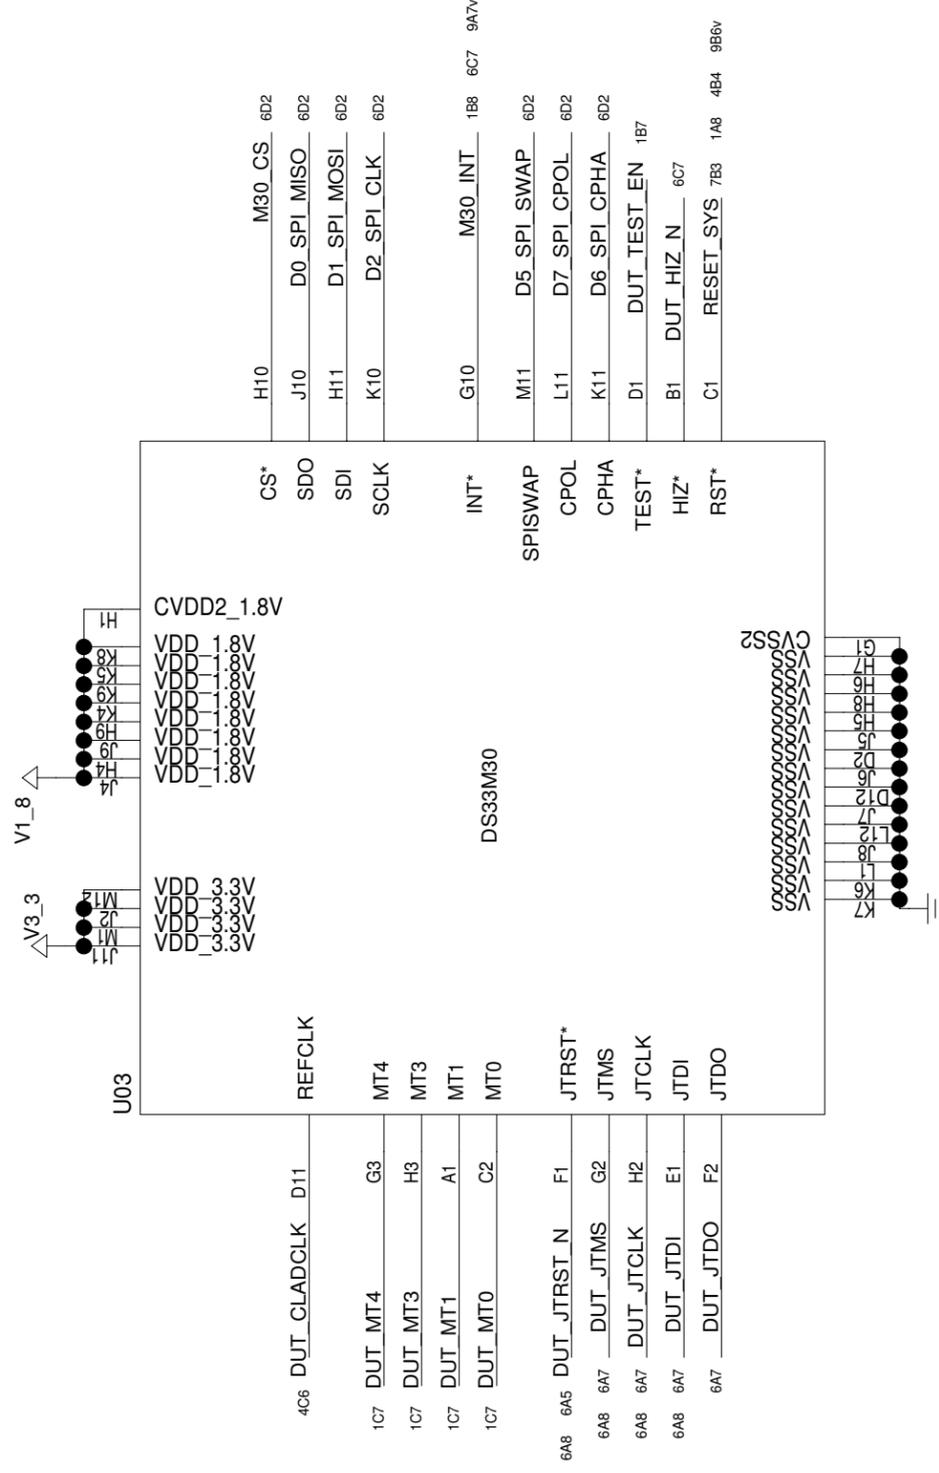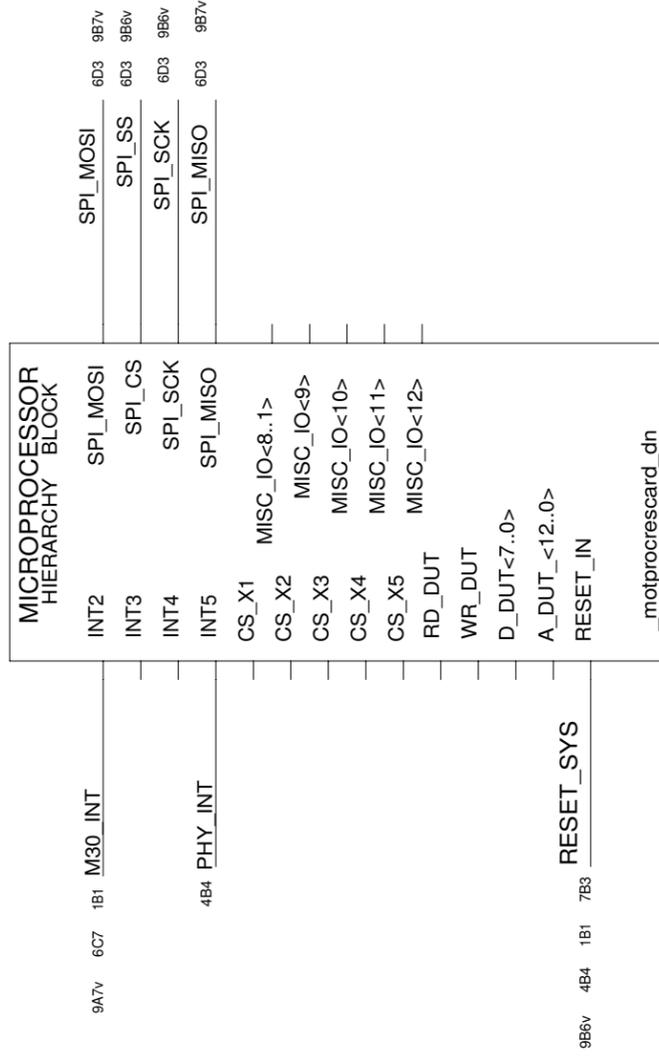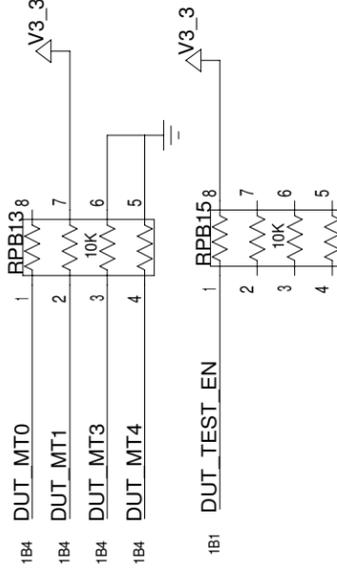

BEGINNING OF DS33M30DK

TITLE: DS33M30DK02A0


MICROPORT. P.1,9-11

ENGINEER: STEVE SCULLY

DATE:


03/10/2008

PAGE: 1/8(BLOCK)
1/14(TOTAL)

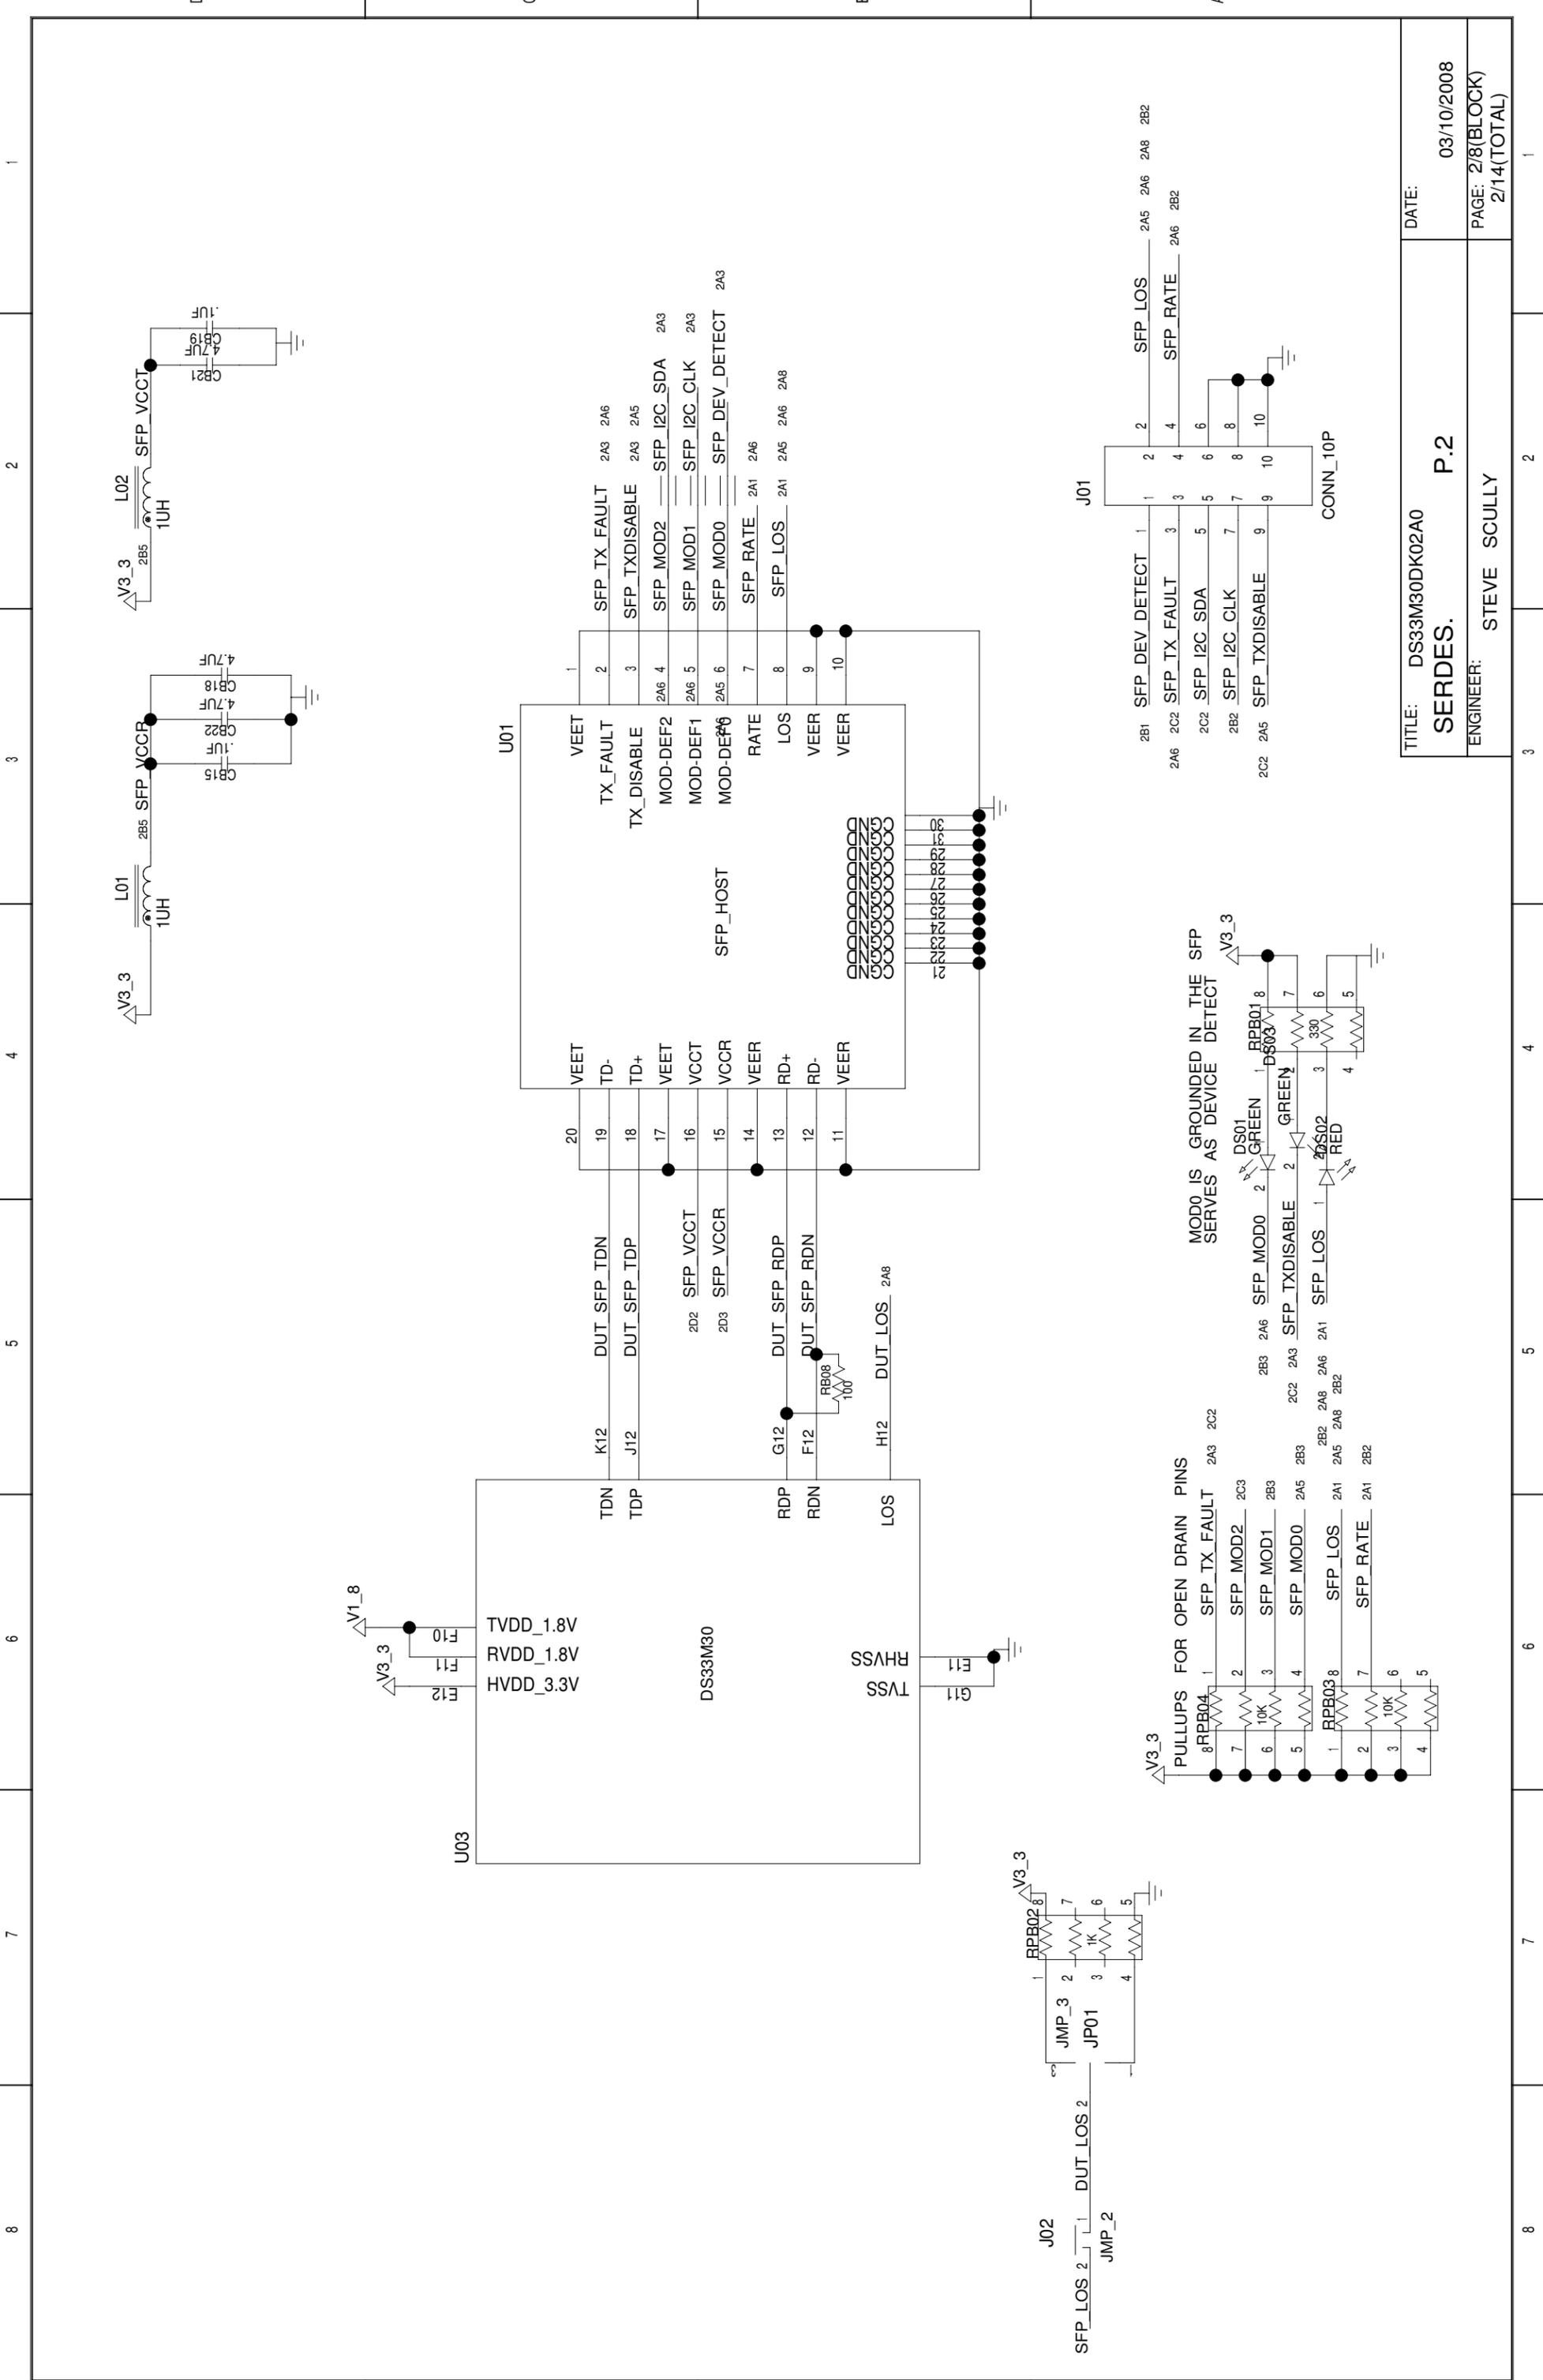


TITLE: DS33M30DK02A0
SERDES. P.2
 ENGINEER: STEVE SCULLY

DATE: 03/10/2008
 PAGE: 2/8(BLOCK)
 2/14(TOTAL)

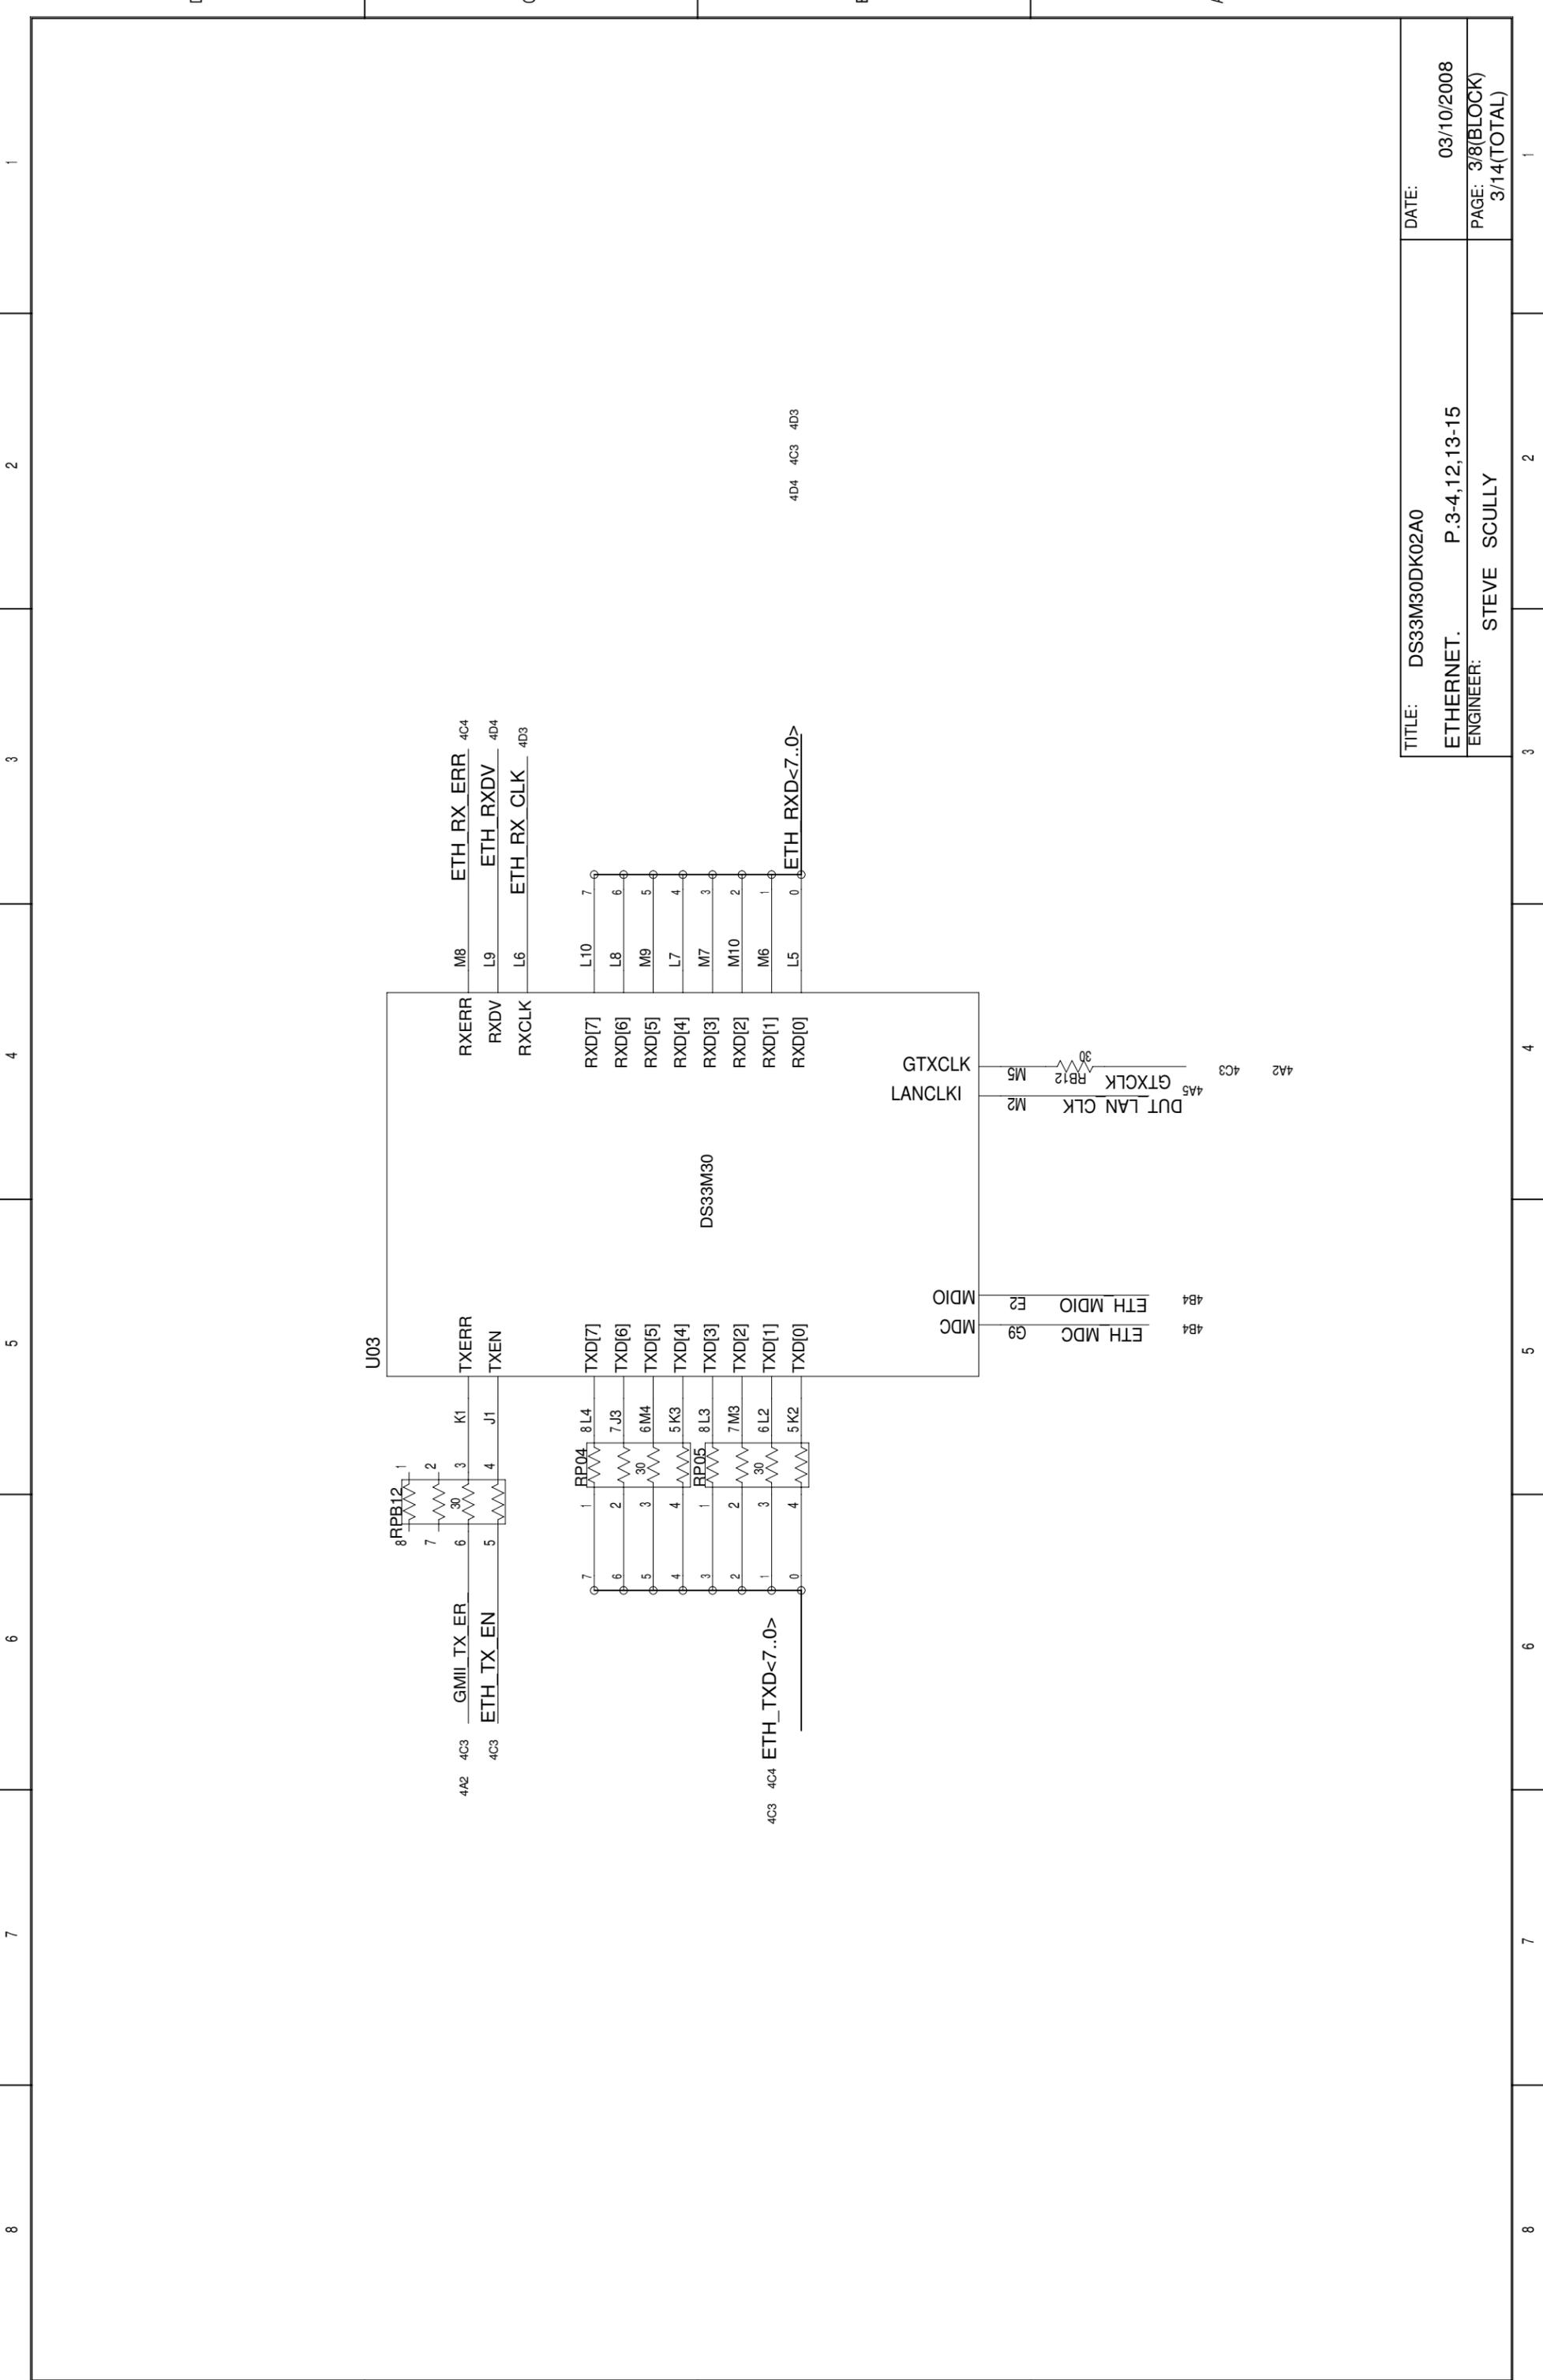


TITLE: DS33M30DK02A0	DATE: 03/10/2008
ETHERNET. P.3-4,12,13-15	PAGE: 3/8(BLOCK)
ENGINEER: STEVE SCULLY	3/14(TOTAL)





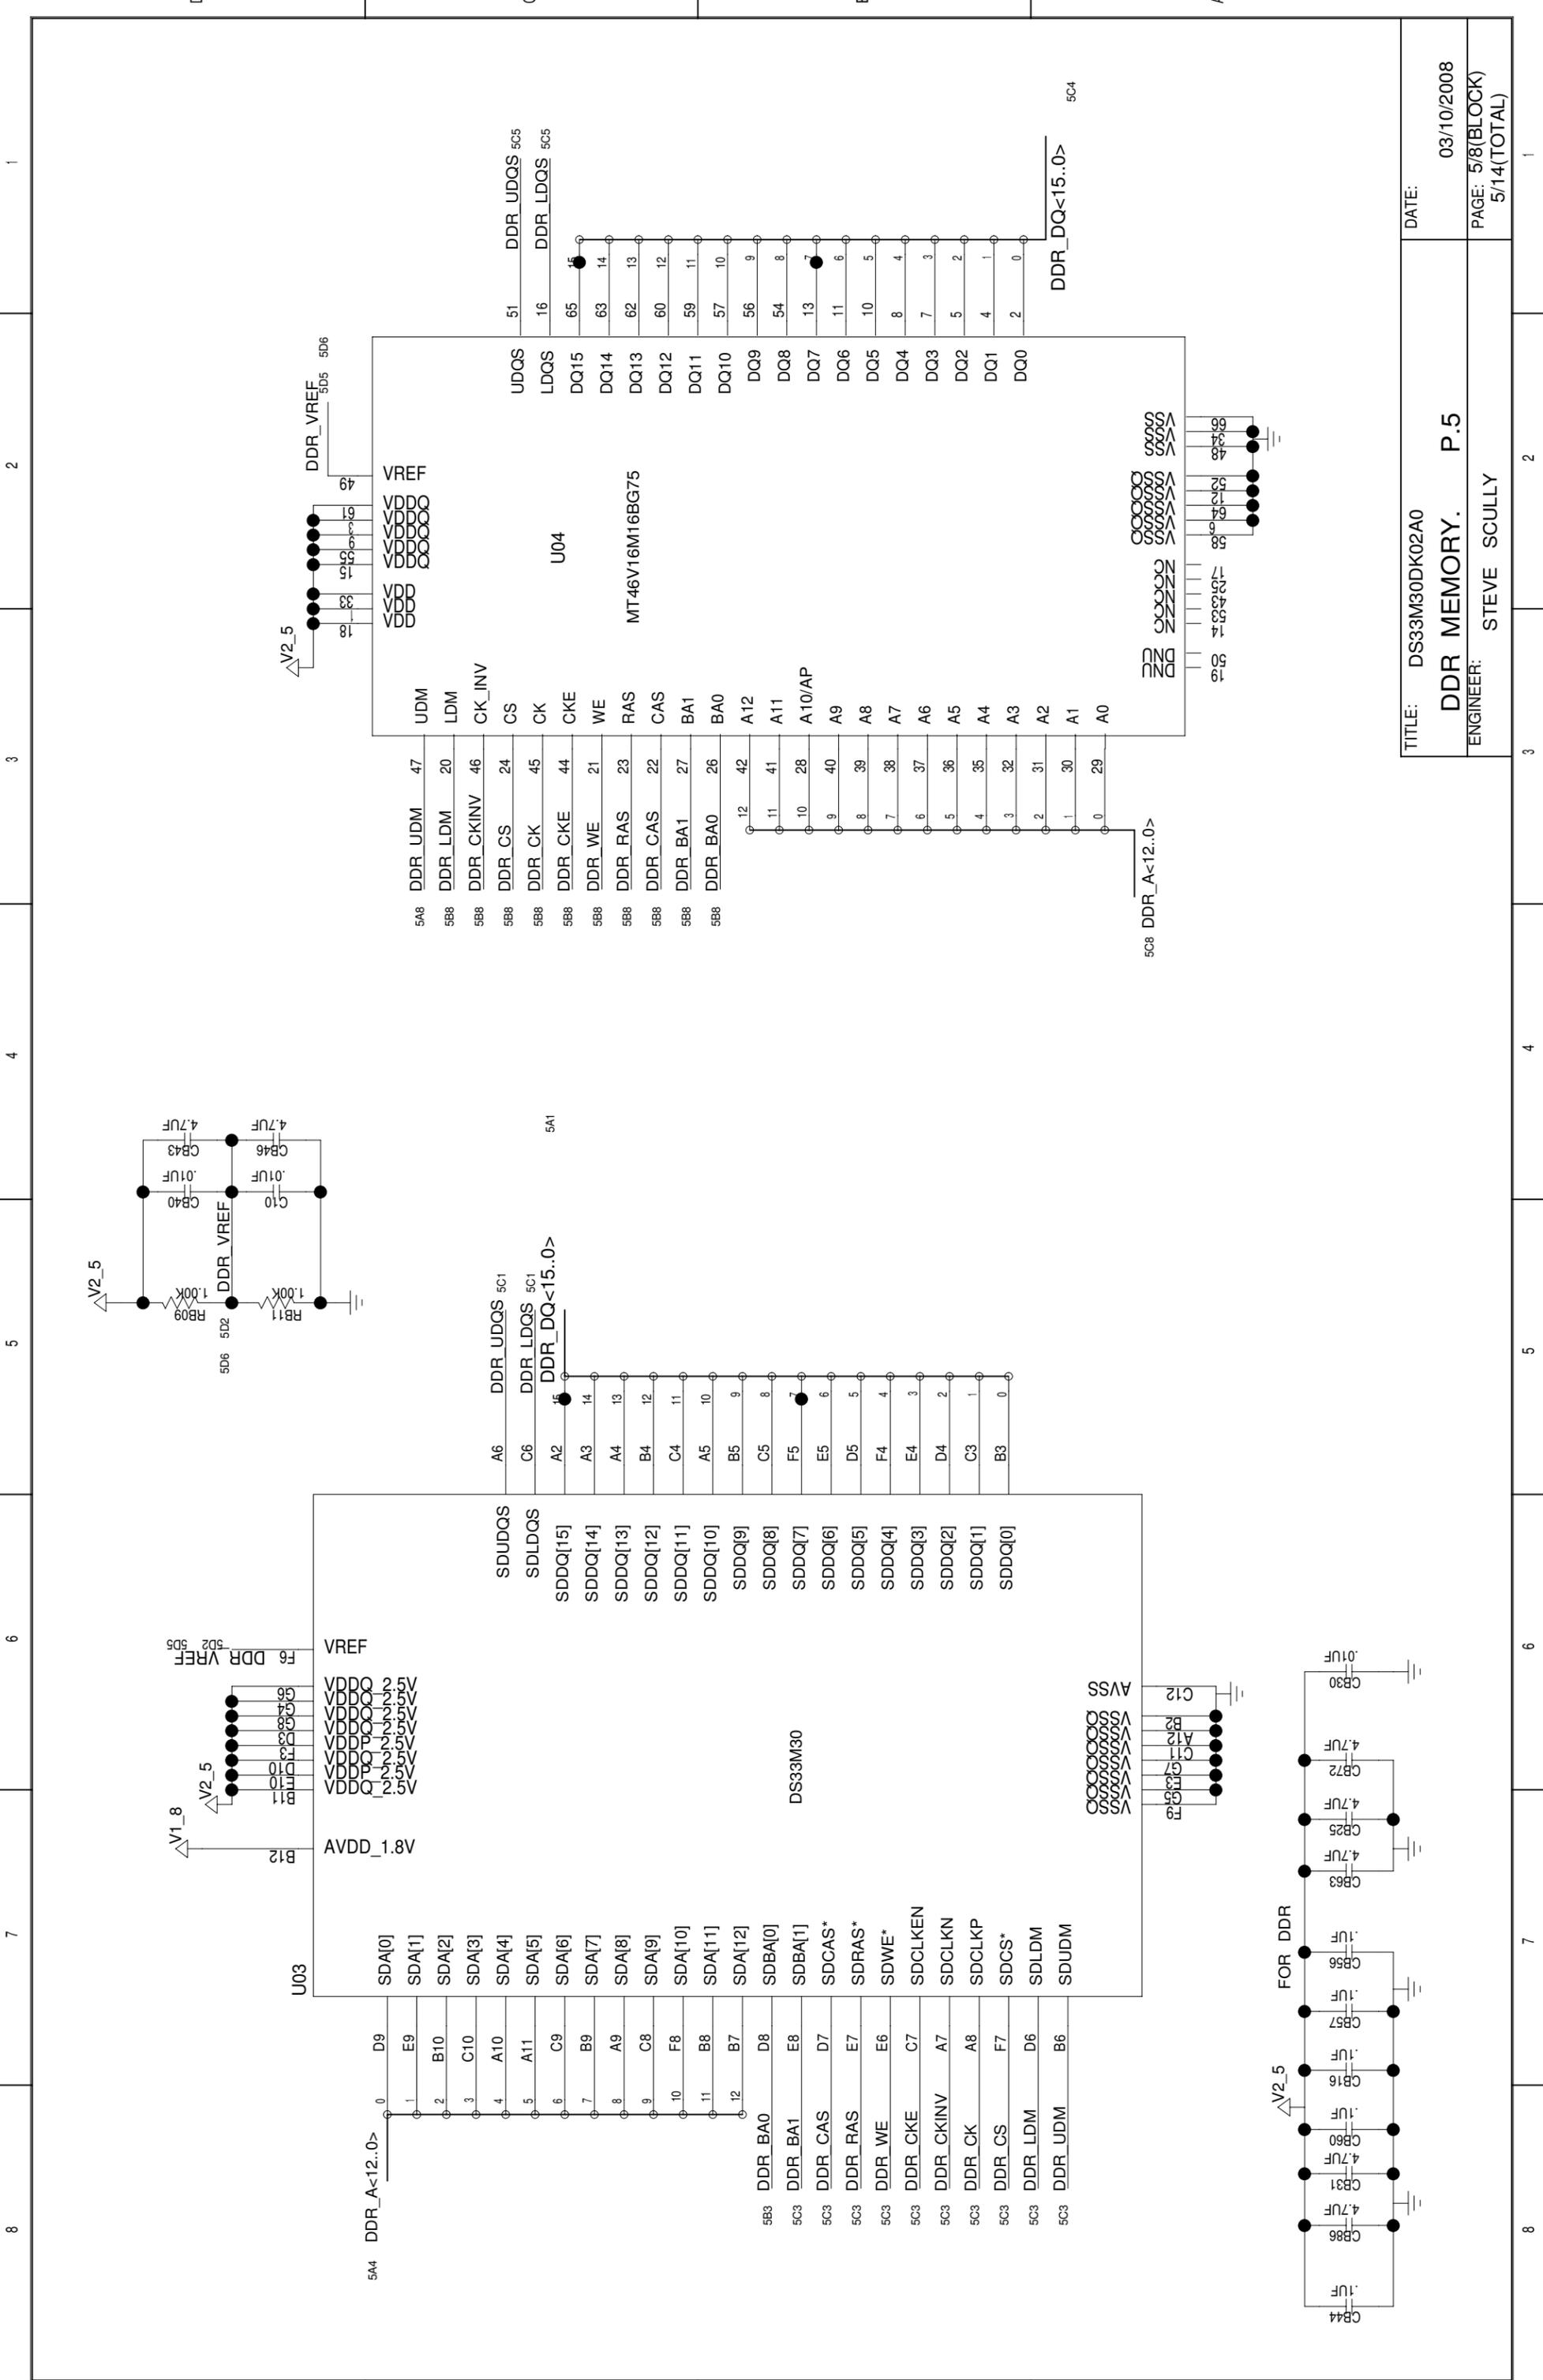


TITLE: DS33M30DK02A0
DDR MEMORY. P.5
 ENGINEER: STEVE SCULLY





DATE: 03/10/2008
 PAGE: 5/8(BLOCK)
 5/14(TOTAL)

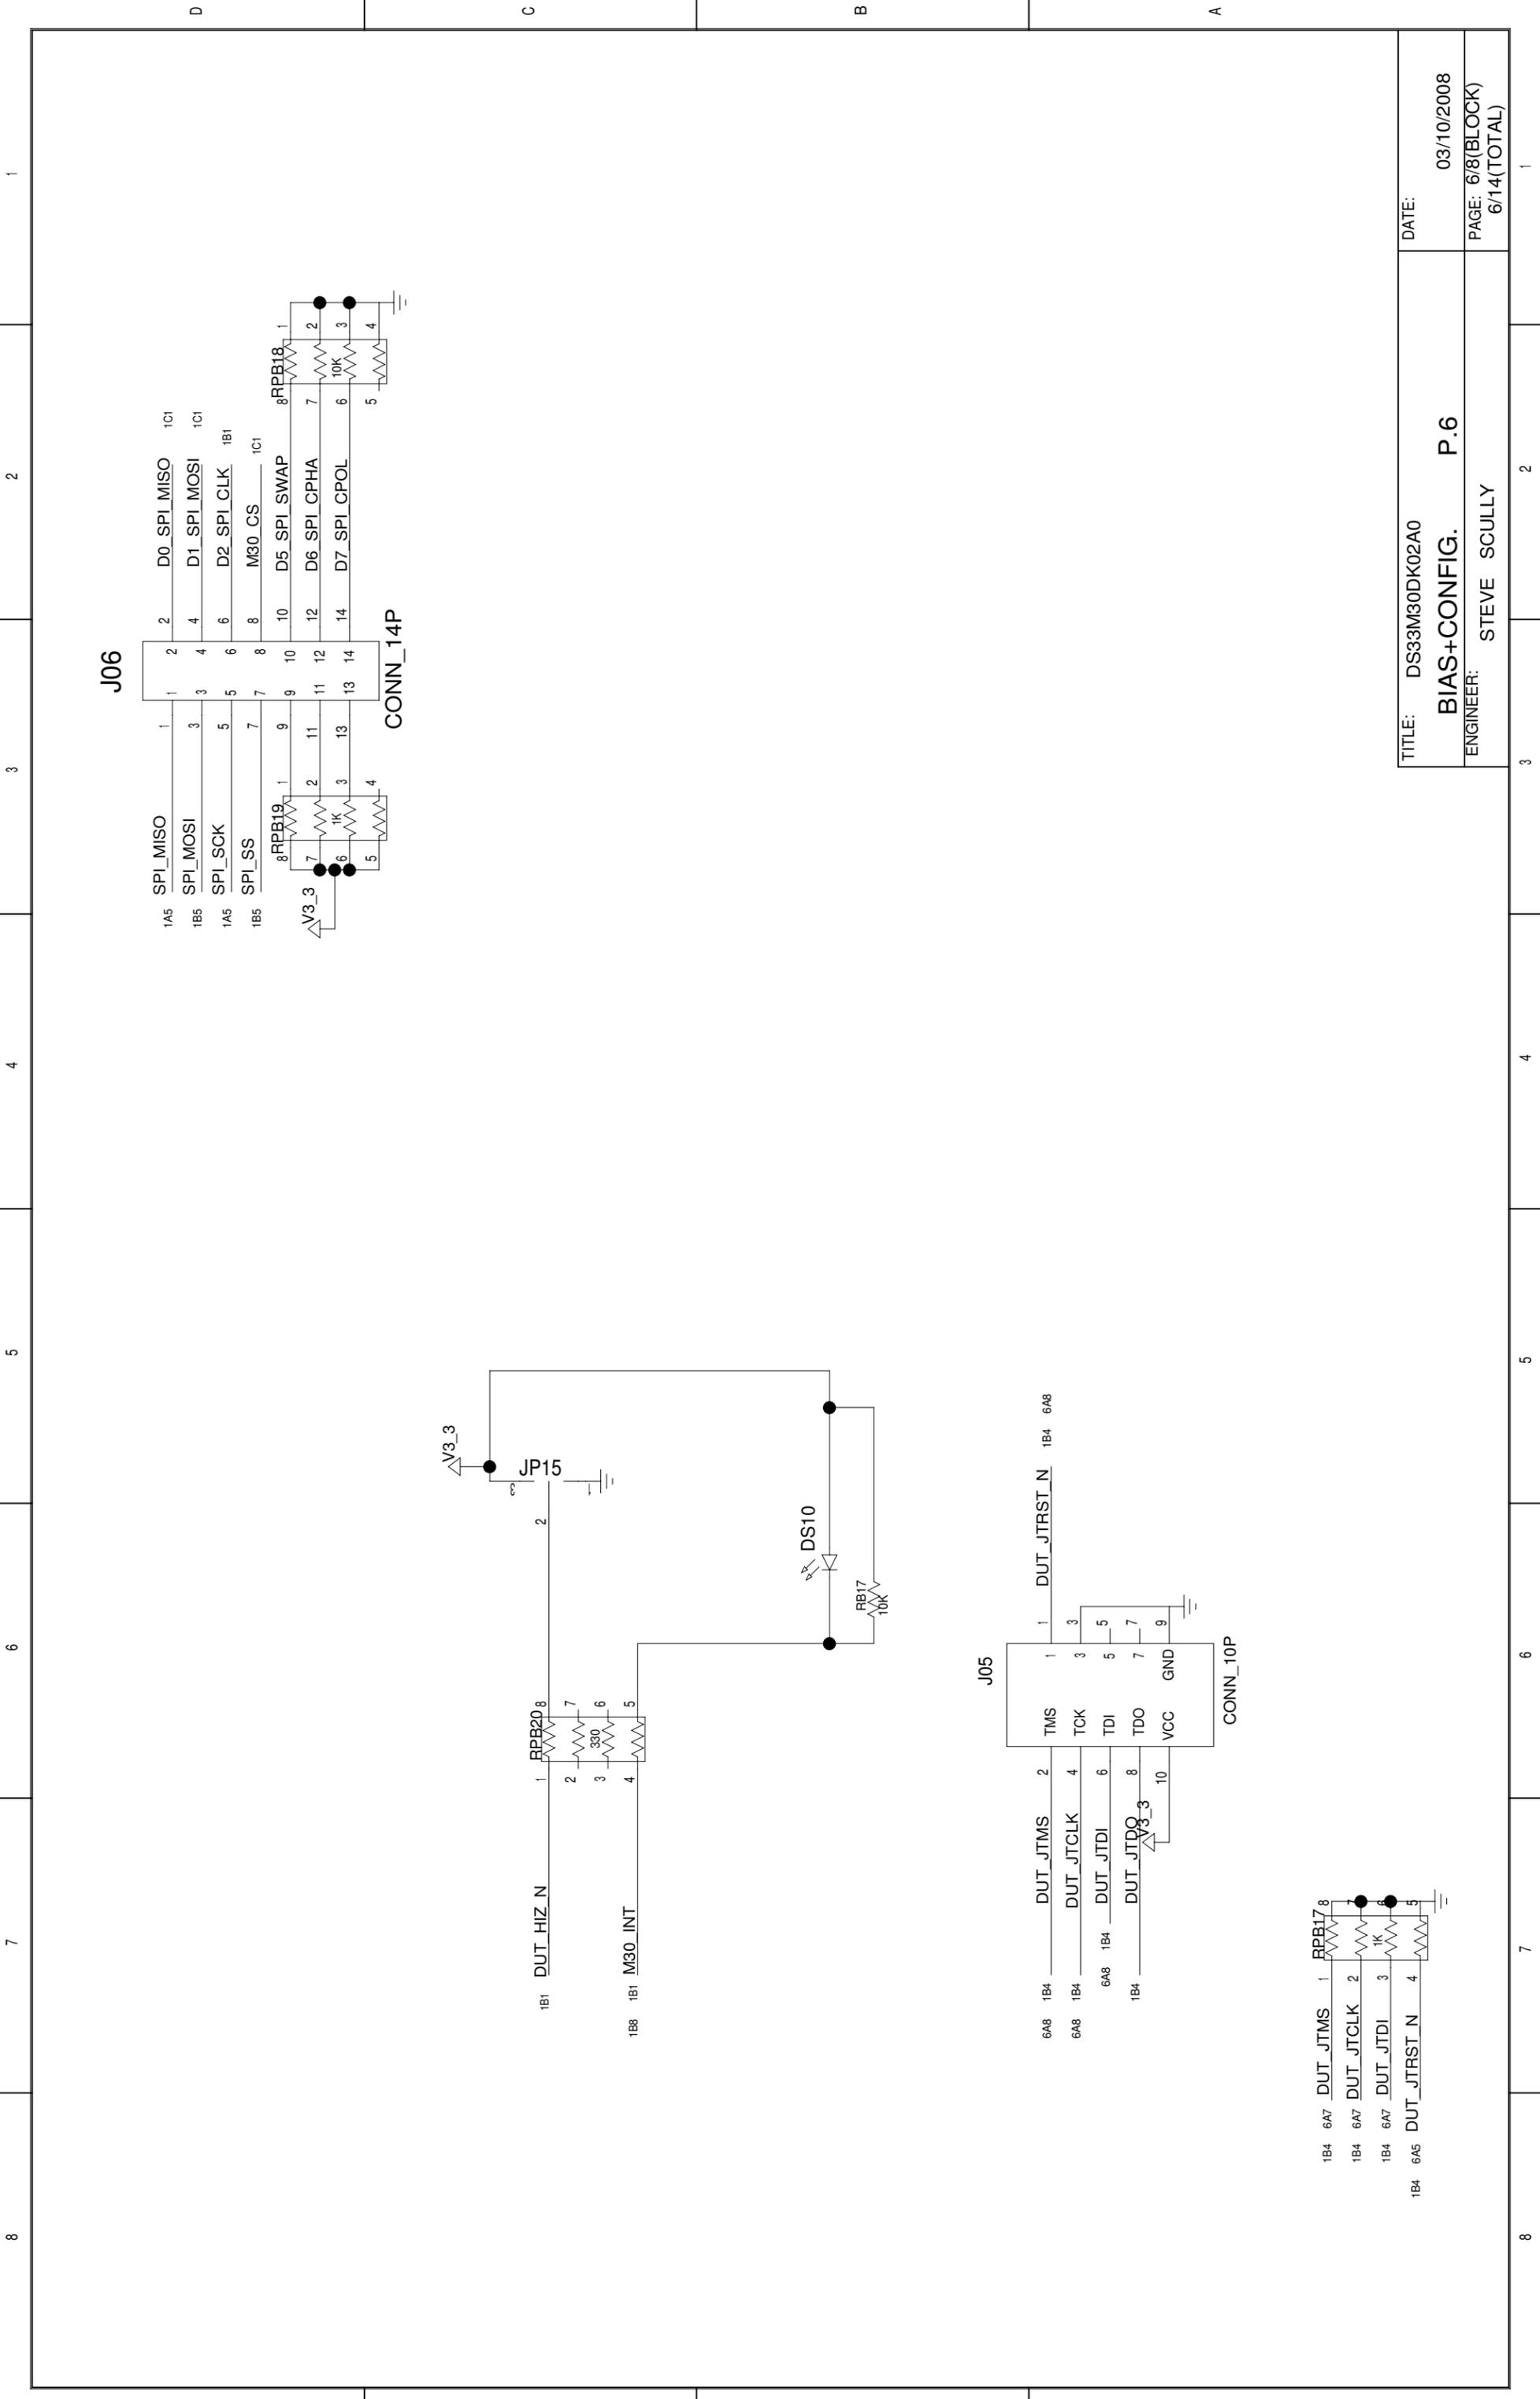




TITLE:	DS33M30DK02A0	DATE:	03/10/2008
	BIAS+CONFIG. P.6		
ENGINEER:	STEVE SCULLY	PAGE:	6/8(BLOCK) 6/14(TOTAL)

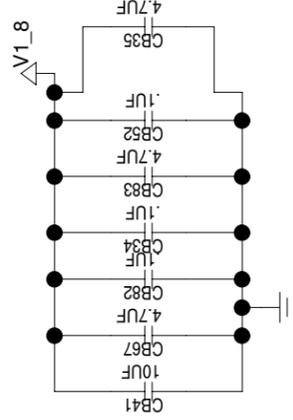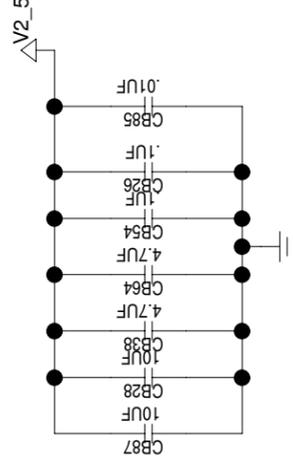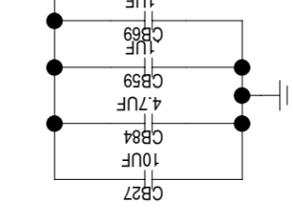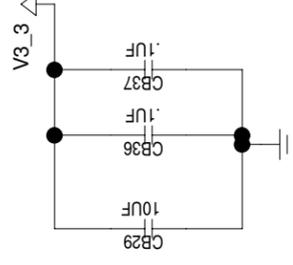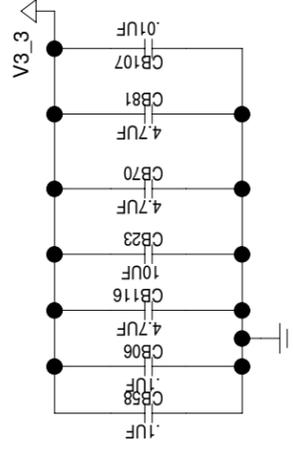

**UB01
MAX1793_U**

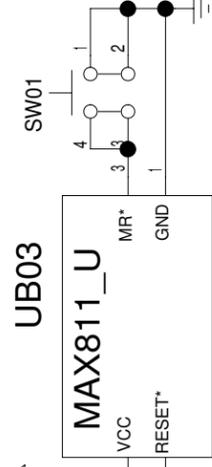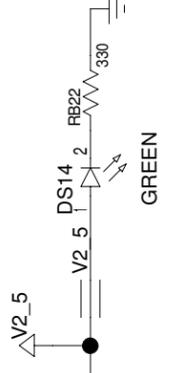
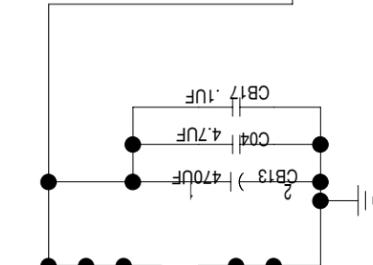
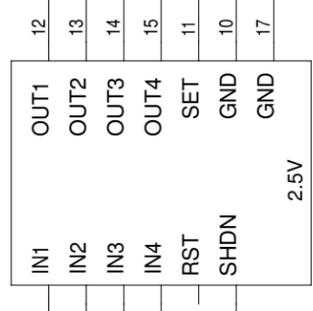


**UB02
MAX1793_U**

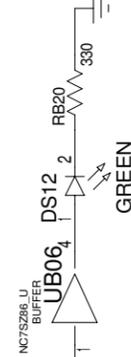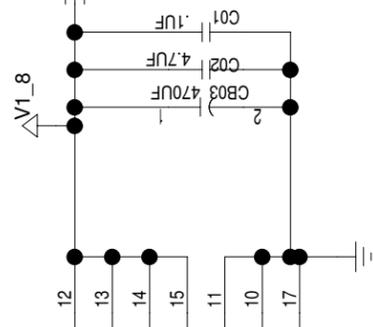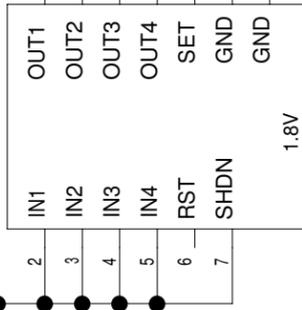

TRACES BETWEEN REGULATOR OUTPUT AND V2.5 SHOULD BE LONG ENOUGH TO BUILD UP 0.05 OHM OF RESISTANCE TO ENSURE LOAD SHARING BETWEEN THE 2.5V 1% REGULATORS TRACE GEOMETRY FOR THIS IS: 1 INCH LONG, 10 MIL WIDE, 1 OZ COPPER




TITLE:	DS33M30DK02A0	DATE:	03/10/2008
ENGINEER:	STEVE SCULLY	PAGE:	7/8(BLOCK)
		PAGE:	7/14(TOTAL)

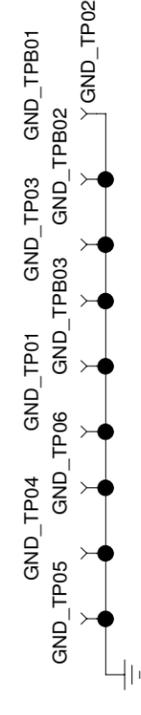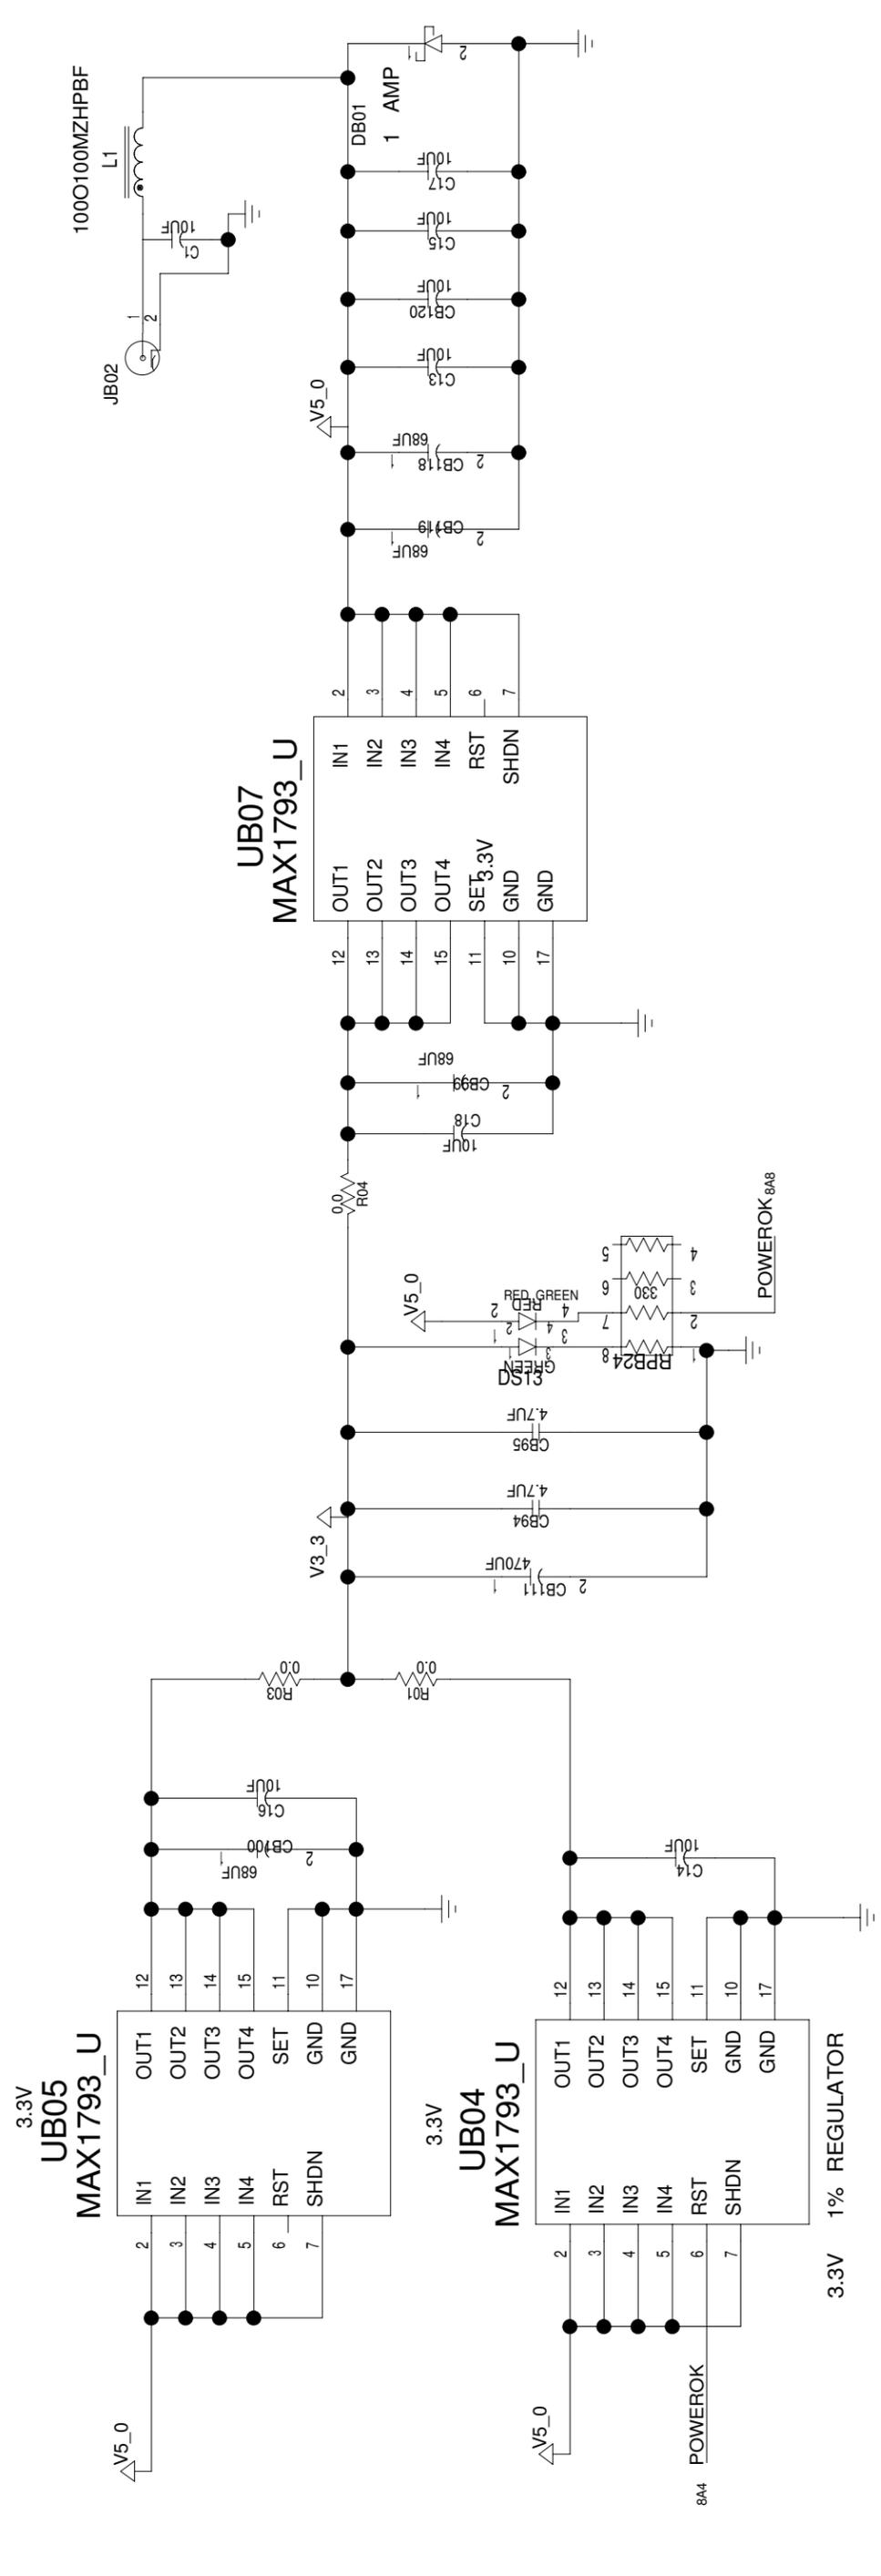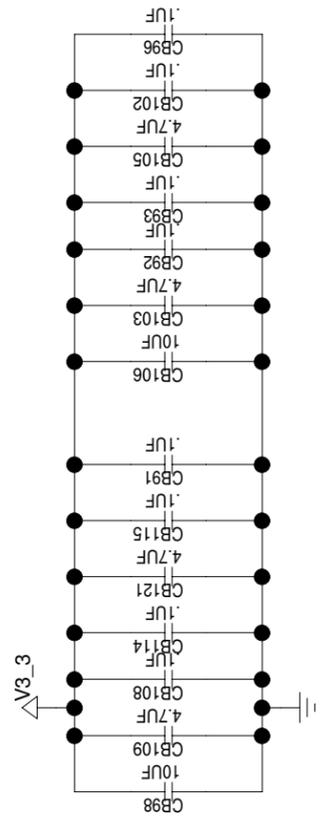


- H01
- H05
- H03
- H04
- H05
- H04
- H08
- H02

TITLE:	DS33M30DK02A0	DATE:	03/10/2008
ENGINEER:	STEVE SCULLY	PAGE:	8/8(BLOCK)
		P.7-8	8/14(TOTAL)





RESET CONFIGURATION

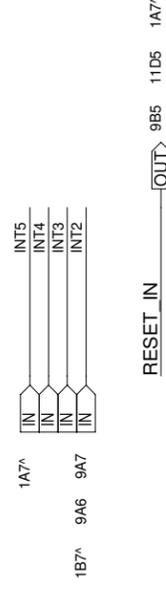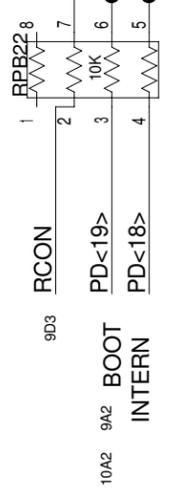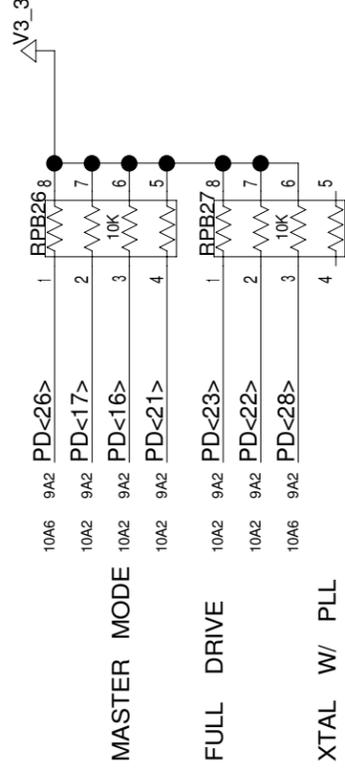

3.3V U1

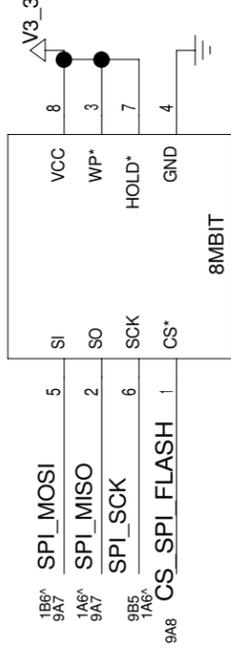

AT26DF081_U

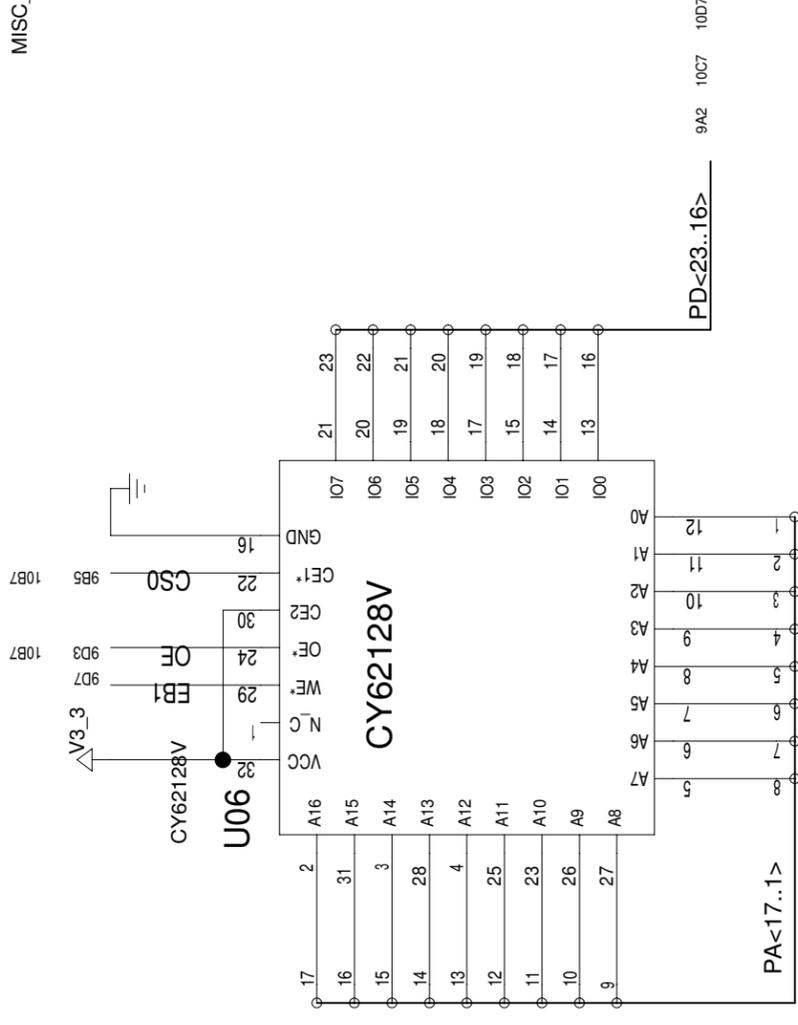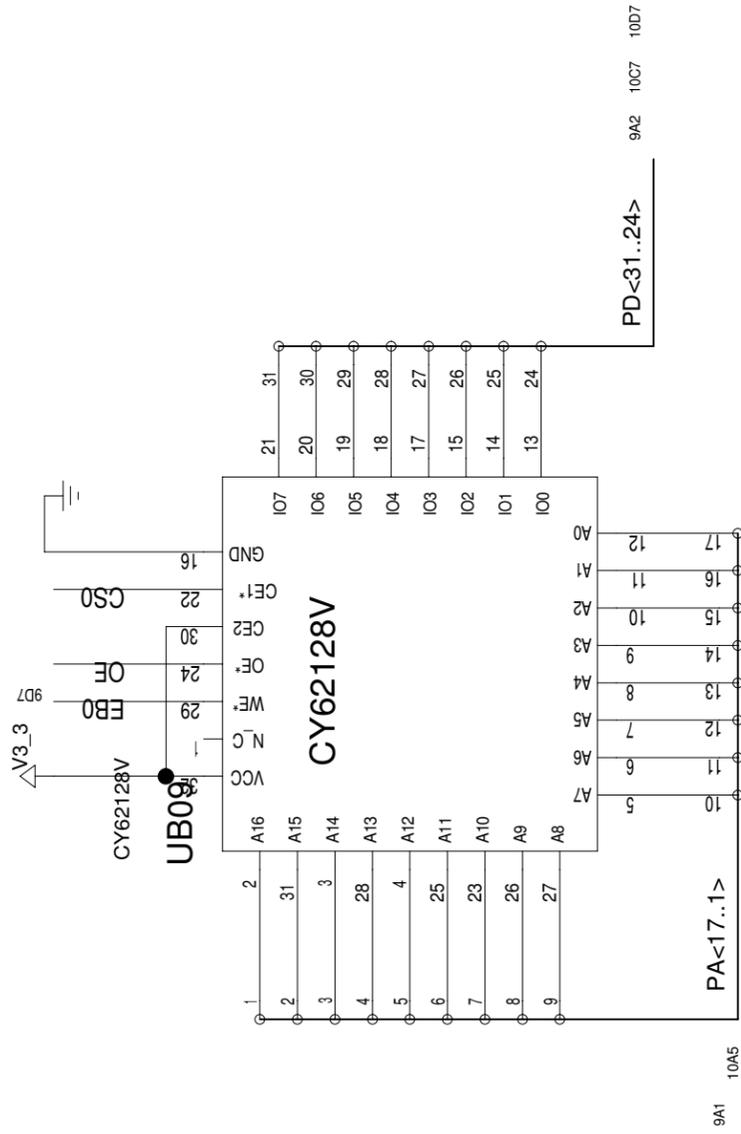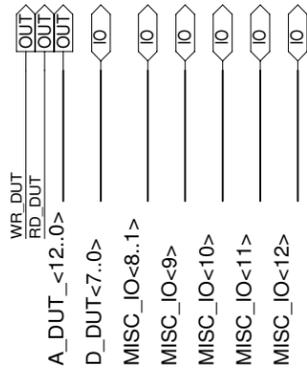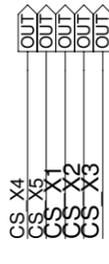






TITLE: DS33M30DK02A0

DATE:



03/10/2008

ENGINEER: STEVE SCULLY


PAGE: 2/3(BLOCK)
10/14(TOTAL)

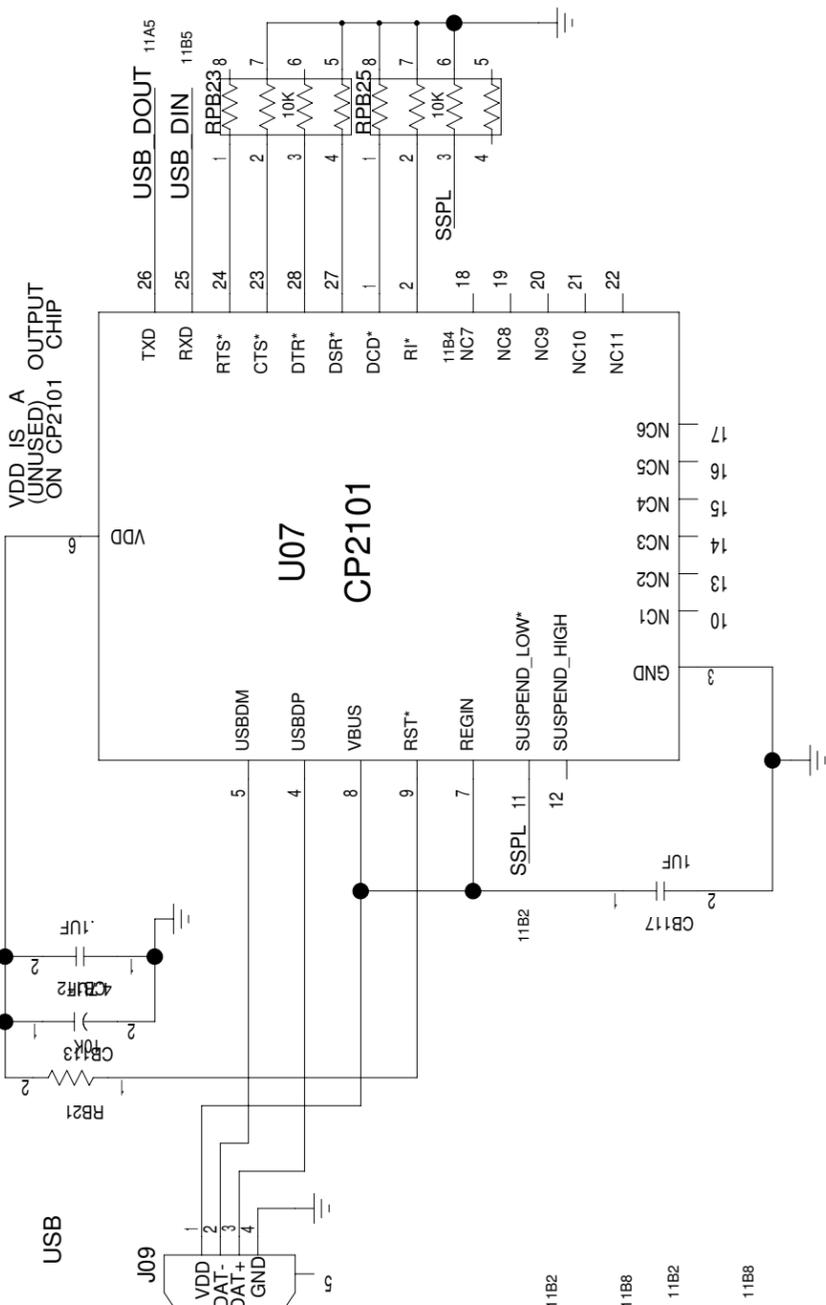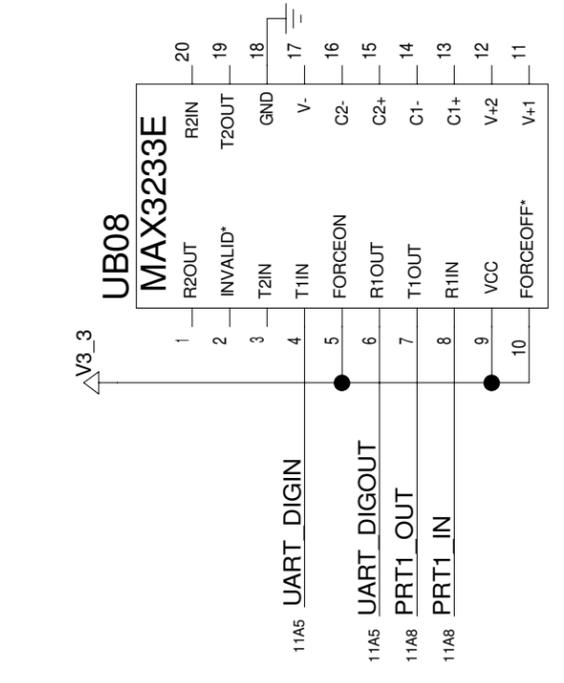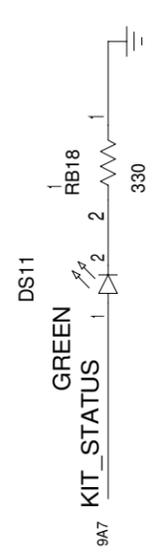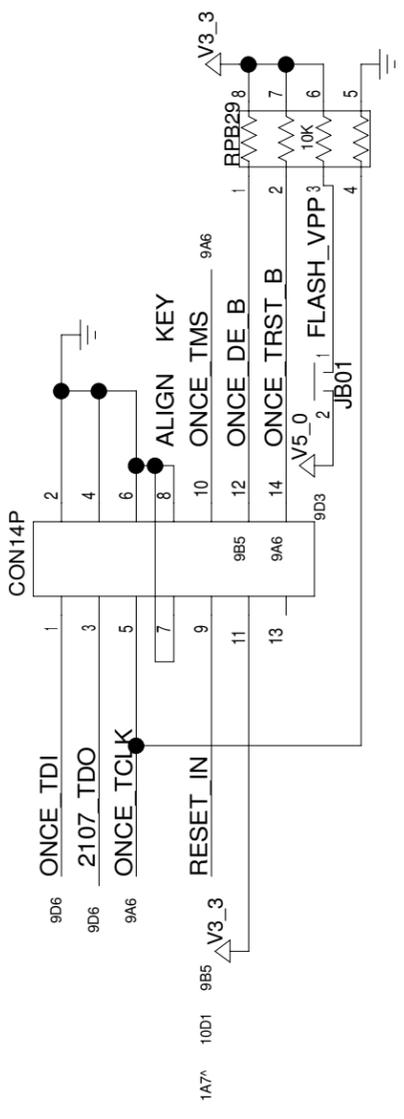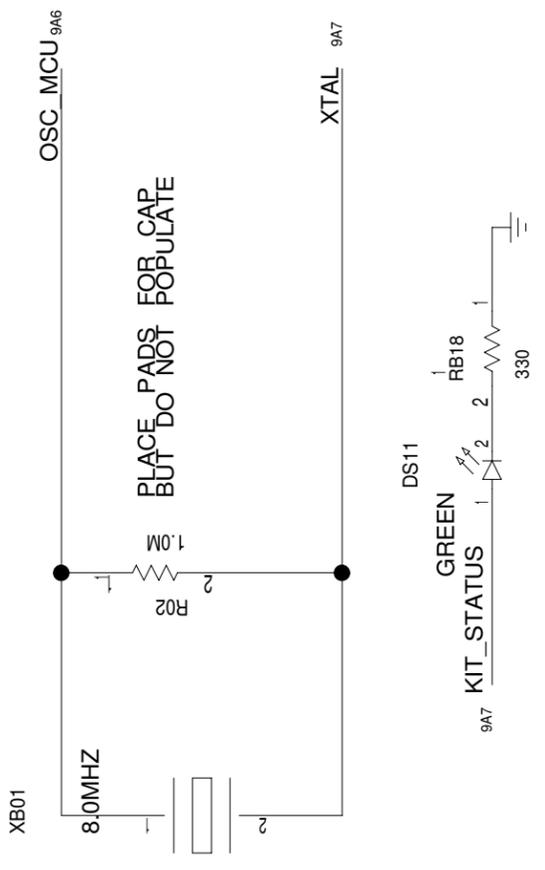

DTR AND RTS
USE RPACK
CONNECTION AS
TESTPOINTS

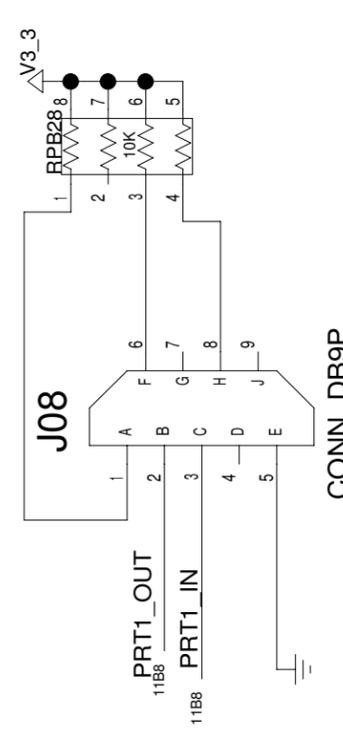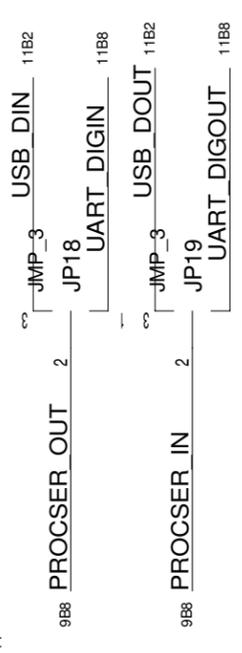


TITLE: DS33M30DK02A0	DATE: 03/10/2008
ENGINEER: STEVE SCULLY	PAGE: 3/3(BLOCK) 11/14(TOTAL)

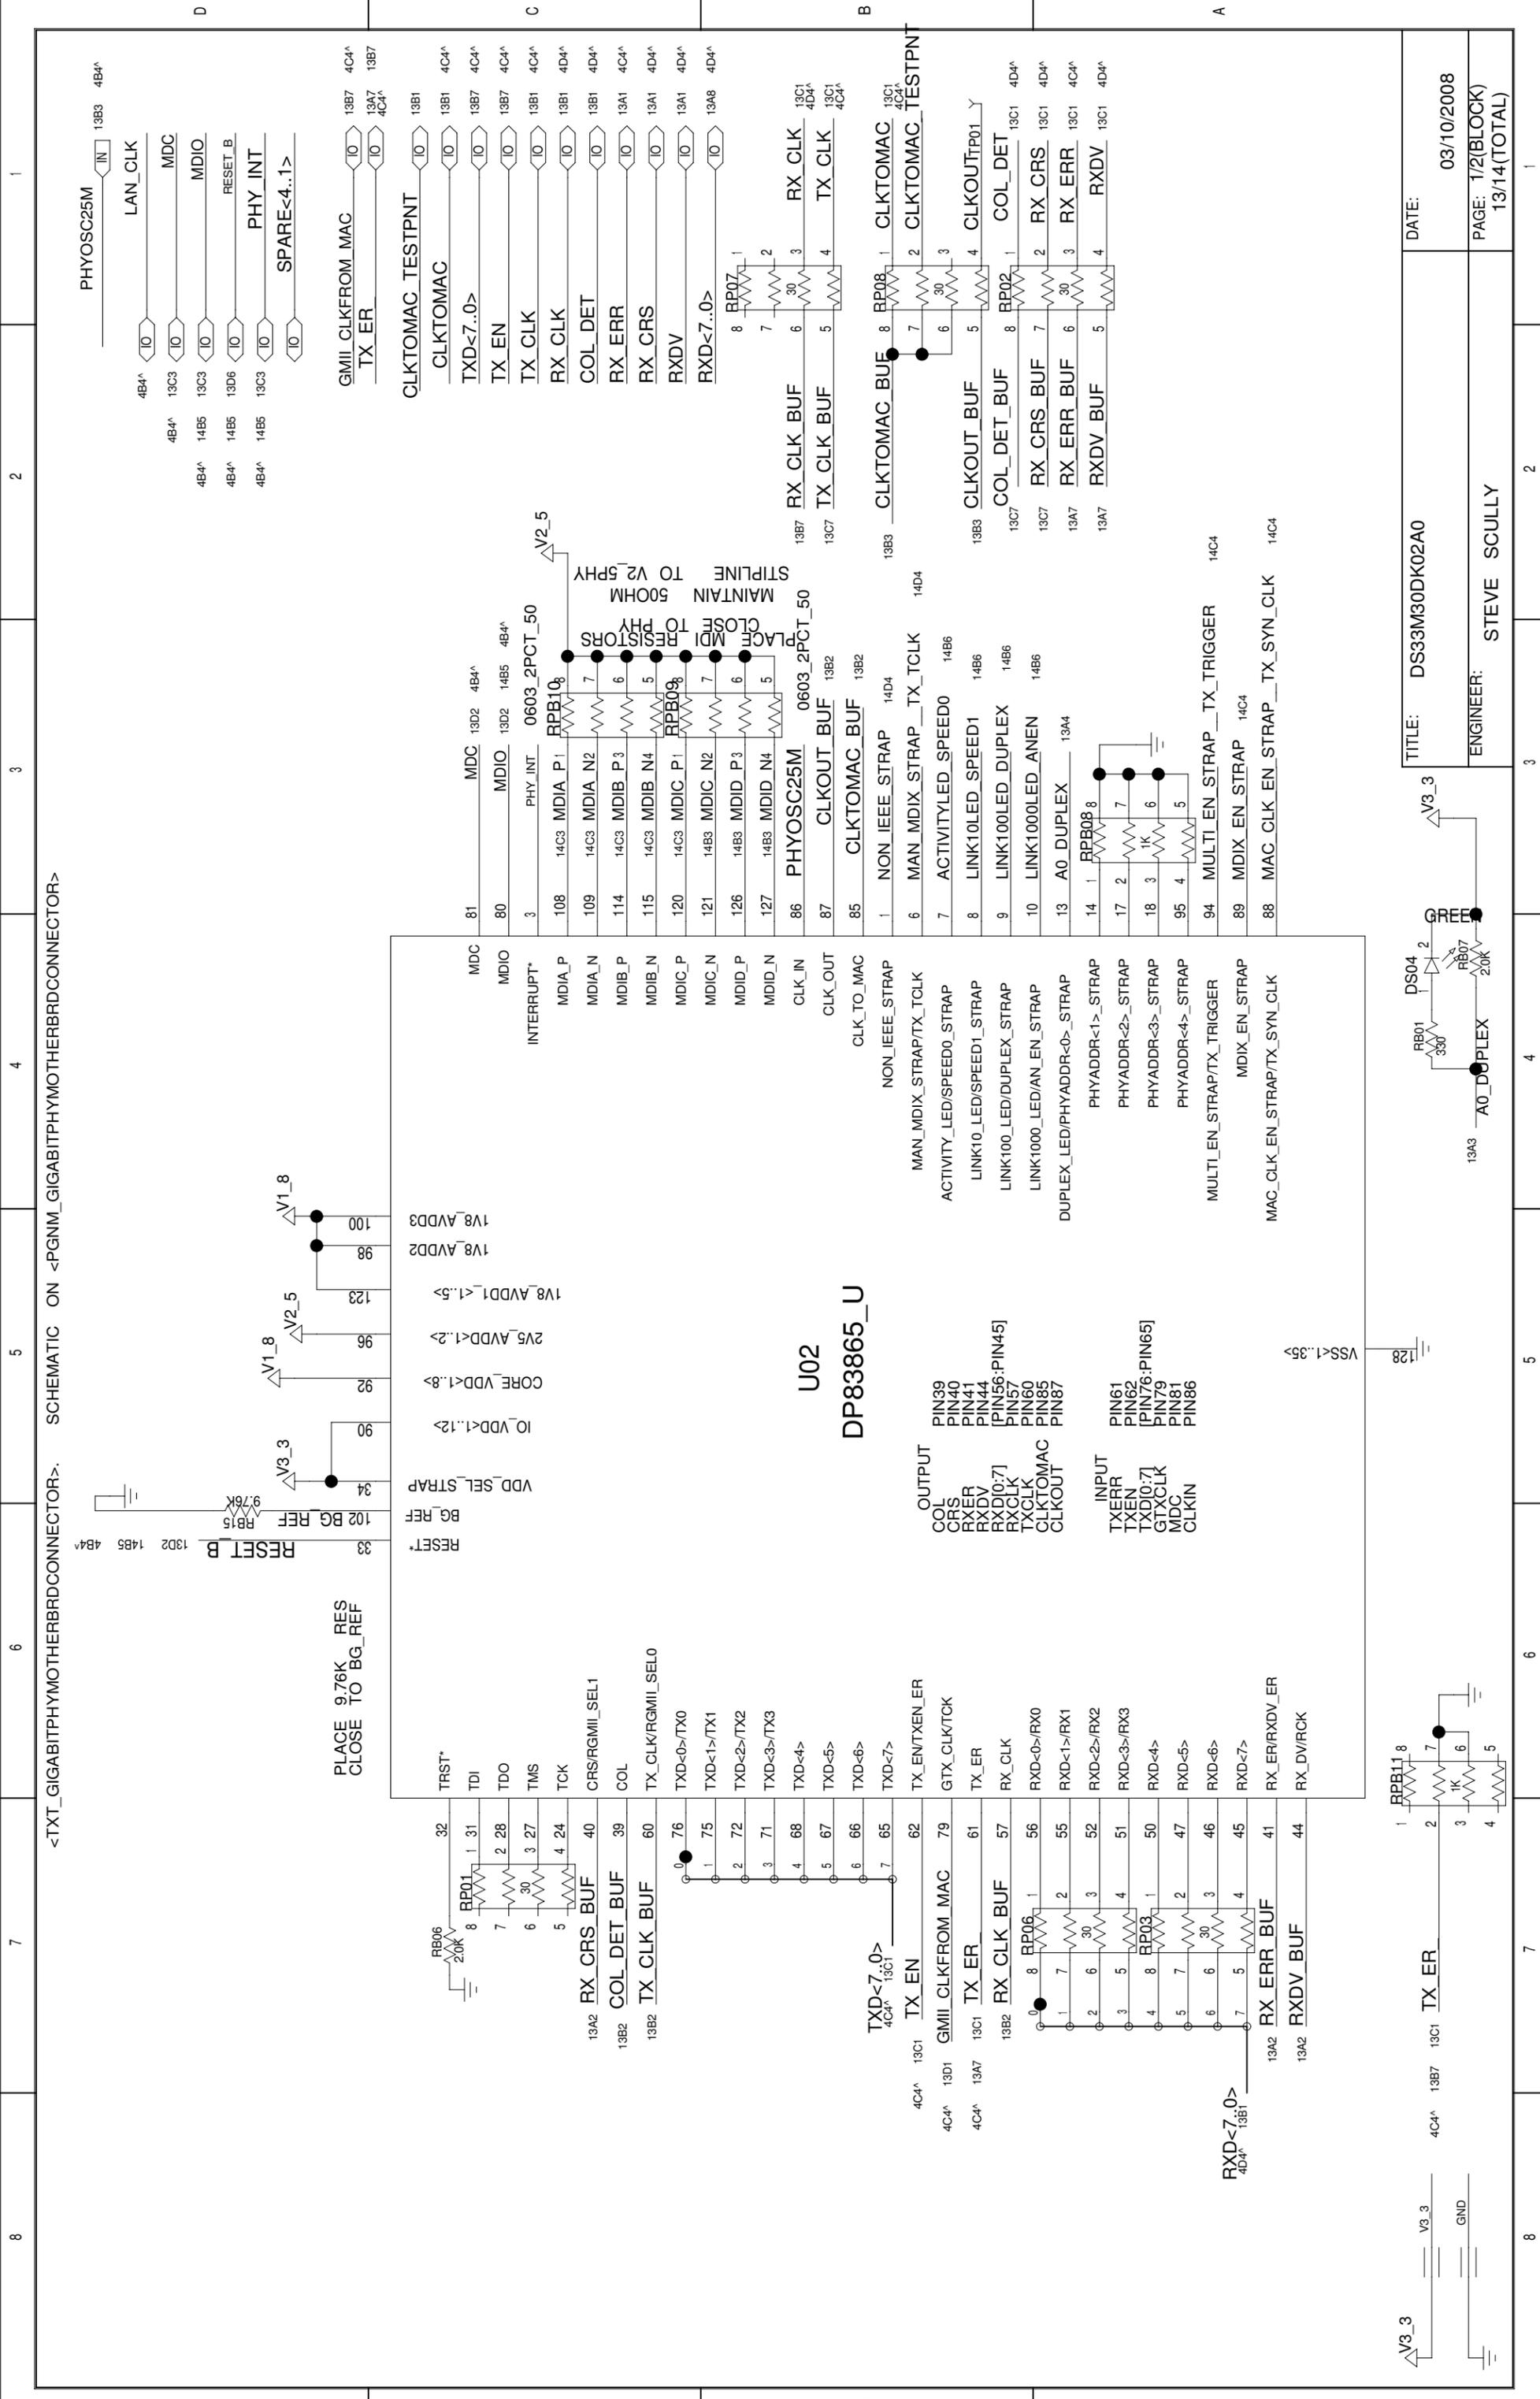

Pin	Signal	Value/Component	Notes
33	RESET_B	9.76K	PLACE 9.76K RES CLOSE TO BG_REF
34	V3_3		
35	IO_VDD<1..12>		
36	CORE_VDD<1..8>		
37	2V5_AVDD<1..2>		
38	1V8_AVDD1<1..5>		
39	1V8_AVDD2		
40	1V8_AVDD3		
41	RESISTOR	330	
42	RESISTOR	20K	
43	RESISTOR	1K	
44	RESISTOR	1K	
45	RESISTOR	1K	
46	RESISTOR	1K	
47	RESISTOR	1K	
48	RESISTOR	1K	
49	RESISTOR	1K	
50	RESISTOR	1K	
51	RESISTOR	1K	
52	RESISTOR	1K	
53	RESISTOR	1K	
54	RESISTOR	1K	
55	RESISTOR	1K	
56	RESISTOR	1K	
57	RESISTOR	1K	
58	RESISTOR	1K	
59	RESISTOR	1K	
60	RESISTOR	1K	
61	RESISTOR	1K	
62	RESISTOR	1K	
63	RESISTOR	1K	
64	RESISTOR	1K	
65	RESISTOR	1K	
66	RESISTOR	1K	
67	RESISTOR	1K	
68	RESISTOR	1K	
69	RESISTOR	1K	
70	RESISTOR	1K	
71	RESISTOR	1K	
72	RESISTOR	1K	
73	RESISTOR	1K	
74	RESISTOR	1K	
75	RESISTOR	1K	
76	RESISTOR	1K	
77	RESISTOR	1K	
78	RESISTOR	1K	
79	RESISTOR	1K	
80	RESISTOR	1K	
81	RESISTOR	1K	
82	RESISTOR	1K	
83	RESISTOR	1K	
84	RESISTOR	1K	
85	RESISTOR	1K	
86	RESISTOR	1K	
87	RESISTOR	1K	
88	RESISTOR	1K	
89	RESISTOR	1K	
90	RESISTOR	1K	
91	RESISTOR	1K	
92	RESISTOR	1K	
93	RESISTOR	1K	
94	RESISTOR	1K	
95	RESISTOR	1K	
96	RESISTOR	1K	
97	RESISTOR	1K	
98	RESISTOR	1K	
99	RESISTOR	1K	
100	RESISTOR	1K	
101	RESISTOR	1K	
102	RESISTOR	1K	
103	RESISTOR	1K	
104	RESISTOR	1K	
105	RESISTOR	1K	
106	RESISTOR	1K	
107	RESISTOR	1K	
108	RESISTOR	1K	
109	RESISTOR	1K	
110	RESISTOR	1K	
111	RESISTOR	1K	
112	RESISTOR	1K	
113	RESISTOR	1K	
114	RESISTOR	1K	
115	RESISTOR	1K	
116	RESISTOR	1K	
117	RESISTOR	1K	
118	RESISTOR	1K	
119	RESISTOR	1K	
120	RESISTOR	1K	
121	RESISTOR	1K	
122	RESISTOR	1K	
123	RESISTOR	1K	
124	RESISTOR	1K	
125	RESISTOR	1K	
126	RESISTOR	1K	
127	RESISTOR	1K	
128	RESISTOR	1K	
129	RESISTOR	1K	
130	RESISTOR	1K	
131	RESISTOR	1K	
132	RESISTOR	1K	
133	RESISTOR	1K	
134	RESISTOR	1K	
135	RESISTOR	1K	
136	RESISTOR	1K	
137	RESISTOR	1K	
138	RESISTOR	1K	
139	RESISTOR	1K	
140	RESISTOR	1K	
141	RESISTOR	1K	
142	RESISTOR	1K	
143	RESISTOR	1K	
144	RESISTOR	1K	
145	RESISTOR	1K	
146	RESISTOR	1K	
147	RESISTOR	1K	
148	RESISTOR	1K	
149	RESISTOR	1K	
150	RESISTOR	1K	

Pin	Signal	Value/Component	Notes
1	PHYOSC25M		
2	LAN_CLK		
3	MDC		
4	MDC		
5	MDC		
6	MDC		
7	MDC		
8	MDC		
9	MDC		
10	MDC		
11	MDC		
12	MDC		
13	MDC		
14	MDC		
15	MDC		
16	MDC		
17	MDC		
18	MDC		
19	MDC		
20	MDC		
21	MDC		
22	MDC		
23	MDC		
24	MDC		
25	MDC		
26	MDC		
27	MDC		
28	MDC		
29	MDC		
30	MDC		
31	MDC		
32	MDC		
33	MDC		
34	MDC		
35	MDC		
36	MDC		
37	MDC		
38	MDC		
39	MDC		
40	MDC		
41	MDC		
42	MDC		
43	MDC		
44	MDC		
45	MDC		
46	MDC		
47	MDC		
48	MDC		
49	MDC		
50	MDC		
51	MDC		
52	MDC		
53	MDC		
54	MDC		
55	MDC		
56	MDC		
57	MDC		
58	MDC		
59	MDC		
60	MDC		
61	MDC		
62	MDC		
63	MDC		
64	MDC		
65	MDC		
66	MDC		
67	MDC		
68	MDC		
69	MDC		
70	MDC		
71	MDC		
72	MDC		
73	MDC		
74	MDC		
75	MDC		
76	MDC		
77	MDC		
78	MDC		
79	MDC		
80	MDC		
81	MDC		
82	MDC		
83	MDC		
84	MDC		
85	MDC		
86	MDC		
87	MDC		
88	MDC		
89	MDC		
90	MDC		
91	MDC		
92	MDC		
93	MDC		
94	MDC		
95	MDC		
96	MDC		
97	MDC		
98	MDC		
99	MDC		
100	MDC		
101	MDC		
102	MDC		
103	MDC		
104	MDC		
105	MDC		
106	MDC		
107	MDC		
108	MDC		
109	MDC		
110	MDC		
111	MDC		
112	MDC		
113	MDC		
114	MDC		
115	MDC		
116	MDC		
117	MDC		
118	MDC		
119	MDC		
120	MDC		
121	MDC		
122	MDC		
123	MDC		
124	MDC		
125	MDC		
126	MDC		
127	MDC		
128	MDC		
129	MDC		
130	MDC		
131	MDC		
132	MDC		
133	MDC		
134	MDC		
135	MDC		
136	MDC		
137	MDC		
138	MDC		
139	MDC		
140	MDC		
141	MDC		
142	MDC		
143	MDC		
144	MDC		
145	MDC		
146	MDC		
147	MDC		
148	MDC		
149	MDC		
150	MDC		

Pin	Signal	Value/Component	Notes
1	PHYOSC25M		
2	LAN_CLK		
3	MDC		
4	MDC		
5	MDC		
6	MDC		
7	MDC		
8	MDC		
9	MDC		
10	MDC		
11	MDC		
12	MDC		
13	MDC		
14	MDC		
15	MDC		
16	MDC		
17	MDC		
18	MDC		
19	MDC		
20	MDC		
21	MDC		
22	MDC		
23	MDC		
24	MDC		
25	MDC		
26	MDC		
27	MDC		
28	MDC		
29	MDC		
30	MDC		
31	MDC		
32	MDC		
33	MDC		
34	MDC		
35	MDC		
36	MDC		
37	MDC		
38	MDC		
39	MDC		
40	MDC		
41	MDC		
42	MDC		
43	MDC		
44	MDC		
45	MDC		
46	MDC		
47	MDC		
48	MDC		
49	MDC		
50	MDC		
51	MDC		
52	MDC		
53	MDC		
54	MDC		
55	MDC		
56	MDC		
57	MDC		
58	MDC		
59	MDC		
60	MDC		
61	MDC		
62	MDC		
63	MDC		
64	MDC		
65	MDC		
66	MDC		
67	MDC		
68	MDC		
69	MDC		
70	MDC		
71	MDC		
72	MDC		
73	MDC		
74	MDC		
75	MDC		
76	MDC		
77	MDC		
78	MDC		
79	MDC		
80	MDC		
81	MDC		
82	MDC		

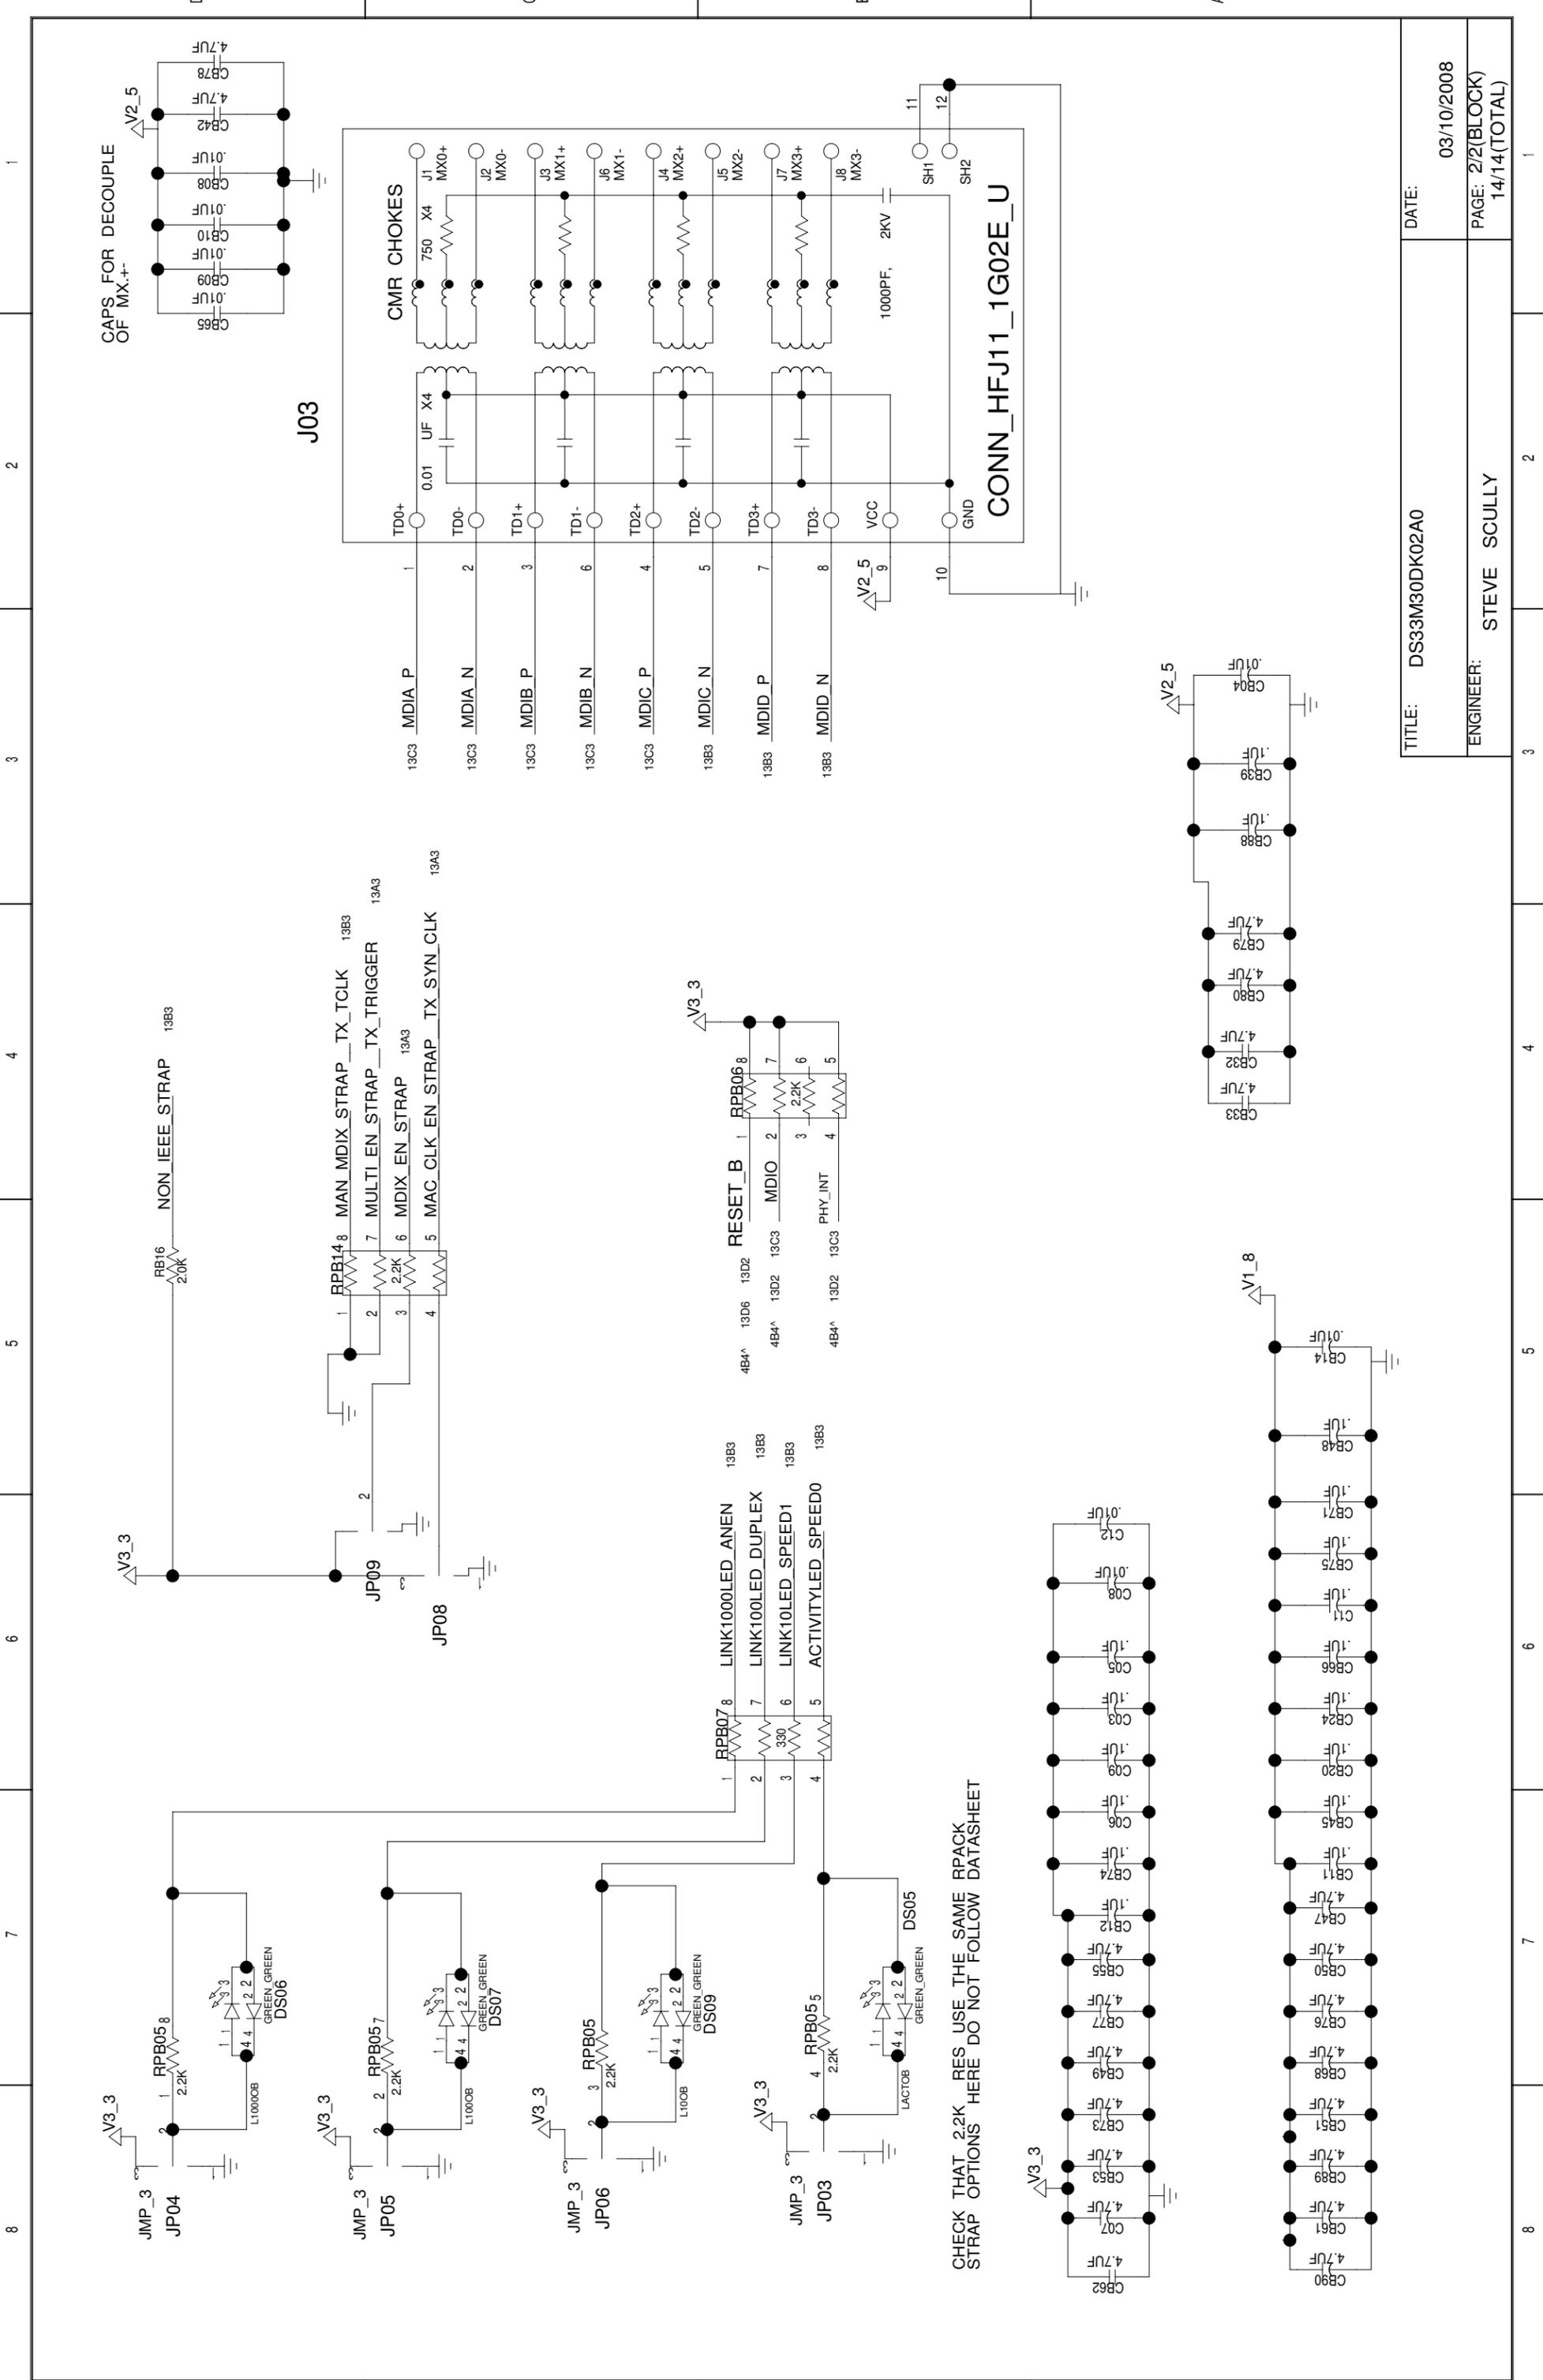

CHECK THAT 2.2K RES USE THE SAME RPACK STRAP OPTIONS HERE DO NOT FOLLOW DATASHEET

TITLE: DS33M30DK02A0

DATE:

03/10/2008

ENGINEER: STEVE SCULLY

PAGE: 2/2(BLOCK)
14/14(TOTAL)