

- Unscrew the screws and put Raspberry Pi 4B as following picture:



- Put the thermal tape on Raspberry Pi 4B's CPU and memory chip and insert the acrylic panel into the case.
- Close the top case and fix it with screws.
- Connect the cable of fan to Raspberry pi 4B GPIO (5V and GND).