575C1 Data Sheet 05.10

## **575C1 Vane and Hotwire Velocity Meter**

## Test the TPI advantage



## Features:

- (Vane) Air flow 0.4 to 25 m/s (Also reads km/s, ft/min, knots/h, miles/h)
- (Hotwire) Air flow 0.2 to 20 m/s (Also reads km/s, ft/min, knots/h, miles/h
- Temperature -5° to 175° F (-20° to 80°C)
- Data record function for maximum and minimum temperature and air velocity reaing
- Download to a computer using the RS-232 port and optional A500 cable. (The 555 uses Microsoft® Hyper Terminal to download and display air velocity and temperature on your PC.)
- 39" cable length with Lemo connector
- Data Hold

www.tpi-

- Auto Power Off
- Protective boot and soft carrying case included

## The state </tab

| 0 1/1 11                        |  |
|---------------------------------|--|
| Specifications:                 |  |
| Display                         | Dual digits LCD with function annunciation                   |
| Measurement                     | m/s, km/s, ft/min, knots, mile/h, °C, °F                     |
| Measurement Range and Accuracy: |  |
| Air Flow (Vane)                 | $0.4 \sim 25$ m/s (±2% of reading ±3 digits)                 |
| (Hotwire)                       | 0.2 ~ 20 m/s (±5% of reading ±3 digits)                      |
| Temperature                     | -5°F ~ 175°F (±1% of reading ±1.0°F ±3 digit                 |
|                                 | -20°C ~ 80°C ( $\pm$ 1% of reading $\pm$ 0.5°C $\pm$ 3 digit |
| Operating Temperature           | 0 ~ 50°C (32°F ~ 122°F)                                      |
| Operating Humidity              | Less than 80% R/H  |
| Powering                        | 1.5V AAA x 6EA   |
| Optional Accessories            | A500 RS-232 cable  |
|                                 | A901 soft shoulder strap carrying case                       |