

USB-Serial-Cable-F



FEATURES

- USB to serial cable
- Three wires for Breadboard connection
- SERIAL output 3.3V voltage levels
- GND=BLUE, RX(INPUT)=GREEN, TX(OUTPUT)=RED

SOFTWARE

[USB-SERIAL-CABLE drivers](#)

FAQ

How do I connect the cable to the RX and TX signals of my target board?

The RX line of the cable (GREEN wire) should go to TX line of the target board; the TX line of the cable (RED wire) should go to the RX line of the target board. The BLUE wire should go to the target's GND line.

What are the serial port settings?

After you install the drivers the default terminal settings for the port associated with USB-SERIAL-CABLE-F are: 115200 baud, 8-N-1

Can I use the cable with Windows 10?

Yes, you can. USB-SERIAL-CABLE-F works with Windows XP, Windows 7, Windows 8, Windows 10, Linux, MacOS, etc.

I have some problems using the cable under both Windows 8.1 and Windows 10. How can I get the cable working under Windows 10?

There are lot of tutorials and videos available online on how to get it working. Search for the following string: **pl2303 windows 10**