# FK-3625AH-C SHOCK ABSORBER - FIXED

# Bansbach easylift



SPECIFICATIONS								
Model		Stroke mm	Max Absorption Energy J(kgf∙m)		Max Equivalent Mass kg (kgf)			
FK-3625AH-C		25	200(20.4)			150		
Max Drag N (kgf)	Ener	Absorption gy per min. h(kgf∙m/min)	Extension Force N(kgf)	Ma		Urethane Cap Specification (Type-R)		
1,500 (153)	25,0	000(2,551)	100(10.2) or lower	90	0	0		

Note) Insert R in place of C if ordering urethane cap. (-S is not available for FK-3625 $\square$ ) Note) An additional urethane cap (OP-090M36B) can be mounted on FK-3625A $\square$ -C

### **COMMON SPECIFICATIONS**

Range of Impact Rate	m/s	0.3~3
Maximum Cycle Rate	cycle/min	30
Operating Temperature	C°	-5~70

# **CHARACTERISTICS**

- With a fixed, specially-designed orifice structure, an optimal impact absorption can be achieved even under variable operating conditions.
- The main unit can also be used as a stopper. (No external stopper required, except for FK-3625A)
- Three different types are available to accommodate various speeds. For low-speed: L, for medium-speed: M, for highspeed: H.
- Urethane cap specification is also available.
- Two or more of each product can be used in parallel.
- This product can also be custom-designed for optimal impact absorption.

# **PRECAUTIONS FOR USE**

- Do not use this product without carefully reading the attached owner's manual.
- Do not turn the oil inlet screw located at the bottom of the main unit.
- Ensure that sufficient mounting strength is secured for this product.
  (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- Do not use this product in a vacuum or a location where it may come in contact with oil.
- Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: ±2.5°)
- We recommend that you use it with an external stopper(OP-020\*\*).
- Urethane caps are consumable goods that need to be replaced with new ones if necessary.


# **OPTIONAL PARTS**


#### Eccentric angle adaptor OP-010M3625

When attaching the eccentric angle adaptor, screw it into the main unit until the cap for eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.

\* If the eccentric angle adaptor is secured without establishing a tight fit, a sufficient stroke cannot be obtained. Furthermore, if the eccentric angle adaptor is further screwed in, after it has formed a tight connection, and then secured in place, the cap for eccentric angle cannot be pushed all the way to the stroke end.


 The inclined adapter is not available for models with soft absorber cap (-C) and urethane cap (-R)

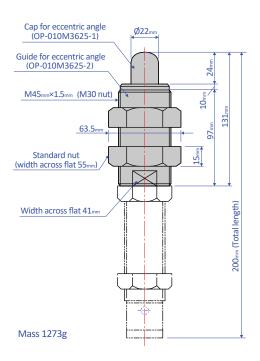

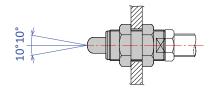

#### Stopper nut OP-020M36


Adjust so that it stops 1 mm before the stroke end, and fasten with the main unit's nut until secured.

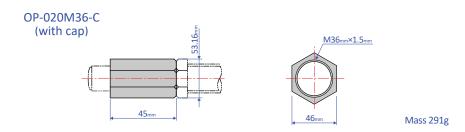


Note: When attaching, make sure that the side without a bearing chamfer is the impact surface.

#### Flange OP-OP-040UB



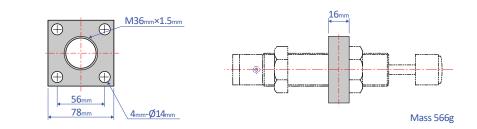

#### Urethane cap OP-090M36B

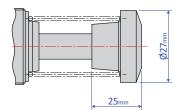

Standard nuts are sold separately as well - M36 Nut