 
PRODUCT SPECIFICATION

PRODUCT NAME:FAN MOTORMODEL:109P0424H359SPECIFICATION No.:S5269202

Signature

We would kindly like you to check all specifications, make your signature on one copy, and return it to us by $\underline{14\text{-}September\text{-}2019}$ When you have corrections, please write them in red. If this is not returned by the due date, we will deliver the products following this product specification.

 


- To ensure that this product is used safely, be sure that you read and understand the following precautions fully and use the product only as directed.
- Be sure to read the Safety Precautions carefully before installing, connecting, operating, maintaining, or inspecting this product. Follow all the precautions and directions given here.
- This product has been designed and manufactured for use as a device to be used in general industrial machinery, and may not be used as a standalone product.
- The product of our company (hereinafter called the product) falls into the category of the products specified in the Attached List 1, Item 16 (Class 84, Item 14) of the Export Trade Control Ordinance. To export the product as an individual part or to export a product into which the product is assembled, the "Informing Requirements" and "Objective Requirements" that the Ministry of Economy, Trade and Industry of Japan established based on the "Catchall Controls" must be studied for applicability. Accordingly, appropriate export formalities must be performed.
- When disposing the product, treat it as industrial waste. Please contact your local government office for further details about disposal.
- To prevent any possible bodily injury or damage to property or equipment, the following precautions for ensuring safety are displayed according to the following two ranks of importance:

(1) Danger	Handling or using the product improperly and in disregard of the instructions with this mark may result in serious bodily injury or death.	
A Caution	Handling or using the product improperly and in disregard of the instructions with this mark may result in bodily injury or physical damage.	

Note: Items marked 'Caution' might also result in serious bodily injury or death in some circumstances. Always follow the instructions the same as for items marked 'Danger.'

SANYO DENKI CO., LTD.



Safety Precautions (1/2)

Danger

- When using the product in the following environments, use it at your own discretion only after deploying sufficient safety measures and making prior evaluations.
- Equipment such as medical equipment related to human life, facilities that have serious social and public effects, or environments with vibrations such as in-automobiles or ships.
- Ensure that wiring has been correctly done. Failure to do so may result in fire, burns, or electrical shock.
- If there are any grounding taps or wires, ground them securely. There is danger of electrical shock.
- Never use in explosive atmospheres, as doing so might result in fires, burns, or bodily injury.
- Do not operate the product when electronic components are exposed. There is danger of electric shock.
- Never allow any persons or objects to approach or come into contact with the rotor while in operation, as doing so might result in damage or personal injury.
- Turn off the power and stop using the product immediately if you notice any sparks, smoke, odd odors, sounds, or anything unusual during operation. There is danger of electrical shock, fires, or bodily injury.
- Never allow the product to fall, topple over, or otherwise be subjected to excessive shocks when moving it, as doing so might result in product breakdown or substandard operation.
- The product should be handled only by personnel with sufficient training and knowledge and under the responsibility of the end user.
- Never attempt to disassemble, repair, or alter this product in any way, as doing so might result in electrical shock, fires, or bodily injury.

ACaution

<u>Handling</u>

- Installation, placement, connections, wiring, or relocation of the product should be performed by knowledgeable or correctly licensed personnel. Never perform such work while the product is on, as this might lead to injury, electrical shock, burns, or fire.
- Do not use the fan if it is not fixed, nor while held in hand.
- Never allow yourself to come into contact with the ends of wires or plugs when measuring insulation resistance or dielectric strength voltage. There is danger of electrical shock.
- Never attempt to disassemble or alter this product in any way. Doing so may invalidate any warranties concerning the functions or performance of the product, and may also result in fire, burns, bodily injury, or electrical shock.

Cautions for operation

- Give proper consideration to the device for its protection in case the fan stops during operation.
- Never use the product at voltages, temperatures, or any other settings which exceed those given in the product specifications. This might result in substandard operation, breakdown, fire, bodily injury, or electrical shock.
- The fan may fail to operate properly if there is insufficient power capacity, because a starting current several times larger than the rated current will flow at the moment voltage is supplied to the fan. Be sure to inquire about starting current levels for individual models.
- Do not control the speed of the fan by changing power voltage using PWM. It may cause fan failure.
- Start all fans at the same time when two or more fans whose wind creates interference are installed in the device. If the fan is exposed to wind from other fans at startup, it may cause fan failure or the fan may not start up correctly.
- Never insert or remove any lead wires, plug cords, or connectors while the power is turned on. When inserting or removing plugs or connectors, always be sure to first check that the power has been turned off, and hold the fan frame of the plug or connector when doing so. Failure to do so might result in damage or electrical shock.
- Do not remove the lead wire of the fan from the frame hook. Doing so may scratch and damage the surface of the lead wire.
- Do not remove the nameplate. There is danger of electrical shock or failure.
- Do not push the nameplate of the fan with strong force. The nameplate may break or come in contact with the shaft.
- The product might become damaged if foreign objects or external forces interfere with normal fan operation.
- Do not implement ON-OFF on the negative power supply line. That might damage the fan.

Safety Precautions (2/2)

A Caution

Installation

- When fixing this product into place, be sure to take the product's weight, vibrations generated during operation, and all other relevant factors into consideration. Failure to do so may result in the product or its parts falling, resulting in bodily injury or device failure.
- Be sure to check the installation direction (i.e., the fan), as failing to do so might result in bodily injury or mechanical breakdown.
- To ensure that the product operates properly, allow spaces for ventilation and take necessary steps to prevent the entry of foreign objects. Failure to do so might result in bodily injury or mechanical breakdown.
- When fixing the fan with screws, ensure the screwing torque. If the screwing torque exceeds the recommended torque, the fan frame may be deformed or damaged. Use a ribbed frame when using through-screws to affix fans with plastic frames. To prevent loose screws, use plain washers or spring lock washers. For the screwing torque of each fan type, contact SANYO DENKI or a SANYO DENKI distributor.
- When fixing the fan with self-tapping screws, the fan frame may be damaged.
- When excessive shock is applied to the fan, the impeller may protrude from the surface of the fan frame. Make sure that the impeller does not touch covers, such as finger guards or mounting plates.
- Do not subject fans to excessive shock to avoid fan failure and performance deterioration.
- Pulling or pinching lead wires could result in damage to the wire; avoid placing excessive stress on wires. The device should be installed so that the lead wires do not come into contact with the rotor or blades. Failure to do so might result in damage or electrical shock.
- Take proper precautions against static electricity when making electrical connections. Failure to do so might cause the breakdown of the fan or device.
- Install a finger guard or other cover if there is any danger of fingers, hands, or objects coming into contact with the rotor or blades. Failure to do so might result in bodily injury or mechanical breakdown.
- Install finger guards, filters, and plates in the correct position while avoiding touching the rotor blade. Avoiding this will prevent device failure. Please use only genuine SANYO DENKI finger guards and filter kits.
- Make electrical connections properly. If not there is a possibility that the device might break, or that the product might malfunction, breakdown, or have degraded performance.

Operating environment

- Avoid using or storing the product in the following areas and environments. There is the possibility that a fire may occur, the product may malfunction, or its performance may deteriorate.
- Flammable or corrosive gas atmospheres, in places where water or oil splashes (not applicable to Splash Proof or Oil Proof Fans), in places where there is much dust or humidity, in places where condensation occurs, in places where the product is exposed to radioactive rays or is in direct sunlight, in places where a salty sea breeze blows or seawater splashes, or in an environment where the product may be contaminated by such corrosive materials as sulfurous water, sulfurous volcanic ash, organic solvents, acidic chemicals, alkali chemicals, etc., or such hazardous substances as nuclear fuel materials, etc.
- Avoid using or storing the product in the following areas and environments. Doing so might result in product breakdown or substandard operation.
- Environments where it could be constantly exposed to vibrations, strong shocks, centrifugal force, acceleration (excluding G Proof Fans) magnetic or electromagnetic noise, areas in which the electromagnetic noise overlaps into power voltage, or areas subjected to rapid environmental fluctuations (temperature, humidity, etc.)

Maintenance

- Maintenance and inspections should always be performed by personnel with sufficient training and knowledge. Otherwise, it may result in fire, burns, bodily injury, or electrical shock.
- Never perform any maintenance or inspections while the product is in operation. Also note that the blades continue to rotate for some time immediately after operation ceases. Always confirm that all rotating parts have come to a stop before beginning work. There is danger of electrical shock, fires, or bodily injury.
- Never use gasoline, paint thinner, benzene, or other organic solvents to clean the product, as this could result in deformation or substandard operation.

	4 5 6 7 8
$\begin{array}{c c} A \\ \underline{LABEL(NOTE4)} \\ \underline{A} \\ $	$\begin{array}{c} +1 \\ +28\pm0.5 \\ \hline (4) \hline (4$
	UL1007 AWG24 ⊕ RED # ⊖ BLACK # • 000000000000000000000000000000000000
ROTATING DIRECTION 回転方向	AIRFLOW DIRECTION 風吹出方向 CONNECTOR MOLEX: 22-01-3027 (2695-02RP)
RATED VOLTAGE 定格電圧 24 V DC D のPERATING VOLTAGE 使用電圧範囲 12 V DC ~ 27.6 V DC RATED CURRENT 定格電流 0.14 A MAX. AT 24 V DC 以下(DC24 Vicc) RATED SPEED 定格回転速度 8700 min ⁻¹ AT 24 V DC (NOMINAL) (AT 25 °C) (DC24 Vicc, 25 °Cの時) (中心値) INSULATION RESISTANCE 総縁抵抗 10 MΩ MIN. AT 500 V DC (NOTE2) DC500 V×ガーにて10 MΩ以上(注2)	$\begin{array}{c c c c c c c c c c c c c c c c c c c $
E DIELECTRIC STRENGTH 1 MINUTE AT 500 V AC, 50/60 Hz(NOTE2) 絶縁耐圧 AC50/60 Hz, 500 Vicc1分間耐えること(注2) OPERATING TEMPERATURE -20 ℃ ~ +70 ℃ G使用温度範囲 SOUND PRESSURE LEVEL 37 dB(A) (NOMINAL) (NOTE1) 音圧レベル (中心値) (注1) MASS APPROX. 52 g	 3. MOTOR IS PROTECTED FROM DAMAGE OF LOCKED ROTOR CONDITION AT THE OPERATING VOLTAGE. ファン拘束時燒損の恐ればない。 4. PRINT PRODUCT NAME, MODEL No., MANUFACTURER, AND MANUFACTURED DATE ETC. 品名,型名,製造会社名 及び 製造年月日等を表示する。
質量 約 MATERIAL FRAME, IMPELLER : PLASTICS 材質 フレーム・羽根 : 樹脂成形品 BEARING SYSYTEM 2 BALL BEARINGS 軸受 ボールペアリング	ФС ТЕ. YAMAZAKI 24 V П SPELU 19-08-20 Н2ピ~К ФС Таких сискер ву А.NAKAYAMA 19-08-20 San Ace IO (QP)
F NOTE: 1. MEASURED AT 1 m DISTANCE FROM THE AIR INLET. 注 ファン吸込側より1 mにて測定する。 2. MEASURED BETWEEN THE LEAD WIRES AND THE FRAME.	
2. MEASURED BEIWEEN THE LEAD WIRES AND THE FRAME. リード線導体部とフレームとの間。 1 2 3	山洋電気株式会社 (SANOD LED.) DVG NO. 109P0424H359 A 4 5 6 A3G-P4L D12,E0 01035616

L