
## Type BLR-I-606 Fuse Block - Indicating 6 Pole – Regular Auto Blade

www.optifuse.com (619) 593-5050

## **Specifications:**

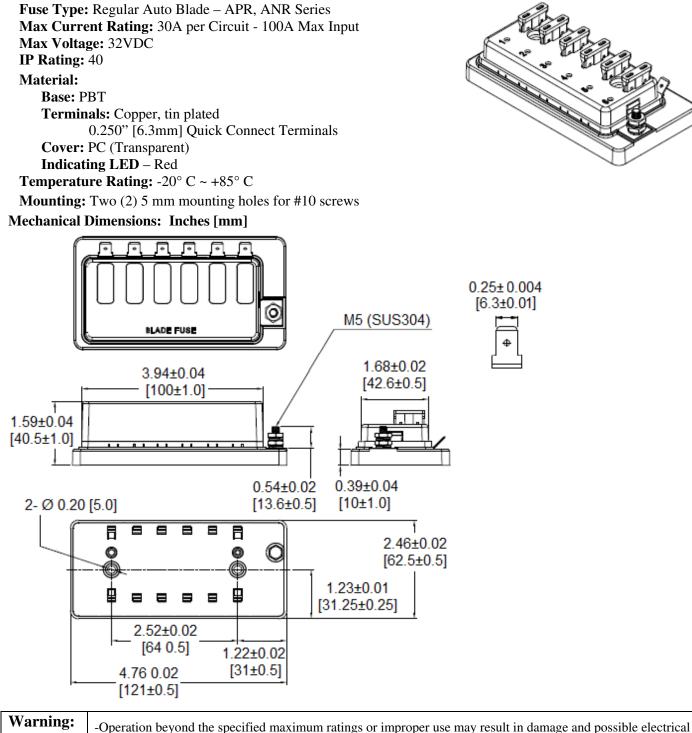

 $\wedge$ 

arcing and/or flame.

-Avoid contact of device with chemical solvent. Prolonged contact may damage the device performance.