Bansbach easylift

		SPECIFICATIONS							
		Model		Rated Torque		Damping Direction			
		FDN-57A-R303		3±0.4Nm (30±4kgfcm)		Clockwise	50 RPM		
Max Cycle Rate		Operating Wemperature		eight	Body Material	Rotor (Shaft Material)	Oil Type	
12 cycles/min.	-	10~50°C	ç)4g	Iron	Nylon/glass fiber composi		Silicone Oil	

Note) Rated torque is measured at a rotation speed of 20rpm at 23°C±3°C


Speed characteristics of FDN-57A-303 series (Measurement temperature: 23°C) 8.0 7.0 6.0 Torque (Nm) 5.0 4.0 3.0 2.0 1.0 0.0 0 10 20 30 40 50 60 (Rotation speed: rpm) Temperature characteristics of FDN-57A-303 series (Rotation speed: 20 rpm) 8.0 7.0 6.0 Torque (Nm) 5.0 4.0 3.0 2.0 1.0 0.0 -30 -20 -10 0 10 20 30 40 50 60 (Ambient temperature: °C)

DAMPING CHARACTERISTICS

- Speed characteristics: A disk damper's torque varies according to the rotation speed. In general, as shown in the graph to the left, the torque increases as the rotation speed increases, and the torque decreases as the rotation speed decreases. Torque at 20 rpm is shown in this document. In a closing lid, the rotation speed is slow when the lid begins to close, resulting in the generation of torque that is smaller than the rated torque.
- Temperature characteristics: Damper torque (rated torque in this document) varies according to the ambient temperature. As the temperature increases, the torque decreases, and as the temperature decreases, the torque increases. This is because the viscosity of the silicone oil inside the damper varies according to the temperature. The graph to the left illustrates the temperature characteristics.

USING THE DAMPER

Shafts external dimensions	Ø10mm - Ø9.97mm
Surface hardness	HRC55 or higher
Quenching depth	0.5mm or higher
Surface roughness	1.0Z or lower
Chamfer end (Damper insertion side)	CO.2~CO.3 (or RO.2~RO.3)

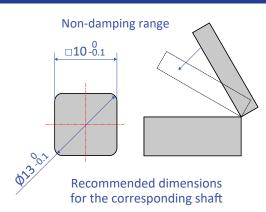

- FDN-57A dampers may generate torque clockwise or counter-clockwise.
- Please make sure that a shaft attached to a damper has a bearing, as the damper itself is not fitted with one.
- Please refer to the chart when creating a shaft for the FDN-57A disk damper. Not using the recommended shaft dimensions may cause the shaft to slip out.
- To insert a shaft into FDN-57A, insert the shaft while spinning it in the idling direction of the one-way clutch.
 (Do not force the shaft in from the regular direction. This may damage the one-way clutch.)