

## Corrugated pipe opener - WR-OEF-PG16 - 1853638

Please be informed that the data shown in this PDF Document is generated from our Online Catalog. Please find the complete data in the user's documentation. Our General Terms of Use for Downloads are valid (<http://download.phoenixcontact.com>)


Opener for corrugated tube, to disassemble corrugated tube screw connection, size Pg16



The illustration shows version WR-OEF-PG 21



### Key commercial data

Packing unit	1 pc
Minimum order quantity	5 pc
GTIN	 4 017918 134310
Weight per Piece (excluding packing)	6.5 GRM
Custom tariff number	82055980
Country of origin	Germany

### Technical data

#### General

Pg screw connection	Pg16
Material	PA

### Classifications

#### eCl@ss

eCl@ss 4.0	27141209
eCl@ss 4.1	27141209
eCl@ss 5.0	27149109
eCl@ss 5.1	27149109
eCl@ss 6.0	27149109

# Corrugated pipe opener - WR-OEF-PG16 - 1853638

## Classifications

eCl@ss

eCl@ss 7.0	27149109
eCl@ss 8.0	27149109

ETIM


ETIM 2.0	EC000441
ETIM 3.0	EC000441
ETIM 4.0	EC000441
ETIM 5.0	EC000441

UNSPSC

UNSPSC 6.01	31261502
UNSPSC 7.0901	31261502
UNSPSC 11	31261502
UNSPSC 12.01	31261502
UNSPSC 13.2	31261502

## Drawings

Dimensioned drawing

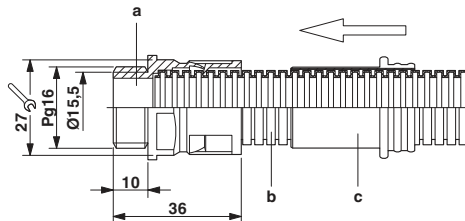

Assembly instructions for Pg16 corrugated pipe

a = Corrugated screw connection

B = Corrugated pipe

c = Opener

Installation note:

Cut the corrugated pipe in the groove to retain a round shape for insertion. The lighter seal (not depicted in the illustration) is positioned in the corrugated pipe screw connection below the safety latch. The darker outer seal (not depicted in the illustration) is placed over the corrugated pipe screw connection from outside. The corrugated pipe is then pushed as far as possible into the corrugated pipe screw connection and clicks into place. The screw connection is opened by placing the yellow corrugated pipe opener with force between the safety latch and the corrugated tube and the corrugated pipe is then pulled out.