
## DF57 Insertion and removal operation method


## **Mating**

1. Determine position, fitting the external form

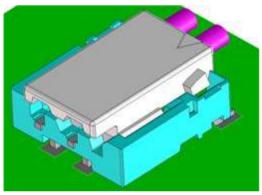


Unmating


1. Engage lever

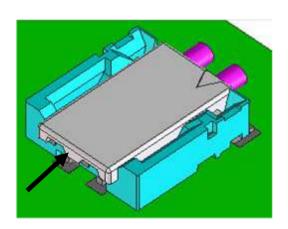


2. Insert the cable side

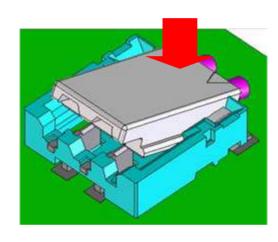

2. Pull up and release the simple lock

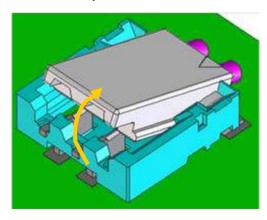

3. Push the contact portion side

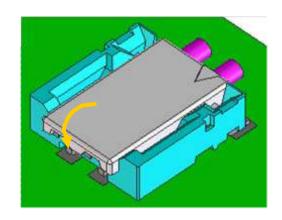

3. The reinforced lock is also released and the un-mating is complete

