

QUINT4-PS/3AC/24DC/10

Power supply unit

Data sheet
107104_en_00

© PHOENIX CONTACT 2016-11-29



1 Description

QUINT POWER power supplies with integrated NFC interface and SFB technology ensure superior system availability.

Adaptable

- Signaling thresholds and characteristic curves can be set via NFC

Powerful

- SFB technology: 6 times the nominal current for 15 ms
- Power reserves:
 - Static boost of up to 125% (P_N) for a sustained period
 - Dynamic boost of up to 200% (P_N) for 5 s

Preventive

- Comprehensive signaling

Robust

- Mains buffering > 20 ms
- High degree of immunity, thanks to integrated gas-filled surge arrester (6 kV)

Technical data (short form)

| | |
|---|--|
| Input voltage range | 3x 400 V AC ... 500 V AC -20 % ... +10 % 2x 400 V AC ... 500 V AC -10 % ... +10 % |
| Mains buffering | ≥ 22 ms (3x 400 V AC) ≥ 22 ms (3x 480 V AC) |
| Nominal output voltage (U_N) | 24 V DC |
| Setting range of the output voltage (U_{Set}) | 24 V DC ... 29.5 V DC |
| Residual ripple | < 75 mV _{pp} |
| Nominal output current (I_N) | 10 A |
| Static Boost ($I_{Stat.Boost}$) | 12.5 A |
| Dynamic Boost ($I_{Dyn.Boost}$) | 20 A (5 s) |
| Selective Fuse Breaking (I_{SFB}) | 60 A (15 ms) |
| Output power (P_N) | 240 W |
| Output power ($P_{Stat.Boost}$) | 300 W |
| Output power ($P_{Dyn.Boost}$) | 480 W |
| Efficiency | typ. 93 % (400 V AC) typ. 92.6 % (480 V AC) |
| MTBF (IEC 61709, SN 29500) | > 654000 h (40°C) |
| Ambient temperature (operation) | -25 °C ... 70 °C -40°C (startup type tested) > 60 °C Derating: 2,5 %/K |
| Dimensions W/H/D | 50 mm / 130 mm / 125 mm |
| Weight | 0.9 kg |



All technical specifications are nominal values and refer to a room temperature of 25 °C and 70 % relative humidity at 100 m above sea level.

2 Table of contents

1 Description 1

2 Table of contents 2

3 Ordering data 4

4 Technical data 5

5 Safety and installation notes 15

6 High-voltage test (HIPOT) 16

 6.1 High-voltage dielectric test (dielectric strength test) and why must it be performed? 16

 6.2 High-voltage dielectric test during the manufacturing process 16

 6.3 High-voltage dielectric test performed by the customer 16

 6.3.1 Performing high-voltage testing 17

 6.3.2 Disconnecting the gas-filled surge arrester 17

7 Structure of the power supply 18

 7.1 Function elements 18

 7.2 Device dimensions and keepout areas 18

 7.3 Block diagram 19

8 Mounting/removing the power supply 20

 8.1 Mounting the power supply unit 20

 8.2 Removing the power supply unit 20

 8.3 Retrofitting the universal DIN rail adapter 20

 8.3.1 Disassembling the universal DIN rail adapter 20

 8.3.2 Mounting the universal DIN rail adapter 21

 8.4 Retrofitting the universal wall adapter 21

 8.4.1 Mounting the UWA 182/52 universal wall adapter 21

 8.4.2 Mounting the UWA 130 2-piece universal wall adapter 22

9 Device connection terminal blocks 22

 9.1 Input 22

 9.2 Protection of the primary side 23

 9.3 Output 23

 9.4 Protection of the secondary side 23

10 Output characteristic curves 24

 10.1 U/I Advanced output characteristic curve 24

 10.2 Smart HICCUP output characteristic curve 25

 10.3 FUSE MODE output characteristic curve 25

11 Configuring the power supply 26

 11.1 Configuration with PC software 26

 11.2 Configuring the power supply 26

 11.3 Configuration with NFC-capable mobile terminal device 27

 11.4 Ordering a configured power supply 27

| | | |
|--------|---|----|
| 12 | SFB technology | 27 |
| 12.1 | Tripping circuit breakers | 27 |
| 12.2 | Tripping a fuse | 27 |
| 12.3 | SFB configuration | 28 |
| 12.4 | Maximum distance between the power supply and load | 28 |
| 12.4.1 | Thermomagnetic device circuit breaker, type: Phoenix Contact CB TM1 SFB | 28 |
| 12.4.2 | Thermomagnetic circuit breaker, type: Siemens 5SY, ABB S200 | 29 |
| 12.4.3 | Fuse, type: Cooper Bussmann GMA xA, GMC xA | 30 |
| 13 | Signaling | 31 |
| 13.1 | Location and function of the signaling elements | 31 |
| 13.2 | Description of signaling | 33 |
| 13.2.1 | Output voltage | 33 |
| 13.2.2 | Output current | 33 |
| 13.2.3 | Output power | 33 |
| 13.2.4 | Operating hours | 33 |
| 13.2.5 | Early warning of high temperature | 33 |
| 13.2.6 | Voltage limitation active | 33 |
| 13.2.7 | Input voltage OK | 34 |
| 13.2.8 | Phase monitoring (3AC operation) | 34 |
| 13.2.9 | Remote input | 34 |
| 13.3 | LED status indicators | 34 |
| 13.4 | U/I Advanced characteristic curve signaling | 35 |
| 13.5 | SMART HICCUP characteristic curve signaling | 35 |
| 13.6 | FUSE MODE characteristic curve signaling | 36 |
| 13.7 | SLEEP MODE signaling | 36 |
| 14 | Operating modes | 37 |
| 14.1 | Series operation | 37 |
| 14.2 | Parallel operation | 37 |
| 14.2.1 | Redundancy operation | 38 |
| 14.2.2 | Increased power | 38 |
| 15 | Derating | 39 |
| 15.1 | Ambient temperature | 39 |
| 15.2 | Input voltage | 39 |
| 15.3 | Installation height | 39 |





3 Ordering data

| Description | Type | Order No. | Pcs./Pkt. |
|--|-----------------------------|-----------|-----------|
| Primary-switched QUINT POWER power supply with free choice of output characteristic curve, SFB (selective fuse breaking) technology, and NFC interface, input: 3-phase, output: 24 V DC/10 A | QUINT4-PS/3AC/24DC/10 | 2904621 | 1 |
| Online configured version of the primary-switched QUINT POWER power supply with free choice of output characteristic curve, SFB (selective fuse breaking) technology, and NFC interface, input: 3-phase, output: 24 V DC/10 A | QUINT4-PS/3AC/24DC/10/... | 2907872 | 1 |
| Accessories | Type | Order No. | Pcs./Pkt. |
| Universal wall adapter for securely mounting the power supply in the event of strong vibrations. The power supply is screwed directly onto the mounting surface. The universal wall adapter is attached at the top/bottom. | UWA 182/52 | 2938235 | 1 |
| 2-piece universal wall adapter for securely mounting the power supply in the event of strong vibrations. The profiles that are screwed onto the side of the power supply are screwed directly onto the mounting surface. The universal wall adapter is attached on the left/right. | UWA 130 | 2901664 | 1 |
| Assembly adapter for QUINT-PS... power supply on S7-300 rail | QUINT-PS-ADAPTERS7/1 | 2938196 | 1 |
| Near Field Communication (NFC) programming adapter with USB interface for the wireless configuration of NFC-capable products from PHOENIX CONTACT with software. No separate USB driver is required. | TWN4 MIFARE NFC USB ADAPTER | 2909681 | 1 |
| Fuse, for the photovoltaics industry according to UL 2579, Length: 38 mm, Diameter: 10.3 mm, Color: white | FUSE 10,3X38 6A PV A | 3062778 | 10 |
| Plug-in device protection, according to type 3/class III, for 3-phase power supply networks with separate N and PE (5-conductor system: L1, L2, L3, N, PE), with integrated surge-proof fuse and remote indication contact. | PLT-SEC-T3-3S-230-FM | 2905230 | 1 |



The range of accessories is being continuously extended. The current range of accessories can be found in the download area for the product.

4 Technical data

| Input data | |
|---|--|
|  Unless otherwise stated, all data applies for 25°C ambient temperature, 400 V AC input voltage, and nominal output current (I_N). | |
| Input voltage range | 3x 400 V AC ... 500 V AC -20 % ... +10 % 2x 400 V AC ... 500 V AC -10 % ... +10 % ± 260 V DC ... 300 V DC -13 % ... +30 % |
| Frequency range (f_N) | 50 Hz ... 60 Hz -10 % ... +10 % |
| Network type | Star network |
| Current consumption | 3x 0.5 A (400 V AC) 3x 0.4 A (480 V AC) 2x 0.8 A (400 V AC) 2x 0.9 A (480 V AC) 3x 0.4 A (500 V AC) 2x 0.9 A (500 V AC) 0.7 A (± 260 V DC) 0.6 A (± 300 V DC) |
|  The specified values for current consumption apply for operation in the static boost ($P_N \times 125\%$). | |
| Discharge current to PE typical | < 3.5 mA 1 mA (550 V AC, 60 Hz) |
| Mains buffering | ≥ 22 ms (3x 400 V AC) ≥ 22 ms (3x 480 V AC) |
| Switch-on time | < 1 s |
| Typical response time from SLEEP MODE | 300 ms |
| Protective circuit | Transient surge protection Varistor, gas-filled surge arrester |
| Switch-on current surge limitation typical after 1 ms | 3 A |
| Inrush surge current I^2t | < 0.1 A ² s |
|  During the first few microseconds, the current flow into the filter capacitors is excluded. | |
|  The SCCR value (short-circuit current rating) of the power supply unit corresponds to the SCCR value of the backup fuse (see input protection table). | |

AC Input protection (to be connected externally upstream)

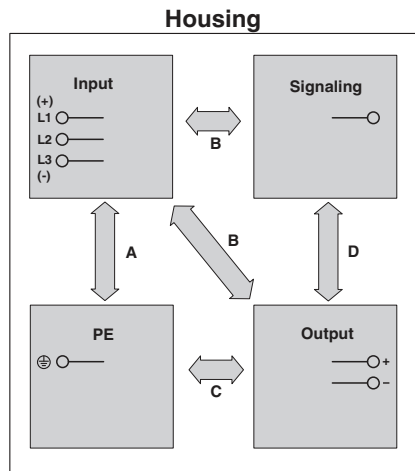
| Input current I_{In} Input protection | Circuit breaker | | | | | Neozed fuse or equivalent | Power switch |
|--|-----------------|---|---|---|---|------------------------------|--|
| Characteristics | A | B | C | D | K | gG | $\leq 13 \times I_{In}$ (maximum magnetic tripping) |
| 4 A | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 6 A | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8 A | ✓ | ✓ | ✓ | ✓ | ✓ | - | ✓ |
| 10 A | ✓ | ✓ | ✓ | ✓ | ✓ | - | ✓ |
| 13 A | ✓ | ✓ | ✓ | - | ✓ | - | ✓ |
| 16 A | ✓ | ✓ | ✓ | - | - | - | - |

DC Input protection (to be connected externally upstream)

Choice of suitable circuit breakers


1 x 6 A (10 x 38 mm, 30 kA L/R = 2 ms) , ≥ 1000 V DC

Electric strength of the insulation



| | A | B | C | D |
|---|------------------------|------------------------|-----------|-----------|
| Type test (IEC/EN 60950-1) | 3.5 kV AC | 4 kV AC | 0.5 kV DC | 0.5 kV DC |
| Production test | 2.4 kV AC | 2.4 kV AC | 0.5 kV DC | 0.5 kV DC |
| Field test (with gas-filled surge arrester) | 0.8 kV AC 1.1 kV DC | 0.8 kV AC 1.1 kV DC | 0.5 kV DC | 0.5 kV DC |
| Field test (gas-filled surge arrester de-contacted) | 2 kV AC 2.83 kV DC | 2 kV AC 2.83 kV DC | 0.5 kV DC | 0.5 kV DC |

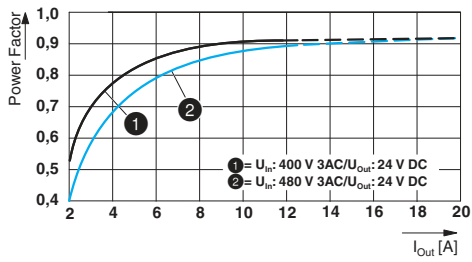POWER factor



Crest factor


400 V AC

480 V AC

typ. 1.8

typ. 2.25

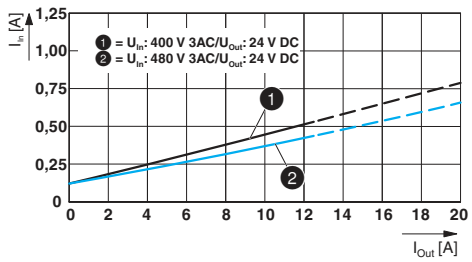Input current vs. output current



Input connection data

| | |
|-----------------------------------|---|
| Connection method | Screw connection |
| Conductor cross section, solid | 0.2 mm ² ... 6 mm ² |
| Conductor cross section, flexible | 0.2 mm ² ... 4 mm ² |
| Conductor cross section AWG | 30 ... 10 |
| Stripping length | 8 mm |
| Tightening torque | 0.5 Nm ... 0.6 Nm |

| Output data | |
|--|---|
| Nominal output voltage (U_N) | 24 V DC |
| Setting range of the output voltage (U_{Set}) (constant capacity) | 24 V DC ... 29.5 V DC |
| Nominal output current (I_N) | 10 A |
| Static Boost ($I_{Stat.Boost}$) | 12.5 A |
| Dynamic Boost ($I_{Dyn.Boost}$) | 20 A (5 s) |
| Selective Fuse Breaking (I_{SFB}) | 60 A (15 ms) |
| Magnetic circuit breaker tripping | A1...A6 / B2...B6 / C1...C3 / Z1...Z6 |
| Control deviation Static load change 10 % ... 90 % | < 0.5 % |
| Control deviation Dynamic load change 10 % ... 90 %, (10 Hz) | < 2 % |
| Control deviation change in input voltage ± 10 % | < 0.25 % |
| Short-circuit-proof | yes |
| No-load proof | yes |
| Residual ripple (with nominal values) | < 75 mV _{PP} |
| Connection in parallel | Yes, for redundancy and increased capacity |
| Connection in series | yes |
| Feedback resistance | ≤ 35 V DC |
| Circuit breaker against surge voltage at output by invasive foreign matter | ≤ 32 V DC |
| Rise time typical | < 1 s ($U_{Out} = 10$ % ... 90 %) |
| Output connection data | |
| Connection method | Screw connection |
| Conductor cross section, solid | 0.2 mm ² ... 2.5 mm ² |
| Conductor cross section, flexible | 0.2 mm ² ... 2.5 mm ² |
| Conductor cross section AWG | 30 ... 12 |
| Stripping length | 6.5 mm |
| Tightening torque | 0.5 Nm ... 0.6 Nm |
| LED signaling | |
| $P_{Out} > 100\%$ | LED lights up yellow, output power > 240 W |
| $P_{Out} > 75\%$ | LED lights up green, output power > 180 W |
| $P_{Out} > 50\%$ | LED lights up green, output power > 120 W |
| $U_{Out} > 0.9 \times U_{Set}$ | LED lights up green |
| $U_{Out} < 0.9 \times U_{Set}$ | LED flashes green |

Signal contact (configurable)

| | |
|---|--|
| Signal output (configurable) Out 1 | |
| Digital | 0 / 24 V DC , 20 mA |
| Default | 24 V DC , 20 mA (24 V DC for $U_{Out} > 0.9 \times U_{Set}$) |
| Signal output (configurable) Out 2 | |
| Digital | 0 / 24 V DC , 20 mA |
| Analog | 4 mA ... 20 mA \pm 5 % (Load \leq 400 Ω) |
| Default | 24 V DC , 20 mA (24 V DC for $P_{Out} < P_N$) |
| Relay contact (configurable) 13/14 | |
| Function | N/O contact |
| Default | closed ($U_{out} > 0.9 U_{Set}$) |
| Control input (configurable) Rem | |
| Function | Output power ON/OFF (SLEEP MODE) |
| Default | Output power ON (> 1.5 k Ω /24 V DC/open bridge between Rem and SGnd) |
| Signal ground SGnd | Reference potential for Out1, Out2, and Rem |

Signal connection data

| | |
|-----------------------------------|---|
| Connection method | Push-in connection |
| Conductor cross section, solid | 0.2 mm ² ... 1.5 mm ² |
| Conductor cross section, flexible | 0.2 mm ² ... 1.5 mm ² |
| Conductor cross section AWG | 24 ... 16 |
| Stripping length | 8 mm |

Reliability

| | |
|----------------------------|---|
| | 400 V AC |
| MTBF (IEC 61709, SN 29500) | > 1034000 h (25 °C) > 654000 h (40°C) > 320000 h (60°C) |

Life expectancy (electrolytic capacitors)

| Output current (I_{Out}) | 400 V AC | 480 V AC |
|------------------------------|----------------------|----------------------|
| 5 A | > 389000 h (40 °C) | > 364000 h (40 °C) |
| 10 A | > 200000 h (40 °C) | > 183000 h (40 °C) |
| 10 A | > 566000 h (25 °C) | > 520000 h (25 °C) |



The expected service life is based on the capacitors used. If the capacitor specification is observed, the specified data will be ensured until the end of the stated service life. For runtimes beyond this time, error-free operation may be reduced. The specified service life of 15 years is simply a comparative value.


Switching frequency

| | Min. | Max. |
|---------------------------|--------|---------|
| PFC stage | 25 kHz | 500 kHz |
| Auxiliary converter stage | 90 kHz | 110 kHz |
| Main converter stage | 56 kHz | 500 kHz |

| General data | |
|---|------------------------|
| Degree of protection | IP20 |
| Protection class | I |
| Inflammability class in acc. with UL 94 (housing) | V0 |
| Side element version | Aluminum |
| Hood version | Stainless steel X6Cr17 |
| Weight | 0.9 kg |

| Power dissipation | 400 V AC | 480 V AC |
|--|----------|----------|
| Maximum power dissipation in no-load condition | < 5 W | < 5 W |
| Power dissipation SLEEP MODE | < 5 W | < 5 W |
| Power loss nominal load max. | < 19 W | < 20 W |

| Efficiency | 400 V AC | 480 V AC |
|------------|-----------|-------------|
| | typ. 93 % | typ. 92.6 % |

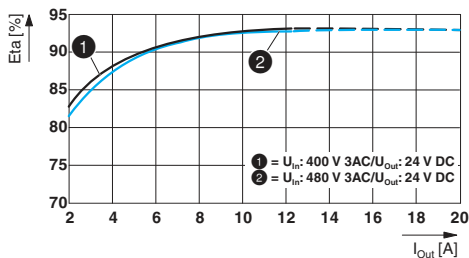

| Ambient conditions | |
|---------------------------------|--|
| Ambient temperature (operation) | -25 °C ... 70 °C (> 60 °C Derating: 2,5 %/K) |



The ambient temperature (operation) refers to UL 508 surrounding air temperature.

| | |
|--|---|
| Ambient temperature (start-up type tested) | -40 °C |
| Ambient temperature (storage/transport) | -40 °C ... 85 °C |
| Max. permissible relative humidity (operation) | ≤ 95 % (at 25 °C, non-condensing) |
| Installation height | ≤ 5000 m (> 2000 m, observe derating) |
| Vibration (operation) | 5 Hz - 100 Hz resonance search 2.3g, 90 min., resonance frequency 2.3g, 90 min. (according to DNV GL Class C) |
| Shock | 18 ms, 30g, in each space direction (according to IEC 60068-2-27) |
| Degree of pollution | 2 |
| Climatic class | 3K3 (in acc. with EN 60721) |
| Overvoltage category | |
| EN 60950-1 | II |
| EN 61010-1 | II |
| EN 62477-1 | III |

Standards

| | |
|--|---|
| Electrical safety (of information technology equipment) | IEC 60950-1/VDE 0805 (SELV) |
| SELV | IEC 60950-1 (SELV) and EN 60204-1 (PELV) |
| Rail applications | EN 50121-3-2 EN 50121-4 EN 50121-5 IEC 62236-3-2 IEC 62236-4 IEC 62236-5 |
| Safety of power supply units up to 1100 V (insulation distances) | DIN EN 61558-2-16 |

Approvals

| | |
|-----|--|
| UL | UL Listed UL 508 UL/C-UL Recognized UL 60950 |
| CSA | CAN/CSA-C22.2 No. 60950-1-07 CSA-C22.2 No. 107.1-01 |

| Electromagnetic compatibility | | |
|--|---|--|
| Noise emission according to EN 61000-6-3 (residential and commercial) and EN 61000-6-4 (industrial) | | |
| CE basic standard | Minimum normative requirements | Higher requirements in practice (covered) |
| Conducted noise emission EN 55016 | EN 61000-6-4 (Class A) | EN 61000-6-3 (Class B) |
| Noise emission EN 55016 | EN 61000-6-4 (Class A) | EN 61000-6-3 (Class B) |
| Harmonic currents EN 61000-3-2 | 0 kHz ... 2 kHz | 0 kHz ... 2 kHz |
| Flicker EN 61000-3-3 | not required | 0 kHz ... 2 kHz |
| Noise emission for marine approval | Minimum normative requirements of DNV GL | Higher requirements in practice of DNV GL (covered) |
| DNV GL conducted noise emission | Class A Area power distribution | Class A Area power distribution |
| DNV GL noise radiation | Class A Area power distribution | Class B Bridge and deck area |
| Immunity according to EN 61000-6-1 (residential), EN 61000-6-2 (industrial), and EN 61000-6-5 (power station equipment zone 1, 2) | | |
| CE basic standard | Minimum normative requirements of EN 61000-6-2 (CE) (immunity for industrial environments) | Higher requirements in practice (covered) |
| Electrostatic discharge EN 61000-4-2 | | |
| Housing contact discharge | 4 kV (Test Level 2) | 8 kV (Test Level 4) |
| Housing air discharge | 8 kV (Test Level 3) | 15 kV (Test Level 4) |
| Comments | Criterion B | Criterion A |
| Electromagnetic HF field EN 61000-4-3 | | |
| Frequency range | 80 MHz ... 1 GHz | 80 MHz ... 1 GHz |
| Test field strength | 10 V/m (Test Level 3) | 20 V/m (Test Level 3) |
| Frequency range | 1.4 GHz ... 2 GHz | 1 GHz ... 6 GHz |
| Test field strength | 3 V/m (Test Level 2) | 10 V/m (Test Level 3) |
| Frequency range | 2 GHz ... 2.7 GHz | 1 GHz ... 6 GHz |
| Test field strength | 1 V/m (Test Level 1) | 10 V/m (Test Level 3) |
| Comments | Criterion B | Criterion A |
| Fast transients (burst) EN 61000-4-4 | | |
| Input | 2 kV (Test Level 3 - asymmetrical) | 4 kV (Test Level 4 - asymmetrical) |
| Output | 2 kV (Test Level 3 - asymmetrical) | 2 kV (Test Level 3 - asymmetrical) |
| Signal | 1 kV (Test Level 3 - asymmetrical) | 2 kV (Test Level 4 - asymmetrical) |
| Comments | Criterion B | Criterion A |

| Immunity according to EN 61000-6-1 (residential), EN 61000-6-2 (industrial), and EN 61000-6-5 (power station equipment zone 1, 2) | | | |
|---|---------------------|---|---|
| CE basic standard | | Minimum normative requirements of EN 61000-6-2 (CE) (immunity for industrial environments) | Higher requirements in practice (covered) |
| Surge current loads (surge) EN 61000-4-5 | | | |
| | Input | 1 kV (Test Level 3 - symmetrical) 2 kV (Test Level 3 - asymmetrical) | 3 kV (Test Level 4 - symmetrical) 6 kV (Test Level 4 - asymmetrical) |
| | Output | 0.5 kV (Test Level 2 - symmetrical) 0.5 kV (Test Level 1 - asymmetrical) | 1 kV (Test Level 2 - symmetrical) 2 kV (Test Level 3 - asymmetrical) |
| | Signal | 0.5 kV (Test Level 1 - asymmetrical) | 1 kV (Test Level 2 - asymmetrical) |
| | Comments | Criterion B | Criterion A |
| Conducted interference EN 61000-4-6 | | | |
| | Input/Output/Signal | asymmetrical | asymmetrical |
| | Frequency range | 0.15 MHz ... 80 MHz | 0.15 MHz ... 80 MHz |
| | Voltage | 10 V (Test Level 3) | 10 V (Test Level 3) |
| | Comments | Criterion A | Criterion A |
| Power frequency magnetic field EN 61000-4-8 | | | |
| | | 50 Hz , 60 Hz (30 A/m) | 16.67 Hz , 50 Hz , 60 Hz (100 A/m , 60 s) |
| | | not required | 50 Hz , 60 Hz (1 kA/m , 3 s) |
| | | not required | 0 Hz (300 A/m , DC , 60 s) |
| | Comments | Criterion A | Criterion A |
| Voltage dips EN 61000-4-11 | | | |
| Input voltage (400 V AC , 50 Hz) | | | |
| | Voltage dip | 70 % , 25 periods (Test Level 2) | 70 % , 0.5, 1 / 25 periods (Test Level 2) |
| | Comments | Criterion C | Criterion A: 0.5, 1 period Criterion B: 25 periods |
| | Voltage dip | 40 % , 10 periods (Test Level 2) | 40 % , 5, 10, 50 periods (Test Level 2) |
| | Comments | Criterion C | Criterion B |
| | Voltage dip | 0 % , 1 period (Test Level 2) | 0 % , 0.5, 1 / 5, 50 periods (Test Level 2) |
| | Comments | Criterion B | Criterion A: 0.5, 1 period Criterion B: 5, 50 periods |

| Additional basic standard EN 61000-6-5 (immunity in power station) | | |
|--|---|--|
| Basic standard | Minimum normative requirements of EN 61000-6-5 (power station equipment, zone 1, 2) | Higher requirements in practice (covered) |
| Pulse-shape magnetic field EN 61000-4-9 | | |
| | 1000 A/m | 1000 A/m |
| Comments | Criterion A | Criterion A |
| Attenuated sinusoidal oscillations (ring wave) EN 61000-4-12 | | |
| | not required | 2 kV (Test Level 4 - symmetrical) |
| | not required | 4 kV (Test Level 4 - asymmetrical) |
| Comments | none | Criterion A |
| Asymmetrical conducted disturbance variables EN 61000-4-16 | | |
| | 50 Hz , 60 Hz , 10 V (Permanent) (Test Level 3) | 50 Hz , 60 Hz , 10 V (Permanent) (Test Level 3) |
| | 0 Hz , 16.67 Hz , 50 Hz , 60 Hz , 100 V (1 s) (Test Level 3) | 0 Hz , 16.67 Hz , 50 Hz , 60 Hz , 100 V (1 s) (Test Level 3) |
| Comments | Criterion A | Criterion A |
| Attenuated oscillating wave EN 61000-4-18 | | |
| | 0.5 kV (Test Level 2 - symmetrical) | 0.5 kV (Test Level 2 - symmetrical) |
| | 1 kV (Test Level 2 - asymmetrical) | 1 kV (Test Level 2 - asymmetrical) |
| Comments | Criterion A | Criterion A |

| Key | |
|-------------|--|
| Criterion A | Normal operating behavior within the specified limits. |
| Criterion B | Temporary impairment to operational behavior that is corrected by the device itself. |
| Criterion C | Temporary adverse effects on the operating behavior, which the device corrects automatically or which can be restored by actuating the operating elements. |

5 Safety and installation notes

Only qualified electricians may install, start up, and operate the device. Observe the national safety and accident prevention regulations.

The specified technical characteristics relate to the factory setting of the standard device.

Configured devices may have different technical characteristics. The device behavior may also differ from the documentation.

Check the device for damage before startup.



The power supply is maintenance-free. Repairs may only be carried out by the manufacturer. The warranty no longer applies if the housing is opened.



The power supply may only be used for its intended use.



DANGER: Hazardous voltage

The power supply contains components that have been designed for operation at potentially lethal voltages. The accumulated level of energy can also be high. Never carry out work when mains voltage is present.



CAUTION: Hot surface

Depending on the ambient temperature and load on the power supply, the housing can become hot.



CAUTION: Before startup, observe the following

The power supply must be switched off from outside according to EN 60950-1 (e.g., via the line protection on the primary side).

Preferably mount the power supply in the normal mounting position.

Ensure that the primary-side and secondary-side wiring of the power supply are the correct size and have sufficient fuse protection.

The power supply is a built-in device. The IP20 degree of protection of the power supply is intended for a clean and dry environment. The power supply is mounted in a control cabinet.

For the connection parameters for wiring the power supply, such as the required stripping length with and without ferrule, refer to the technical data section.

As a safety measure against shock currents, always wire the protective conductor device terminal block to the control cabinet ground connection.

To avoid accidental contact with live parts, always cover the termination area (e.g., installation in the control cabinet).

6 High-voltage test (HIPOT)

This protection class I power supply is subject to the Low Voltage Directive and is factory tested. During the HIPOT test (high-voltage test), the insulation between the input circuit and output circuit is tested for the prescribed electric strength values, for example. The test voltage in the high-voltage range is applied at the input and output terminal blocks of the power supply. The operating voltage used in normal operation is a lot lower than the test voltage used.



High-voltage tests up to 0.8 kV AC / 1.1 kV DC can be performed as described.

For high-voltage tests > 0.8 kV AC / 1.1 kV DC, the gas-filled surge arrester must be disconnected.

The test voltage should rise and fall in ramp form. The relevant rise and fall time of the ramp should be at least seconds.

6.3 High-voltage dielectric test performed by the customer

Apart from routine and type tests to guarantee electrical safety, the end user does not have to perform another high-voltage test on the power supply as an individual component. According to EN 60204-1 (Safety of machinery - Electrical equipment of machines) the power supply can be disconnected during the high-voltage test and only installed once the high-voltage test has been completed.

6.1 High-voltage dielectric test (dielectric strength test) and why must it be performed?

In order to protect the user, power supplies (as electric components with a direct connection to potentially hazardous voltages) are subject to more stringent safety requirements. For this reason, permanent safe electrical isolation between the hazardous input voltage and the touch-proof output voltage as safety extra-low voltage (SELV) must always be ensured.

In order to ensure permanent safe isolation of the AC input circuit and DC output circuit, high-voltage testing is performed as part of the safety approval process (type test) and manufacturing (routine test).

6.2 High-voltage dielectric test during the manufacturing process

During the manufacturing process for the power supply, a high-voltage test is performed as part of the dielectric test in accordance with the specifications of IEC/UL/EN 60950-1. The high-voltage test is performed with a test voltage of at least 1.5 kV AC or higher. Routine manufacturing tests are inspected regularly by a certification body.

6.3.1 Performing high-voltage testing

If high-voltage testing of the control cabinet or the power supply as a stand-alone component is planned during final inspection and testing, the following features must be observed.

- The power supply wiring must be implemented as shown in the wiring diagram.
- The maximum permissible test voltages must not be exceeded.

Avoid unnecessary loading or damage to the power supply due to excessive test voltages.

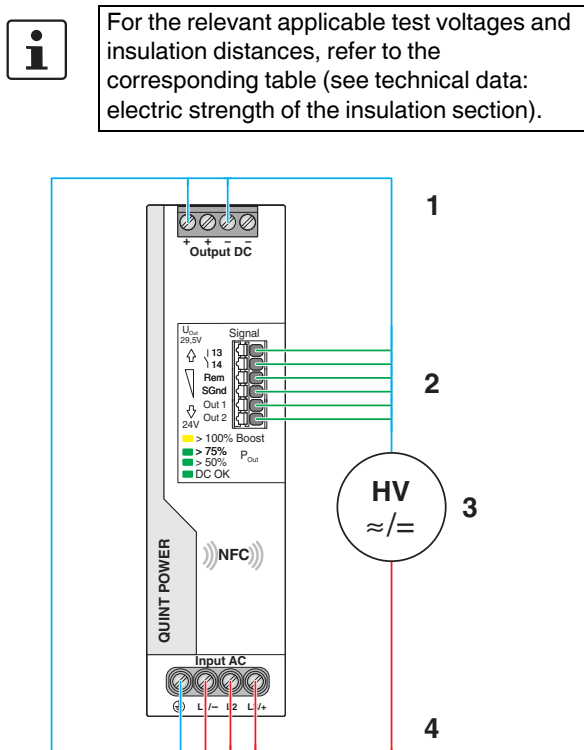


Figure 1 Potential-related wiring for the high-voltage test

Key

| No. | Designation | Color coding | Potential levels |
|-----|---------------------|------------------|------------------|
| 1 | DC output circuit | Blue | Potential 1 |
| 2 | Signal contacts | Green (optional) | Potential 2 |
| 3 | High-voltage tester | -- | -- |
| 4 | AC input circuit | Red | Potential 3 |

6.3.2 Disconnecting the gas-filled surge arrester

The built-in gas-filled surge arrester inside the device ensures that the power supply is effectively protected against asymmetrical disturbance variables (e.g., EN 61000-4-5).

Each surge voltage test represents a very high load for the power supply. Therefore avoid unnecessary loading or damage to the power supply due to excessive test voltages. If necessary, the gas-filled surge arrester inside the device can be disconnected in order to use higher test voltages. Following successful completion of testing, please reconnect the gas-filled surge arrester.

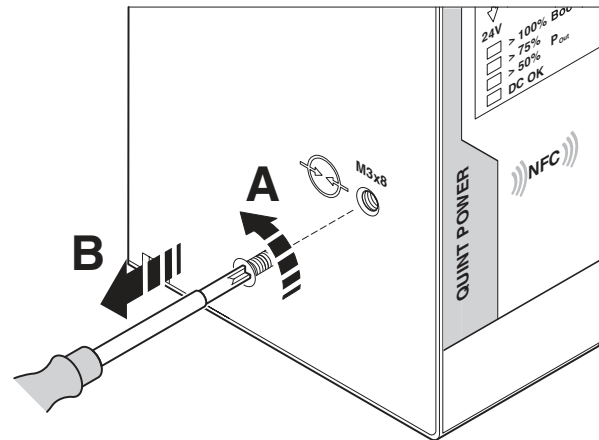


Figure 2 Disconnect gas-filled surge arrester

To disconnect the gas-filled surge arrester, proceed as follows:

1. Disconnect the power to the device.
2. Unscrew the Phillips head screw completely and keep the gas-filled surge arrester screw in a safe place. The gas-filled surge arrester is now disconnected and is no longer functional.
3. Perform the surge voltage test on the power supply.
4. Following successful high-voltage testing, screw the gas-filled surge arrester screw fully back into the power supply.



DANGER: Risk of electric shock or damage to the power supply due to using the wrong gas-filled surge arrester screw

To connect the gas-filled surge arrester, only use the gas-filled surge arrester screw that was originally installed in the power supply.

7 Structure of the power supply

The fanless convection-cooled power supply can be snapped onto all DIN rails according to EN 60715.

7.1 Function elements

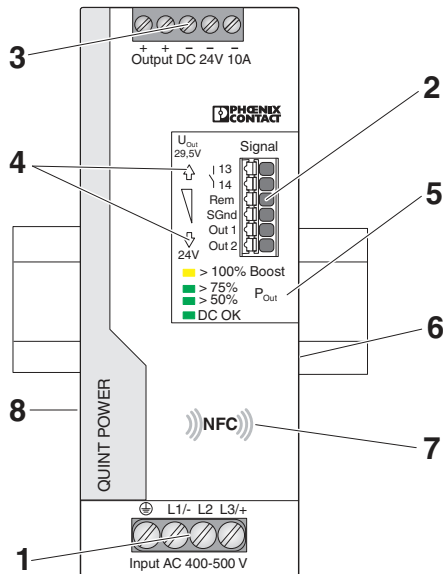


Figure 3 Operating and indication elements

Key

| No. | Designation |
|-----|---|
| 1 | AC input voltage connection terminal blocks |
| 2 | Signaling connection terminal blocks |
| 3 | DC output voltage connection terminal blocks |
| 4 | Output voltage button ↓(-) / ↑(+) |
| 5 | Status and diagnostics indicators |
| 6 | Universal DIN rail adapter (rear of housing) |
| 7 | NFC interface (Near Field Communication) |
| 8 | Gas-filled surge arrester for surge protection (left side of housing) |

7.2 Device dimensions and keepout areas

| Nominal output capacity | Ambient temperature | Distance | |
|-------------------------|---------------------|----------|---------------|
| | | lateral | top/ bottom |
| 0 ... 50 % | -25 ... 70 °C | 0 mm | 40 mm / 20 mm |
| ≥ 50% ... 125% | -25 ... ≤40 °C | 5 mm | 50 mm |
| ≥ 50 % ... 100 % | >40 ... 70 °C | 15 mm | |

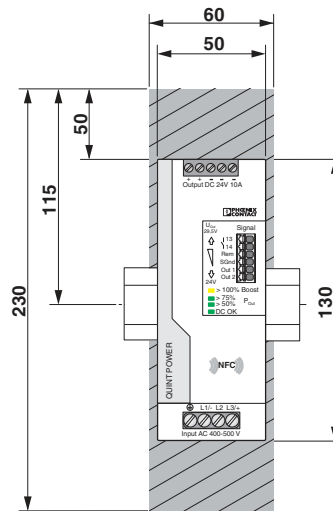


Figure 4 Device dimensions and maximum keepout areas (in mm)

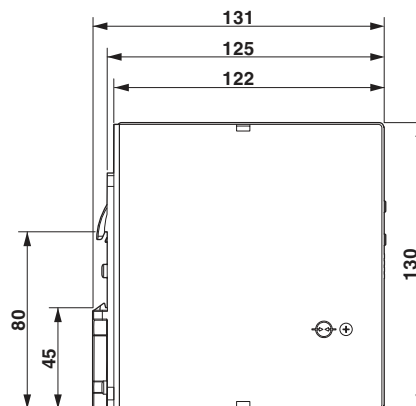


Figure 5 Device dimensions (in mm)

7.3 Block diagram

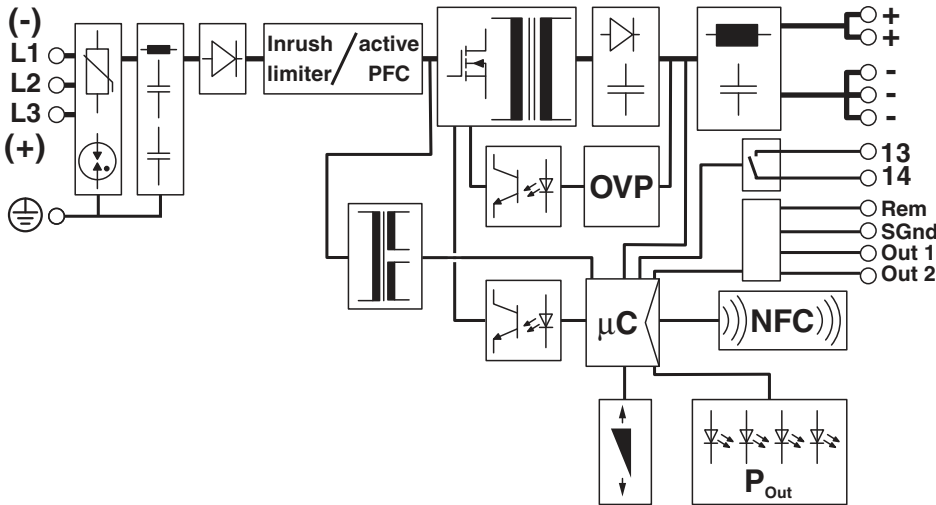


Figure 6 Block diagram

Key

| Symbol | Designation |
|--------|--|
| | Surge protection (varistor, gas-filled surge arrester) with filter |
| | Bridge rectifier |
| | Inrush current limitation |
| | Power factor correction (PFC) |
| | Switching transistor and main transmitter (electrically isolating) |
| | Secondary rectification and smoothing |
| | Filter |
| | Auxiliary converter (electrically isolating) |

| Symbol | Designation |
|--------|--|
| | Optocoupler (electrically isolating) |
| | Additional regulatory protection against surge voltage |
| | Relay contact and signal contacts |
| | Microcontroller |
| | NFC interface (Near Field Communication) |
| | Output voltage button ↓(-) / ↑(+) |
| | Signal/display LEDs (P _{Out} , DC OK) |

8 Mounting/removing the power supply

8.1 Mounting the power supply unit

Proceed as follows to mount the power supply:

1. In the normal mounting position the power supply is mounted on the DIN rail from above. Make sure that the universal DIN rail adapter is in the correct position behind the DIN rail (A).
2. Then press the power supply down until the universal DIN rail adapter audibly latches into place (B).
3. Check that the power supply is securely attached to the DIN rail.

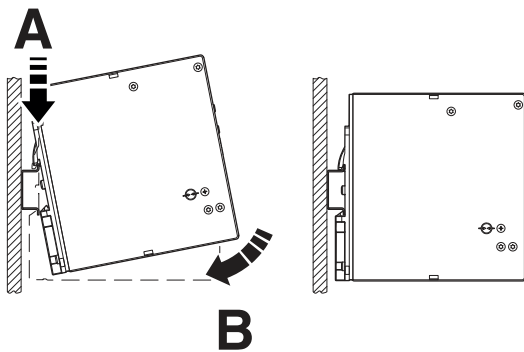


Figure 7 Snapping the power supply onto the DIN rail

8.2 Removing the power supply unit

Proceed as follows to remove the power supply:

1. Take a suitable screwdriver and insert this into the lock hole on the universal DIN rail adapter (A).
2. Release the lock by lifting the screwdriver (B).
3. Carefully swivel the power supply forward (C) so that the lock slides back into the starting position.
4. Then separate the power supply from the DIN rail.

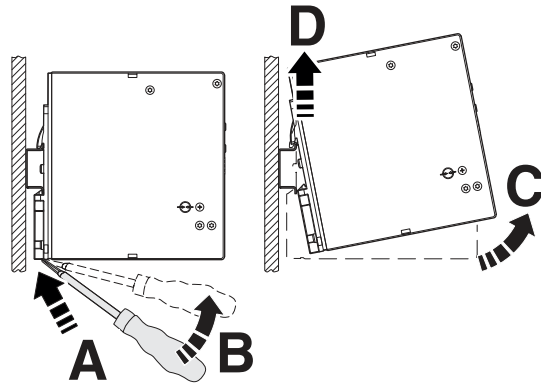


Figure 8 Removing the power supply from the DIN rail

8.3 Retrofitting the universal DIN rail adapter

For installation in horizontal terminal boxes it is possible to mount the power supply at a 90° angle to the DIN rail. No additional mounting material is required.



Use the Torx screws provided to attach the universal DIN rail adapter to the side of the power supply.

8.3.1 Disassembling the universal DIN rail adapter

Proceed as follows to disassemble the universal DIN rail adapter that comes pre-mounted:

1. Remove the screws for the universal DIN rail adapter using a suitable screwdriver (Torx 10).
2. Separate the universal DIN rail adapter from the rear of the power supply.

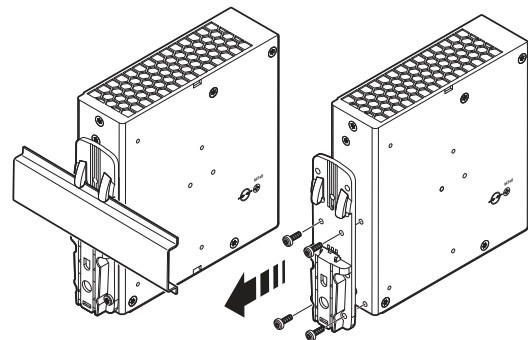


Figure 9 Disassembling the universal DIN rail adapter

8.3.2 Mounting the universal DIN rail adapter

To mount the universal DIN rail adapter on the left side of the device, proceed as follows:

1. Position the universal DIN rail adapter on the left side of the housing so that the mounting holes are congruent with the hole pattern for the mounting holes.
2. Insert the Torx screws that were removed earlier into the appropriate hole pattern on the universal DIN rail adapter so that the necessary drill holes on the power supply can be accessed.
3. Screw the universal DIN rail adapter onto the power supply.



The maximum tightening torque of the Torx screw (Torx® T10) is 0.7 Nm.

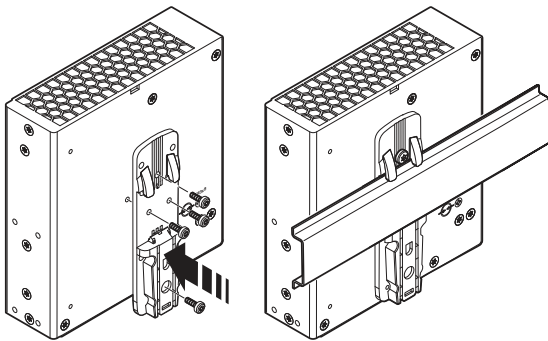


Figure 10 Mounting the universal DIN rail adapter

8.4 Retrofitting the universal wall adapter

The UWA 182/52 universal wall adapter (Order No. 2938235) or UWA 130 universal wall adapter (Order No. 2901664) is used to attach the power supply directly to the mounting surface.

The use of universal wall adapters is recommended under extreme ambient conditions, e.g., strong vibrations. Thanks to the tight screw connection between the power supply and the universal wall adapter or the actual mounting surface, an extremely high level of mechanical stability is ensured.



The power supply is attached to the UWA 182 or UWA 130 universal wall adapter by means of the Torx screws of the universal DIN rail adapter.

8.4.1 Mounting the UWA 182/52 universal wall adapter

Proceed as follows to disassemble the universal DIN rail adapter that comes pre-mounted:

1. Remove the screws for the universal DIN rail adapter using a suitable screwdriver (Torx 10).
2. Separate the universal DIN rail adapter from the rear of the power supply.
3. Position the universal wall adapter in such a way that the keyholes or oval tapers face up. The mounting surface for the power supply is the raised section of the universal wall adapter.
4. Place the power supply on the universal wall adapter in the normal mounting position (input voltage connection terminal blocks below).
5. Insert the Torx screws into the appropriate hole pattern on the universal wall adapter so that the necessary mounting holes on the power supply can be accessed.
6. Screw the universal wall adapter onto the power supply.

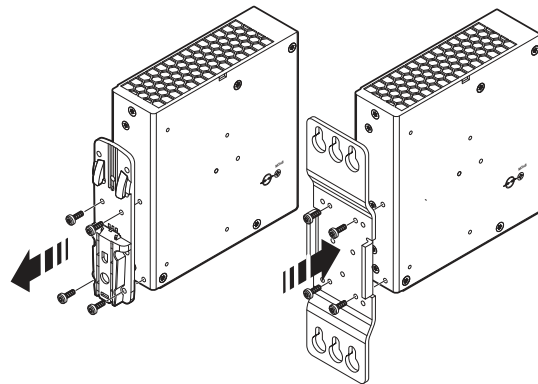


Figure 11 Mounting the UWA 182/52 universal wall adapter



The maximum tightening torque of the Torx screw (Torx® T10) is 0.7 Nm.



Make sure you use suitable mounting material when attaching to the mounting surface.

8.4.2 Mounting the UWA 130 2-piece universal wall adapter

Proceed as follows to disassemble the universal DIN rail adapter that comes pre-mounted:

1. Remove the screws for the universal DIN rail adapter using a suitable screwdriver (Torx 10).
2. Separate the universal DIN rail adapter from the rear of the power supply.
3. Position the universal wall adapter. The mounting surface for the power supply is the raised section of the universal wall adapter.
4. Place the power supply on the universal wall adapter in the normal mounting position (input voltage connection terminal blocks below).
5. Insert the Torx screws into the appropriate hole pattern on the universal wall adapter so that the necessary mounting holes in the side flanges of the power supply can be accessed.
6. Screw the two-piece universal wall adapter onto the power supply.

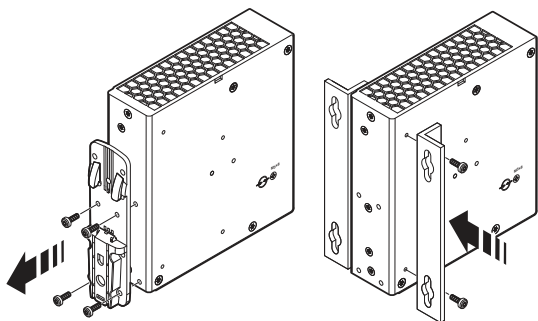


Figure 12 Mounting the UWA 130 universal wall adapter

9 Device connection terminal blocks

The AC input and DC output terminal blocks on the front of the power supply feature screw connection technology. The signal level is wired without tools by means of Push-in connection technology.



For the necessary connection parameters for the connection terminal blocks, refer to the technical data section.

9.1 Input

The power supply is operated in a three-phase AC power grid (star network). The power supply is connected on the primary side via the INPUT L1/L2/L3/⊕ connection terminal blocks.



The power supply is approved for connection to TN, TT, and IT power grids (star networks) with a maximum phase-to-phase voltage of 500 V AC.

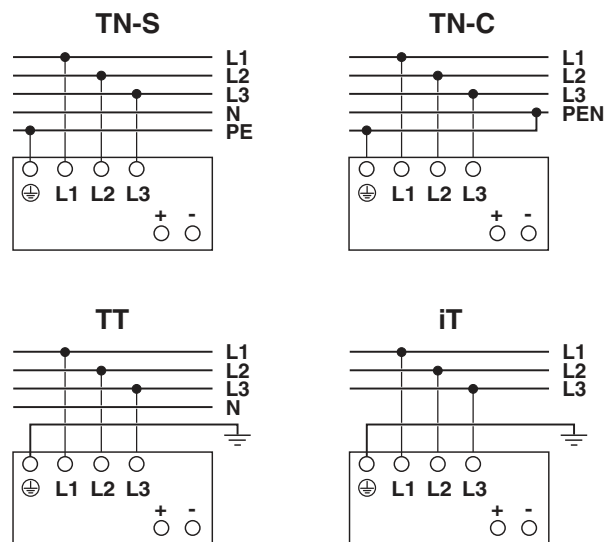


Figure 13 Network configurations in star network

9.2 Protection of the primary side

Installation of the device must correspond to EN 60950-1 regulations. It must be possible to switch off the device using a suitable disconnecting device outside the power supply. The line protection on the primary side is suitable for this (see technical data section).



DANGER: Hazardous voltage
An all-pos. fuse must be present for operation on three-phase and DC systems.

Protection for AC supply

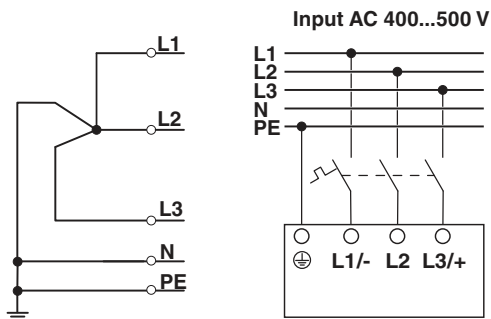


Figure 14 Pin assignment for AC supply voltage

Protection for DC supply



If the power supply is operated with a DC voltage, the star point of the DC supply system used for supply must be grounded.

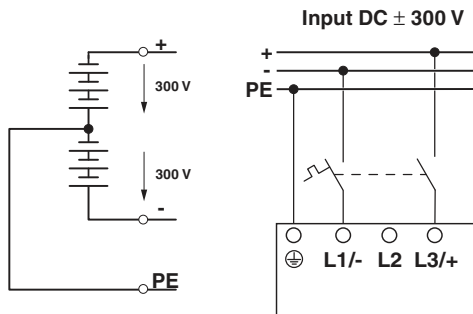


Figure 15 Pin assignment for DC supply voltage

9.3 Output

By default, the power supply is pre-set to a nominal output voltage of 24 V DC.

The output voltage is adjusted via the two arrow keys ↓(-) and ↑(+) on the front of the power supply.

When you press the arrow key once briefly, the output voltage is reduced ↓(-) or increased ↑(+) by 3 mV. When you press the arrow key for longer, the voltage is adjusted in 100 mV increments.

9.4 Protection of the secondary side

The power supply is electronically short-circuit-proof and no-load-proof. In the event of an error, the output voltage is limited



If sufficiently long connecting cables are used, fuse protection does not have to be provided for each individual load.

If each load is protected separately with its own protective device, the selective shutdown in the event of a fault enables the system to remain operational.

10 Output characteristic curves

This section describes the various output characteristic curves together with their areas of application for customization to your specific application. The U/I Advanced characteristic curve is set by default.

| Application | U/I Advanced | Smart HICCUP | FUSE MODE |
|---|--------------|--------------|-----------|
| Normal load (nominal operating area) | ✓ | ✓ | ✓ |
| System extension (static boost) | ✓ | ✓ | ✓ |
| Load with high switch-on current (dynamic boost) | ✓ | ✓ | -- |
| Energy storage charging (e.g., of batteries) | ✓ | ✓ | -- |
| Tripping of fuses (SFB technology) | ✓ | -- | -- |
| Keeping cable heating at a low level in the event of an error | -- | ✓ | -- |
| Configuration without protection on the secondary side | -- | ✓ | ✓ |

Key

| Symbol | Designation |
|--------|----------------------------------|
| ✓ | Suitable for the application |
| -- | Not suitable for the application |

10.1 U/I Advanced output characteristic curve

The preset U/I Advanced output characteristic curve is optimized for the following applications:

- For selective tripping of standard circuit breakers (SFB technology). The power supply supplies up to 6 times the nominal current for 15 ms. Loads connected in parallel continue working.
- When supplying loads with high switch-on currents, such as motors. The dynamic boost of the power supply supplies up to 200% of the nominal power for 5 s. This ensures that sufficient reserve energy is available; overdimensioning of the power supply is not necessary.
- For system extension. With the static boost, up to 125% of the nominal output power is available for a sustained period (up to 40°C).
- For fast energy storage charging (e.g., of batteries) to supply a wide range of loads. The power supply operates in the nominal operating range. Energy supply to the load is ensured.

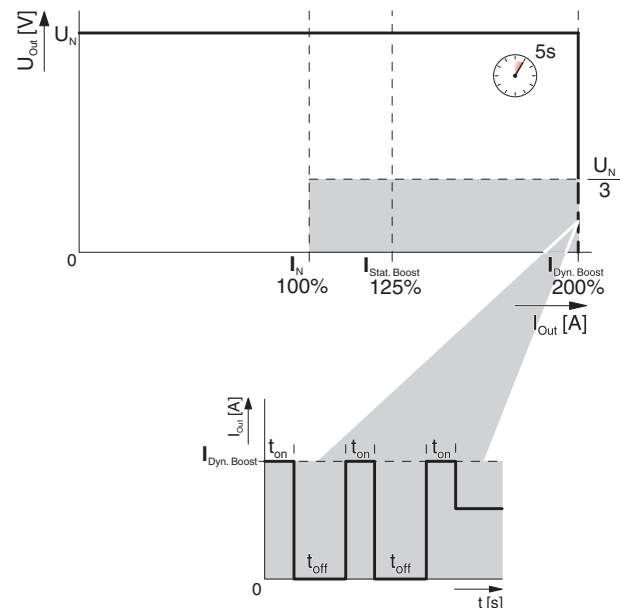


Figure 16 U/I Advanced output characteristic curve

10.2 Smart HICCUP output characteristic curve

The SMART HICCUP output characteristic curve keeps the thermal load of the connecting cables at a low level in the event of a sustained overload. If loads are not protected or are protected in a way that is not permitted, the loads are supplied for 2 s. The DC output of the power supply is then switched off for 8 s. This procedure is repeated until the cause of the overload has been remedied.

The preset Smart HICCUP output characteristic curve is optimized for the following applications:

- If only a low short-circuit current is permitted.
- If following an overload or short circuit the output voltage should be made available again automatically.

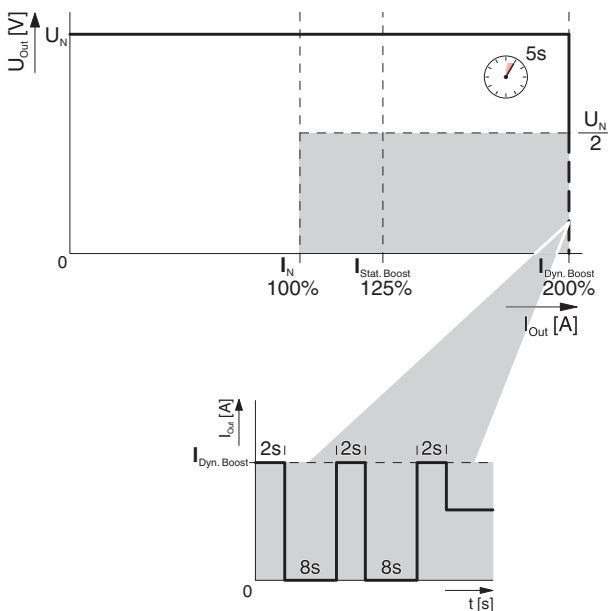


Figure 17 Smart HICCUP output characteristic curve

10.3 FUSE MODE output characteristic curve

In the event of an overload (e.g., short circuit), the power supply switches off the DC output permanently. The value of the switch-off threshold and the time period for which it may be exceeded can be freely selected. The power supply is restarted via the remote contact. As an option, the power supply can be switched on by switching the supply voltage on the primary side off and on.

Selecting the FUSE MODE output characteristic curve sets the following default values.

- $t_{Fuse} = 100 \text{ ms}$
- $I_{Fuse} = I_N$

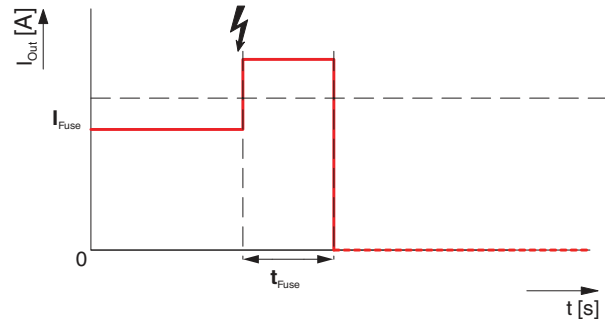


Figure 18 FUSE MODE output characteristic curve

11 Configuring the power supply

With the fourth generation of the QUINT POWER power supply, it is now possible for the first time to adapt the behavior of the power supply. In addition to setting the output voltage and selecting the output characteristic curves, you can configure signal outputs Out 1, Out 2, and floating signal contact 13/14, for example. Configuration of the remote input for controlling the power supply or specification of signal options and signal thresholds also extend the range of possible applications.

The power supply is configured via the device's internal NFC (near field communication) interface.



The power supply behaves like a passive NFC tag. An auxiliary power source is required in order to supply the power supply with configuration data.

11.1 Configuration with PC software

In order to configure the power supply via the NFC interface, the following hardware and software requirements must be met:

- PC or notebook (as of Windows 7, Microsoft.Net Framework 4.5, USB 2.0 interface, 50 MB hard disk capacity, QUINT POWER software).
- Programming adapter: TWN4 MIFARE NFC USB ADAPTER (Order No. 2909681) is plugged into the USB interface.
- Programming software: the QUINT POWER software has been successfully installed.

11.2 Configuring the power supply

To configure the power supply, proceed as follows:

- Before you can configure the power supply, it should either be disconnected from the supply voltage or switched to SLEEP MODE.
- To switch the power supply to SLEEP MODE, use one of the external circuits. The following connection versions are possible between the Rem (remote input) and SGnd (signal ground) connection terminal blocks. Plug-in bridge or isolator: $R = < 1.5 \text{ k}\Omega$, voltage source: $U = < 5 \text{ V DC}$ (observe the polarity)

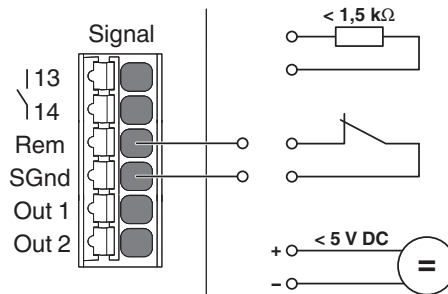


Figure 19 SLEEP MODE connection versions

- Hold the USB-PROG-ADAPTER in front of the mounted power supply so that the NFC antenna symbols are congruent with one another.

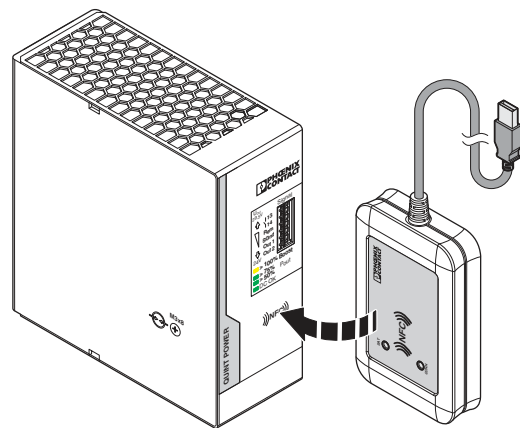


Figure 20 Configuration of the power supply

- In the programming interface of the QUINT POWER software, press the [Read] button. The current device and configuration data for the power supply is read and displayed.



If a connection cannot be established between the USB-PROG-ADAPTER and the power supply, more detailed information can be found in the user manual for the QUINT POWER software.



For information regarding the configuration of the power supply, such as selecting the characteristic curve and output parameters, refer to the user manual for the QUINT POWER software.

11.3 Configuration with NFC-capable mobile terminal device

The QUINT POWER app enables you to conveniently configure the power supply using a mobile terminal device, such as a smartphone.

In order to configure the power supply via the NFC interface, the following hardware and software requirements must be met:

- NFC-capable mobile terminal device with Android operating system as of Version 4.1.x (Jelly Bean)
- QUINT POWER app (Google Play Store)



For information regarding the configuration of the power supply, such as selecting the characteristic curve and output parameters, please refer to the QUINT POWER app.

11.4 Ordering a configured power supply

Customer-specified QUINT POWER power supplies are ordered as a KMAT item (configurable material) and are configured during the production process in the factory. The power supply is therefore supplied ready to connect for your specific application.



To configure the power supply, switch to the configuration area for the product at www.phoenixcontact.net.

12 SFB technology

SFB (selective fuse breaking) technology can be used to trip circuit breakers and fuses connected on the secondary side quickly and reliably. In the event of a short circuit on the secondary side, the power supply supplies up to 6 times the nominal current for 15 ms. The faulty load circuit is switched off selectively.

Loads that are connected in parallel are still supplied with energy. Operation of these system parts is ensured. In order to always enable the reliable tripping of circuit breakers and fuses, certain framework conditions must be observed (see SFB configuration section).



The U/I Advanced output characteristic curve supports SFB technology.

12.1 Tripping circuit breakers

The circuit breaker is tripped by the high SFB current of the power supply, typically within 3 to 5 ms. As a result, voltage dips at loads that are connected in parallel are avoided.

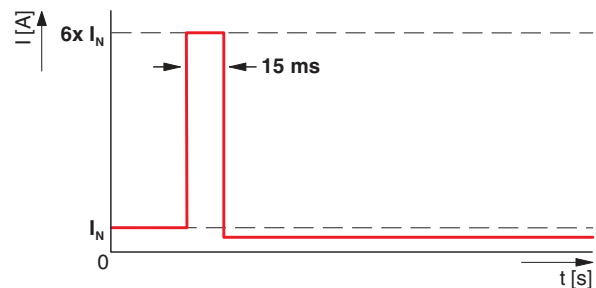


Figure 21 SFB pulse trips circuit breakers

12.2 Tripping a fuse

Fuses are tripped by melting the predetermined breaking point inside the fuse capsule. The tripping characteristic of the fuse is described by the melting integral (I^2t). A high current is crucial in order to achieve a very short tripping time.

12.3 SFB configuration

Observe the following framework conditions for determining the maximum distance between the power supply and load:

- The performance class of the power supply.
- The cross section of the connecting cable.
- The tripping characteristic of the fuse component.

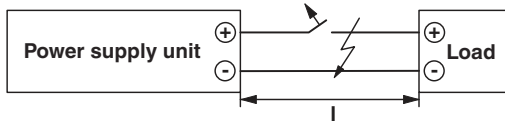


Figure 22 Schematic diagram of the maximum cable length

12.4 Maximum distance between the power supply and load

The distances given in the table are worst-case values and therefore cover the entire tolerance range for the magnetic tripping of circuit breakers. The possible distances are often greater in practice.

12.4.1 Thermomagnetic device circuit breaker, type: Phoenix Contact CB TM1 SFB

| Maximum distance l [m] with device circuit breaker | | Conductor cross section | | | | |
|--|-----------------|-------------------------|------|------|-----|-----|
| | | A [mm ²] | 0.75 | 1.0 | 1.5 | 2.5 |
| | | AWG | 18 | (17) | 16 | 14 |
| Phoenix Contact | CB TM1 1A SFB P | | 27 | 36 | 54 | 91 |
| | CB TM1 2A SFB P | | 18 | 25 | 37 | 63 |
| | CB TM1 4A SFB P | | 11 | 15 | 22 | 38 |
| | CB TM1 4A SFB P | | 6 | 8 | 13 | 22 |
| | CB TM1 5A SFB P | | 4 | 5 | 8 | 14 |

The cable lengths determined are based on the following parameters:

| | |
|--|--|
| Tripping: | magnetic |
| DC correction factor (0 Hz): | Siemens = 1.4; ABB = 1.5 |
| Characteristics: | C Characteristic C (5 to 10 times the rated current) x correction factor |
| Ambient temperature: | +20 °C |
| Internal resistance R_i of the device circuit breaker: | taken into consideration |
| Comments: | In addition to the short-circuit current, the power supply unit also supplies half the nominal current for load paths connected in parallel. |

12.4.2 Thermomagnetic circuit breaker, type: Siemens 5SY, ABB S200

| Maximum distance l [m] with circuit breaker | | Conductor cross section | | | | |
|---|----------|-------------------------|------|------|-----|-----|
| | | A [mm ²] | 0.75 | 1.0 | 1.5 | 2.5 |
| | | AWG | 18 | (17) | 16 | 14 |
| Siemens 5SY | A1 | 78 | 104 | 156 | 260 | |
| | A1.6 | 58 | 77 | 116 | 194 | |
| | A2 | 49 | 65 | 98 | 164 | |
| | A3 | 35 | 47 | 71 | 118 | |
| | A4 | 27 | 36 | 54 | 90 | |
| | A6 | 18 | 24 | 37 | 62 | |
| | B2 | 28 | 37 | 56 | 93 | |
| | B4 | 14 | 19 | 28 | 48 | |
| | B6 | 6 | 8 | 13 | 21 | |
| | C1 | 10 | 14 | 21 | 35 | |
| | C1.6 | 12 | 17 | 25 | 42 | |
| | C2 | 11 | 15 | 22 | 37 | |
| | C3 | 4 | 6 | 9 | 15 | |
| | ABB S200 | B6 | 5 | 7 | 11 | 18 |
| C1 | | 3 | 4 | 6 | 11 | |
| C1.6 | | 7 | 10 | 15 | 25 | |
| C2 | | 4 | 6 | 9 | 15 | |
| C3 | | 3 | 4 | 7 | 11 | |
| Z1 | | 64 | 85 | 128 | 214 | |
| Z1.6 | | 46 | 62 | 93 | 156 | |
| C2 | | 42 | 57 | 85 | 143 | |
| C3 | | 33 | 44 | 66 | 100 | |
| C4 | | 24 | 33 | 49 | 82 | |
| C6 | | 15 | 20 | 30 | 51 | |

The cable lengths determined are based on the following parameters:

- Tripping: magnetic
- DC correction factor (0 Hz): Siemens = 1.4; ABB = 1.5
- Characteristics: A, B, C, Z
 - Characteristic A (3 times the rated current) x correction factor
 - Characteristic B (5 times the rated current) x correction factor
 - Characteristic C (10 times the rated current) x correction factor
 - Characteristic Z (3 times the rated current) x correction factor
- Ambient temperature: +20 °C
- Internal resistance R_i of the device circuit breaker: taken into consideration
- Comments: In addition to the short-circuit current, the power supply unit also supplies half the nominal current for load paths connected in parallel.

12.4.3 Fuse, type: Cooper Bussmann GMA xA, GMC xA

| Maximum distance l [m] with fuse | | Melting integral I ² t [A ² s] | Conductor cross section | | | | |
|----------------------------------|-----------|--|-------------------------|------|------|-----|-----|
| | | | A [mm ²] | 0.75 | 1.0 | 1.5 | 2.5 |
| | | | AWG | 18 | (17) | 16 | 14 |
| Cooper Bussmann | GMA 1A | 0.48 | 48 | 64 | 97 | 162 | |
| | GMA 1.25A | 0.84 | 36 | 49 | 73 | 122 | |
| | GMA 1.5A | 1.6 | 26 | 35 | 53 | 88 | |
| | GMA 1.6A | 2 | 23 | 31 | 47 | 79 | |
| | GMA 2A | 3.1 | 19 | 25 | 38 | 63 | |
| | GMA 2,5A | 4.9 | 12 | 16 | 25 | 42 | |
| | GMA 3,15A | 4.9 | 7 | 9 | 14 | 23 | |
| | GMA 3,5A | 9.7 | 6 | 8 | 12 | 21 | |
| | GMA 3,5A | 13 | 4 | 6 | 9 | 16 | |
| | GMC 1A | 1.8 | 23 | 31 | 47 | 78 | |
| | GMC 1.25A | 3.4 | 17 | 22 | 34 | 56 | |
| | GMC 1,5A | 5.4 | 10 | 14 | 21 | 36 | |
| | GMC 1,6A | 5.8 | 10 | 13 | 20 | 34 | |
| | GMC 2A | 8.9 | 6 | 9 | 13 | 22 | |
| | GMC 2,5A | 13 | 4 | 6 | 9 | 15 | |

The cable lengths determined are based on the following parameters:

| | |
|--|--|
| Tripping: | thermal |
| Characteristics: | Cooper Bussmann GMA (fast-blow - fast acting) Cooper Bussmann GMC (medium-blow - medium time delay) |
| Reaching the set output voltage again (U _{Out} ≤ 90% U _{Set}) | <10 ms |
| Ambient temperature: | +20 °C |
| Internal resistance R _i of the fuse: | taken into consideration |
| Comments: | In addition to the short-circuit current, the power supply unit also supplies half the nominal current for load paths connected in parallel. |

13 Signaling

A floating signal contact is available for preventive function monitoring of the power supply. Depending on the configuration of the power supply, two digital outputs or one digital and one analog output can be selected.

The current device status of the power supply is signaled using four LED status indicators. The function of each LED status indicator is assigned to a fixed event and cannot be modified.

In addition, the power supply can be switched off and on via an external circuit.

The signal outputs are configured on the software side using the QUINT POWER software or the QUINT POWER app. Upon delivery, the power supply is pre-allocated a default configuration for the signal outputs.

13.1 Location and function of the signaling elements

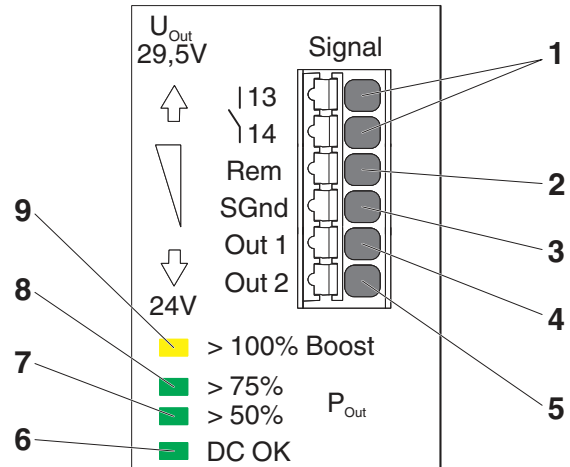







Figure 23 Position of the signaling element

Key

| No. | Signaling elements |
|-----|---|
| 1 | 13/14 floating switch contact (N/O contact) |
| 2 | Rem, remote input (switch power supply off and on) |
| 3 | SGnd, signal ground (reference potential for signals Out 1, Out 2) |
| 4 | Out 1 (digital output, function depends on the signal option set) |
| 5 | Out 2 (digital or analog output, function depends on the signal option set) |
| 6 | LED status indicator DC-OK |
| | LED on: $U_{Out} > 90\% \times U_{Set}$ |
| | LED flashing: $U_{Out} < 90\% \times U_{Set}$ |
| 7 | LED status indicator $P_{Out} > 50\%$ (output power >120 W) |
| 8 | LED status indicator $P_{Out} > 75\%$ (output power >180 W) |
| 9 | LED status indicator $P_{Out} > 100\%$, boost mode (output power >240 W) |

Preventive function monitoring

| QUINT POWER default settings upon delivery | | | Out 1 digital 0/24 V DC 20 mA | Out 2 digital 0/24 V DC 20 mA | Relay 13/14 floating 24 V DC / ≤ 1 A 30 V AC / ≤ 0.5 A | Out 2 analog 4 ... 20 mA |
|---|-----------------------------------|---------------------------|-------------------------------------|-------------------------------------|---|------------------------------------|
|  | Output voltage | ① 25 ... 135% ② 90% | Default | ✓ | Default | ① 0 ... 32 V DC ② 0 ... 30 V DC |
|  | Output current | ① 5 ... 200% ② 100% | ✓ | ✓ | ✓ | ① 0 ... 20 A ② 0 ... 10 A |
|  | Output power | ① 5 ... 200% ② 100% | ✓ | Default | ✓ | ① 0 ... 480 W ② 0 ... 240 W |
|  | Operating hours | ① 0 ... ∞ h ② 10 years | ✓ | ✓ | ✓ | -- |
|  | Early warning of high temperature | Warning of derating | ✓ | ✓ | ✓ | -- |
| OVP | Voltage limitation active | Surge voltage at output | ✓ | ✓ | ✓ | -- |
| AC_{OK} | Input voltage OK | 10 ms after mains failure | ✓ | -- | ✓ | -- |
| 3AC_{OK} | Phase monitoring | Warning 2AC operation | ✓ | ✓ | ✓ | -- |

Key

| Symbol | Description |
|---------|---------------------------------------|
| ① | Setting range |
| ② | Default setting of the standard item |
| Default | Configuration set upon delivery |
| ✓ | Configuration that can be selected |
| -- | Configuration that cannot be selected |

13.2 Description of signaling

In contrast to the default signaling set upon delivery, you can customize the signaling to the specific needs of the system.



The simultaneous control of multiple signal outputs by means of one signal option is possible, as is the use of logic operations to link multiple signal options to one control. The power supply is configured using the QUINT POWER software or the QUINT POWER app.

The following signal options can be selected to signal system states.

13.2.1 Output voltage

Signals whether the output voltage is in the preset range. If the output voltage of the power supply falls below the set threshold value, the signal state changes.

Example of use

Indicates whether the connected load is being supplied. Used to quickly detect a load circuit that is not being supplied (e.g., in the event of mains failure or short circuit in the supply line).

13.2.2 Output current

If the output current of the power supply exceeds the set threshold value, the signal state changes.

Example of use

In the case of system extensions, loads are added. This increases the utilization of the power supply. Preventive function monitoring detects critical operating states in good time. Action can be taken before system downtime occurs.

13.2.3 Output power

If the output power of the power supply exceeds the set threshold value, the signal state changes.

Example of use

In the case of system extensions, loads are added. This increases the utilization of the power supply. Preventive function monitoring detects critical operating states in good time. Action can be taken before system downtime occurs.

13.2.4 Operating hours

If the preset operating time of the power supply is exceeded, the signal state changes.

Example of use

For systems with a very long operating time, such as wind turbine generators or refineries, maintenance intervals are planned. You can even schedule the maintenance date during configuration based on the ambient temperature and utilization of the power supply (see service life section).

13.2.5 Early warning of high temperature

Before the power supply protects itself through power derating in the event of an overtemperature, the signal state changes.

Example of use

Outdoor control cabinets can reach a high internal temperature depending on the position of the sun. The same is true if a control cabinet fan or cooling system fails. In the event of any form of overtemperature, the power supply provides a warning by means of this signal, well before the supply of the loads is in any danger.

Specifications regarding the available output power (see derating section).

13.2.6 Voltage limitation active

If the circuit inside the device for protecting against surge voltages is activated at the output, the signal state changes.

Example of use

Normative requirements stipulate that an upper voltage limit must be observed at the output in the event of an error. It must therefore be ensured, for example, that safety-related controllers are not supplied with an output voltage that exceeds 32 V DC, even in the event of an error. If foreign bodies (ferrules, screws, etc.) enter the power supply and generate an error, the signal state changes.

13.2.7 Input voltage OK

If the input voltage of the power supply is interrupted for 10 ms, the signal state changes.

Example of use

In the event of mains failure, the power supply continues to supply the load with energy for at least 20 ms. Failure of the input voltage is signaled after just 10 ms, which means that this information is provided to the higher-level controller at an early stage. System states can therefore be stored promptly without any loss of data as a result of the unexpected failure of the supply voltage.

13.2.8 Phase monitoring (3AC operation)

If one phase fails completely or the voltage difference between the outer conductors is > 10%, the signal state changes.

Example of use

It is possible that the voltage of one phase may drop or fail completely due to an asymmetrical load on the 3-phase supply network or a fuse tripping. If one phase fails completely or the voltage difference between the outer conductors is > 10%, the power supply signals 2AC operation. Permanent supply of the load by the power supply is still ensured in 2AC operation.

Specifications regarding the available output power (see derating section).

13.2.9 Remote input

The power supply is switched on and off using the digital remote input of the power supply. When switched off, power transmission is deactivated on the DC output side of the power supply. The load connected to the DC output terminal blocks is no longer supplied with energy. The operating mode where the DC output side is deactivated is called SLEEP MODE.

To switch the power supply to SLEEP MODE, select one of the three external circuit versions. The external circuit is wired between signal terminal blocks Rem and SGnd (signal ground).

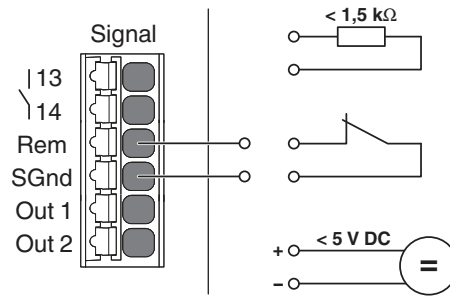


Figure 24 External wiring versions, enable SLEEP MODE

To switch the power supply back on, change the external circuit between signal terminal blocks Rem and SGnd. Power transmission inside the device is activated again. The energy for supplying the loads is once again available at the DC output terminal blocks.

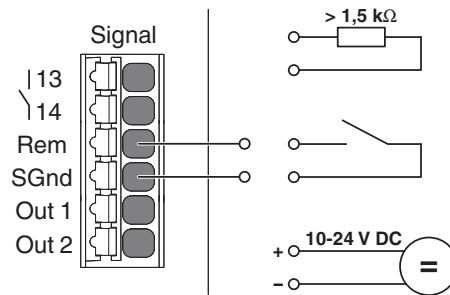


Figure 25 External wiring versions, disable SLEEP MODE

13.3 LED status indicators

Four LED status indicators are integrated in the front of the power supply, which indicate the current device state.

The green DC-OK LED indicates the current status of the output voltage (U_{Out}). The DC-OK LED is permanently on as long as the output voltage U_{Out} is $\geq 0.9 \times U_{Set}$. If the value of the output voltage is $< 0.9 \times U_{Set}$, the green DC-OK LED flashes.

Depending on the required output power of the connected load, the three P_{Out} LEDs, which indicate the current output power, light up. Assuming that the provided output power is > 50% of the nominal output power, the > 50% LED lights up green. If the demanded power continues to increase until it is above 75%, the < 75% LED lights up green in addition to the > 50% LED. If the required output power is then greater than the nominal device power, the power supply operates in boost mode. In boost mode, the > 100% LED additionally lights up yellow.

The LED status indicator cannot be configured individually.

13.4 U/I Advanced characteristic curve signaling

The following table shows the standard assignment for signaling for the U/I Advanced characteristic curves which is set by default.

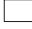











| | | Normal operation $P_{Out} < P_N$ | BOOST $P_{Out} > P_N$ | Overload operation $U_{Out} < 0.9 \times U_{Set}$ |
|-------------------------------|---------|---|---|---|
| LED: $P_{Out} > 100\%$ | yellow |  |  |  |
| Signal Out 2: $P_{Out} < P_N$ | Default | Active High | Active Low | Active Low |
| LED: $P_{Out} > 75\%$ | green |  |  |  |
| LED: $P_{Out} > 50\%$ | |  |  |  |
| LED: DC OK | |  |  |  |
| Relay: 13/14, DC OK | Default | closed | closed | open |
| Signal Out 1: DC OK | | Active High | Active High | Active Low |



Figure 26 U/I Advanced signaling

13.5 SMART HICCUP characteristic curve signaling

The following table shows the standard assignment for signaling for the SMART HICCUP characteristic curve.













| | | Normal mode $P_{Out} < P_N$ | BOOST $P_{Out} > P_N$ | Overload mode $U_{Out} < 0.9 \times U_{Set}$ |
|-------------------------------|---------|---|---|---|
| LED: $P_{Out} > 100\%$ | Yellow |  |  |  |
| Signal Out 2: $P_{Out} < P_N$ | Default | Active High | Active Low | Active Low |
| LED: $P_{Out} > 75\%$ | Green |  |  |  |
| LED: $P_{Out} > 50\%$ | |  |  |  |
| LED: DC OK | |  |  |  |
| Relay: 13/14, DC OK | Default | Closed | Closed | Open |
| Signal Out 1: DC OK | | Active High | Active High | Active Low |



Figure 27 Signal image in overload mode

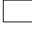13.6 FUSE MODE characteristic curve signaling

The following table shows the standard assignment for signaling for the FUSE MODE characteristic curve.













| | | Normal operation $P_{Out} < P_N$ | BOOST $P_{Out} > P_N$ | FUSE MODE $I > I_{Fuse}$ for $t > t_{Fuse}$ |
|-------------------------------|---------|---|---|---|
| LED: $P_{Out} > 100\%$ | yellow |  |  |  |
| Signal Out 2: $P_{Out} < P_N$ | Default | Active High | Active Low | Active Low |
| LED: $P_{Out} > 75\%$ | green |  |  |  |
| LED: $P_{Out} > 50\%$ | |  |  |  |
| LED: DC OK | |  |  |  |
| Relay: 13/14, DC OK | Default | closed | closed | open |
| Signal Out 1: DC OK | | Active High | Active High | Active Low |



Figure 28 Signal image for FUSE MODE active

13.7 SLEEP MODE signaling

In SLEEP MODE, all LEDs are off, all signals are low, and the relay switching contact is open.

14 Operating modes

Depending on the intended use, the power supply can be run in series or parallel operation.

14.1 Series operation

To double the output voltage, connect two power supplies in series. Only use power supplies with the same performance class and configuration for series operation. If two 24 V DC power supplies are connected in series, an output voltage of 48 V DC is available to supply the loads.

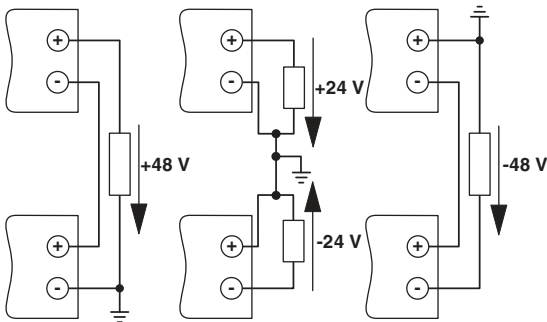


Figure 29 Schematic diagrams in series operation

14.2 Parallel operation

You can connect several power supplies in parallel in order to increase the power or to supply the loads redundantly.

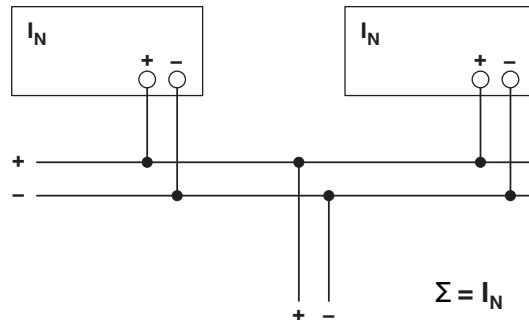


Figure 30 Schematic diagram in parallel operation

Observe the following points when carrying out parallel connection:

1. Use power supplies of the same type and performance class
2. Setting power supplies to “parallel operation” via the QUINT POWER software or QUINT POWER app
3. Setting the same output voltages
4. Using the same cable cross sections for wiring
5. Using the same cable lengths for the DC convergence point
6. Operating power supplies in the same temperature environment
7. When three or more power supplies are connected in parallel, each output must be protected (e.g., with circuit breakers, fuses or decoupling modules)



For more detailed information on the operating mode for parallel operation, refer to the user manual for the QUINT POWER software or the QUINT POWER app.

14.2.1 Redundancy operation

Redundant circuits are suitable for supplying systems and system parts which place particularly high demands on operational reliability.

If energy is to be supplied to the load with 1+1 redundancy, two power supplies of the same type and performance class must be used. In the event of an error, it must be ensured that one of the power supplies is able to provide the total required power for the load. This means that in redundancy mode, two 10 A power supplies supply a load with a nominal current of 10 A, for example. During normal operation of the power supplies, each power supply therefore supplies 5 A. Always use cables with the same cross sections and lengths when wiring the power supplies on the DC output side.

A redundancy module can be used to 100% decouple two power supplies from one another and to ensure the supply. A distinction is made here between passive and active redundancy modules. Optimum decoupling with simultaneous monitoring and minimal power dissipation can be achieved with the QUINT ORING active redundancy module.

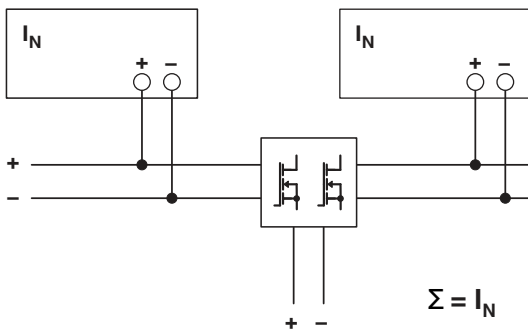


Figure 31 Schematic diagram, redundant operation with QUINT ORING

Certain specifications apply in redundancy operation with regard to the configuration of the keepout areas. In redundancy operation, the power supplies are operated with maximum half the nominal power. The keepout areas are therefore reduced.

The following conditions must be met for 1+1 and n+1 redundancy operation of the power supplies in conjunction with a QUINT ORING module.

Only use power supplies with the same performance class and configuration for parallel connection.

Using the signaling settings, you can monitor whether both power supplies are being operated with \leq half the nominal load. In the case of system extension, an overload is prevented if one of the power supplies fails.



When using a QUINT ORING module with ACB technology, the QUINT power supply does not have to be set to "parallel operation" for symmetrical load distribution.

14.2.2 Increased power

When n power supplies are connected in parallel, the output current is increased to $n \times I_N$. Parallel connection for increased power is used when extending existing systems. If the individual power supply does not cover the current consumption of the most powerful load, parallel connection of power supplies is recommended.



When three or more power supplies are connected in parallel, each output must be protected separately, e.g., by a circuit breaker, fuse or decoupling module such as QUINT ORING or QUINT DIODE.

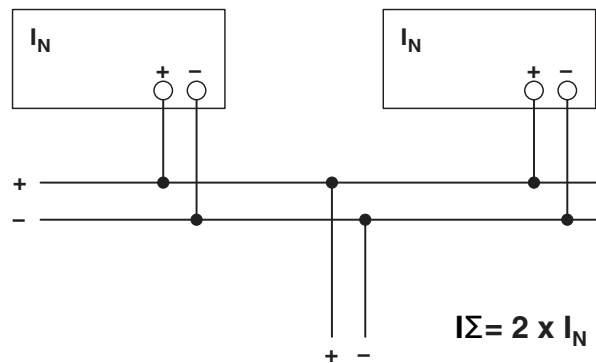


Figure 32 Schematic diagram of increased performance

15 Derating

The QUINT POWER power supply runs in nominal operation without any limitations. For operation outside the nominal range, the following points should be observed depending on the type of use.

15.1 Ambient temperature

When operating the power supply at an ambient temperature of $> 60^{\circ}\text{C}$, a power derating of $2.5\%/K$ should be observed. Up to an ambient temperature of 40°C , the power supply can take power from the static boost for a sustained period. In the 40°C to 60°C temperature range, the power supply can output more than the nominal power for a sustained period.

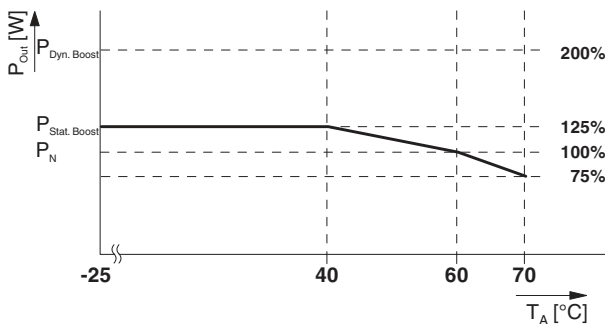


Figure 33 Output power depending on the ambient temperature

15.2 Input voltage

The power supply is designed for operation in a three-phase network. If one phase fails or drops in the event of a fault (e.g., due to starting a load on the affected phase as in the case of a cooling unit), sustained operation on two phases is possible. This type of scenario is already covered for QUINT POWER by virtue of its approval.



The maximum available output power in 2AC operation depends on the input voltage value.

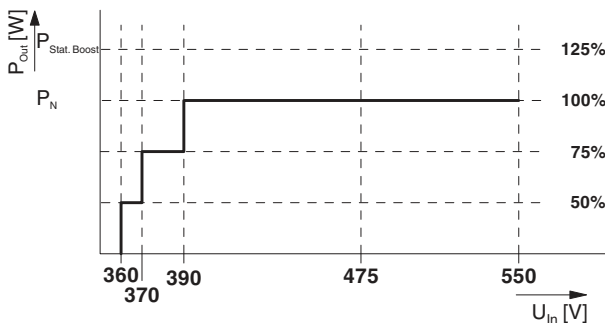


Figure 34 Output power in 2AC operation

15.3 Installation height

The power supply can be operated at an installation height of up to 2000 m without any limitations. Different data applies for installation locations above 2000 m due to the differing air pressure and the reduced convection cooling associated with this (see technical data section). The data provided is based on the results of pressure chamber testing performed by an accredited test laboratory.

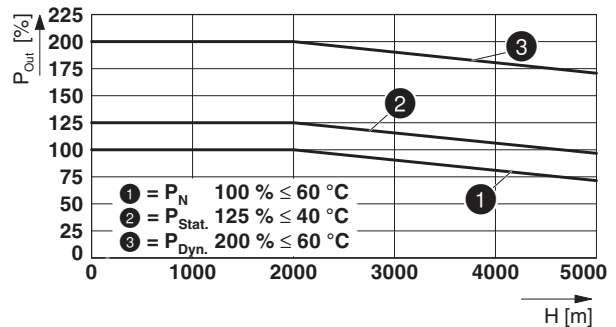


Figure 35 Output power depending on the installation height