 



**TOOL FOR REMOVING
BMA FLOATING PLUG**

R282.918.000

Series : **TOOLING**

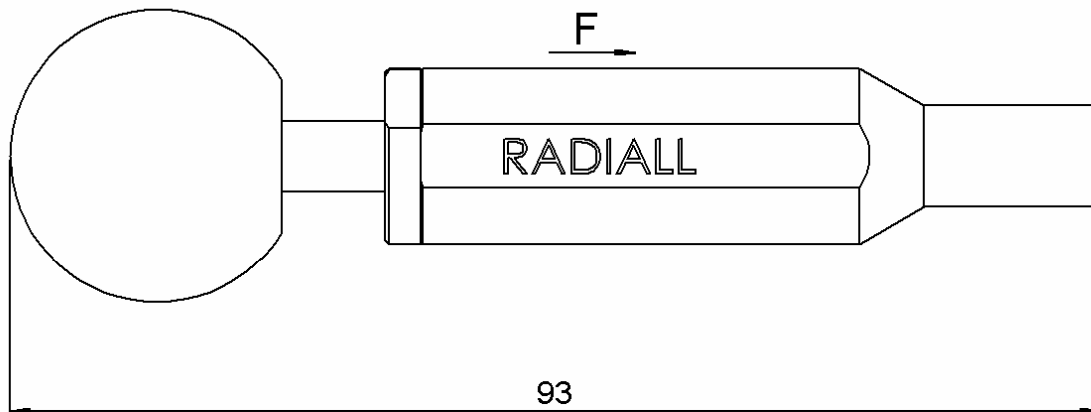

INSTRUCTION FOR USING :

1. Insert the tool into the connector
2. Make sure that the front side of the tool is flush inserted in the connector
3. Maintain with pressure in F direction the tool handle by the body and push by the ball side into the panel
4. The connector is disengage

Issue : 1135 B

In the effort to improve our products, we reserve the right to make changes judged to be necessary.



RADIALL®