FA-1008VB-S SHOCK ABSORBER - ADJUSTABLE

Bansbach easylift



SPECIFICATIONS										
Model		Stroke mm	Max Energy Absorption J(kgf⋅m)	Max Equiv. Mass kg(kgf)		Range of Impact Rate m/s		Orifice Type		
FA-1008VB-S		8	1.47(0.15)	1	10(10) 0.3~1		L	Single- orifice type		
COMMON SPECIFICATIONS										
Max Drag N(kgf)		Max Cycle Max Energy Rate Absorption per min. cycle/min J/min(kgf·m/min)		Extension Force N(kgf)		Operating Temp. C°		Mass g		
637(65)	7(65) 60 58.8(6)			5.88(0.6) or lower		~70	26.5			

PRECAUTIONS FOR USE

- Do not use this product without carefully reading the attached owner's manual.
- Ensure that an external stopper (Stopper nut OP-020PB) is also used.
- Do not turn the oil inlet screw located at the bottom of the main unit.
- Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- Do not use this product in a vacuum or a location where it may come in contact with oil.
- Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: within ±2.5°)

ADJUSTMENT METHOD

- To adjust, turn the adjustment knob.
- Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- It does not have a lock screw for locking the adjusted setting.


ABSORPTION CHARACTERISTICS

 
Orifice type	Single-orifice type	Absorption characteristics			
Model number	FA-1008VB Series	Resistance			
Application	For low speed	Stroke			

 
OPTIONAL PARTS

Eccentric angle adaptor OP-010PB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until it is secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is ±10°.
- The maximum inclination angle using an inclination angle adaptor is ± 10°
- The caps and the guides for inclined use are not unbundled.

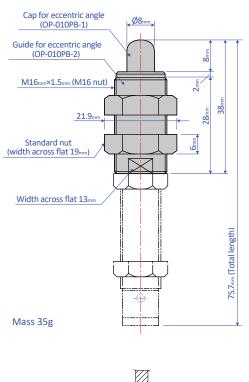







Stopper nut OP-020PB


 Adjust so that it stops 1 mm before the stroke end, and fasten with the main unit's nut until secured.

 
OP-020PB-S (without cap)



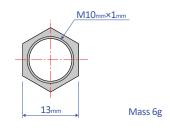

OP-020PB-C (with cap)

 

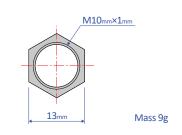



Note: When attaching, make sure that the side without a bearing chamfer is the impact surface.

Standard nuts are sold separately as well - M10 Nut

Square flange OP-040PB

  Once the attachment site is determined, use the main unit's nut to securely fasten in place.

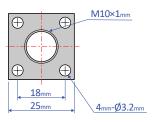



Mass 16g