



Optional super bright LEDs

||EXMATE

UM-35-ACV 199.9V AC to 600V AC Meter

A cost-effective utility meter for AC voltage measurement with safe resistively isolated differential inputs.

Specifications

Input Configuration:	. Differential auto zeroing Volts true RMS AC Volts to DC converter. Inputs are resistively isolated to 1400V from internal ground of meter by $1.94M\Omega$, so that phase to phase measurements up to 600V AC can be safely made.		
Full Scale Ranges:	. Two header selectable ranges of 199.9V AC and 600V AC full scale		
Input Impedance:	4MΩ minimum.		
A/D Converter:	12 Bit Dual Slope		
Accuracy:	±(0.05% of reading + 2 counts)		
Temperature Coefficient: 100 ppm/°C (Typical)			
Warm Up Time:	2 minutes to specified accuracy		
Conversion Rate:	3 conversions per second (Typical)		
Display:	3 1/2 digit 0.56" Red LED display (std), Green or Super Bright Red are optional. Range 0 to 1999 counts.		
Decimal Selection:	Header under face plate, X•X•X•X•		
Over-range Indication:	1 (MSD) displayed all other digits blank		
Power Supply (PS6 std):.Auto-sensing 85-305VAC or 120-430VDC, 50/60Hz App. 1W			
(PS7 opt.)	.Isolated (1.5kV) auto-sensing 9-36 VDC 1W		
	Isolated (1.5kV) auto-sensing 36-75 VDC 1W		
(PS8 opt.)	.5VDC/200mA		
Operating Temperature:	Operating Temperature:10 to 50 °C		
Storage Temperature:	–20 to 70 °C.		
Relative Humidity:	Relative Humidity:		
Case Dimensions:	.Bezel 3.78"Wx1.89"H (96mm x 48mm) Depth behind bezel 3.36" (83.5mm) Plus 0.5 to .9" (12.7 to 22.8mm) depending on connector used.		
Weight:	NW. 12oz (0.34kg)		

15.6oz (0.44kg). when packed.

UM-Series utility meters for switchboard and pr

UM-35-ACA AC amps, True RMS, (1 or 5 Amp internal shunt), 3.5 digit. UM-35-ACV AC volts, True RMS. 199.9V AC/700V AC header selectable ranges, 3.5 digit. UM-35-DCADC mV ±20mV/±50mV/±100mV/±200mV header selectable ranges, 3.5 digit UM-35-DCVDC Volts ±2V/±20V/±200V DC header selectable ranges, 3.5 digit. UM-40-ACA AC amps, True RMS, (1 or 5 Amp internal shunt), 4.0 digit. UM-40-ACV AC volts, True RMS. 199.9V AC/700V AC header selectable ranges, 4.0 digit. UM-45-DCADC mV ±20mV/±50mV/±100mV/±200mV header selectable ranges, 4.5 digit UM-45-DCV DC Volts ±2V/±20V/±200V DC Header selectable ranges, 4.5 digit.

rocess indi	cation
UM-35-CL Pro	cess 4 to 20mA (100.0), easily user scalable in engineering units from
-19	199 to +1999. 3.5 digit
UM-35-HZ 15H	z to 199.9Hz or optional 40Hz to 400Hz up to 500V AC, 3.5 digit.
	ssure, strain gage and load cell, 4 and 6 wire, 5V DC excitation, ader Selectable Sensitivity 2mV/V, 5mV/V, 10mV/V, 20mV/V , 3.5 digit
UM-35-JF J th	ermocouple input, 1° resolution, order °C or °F, 3.5 digit
UM-35-KFK th	ermocouple input, 1° resolution, order °C or °F, 3.5 digit
UM-35-RTD 100	Ω platinum RTD, 3 or 4 wire, order °C or °F and 0.1° or 1°, 3.5 digit
	cess 4 to 20mA (100.0), easily user scalable in engineering units from 1999 to +19999. 4.5 digit


The UM-35-ACV is a cost-effective, utility, AC voltage measuring

General Features

meter with two header selectable ranges of 199.9V AC and 600V AC. The unique resistively isolated differential input of this meter allows safe measurement of phase to phase voltages, making it a effective solution to most AC voltage measuring applications.

3 1/2 DIGIT with 0.56" LEDs in a NEMA type 1 Style Case

Typical Application Connections

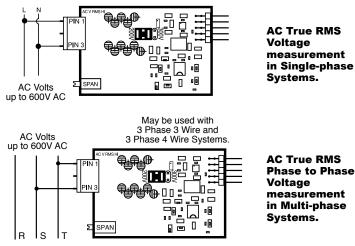

The unique differential input allows safe phase to phase AC true RMS line voltage measurements up to 600V AC.

 
Calibration Procedure

- Select the required full scale voltage range by re-positioning the jumper clip on the Range Select Header. A range of 199.9V AC or 600V AC full scale may be selected.
- 2. Apply an input of 0 Volt AC to the meter by shorting the inputs. The meter will auto zero and display zero.
- 3. Apply a known high input signal that is within the full scale voltage range selected.
- 4. Adjust the Span Pot until the meter displays the required reading for the signal being applied.
- 5. The UM-35-ACV is now calibrated and ready for use.

(Whenever a new range is selected, re-calibration is required to meet the specified accuracy).

Decimal Point Selection

Decimal selection is made by moving the jumper to the indicated position on the header for the decimal required on the front of the display board.







To open meter, insert a flat head screwdriver or similar instrument in both slots on the side of the cover and pry open. The UM-Series meters slide out from the front of the case as a complete assembly.

Signal Conditioning Components



INPUT RANGE Header


Range values are marked on the PCB. Two positions are provided. After selecting a new range with the single jumper clip, re-calibration is required.



SPAN Potentiometer (Pot)


The 15 turn SPAN pot is always on the right side (as viewed from the front of the meter). Typical adjustment is 20% of the input signal range.

Optional Face Plate Descriptors

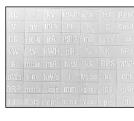


To customize the face plate, clear adhesive label containing various popular descriptors may be ordered. Choose the descriptor desired, peel off the adhesive backing and align the descriptor in the center right of the faceplate. P.N.: DU-CASEDES


Component Layout

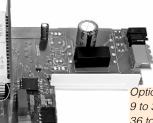

Optional Isolated Auto-Sensing 9 to 36VDC (P.N.: PS7) 36 to 75VDC (P.N.: PS11)

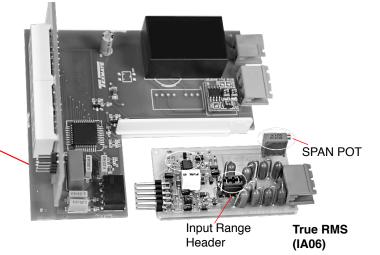


Connector Pinouts

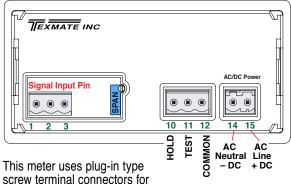

screw terminal connectors for all connections.


Connectors

 This meter uses plug-in type screw terminal connectors for all input and output connections. The power supply connections (pins 14 and 15) have a unique plug and socket outline to prevent cross connection. The main board uses standard right-angled connectors.





WARINING. AC and DC input signals and power supply voltages can be hazardous. Do Not connect live wires to screw terminal plugs, and do not insert, remove or handle screw terminal plugs with live wires connected.

 UM Case Dimensions and Panel Cutouts



FRONT VIEW

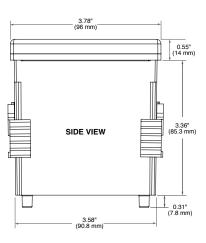

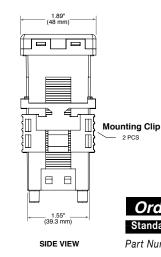

3.58" (91mm)

Panel Cutout

REAR VIEW ...

Clear Lockable Water-proof Cover

The clear lockable cover is designed to be dust and waterproof to NEMA-4X, IP65 standards. The assembly consists of a base and a cover with a cam hinge and key-lock fastening mechanism. An O-ring, or neoprene gasket forms a seal between the base and the panel. The cam hinge prevents the cover from closing when opened until pushed closed. The cover has a tapered recess that, when closed, forms a seal with a tapered spigot on the base. A key-lock employs a cam locking device to force the spigot into the recess, ensuring seal integrity. A safety catch keeps the cover closed even when the key is removed, and the keyhole can be used to attach a safety seal clip,



Measurement MADE IN THE Control Since 1976 lexmate Automation

1934 Kellogg Ave., Carlsbad, CA 92008 Tel: 1-760-598-9899 • 1-800-TEXMATE • Email: orders@texmate.com

Warranty and User's Responsibility

WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or acci-dent. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/ application engineering staff. However, since we have no control over the use of our products once they are shipped, NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the product for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.

Ordering Information

Standard O	ptions for this	s Model Number

Part Number

1.64" (41.6mm)

► BASIC MODEL NUMBER tandard display and standard power supply unless optional versions are ordered.

Description

UM-35-ACV..... AC Volts, True RMS.199.9/600V AC IA06

DISPLAY

DR		
UM-BRIGHTSuper bright Red LEDs, 0.56 inch high		
UM-GREENGreen LEDs, 0.56 inch high		

► POWER SUPPLY

PS6 (Std.)..........85-305VAC or 120-430VDC, 50/60Hz, Approx.1W....

PS7	Isolated (1.5kV)	9-36VDC Approx.1W
DC11	loolotod (1 El/)	DC ZEVIDO Approv 114

FOII	ISUIALEU (1.3KV)	30-75VDC Approx. IW
PS8	5 VDC /200mA	

Special Options and Accessories

Part Number Description

SPECIAL OPTIONS (Specify Inputs & Req. Reading)

......Input Range Change to another Standard Range 7R ZRS-SMUM......Non-standard range change and/or Scale change

►ACCESSORIES

OP-N4X/96X48.96x48mm clear lockable front cover NEMA 4X, splash proof CASE.RPUM...Case: Replacement with Accessories ART-NRC-DEC.NRC for Artwork & set-up Custom Faceplate and/or Descriptor ART-FS1Produce & Install Custom Faceplate per meter - 1 color no-min ART-FS2Produce & Install Custom Faceplate per meter - 2 color no-min ART-FS3Produce & Install Custom Faceplate per meter - 3 color no-min 75-DESCRIPTR.Clear adhesive descriptors label for face plate

Custom Face Plates

Texmate Produces Thousands of Custom OEM Face Plates. Have Texmate Design and produce a Custom Face Plate for your next project!

· Custom face plates have a non-recurring artwork charge. A serial number is then assigned to each artwork to facilitate reordering.

UM-35-ACV Technical Manual Copyright © 2022 Texmate Inc. All rights reserved. Published by: Texmate Inc. USA. Information in this Technical Manual is subject to change without notice due to correction or enhancement. The information described in this manual is proprietary to Texmate, Inc. and may not be copied, reproduced or transmitted, in whole or in part, in connection with the design, manufacture, or sale of apparatus, device or private label product without the express written consent of Texmate, Inc.