

Table of Contents-

1.	GEN	ERAL	DES	CRIPTION	4
2.	FEA	TURE	S		4
3.	ORD	ER IN	IFOR	MATION	4
4.	BALL		IFIGU	IRATION	5
	4.1		Ball A	Assignment: LPSDR x16	5
	4.2		Ball A	Assignment: LPSDR x32	6
5.	BALL	DES	CRIP	TION	7
	5.1		Signa	al Description	7
	5.2		•	essing Table	
6.	BLO			۲	
7.				ESCRIPTION	
	7.1		Com	mand Function	10
		7.1.1		Table 1. Truth Table (Note (1) and (2))	
		7.1.2		Functional Truth Table (See Note 1)	
		7.1.3		Functional Truth Table for CKE	
		7.1.4		Bank Activate Command	.15
		7.1.5		Bank Precharge Command	.15
		7.1.6		Precharge All Command	.15
		7.1.7		Write Command	.15
		7.1.8		Write with Auto Precharge Command	.15
		7.1.9		Read Command	.15
		7.1.10)	Read with Auto Precharge Command	.15
		7.1.11		Extended Mode Register Set Command	.16
		7.1.12		Mode Register Set Command	.16
		7.1.13	}	No-Operation Command	.16
		7.1.14	Ļ	Burst Stop Command	.16
		7.1.15	5	Device Deselect Command	.16
		7.1.16		Auto Refresh Command	
		7.1.17		Self Refresh Entry Command	
		7.1.18		Self Refresh Exit Command	
		7.1.19		Clock Suspend Mode Entry/Power Down Mode Entry Command	
		7.1.20		Clock Suspend Mode Exit/Power Down Mode Exit Command	
		7.1.21		Data Write/Output Enable, Data Mask/Output Disable Command	
8.		RATIC			
	8.1		Read	I Operation	17
	8.2		Write	Operation	18
	8.3			narge	
		8.3.1		Auto Precharge	
		8.3.2		READ with auto precharge interrupted by a READ (with or without auto precharge)	
		8.3.3		READ with auto precharge interrupted by a WRITE (with or without auto precharge)	.19

	windond	
8.3	4 WRITE with auto precharge interrupted by a READ (with or without auto precharge)20
8.3	5 WRITE with auto precharge interrupted by a WRITE (with or without auto precharge	e)20
8.4	Burst Termination	21
8.5	Mode Register Operation	
8.5		
	5 1	
	-	
-		
•••	-	
		-
	•	
	5 1 ()	
11.10	Auto-precharge Write (Burst Length = 4)	49
	8.3. 8.4 8.5 8.5. 8.5. 8.5. 8.5. 8.5. 8.5. 8.6 8.7 ELECTF 9.1 9.2 9.3 9.4 9.5 9.6 9.6. 9.6. 9.6. 0.6. 0.6. 10.1 10.2 10.3 10.4 10.5 10.6 10.7 10.8	8.3.4 WRITE with auto precharge interrupted by a READ (with or without auto precharge 8.3.5 WRITE with auto precharge interrupted by a WRITE (with or without auto precharge 8.4 Burst Termination 8.5 Mode Register Operation 8.5.1 Burst Length field (A2-A0) 8.5.2 Addressing Sequence for Sequential Mode 8.5.3 Addressing Sequence for Interleave Mode 8.5.4 Addressing Sequence Example (Burst Length = 8 and Input Address is 13) 8.5.5 Addressing Sequence Example (Burst Length = 8 and Input Address is 13) 8.5.6 Read Cycle CAS Latency = 3 8.5.7 CAS Latency field (A6-A4) 8.5.8 Mode Register Description 8.7 Simplified State Diagram ELECTRICAL CHARACTERISTICS 9.1 9.1 Absolute Maximum Ratings 9.2 Operating Conditions 9.3 Capacitance 9.4 DC Characteristics 9.5 Automatic Temperature Compensated Self Refresh Current Feature 9.6 AC Test Condition 9.6.1 AC Characteristics 9.6.2 AC Test Condition 9.6.3 AC Latency Characteristics

Publication Release Date: Dec. 01, 2016 Revision: A01-002

	11	winbond	
	11.12	Self Refresh Cycle	51
	11.13	Burst Read and Single Write (Burst Length = 4, CAS Latency = 3)	52
	11.14	Power Down Mode	53
	11.15	Deep Power Down Mode Entry	54
	11.16	Deep Power Down Mode Exit	55
	11.17	Auto-precharge Timing (Read Cycle)	56
	11.18	Auto-precharge Timing (Write Cycle)	57
	11.19	Timing Chart of Read to Write Cycle	58
	11.20	Timing Chart of Write to Read Cycle	58
	11.21	Timing Chart of Burst Stop Cycle (Burst Stop Command)	59
	11.22	Timing Chart of Burst Stop Cycle (Precharge Command)	59
	11.23	CKE/DQM Input Timing (Write Cycle)	60
	11.24	CKE/DQM Input Timing (Read Cycle)	61
12.	PACI	KAGE SPECIFICATION	62
	12.1	LPSDR x16	62
	12.2	LPSDR x32	63
13.	REVI	SION HISTORY	64

FEESE Winbond

1. GENERAL DESCRIPTION

The Winbond 512Mb Low Power SDRAM is a low power synchronous memory containing 536,870,912 memory cells fabricated with Winbond high performance process technology.

It is designed to consume less power than the ordinary SDRAM with low power features essential for applications which use batteries. It is available in two organizations: 4,194,304 words × 4 banks × 32 bits or 8,388,608 words × 4 banks × 16 bits. The device operates in a fully synchronous mode, and the output data are synchronized to positive edges of the system clock and is capable of delivering data at clock rate up to 166MHz. The device supports special low power functions such as Partial Array Self Refresh (PASR) and Automatic Temperature Compensated Self Refresh (ATCSR).

The Low Power SDRAM is suitable for 2.5G / 3G cellular phone, PDA, digital still camera, mobile game consoles and other handheld applications where large memory density and low power consumption are required. The device operates from 1.8V power supply, and supports the 1.8V LVCMOS bus interface.

2. FEATURES

- Power supply VDD = 1.7V~1.95V
- VDDQ = 1.7V~1.95V
- Frequency: 166MHz(-6)
- Standard Self Refresh Mode
- Programmable Partial Array Self Refresh
- Power Down Mode
- Deep Power Down Mode (DPD)
- Programmable output buffer driver strength
- Automatic Temperature Compensated Self Refresh

- CAS Latency: 2 and 3
- Burst Length: 1, 2, 4, 8, and full page
- Refresh: 8K refresh cycle / 64mS
- Interface: LVCMOS
- Support package: 54 balls VFBGA (x16) 90 balls VFBGA (x32)
- Operating Temperature Range: Extended (-25°C ~ +85°C) Industrial (-40°C ~ +85°C)

3. ORDER INFORMATION

Part Number	VDD/VDDQ	I/O Width	Package	Others
W989D6DBGX6I	1.8V/1.8V	16	54 balls VFBGA	166MHz, -40°C~85°C
W989D6DBGX6E	1.8V/1.8V	16	54 balls VFBGA	166MHz, -25°C~85°C
W989D2DBJX6I	1.8V/1.8V	32	90 balls VFBGA	166MHz, -40°C~85°C
W989D2DBJX6E	1.8V/1.8V	32	90 balls VFBGA	166MHz, -25°C~85°C

4. BALL CONFIGURATION

4.1 Ball Assignment: LPSDR x16

				Тор	o View	/			
	1	2	3	4	5	6	7	8	9
A	⊖ Vss	O DQ15	O Vssq					O DQ0	
в	\bigcirc	\bigcirc	\bigcirc				\bigcirc	\bigcirc	\bigcirc
С	DQ14	DQ13					VSSQ	DQ2	DQ1
D	DQ12	DQ11	Vssq					DQ4	DQ3
E	DQ10	DQ9					Vssq	DQ6	DQ5
		NC	Vss						DQ7
F		CLK	() CKE)/CAS	() /RAS	() /WE
G	\bigcirc	\bigcirc	\bigcirc				O BA0	O BA1)/CS
н	A12	A11	A9				\bigcirc	\bigcirc	\bigcirc
J	A8	A7	A6				A0	A1	A10
	Vss	A5	A4				A3	A2	VDD

4.2 Ball Assignment: LPSDR x32

				Тс	op Vie	ew			
	1	2	3	4	5	6	7	8	9
A	DQ26	O DQ24						O DQ23	
В	\bigcirc	\bigcirc	Vss				\bigcirc	\bigcirc	
С	DQ28	VDDQ	VSSQ					Vssq	DQ19
D	VSSQ	DQ27	DQ25				DQ22	DQ20	
E	Vssq	DQ29	DQ30				DQ17	DQ18	VDDQ
	VDDQ	DQ31					NC	DQ16	Vssq
F	VSS	DQM3	O A3				() A2	DQM2	VDD
G	O A4	О А5	О Аб				 A10	O A0	O A1
н	⊖ A7	0 A8	() A12					O BA1	() A11
J	\bigcirc	\bigcirc	\bigcirc				BA0	\bigcirc	\bigcirc
к	CĽK		Ă9				\bigcirc	/ČS	/RAS
L		NC	NC				/CAS	/WE	
м		DQ8	Vss				VDD	DQ7	VSSQ
	VSSQ	DQ10	DQ9				DQ6	DQ5	VDDQ
N	Vssq	DQ12	~						
P	DQ11		() Vssq					Ussq	() DQ4
R	DQ13	O DQ15	O VSS						O DQ2

5. BALL DESCRIPTION

5.1 Signal Description

Ball Name	Function	Description
A [n:0]	Address	Multiplexed pins for row and column address. A10 is Auto Precharge Select
BA0, BA1	Bank Select	Select bank to activate during row address latch time, or bank to read/write during address latch time.
DQ0~DQ15 (×16) DQ0~DQ31 (×32)	Data Input/ Output	Multiplexed pins for data output and input.
CS	Chip Select	Disable or enable the command decoder. When command decoder is disabled, new command is ignored and previous operation continues.
RAS	Row Address Strobe	Command input. When sampled at the rising edge of the clock, $\overline{\text{RAS}}$, $\overline{\text{CAS}}$ and $\overline{\text{WE}}$ define the operation to be executed.
CAS	Column Address Strobe	Referred to RAS
WE	Write Enable	Referred to WE
UDQM / LDQM(x16) DQM0~DQM3 (x32)	I/O Mask	The output buffer is placed at Hi-Z (with latency of 2 in CL=2, 3;) when DQM is sampled high in read cycle. In write cycle, sampling DQM high will block the write operation with zero latency
CLK	Clock Inputs	System clock used to sample inputs on the rising edge of clock.
CKE	Clock Enable	CKE controls the clock activation and deactivation. When CKE is low, Power Down mode, Suspend mode or Self Refresh mode is entered.
VDD	Power	Power supply for input buffers and logic circuit inside DRAM.
VSS	Ground	Ground for input buffers and logic circuit inside DRAM.
VDDQ	Power for I/O Buffer	Power supply separated from VDD, used for output buffers to improve noise.
VSSQ	Ground for I/O Buffer	Separated ground from VSS, used for output buffers to improve noise.
NC	No Connection	No connection




5.2 Addressing Table

	Item	512 Mb		
Num	per of banks	4		
Bank	address pins	BA0,BA1		
Auto p	precharge pin	A10/AP		
	Туре	Package		
×10	Row addresses	A0-A12		
x16	Column addresses	A0-A9		
x32	Row addresses	A0-A12		
X32	Column addresses	A0-A8		

1



6. BLOCK DIAGRAM

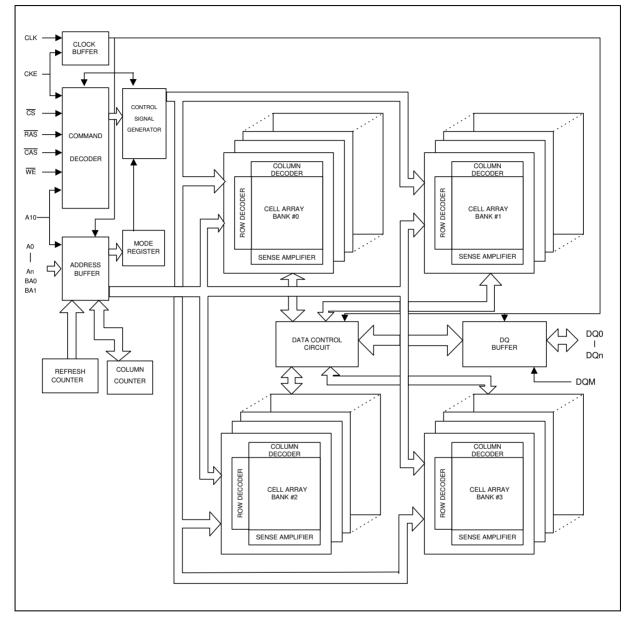

7. FUNCTIONAL DESCRIPTION

7.1 Command Function

7.1.1 Table 1. Truth Table (Note (1) and (2))

Symbol	Command	Device State	CKEn-1	CKEn	DQM ⁽⁵⁾	BA0, 1	A10	A0-An	cs	RAS	CAS	WE
ACT	Bank Activate	Idle ⁽³⁾	Н	Х	Х	V	V	V	L	L	Н	Н
PRE	Bank Precharge	Any	Н	Х	Х	V	L	Х	L	L	Н	L
PREA	Precharge All	Any	Н	Х	Х	Х	Н	х	L	L	Н	L
WRIT	Write	Active ⁽³⁾	Н	Х	Х	V	L	V	L	Н	L	L
WRITA	Write with Auto Precharge	Active ⁽³⁾	н	х	х	v	н	v	L	н	L	L
READ	Read	Active ⁽³⁾	Н	Х	Х	V	L	V	L	Н	L	Н
READA	Read with Auto Precharge	Active ⁽³⁾	Н	х	х	V	Н	V	L	н	L	Н
MRS	Mode Register Set	ldle	Н	Х	Х	V	V	۷	L	L	L	L
EMRS	Extended Mode Register Set	Idle	н	х	х	v	v	v	L	L	L	L
NOP	No-Operation	Any	Н	Х	Х	Х	Х	х	L	Н	Н	Н
BST	Burst stop	Active ⁽⁴⁾	Н	Х	Х	Х	Х	х	L	Н	Н	L
DSL	Device Deselect	Any	Н	Х	Х	Х	Х	х	Н	Х	Х	Х
AREF	Auto-Refresh	ldle	Н	Н	Х	Х	Х	Х	L	L	L	Н
SELF	Self-Refresh Entry	ldle	Н	L	Х	Х	х	х	L	L	L	Н
SELEX	Self-Refresh Exit	ldle (Self Refresh)	L	н	х	х	х	х	H	Х Н	Х Н	X H
CSE	Clock Suspend Mode Entry	Active	Н	L	х	х	х	х	х	х	х	х
PD	Power Down Mode Entry	Idle/Active ⁽⁶⁾	Н	L	х	х	х	х	H	X H	X H	X H
CSEX	Clock Suspend Mode Exit	Active	L	н	х	х	х	х	х	х	х	х
DDEV	Power Down Mode	Any			v	х	х	V	Н	Х	Х	Х
PDEX	Exit	(Power Down)	L	Н	Х	^	^	Х	L	Н	Н	Х
DE	Data Write/Output Enable	Active	н	х	L	х	х	х	х	х	х	х
DD	Data Write/Output Disable	Active	Н	х	н	х	х	х	х	х	х	х
DPD	Deep Power Down Mode Entry	ldle	н	L	х	х	х	х	L	н	н	L
DPDE	Deep Power Down Mode Exit	Idle (DPD)	L	Н	х	х	х	Х	х	х	х	х

Notes:

(1) v = valid, x = Don't care, L = Low Level, H = High Level

(2) CKEn signal is input level when commands are provided.

CKEn-1 signal is the input level one clock cycle before the command is issued.

(3) These are state of bank designated by BA0, BA1 signals.

- (4) Device state is full page burst operation.
- (5) x32: DQM0-3, x16 : LDQM / UDQM

(6) Power Down Mode can not be entered in the burst cycle.

When this command asserts in the burst cycle, device state is clock suspend mode.

7.1.2 Functional Truth Table (See Note 1)

Current State	CS	RAS	CAS	WE	Address	Command	Action	Notes
	Н	Х	Х	Х	Х	DSL	Nop	
	L	Н	Н	Х	Х	NOP/BST	Nop	
	L	Н	L	Н	BA, CA, A10	READ/READA	ILLEGAL	3
Idle	L	Н	L	L	BA, CA, A10	WRIT/WRITA	ILLEGAL	3
laie	L	L	Н	Н	BA, RA	ACT	Row activating	
	L	L	Н	L	BA, A10	PRE/PREA	Nop	
	L	L	L	Н	Х	AREF/SELF	Refresh or Self refresh	2
	L	L	L	L	Op-Code	MRS/EMRS	Mode register accessing	2
	Н	Х	Х	Х	Х	DSL	Nop	
	L	Н	Н	Х	Х	NOP/BST	Nop	
	L	Н	L	Н	BA, CA, A10	READ/READA	Begin read: Determine AP	4
Deve estive	L	Н	L	L	BA, CA, A10	WRIT/WRITA	Begin write: Determine AP	4
Row active	L	L	Н	Н	BA, RA	ACT	ILLEGAL	3
	L	L	Н	L	BA, A10	PRE/PREA	Precharge	5
	L	L	L	Н	Х	AREF/SELF	ILLEGAL	
	L	L	L	L	Op-Code	MRS/EMRS	ILLEGAL	
	Н	Х	Х	Х	Х	DSL	Continue burst to end	
-	L	Н	Н	Н	Х	NOP	Continue burst to end	
	L	Н	Н	L	Х	BST	Burst stop	
	L	н	L	Н	BA, CA, A10	READ/READA	Term burst, new read: Determine AP	6
Read	L	н	L	L	BA, CA, A10	WRIT/WRITA	Term burst, begin write: Determine AP	6, 7
	L	L	Н	Н	BA, RA	ACT	ILLEGAL	3
	L	L	Н	L	BA, A10	PRE/PREA	Term burst, precharging	
	L	L	L	Н	Х	AREF/SELF	ILLEGAL	
	L	L	L	L	Op-Code	MRS/EMRS	ILLEGAL	
	Н	Х	Х	Х	Х	DSL	Continue burst to end.	
	L	Н	Н	Н	Х	NOP	Continue burst to end	
	L	Н	Н	L	Х	BST	Burst stop, row active	
	L	н	L	н	BA, CA, A10	READ/READA	Term burst, start read: Determine AP	6, 7
Write	L	н	L	L	BA, CA, A10	WRIT/WRITA	Term burst, new write: Determine AP	6
	L	L	Н	Н	BA, RA	ACT	ILLEGAL	3
	L	L	Н	L	BA, A10	PRE/PREA	Term burst. precharging	8
	L	L	L	Н	Х	AREF/SELF	ILLEGAL	
	L	L	L	L	Op-Code	MRS/EMRS	ILLEGAL	

					inb	ОП		
Current State	cs	RAS	CAS	WE	Address	Command	Action	Notes
	Н	Х	Х	Х	Х	DSL	Continue burst to end	
	L	Н	Н	Н	Х	NOP	Continue burst to end	
	L	Н	Н	L	Х	BST	ILLEGAL	
Read with	L	Н	L	Н	BA, CA, A10	READ/READA	ILLEGAL	3
auto	L	Н	L	L	BA, CA, A10	WRIT/WRITA	ILLEGAL	3
precnarge	L	L	Н	Н	BA, RA	ACT	ILLEGAL	3
	L	L	Н	L	BA, A10	PRE/PREA	ILLEGAL	3
	L	L	L	Н	Х	AREF/SELF	ILLEGAL	
Precharging I L Precharge I L L L L L L L L L L L L L L	L	L	L	L	Op-Code	MRS/EMRS	ILLEGAL	
	Н	Х	Х	Х	Х	DSL	Continue burst to end	
	L	Н	Н	н	Х	NOP	Continue burst to end	
	L	Н	Н	L	Х	BST	ILLEGAL	
Write with	L	Н	L	Н	BA, CA, A10	READ/READA	ILLEGAL	3
auto	L	Н	L	L	BA, CA, A10	WRIT/WRITA	ILLEGAL	3
precharge	L	L	Н	Н	BA, RA	ACT	ILLEGAL	3
precharge	L	L	Н	L	BA, A10	PRE/PREA	ILLEGAL	3
	L	L	L	Н	Х	AREF/SELF	ILLEGAL	
	ge L L H L L H L L L L L L L L L L L L L L	L	L	Op-Code	MRS/EMRS	ILLEGAL		
	Н	Х	Х	Х	Х	DSL	$\text{Nop} \rightarrow \text{Idle after } t_{RP}$	
	L	Н	Н	Н	Х	NOP	Nop \rightarrow Idle after tRP	
	L	Н	Н	L	Х	BST	ILLEGAL	
	L	Н	L	Н	BA, CA, A10	READ/READA	ILLEGAL	3
Precharging	L	Н	L	L	BA, CA, A10	WRIT/WRITA	ILLEGAL	3
	L	L	Н	Н	BA, RA	ACT	ILLEGAL	3
	L	L	Н	L	BA, A10	PRE/PREA	$\text{Nop} \rightarrow \text{Idle after } t_{RP}$	
	L	L	L	Н	Х	AREF/SELF	ILLEGAL	
	L	L	L	L	Op-Code	MRS/EMRS	ILLEGAL	
	Н	Х	Х	Х	Х	DSL	Nop \rightarrow Row active after t _{RCD}	
	L	н	Н	Н	х	NOP	Nop \rightarrow Row active after t _{RCD}	
	L	Н	Н	L	Х	BST	ILLEGAL	
	L	Н	L	Н	BA, CA, A10	READ/READA	ILLEGAL	3
Row activating	L	Н	L	L	BA, CA, A10	WRIT/WRITA	ILLEGAL	3
astrating	L	L	Н	Н	BA, RA	ACT	ILLEGAL	3
	L	L	Н	L	BA, A10	PRE/PREA	ILLEGAL	3
	L	L	L	Н	Х	AREF/SELF	ILLEGAL	
	L	L	L	L	Op-Code	MRS/EMRS	ILLEGAL	

Current State	cs	RAS	CAS	WE	Address	Command	Action	Notes
	Н	Х	Х	Х	Х	DSL	Nop \rightarrow Maintain Row active after twR	
	L	Н	Н	Н	Х	NOP	Nop \rightarrow Maintain Row active after twR	
	L	Н	Н	L	Х	BST	Nop \rightarrow Maintain Row active after twR	
	L	Н	L	Н	BA, CA, A10	READ/READA	Begin Read	7
Write recovering	L	Н	L	L	BA, CA, A10	WRIT/WRITA	Begin new Write	
0	L	L	Н	Н	BA, RA	ACT	ILLEGAL	3
	L	L	Н	L	BA, A10	PRE/PREA	ILLEGAL	3
	L	L	L	Н	Х	AREF/SELF	ILLEGAL	
	L	L	L	L	Op-Code	MRS/EMRS	ILLEGAL	
	Н	Х	Х	Х	Х	DSL	Nop \rightarrow Enter precharge after twR	
	L	Н	Н	Н	Х	NOP	Nop \rightarrow Enter precharge after twR	
Write recovering with auto	L	Н	Н	L	Х	BST	Nop \rightarrow Enter precharge after twR	
	L	Н	L	Н	BA, CA, A10	READ/READA	ILLEGAL	3
	L	Н	L	L	BA, CA, A10	WRIT/WRITA	ILLEGAL	3
precharge	L	L	Н	Н	BA, RA	ACT	ILLEGAL	3
	L	L	Н	L	BA, A10	PRE/PREA	ILLEGAL	3
	L	L	L	Н	Х	AREF/SELF	ILLEGAL	
	L	L	L	L	Op-Code	MRS/EMRS	ILLEGAL	
	Н	Х	Х	Х	Х	DSL	Nop \rightarrow Idle after t _{RFC}	
	L	Н	Н	Н	Х	NOP	Nop \rightarrow Idle after tRFC	
	L	Н	Н	L	Х	BST	Nop \rightarrow Idle after t _{RFC}	
Refreshing	L	Н	L	Х	Х	READ/WRIT	ILLEGAL	
	L	L	Н	Х	Х	ACT/PRE/PREA	ILLEGAL	
	L	L	L	х	х	AREF/SELF/ MRS/EMRS	ILLEGAL	
	Н	Х	Х	Х	Х	DSL	Nop \rightarrow Idle after t _{MRD}	
	L	н	н	Н	Х	NOP	Nop \rightarrow Idle after t _{MRD}	
Mode	L	Н	Н	L	Х	BST	ILLEGAL	
register accessing	L	Н	L	Х	Х	READ/WRIT	ILLEGAL	
·····g	L	L	х	х	х	ACT/PRE/PREA/ AREF/SELF/ MRS/ EMRS	ILLEGAL	

.

Notes:

1. All entries assume that CKE was active (High level) during the preceding clock cycle and the current clock cycle. (CKEn-1 = CKEn = "1")

3. Illegal to bank in specified states; Function may be legal in the bank indicated by Bank Address (BA), depending on the state of that bank.

- 4. Illegal if tRCD is not satisfied.
- 5. Illegal if tRAS is not satisfied.
- 6. Must satisfy burst interrupt condition.
- 7. Must avoid bus contention, bus turn around, and/or satisfy write recovery requirements.
- 8. Must mask preceding data which don't satisfy twr.

Remark: H = High level, L = Low level, X = High or Low level (Don't care), V = Valid data

^{2.} Illegal if any bank is not idle.



7.1.3 Functional Truth Table for CKE

Current	Cł	(E	cs	RAS	CAS		Address	Action	Notes
State	n-1	n	CS.	RAS	CAS	WΕ	Address	Action	Notes
	Н	Х	Х	Х	Х	Х	Х	N/A	
	L	Н	Н	Х	Х	Х	Х	Exit Self Refresh \rightarrow Idle after tRFC	
Self refresh	L	Н	L	Н	Н	Н	Х	Exit Self Refresh \rightarrow Idle after tRFC	
Sell refresh	L	Н	L	Н	L	Х	Х	ILLEGAL	
	L	Н	L	L	Х	Х	Х	ILLEGAL	
	L	L	Х	Х	Х	Х	Х	Maintain Self Refresh	
	Н	Х	Х	Х	Х	Х	Х	N/A	
Power-Down	L	н	Н	Х	Х	Х	Х	Exit Power Down \rightarrow Idle after 1 clock cycle	
Fower-Down	L		L	Н	Н	Н	Х		
	L	L	Х	Х	Х	Х	Х	Maintain Power-Down	
	Н	Х	Х	Х	Х	Х	Х	N/A	
Deep Power- Down	L	Н	Х	Х	Х	Х	Х	Exit Deep Power-Down \rightarrow Exit Sequence	
	L	L	Х	Х	Х	Х	Х	Maintain Deep Power-Down	
	Н	Н	Х	Х	Х	Х	Х	Refer to Function Truth Table	
	Н	L	Н	Х	Х	Х	Х	Enter Power-down	2
	Н	L	L	Н	Н	Н	Х	Enter Power-Down	2
All banks idle	Н	L	L	Н	Н	L	Х	Enter Deep Power-Down	3
All Darks lule	Н	L	L	L	L	Н	Х	Self Refresh	1
	Н	L	L	Н	L	Х	Х	ILLEGAL	
	Н	L	L	L	Х	Х	Х	ILLEGAL	
	L	Х	Х	Х	Х	Х	Х	Power-Down	2
	Н	Н	Х	Х	Х	Х	Х	Refer to Function Truth Table	
	Н	L	Н	Х	Х	Х	Х	Enter Power down	2
	Н	L	L	Н	Н	Н	Х	Enter Power down	2
Row Active	Н	L	L	L	L	Н	Х	ILLEGAL	
	Н	L	L	Н	L	Х	Х	ILLEGAL	
	Н	L	L	L	Х	Х	Х	ILLEGAL	
	L	Х	Х	Х	Х	Х	Х	$Power\text{-}Down\toRowActiveorMaintainPD$	
Any state other than listed above	Н	Н	х	х	х	х	х	Refer to Function Truth Table	

Notes:

1. Self refresh can enter only from the all banks idle state.

2. Power-down can enter only from the all banks idle or row active state.

Deep power-down can enter only from the all banks idle state.
Remark: H = High level, L = Low level, X = High or Low level (Don't care), V = Valid data



7.1.4 Bank Activate Command

 $(\overline{RAS} = L, \overline{CAS} = H, \overline{WE} = H, BA0, BA1 = Bank, A0~An = Row Address)$

The Bank Activate command activates the bank designated by the BA (Bank Select) signal.

Row addresses are latched on A0~An when this command is issued and the cell data is read out to the sense amplifiers. The maximum time that each bank can be held in the active state is specified as tRAS (max).

7.1.5 Bank Precharge Command

 $(\overline{RAS} = L, \overline{CAS} = H, \overline{WE} = L, BA0, BA1 = Bank, A10 = L)$

The Bank Precharge command is used to close (or precharge) the bank that is activated. Using this command, systems can designated the bank to be closed by specifying the BA address bit setting in the command set. A Precharge command can be used to precharge each bank separately (Bank Precharge) or all four banks simultaneously (Precharge All). After the Bank Precharge command is issued, any one bank can close, and the closed bank transitions from the active state to the idle state. To re-activate the closed bank, a system has to wait the minimum tRP delay after issuing the Precharge command before issuing the Active Command for the device to complete the Precharge operation.

7.1.6 Precharge All Command

 $(\overline{RAS} = L, \overline{CAS} = H, \overline{WE} = L, BA0, BA1 = Don't care, A10 = H)$

The Precharge All command is used to precharge all banks simultaneously. After this command is issued, all four banks close and transition from the active state to the idle state.

7.1.7 Write Command

 $(\overline{RAS} = H, \overline{CAS} = L, \overline{WE} = L, BA0, BA1 = Bank, A10 = L)$

The Write command initiates a Write operation to the bank selected by BA0 and BA1 address inputs. The write data is latched at the positive edge of CLK. Users should preprogram the length of the write data (Burst Length) and the column access sequence (Addressing Mode) by setting the Mode Resister at power-up prior to using the Write command.

7.1.8 Write with Auto Precharge Command

 $(\overline{RAS} = H, \overline{CAS} = L, \overline{WE} = L, BA0, BA1 = Bank, A10 = H)$

The Write with Auto Precharge command performs the Precharge operation automatically after the Write operation. The internal precharge starts in the cycles immediately following the cycle in which the last data is written independent of CAS Latency.

7.1.9 Read Command

 $(\overline{RAS} = H, \overline{CAS} = L, \overline{WE} = H, BA0, BA1 = Bank, A10 = L)$

The Read command performs a Read operation to the bank designated by BA0-1. The read data is issued sequentially synchronized to the positive edges of CLK. The length of read data (Burst Length), Addressing Mode and CAS Latency (access time from \overrightarrow{CAS} command in a clock cycle) must be programmed in the Mode Register at power-up prior to the Write operation.

7.1.10 Read with Auto Precharge Command

 $(\overline{RAS} = H, \overline{CAS} = L, \overline{WE} = H, BA0, BA1 = Bank, A10 = H)$

The Read with Auto Precharge command automatically performs the Precharge operation after the Read operation. When the CAS Latency = 3, the internal precharge starts two cycles before the last data is output. When the CAS Latency = 2, the internal precharge starts one cycle before the last data is output.

7.1.11 Extended Mode Register Set Command

 $(\overline{RAS} = L, \overline{CAS} = L, \overline{WE} = L, BA1, A0 \sim An = Register Data)$

The Extended Mode Register Set command is designed to support Partial Array Self Refresh, Temperature Compensated Self Refresh, and Output Driver Strength/Size by allowing users to program each value by setting predefined address bits. The default values in the Extended Mode Register after power-up are undefined; therefore this command must be issued during the power-up sequence. Also, this command can be issued while all banks are in the idle state.

The set winbond

7.1.12 Mode Register Set Command

 $(\overline{RAS} = L, \overline{CAS} = L, \overline{WE} = L, BA1, A0 \sim An = Register Data)$

The Mode Register Set command is used to program the values of CAS latency, Addressing Mode and Burst Length in the Mode Register. The default values in the Mode Register after power-up are undefined; therefore this command must be issued during the power-up sequence and re-issued after the Deep Power Down Exit Command. Also, this command can be issued while all banks are in the idle state.

7.1.13 No-Operation Command

 $(\overline{RAS} = H, \overline{CAS} = H, \overline{WE} = H)$

The No-Operation command is used in cases such as preventing the device from registering unintended commands. The device performs no operation when this command is registered. This command is functionally equivalent to the Device Deselect command.

7.1.14 Burst Stop Command

 $(\overline{RAS} = H, \overline{CAS} = H, \overline{WE} = L)$

The Burst stop command is used to stop the already activated burst operation. The activated page is left unclosed and future commands can be issued to access the same page of the active bank. If this command is issued during a burst read operation, the read data will go to a Hi-Z state after a delay equal to the CAS latency. If a burst stop command is issued during a burst write operation, then the burst data is terminated and data bus goes to Hi-Z at the same clock that the burst command is activated. Any remaining data from the burst write cycle is ignored.

7.1.15 Device Deselect Command

 $(\overline{CS} = H)$

The Device Deselect command disables the command decoder so that the \overline{RAS} , \overline{CAS} , \overline{WE} and Address inputs are ignored. This command is similar to the No-Operation command.

7.1.16 Auto Refresh Command

 $(\overline{RAS} = L, \overline{CAS} = L, \overline{WE} = H, CKE = H, BA0, BA1, A0~An = Don't care)$

The Auto Refresh command is used to refresh the row address provided by the internal refresh counter. The Refresh operation must be performed 8192 times within 64 mS. The next command can be issued after tRC from the end of the Auto Refresh command. When the Auto Refresh command is issued, All banks must be in the idle

state. The Auto Refresh operation is equivalent to the \overline{CAS} -before- \overline{RAS} operation in a conventional DRAM.

7.1.17 Self Refresh Entry Command

 $(\overline{RAS} = L, \overline{CAS} = L, \overline{WE} = H, CKE = L, BA0, BA1, A0~An = Don't care)$

When the Self Refresh Entry command is issued, the device enters the Self Refresh mode. While the device is in Self Refresh mode, the device automatically refreshes memory cells, and all input and I/O buffers (except the CKE buffer) are disabled. By asserting the CKE signal "high" (and by issuing the Self Refresh Exit command), the device exits the Self Refresh mode.



7.1.18 Self Refresh Exit Command

 $(CKE = H, \overline{CS} = H \text{ or } CKE = H, \overline{RAS} = H, \overline{CAS} = H)$

This command is issued to exit out of the Self Refresh mode. One tRC delay is required prior to issuing any subsequent command from the end of the Self Refresh Exit command.

7.1.19 Clock Suspend Mode Entry/Power Down Mode Entry Command

(CKE = L)

The internal CLK is suspended for one cycle when this command is issued (when CKE is asserted "low"). The device state is held intact while the CLK is suspended. On the other hand, when the device is not operating the Burst cycle, this command performs entry into Power Down mode. All input and output buffers (except the CKE buffer) are turned off in Power Down mode.

7.1.20 Clock Suspend Mode Exit/Power Down Mode Exit Command

(CKE = H)

When the internal CLK has been suspended, operation of the internal CLK is resumed by providing this command (asserting CKE "high"). When the device is in Power Down mode, the device exits this mode and all disabled buffers are turned on to the active state. Any subsequent commands can be issued after one clock cycle from the end of this command.

7.1.21 Data Write/Output Enable, Data Mask/Output Disable Command

(DQM = L/H or LDQM, UDQM = L/H or DQM0-3=L/H)

During a Write cycle, the DQM or LDQM, UDQM or DQM0-3 signals mask write data. Each of these signals control the input buffers per byte. During a Read cycle, the DQM or LDQM, UDQM or DQM0-3 signals control of the output buffers per byte.

I/O Org.	Mask Pin	Masked DQs
×16	LDQM	DQ0~DQ7
×10	UDQM	DQ8~DQ15
	DQM0	DQ0~DQ7
30	DQM1	DQ8~DQ15
×32	DQM2	DQ8~DQ15 DQ0~DQ7 DQ8~DQ15 DQ16~DQ23
	DQM3	DQ24~DQ31

8. OPERATION

8.1 Read Operation

Issuing the Bank Activate command to the idle bank puts it into the active state. When the Read command is issued after t_{RCD} from the Bank Activate command, the data is read out sequentially, synchronized to the positive edges of CLK (a Burst Read operation). The initial read data becomes available after CAS Latency from the issuing of the Read command. The CAS latency must be set in the Mode Register at power-up. In addition, the burst length of read data and Addressing Mode must be set. Each bank is held in the active state unless the Precharge command is issued, so that the sense amplifiers can be used as secondary cache.

When the Read with Auto Precharge command is issued, the Precharge operation is performed automatically after the Read cycle, then the bank is switched to the idle state. This command cannot be interrupted by any other commands. Also, when the Burst Length is 1 and tRCD (min), the timing from the \overrightarrow{RAS} command to the start of the Auto Precharge operation is shorter than t_{RAS} (min). In this case, tRAS (min) must be satisfied by extending tRCD.

When the Precharge operation is performed on a bank during a Burst Read operation, the Burst operation is terminated.

When the Burst Length is full-page, column data is repeatedly read out until the Burst Stop command or Precharge command is issued.

FEESE Winbond

8.2 Write Operation

Issuing the Write command after t_{RCD} from the Bank Activate command, the input data is latched sequentially, synchronizing with the positive edges of CLK after the Write command (Burst Write operation). The burst length of the Write data (Burst Length) and Addressing Mode must be set in the Mode Register at power-up.

When the Write with Auto Precharge command is issued, the Precharge operation is performed automatically after the Write cycle, then the bank is switched to the idle state. This command cannot be interrupted by any other command for the entire burst data duration. Also, when the Burst Length is 1 and tRCD (min), the timing from the \overline{RAS} command to the start of the Auto Precharge operation is shorter than tRAS (min). In this case, tRAS (min)

must be satisfied by extending tRCD.

When the Precharge operation is performed in a bank during a Burst Write operation, the Burst operation is terminated.

When the Burst Length is full-page, the input data is repeatedly latched until the Burst Stop command or the Precharge command is issued.

When the Burst Read and Single Write mode is selected, the write burst length is 1 regardless of the read burst length.

8.3 Precharge

There are two commands which perform the Precharge operation: Bank Precharge and Precharge All. When the Bank Precharge command is issued to the active bank, the bank is precharged and then switched to the idle state. The Bank Precharge command can precharge one bank independently of the other bank and hold the unprecharged bank in the active state. The maximum time each bank can be held in the active state is specified as tRAS (max). Therefore, each bank must be precharged within tRAS (max) from the Bank Activate command.

The Precharge All command can be used to precharge all banks simultaneously. Even if banks are not in the active state, the Precharge All command can still be issued. In this case, the Precharge operation is performed only for the active bank and the precharged bank is then switched to the idle state.

8.3.1 Auto Precharge

Auto precharge is a feature that performs the same individual-bank PRECHARGE function described previously, without requiring an explicit command. This is accomplished by using A10 to enable auto precharge in conjunction with a specific READ or WRITE command. A precharge of the bank/row that is addressed with the READ or WRITE command is automatically performed upon completion of the READ or WRITE burst, except in the continuous page burst mode where auto precharge does not apply. In the specific case of write burst mode set to single location access with burst length set to continuous, the burst length setting is the overriding setting and auto precharge does not apply. Auto precharge is nonpersistent in that it is either enabled or disabled for each individual READ or WRITE command.


Auto precharge ensures that the precharge is initiated at the earliest valid stage within a burst. Another command cannot be issued to the same bank until the precharge time (tRP) is completed. This is determined as if an explicit PRECHARGE command was issued at the earliest possible time.

Winbond SDRAM supports concurrent auto precharge; cases of concurrent auto precharge for READs and WRITEs are defined below.

8.3.2 READ with auto precharge interrupted by a READ (with or without auto precharge)


winh

A READ to bank m will interrupt a READ on bank n following the programmed CAS latency. The precharge to bank n begins when the READ to bank m is registered.

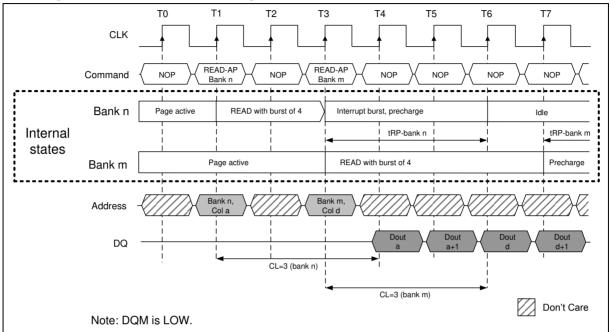

8.3.3 READ with auto precharge interrupted by a WRITE (with or without auto precharge)


A WRITE to bank m will interrupt a READ on bank n when registered. DQM should be used two clocks prior to the WRITE command to prevent bus contention. The precharge to bank n begins when the WRITE to bank m is registered.

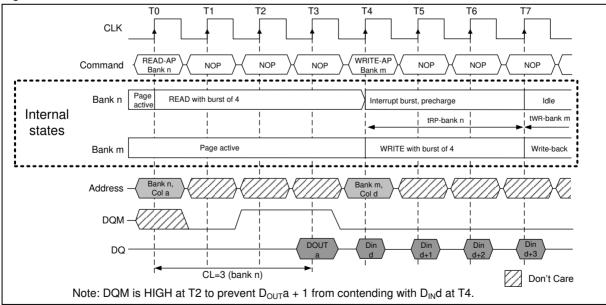

____ winbond ____


8.3.4 WRITE with auto precharge interrupted by a READ (with or without auto precharge)

A READ to bank m will interrupt a WRITE on bank n when registered, with the data-out appearing CL later. The precharge to bank n will begin after tWR is met, where tWR begins when the READ to bank m is registered. The last valid WRITE to bank n will be data in registered one clock prior to the READ to bank m.

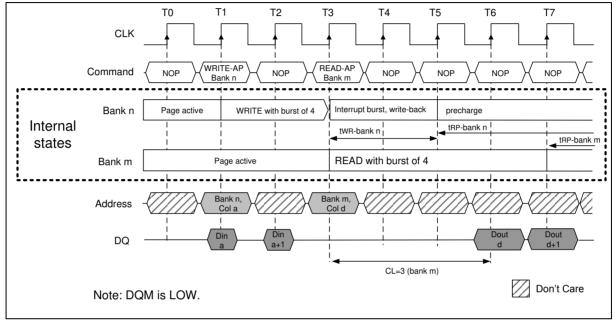

8.3.5 WRITE with auto precharge interrupted by a WRITE (with or without auto precharge)

A READ to bank m will interrupt a WRITE on bank n when registered, with the data-out appearing CL later. The precharge to bank n will begin after tWR is met, where tWR begins when the READ to bank m is registered. The last valid WRITE to bank n will be data in registered one clock prior to the READ to bank m.

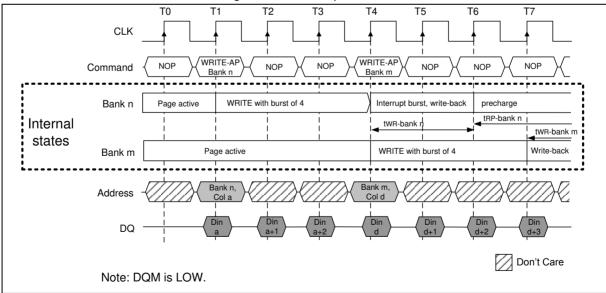

E

8.4 Burst Termination

The Read or Write command can be issued on any clock cycle. Whenever a Read operation is to be interrupted by a Write command, the output data must be masked by DQM to avoid I/O conflict. Also, when a Write operation is to be interrupted by a Read command, only the input data before the Read command is enable and the input data after the Read command is disabled.

- Read Interrupted by a Precharge

A Precharge command can be issued to terminate a Burst cycle early. When a Burst Read cycle is interrupted by a Precharge command, the read operation is terminated after (CAS latency-1) clock cycles from the Precharge command.

- Write Interrupted by a Precharge

A burst Write cycle can be interrupted by a Precharge command, the input circuit is reset at the same clock cycle at which the Precharge command is issued. In this case, the DQM signal must be asserted high to prevent writing the invalid data to the cell array.

- Read Interrupted by a Burst Stop

When the Burst Stop command is issued for the bank in a Burst cycle, the Burst operation is terminated. When the Burst Stop command is issued during a Burst Read cycle, the read operation is terminated after clock cycle of (CAS latency-1) from the Burst Stop command.

- Write Interrupted by a Burst Stop

When the Burst Stop command is issued during a Burst Write cycle, the write operation is terminated at the same clock cycle that the Burst Stop command is issued.

- Write Interrupted by a Read

A burst of write operation can be interrupted by a read command. The read command interrupts the write operation on the same clock that the read command is issued. All the burst writes that are presented on the data bus before the read command is issued will be written to the memory. Any remaining burst writes will be ignored once the read command is activated. There must be at least one clock bubble (Hi-Z state) on the data bus to avoid bus contention.

- Read Interrupted by a Write

A burst of read operation can be interrupted by a write command by driving output drivers in a Hi-Z state using DQM before write to avoid data conflict. DQM should be utilized if there is data from a Read command on the first and second cycles of the subsequent write cycles to ensure the read data are tri-stated. From the third clock cycle, the write command will control the data bus and DQM is not needed.

E

8.5 Mode Register Operation

The Mode register designates the operation mode for the Read or Write cycle. This register is divided into three fields; A Burst Length field to set the length of burst data, an Addressing Mode selected bits to designate the column access sequence in a Burst cycle, and a CAS Latency field to set the access time in clock cycle.

The Mode Register is programmed by the Mode Register Set command when all banks are in the idle state. The data to be set in the Mode Register is transferred using the A0~An, BA0, BA1 address inputs. The initial value of the Mode Register after power-up is undefined; therefore the Mode Register Set command must be issued before proper operation.

8.5.1 Burst Length field (A2~A0)

This field specifies the data length for column access using the A2 \sim A0 pins and sets the Burst Length to be 1, 2, 4, 8, words, or full-page.

A2	A1	A0	Bust Length
0	0	0	1 word
0	0	1	2 words
0	1	0	4 words
0	1	1	8 words
1	1	1	Full-Page

8.5.2 Addressing Mode Select (A3)

The Addressing Mode can be one of two modes; Interleave mode or Sequential mode. When the A3 bit is 0, Sequential mode is selected. When the A3 bit is 1, Interleave mode is selected. Both Addressing modes support burst length of 1, 2, 4 and 8 words. Additionally, Sequential mode supports the full-page burst.

A3	Addressing Mode
0	Sequential
1	Interleave

8.5.3 Addressing Sequence for Sequential Mode

A column access is performed by incrementing the column address input to the device. The address is varied by the Burst Length shown as below table.

DATA	Access Address	Burst Length
Data 0	n	2 words (Address bit is A0)
Data 1	n + 1	not carried from A0 to A1
Data 2	n + 2	4 words (Address bit is A1, A0)
Data 3	n + 3	not carried from A1 to A2
Data 4	n + 4	
Data 5	n + 5	8 words (Address bit is A2, A1, A0)
Data 6	n + 6	not carried from A2 to A3
Data 7	n + 7	V

FEESE winbond

8.5.4 Addressing Sequence for Interleave Mode


A column access is started from the input column address and is performed by inverting the address bits in the sequence shown as below table.

DATA	Access Address	Burst Length
Data 0	A8 A7 A6 A5 A4 A3 A2 A1 A0	2 words
Data 1	A8 A7 A6 A5 A4 A3 A2 A1 A0	
Data 2	A8 A7 A6 A5 A4 A3 A2 A1 A0	4 words
Data 3	A8 A7 A6 A5 A4 A3 A2 A1 A0	
Data 4	A8 A7 A6 A5 A4 A3 A2 A1 A0	8 words
Data 5	A8 A7 A6 A5 A4 A3 A2 A1 A0	
Data 6	A8 A7 A6 A5 A4 A3 A2 A1 A0	
Data 7	A8 A7 A6 A5 A4 A3 A2 A1 A0	\mathcal{I}

8.5.5 Addressing Sequence Example (Burst Length = 8 and Input Address is 13)

Dete	Interleave Mode											Sequer	tial Mode
Data	A 8	A7	A 6	A 5	A 4	A 3	A2	A 1	A 0	ADD		ADD	
Data0	0	0	0	0	0	1	1	0	1	13	13	13	
Data1	0	0	0	0	0	1	1	0	0	12	13 + 1	14	
Data2	0	0	0	0	0	1	1	1	1	15	13 + 2	15	calculated using
Data3	0	0	0	0	0	1	1	1	0	14	13 + 3	8	A2, A1 and A0 bits not carry from
Data4	0	0	0	0	0	1	0	0	1	9	13 + 4	9	A2 to A3 bit.
Data5	0	0	0	0	0	1	0	0	0	8	13 + 5	10	
Data6	0	0	0	0	0	1	0	1	1	11	13 + 6	11	
Data7	0	0	0	0	0	1	0	1	0	10	13 + 7	12]

8.5.6 Read Cycle CAS Latency = 3

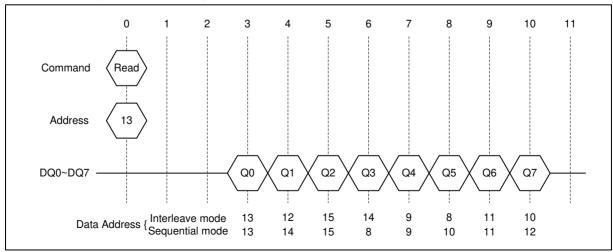

Publication Release Date: Dec. 01, 2016 Revision: A01-002

F

8.5.7 CAS Latency field (A6~A4)

This field specifies the number of clock cycles from the assertion of the Read command to the first data read. The minimum values of CAS Latency depends on the frequency of CLK. The minimum value which satisfies the following formula must be set in this field.

A6	A5	A4	CAS Latency
0	1	0	2 clock
0	1	1	3 clock

• Reserved bits (A7, A8, A10, A11, An, BA0, BA1)


These bits are reserved for future operations. They must be set to 0 for normal operation.

• Single Write mode (A9)

This bit is used to select the write mode. When the A9 bit is 0, Burst Read and Burst Write mode are selected. When the A9 bit is 1, Burst Read and Single Write mode are selected.

A9	Write Mode
0	Burst Read and Burst Write
1	Burst Read and Single Write

8.5.8 Mode Register Definition

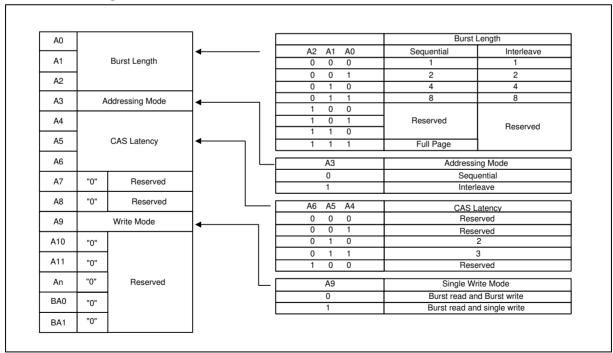

T


8.6 Extended Mode Register Description

The Extended Mode Register designates the operation condition while SDRAM is in Self Refresh Mode and selects the output driver strength as full, 1/2, 1/4, or 1/8 strength. The register is divided into two fields; (1) Partial Array Self Refresh field selects how much banks or which part of a bank need to be refreshed during Self Refresh. (2) Driver Strength selected bit to control the size of output buffer. The initial value of the Extended Mode Register after power-up is Full Driver Strength, and all banks are refreshed during Self Refresh Mode.

A0				A2 A1	A0	Self-Refresh coverage
A1	Pa	artial Array		0 0	0	All banks
	Se	elf Refresh	•	0 0	1	Banks 0 and 1 (BA1=0)
A2				0 1	0	Bank 0 (BA1=BA0=0)
A3	"0"		1	0 1	1	Reserved
	-	Reserved		1 0	0	Reserved
A4	"0"			1 0	1	Reserved
A5				1 1	0	Reserved
A6	0	utput Driver		1 1	1	Reserved
A7	"0"					
A8	"0"					
A9	"0"	Reserved				
A10	"0"	neserveu				
A11	"0"			A6	A5	Driver Strength
	-			0	0	Full strength
An	"0"			0	1	1/2 strength
BA0	"0"	Extended		1	0	1/4 strength
D 4 4	"1"	Mode		1	1	1/8 strength
BA1	1 ° 1 °	Register Set				





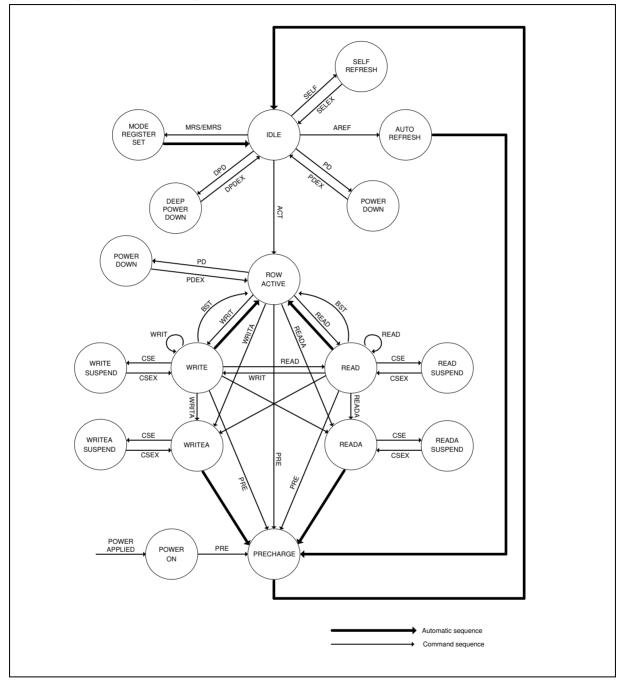

9. ELECTRICAL CHARACTERISTICS

9.1 Absolute Maximum Ratings

Parameter	Symbol	Valu	ies	Unit
Faiameter	Symbol	Min	Max	Unit
Voltage on VDD relative to VSS	Vdd	-0.5	2.3	V
Voltage on VDDQ relative to VSS	VDDQ	-0.5	2.3	V
Voltage on any pin relative to VSS	VIN, VOUT	-0.5	2.3	V
Operating Temperature	TCASE	-25	85	°C
Operating Temperature	TUASE	-40	85	
Storage Temperature	TSTG	-55	150	°C
Short Circuit Output Current	IOUT		±50	mA
Power Dissipation	PD		1.0	W

Note:

stresses greater than those listed in "absolute maximum ratings" may cause permanent damage to the device. This is a stress rating only and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability

9.2 Operating Conditions

Parameter	Symbol	Min	Тур	Max	Unit
Supply Voltage	VDD	1.7	1.8	1.95	V
Supply Voltage (for I/O Buffer)	VDDQ	1.7	1.8	1.95	V
Input High level Voltage	VIH	0.8 x VDDQ	-	VDDQ + 0.3	V
Input Low level Voltage	VIL	-0.3	-	+0.3	V
LVCOMS Output "H" Level Voltage (IOUT = -0.1 mA)	Vон	0.9 x VDDQ	-	-	V
LVCMOS Output "L" Level Voltage (IOUT = +0.1 mA)	VOL	-	-	0.2	V
Input Leakage Current ($0V \le VIN \le VDD$, all other pins not under test = $0V$)	ll(L)	-1	-	1	μA
Output Leakage Current (Output disable , $0V \le VOUT \le VDDQ$)	IO(L)	-5	-	5	μA

Note: $V_{IH}(max) = V_{DD}/V_{DDQ+1.2V}$ for pulse width $\leq 5 \text{ nS}$

 $V_{IL}(min) = V_{SS}/V_{SSQ}-1.2V$ for pulse width $\leq 5 \text{ nS}$

9.3 Capacitance

Parameter	Symbol	Min.	Max.	Unit
Input Capacitance (A[n:0], BA0, BA1, \overline{CS} , \overline{RAS} , \overline{CAS} , \overline{WE} , DQM, CKE)	CI	1.5	3.0	pf
Input Capacitance (CLK)	CCLK	1.5	3.5	pf
Input/Output Capacitance	CIO	3.0	5.0	pf

Note: These parameters are periodically sampled and not 100% tested.

9.4 DC Characteristics

(x16, x32)

Parameter Sym.		-6	-75	l lm it	Notoo
		Max.	Max.	Unit	Notes
Operating current: Active mode; burst = 1; READ or WRITE; tRC = tRC (min)	IDD1	38	35	mA	2, 3, 4
Standby current: Power-down mode; All banks idle; CKE = LOW	IDD2P	0.3	0.3	mA	5
Standby current: Nonpower-down mode; All banks idle; CKE = HIGH	IDD2N	10	10	mA	
Standby current: Active mode; CKE = LOW; \overline{CS} = HIGH; All banks active; No accesses in progress	IDD3P	3	3	mA	3, 4, 6
Standby current: Active mode; CKE = HIGH; \overline{CS} = HIGH; All banks active after tRCD met; No accesses in progress	IDD3N	25	25	mA	3, 4, 6
Operating current: Burst mode; READ or WRITE; All banks active; Half of DQ toggling every cycle	IDD4	75	70	mA	2, 3, 4
Auto refresh current: tRFC = tRFC (min) CKE = HIGH; \overline{CS} = HIGH	IDD5	75	75	mA	2, 3, 4, 6
Deep Power Down Mode	IZZ	10	10	μA	5, 8

The set winbond

9.5 Automatic Temperature Compensated Self Refresh Current Feature

Partial Array Self Refresh Setting EMR [2:0]	Operating Temperature Setting EMR[4:3]	Sym	Max.	Unit
EMR[2:0]=000, CKE=0.2V All 4 banks are Refreshed	85°C		450	
EMR[2:0]=001, CKE=0.2V Bank 0 and 1 are Refreshed	85°C	IDD6	350	μA
EMR[2:0]=010, CKE=0.2V Only Bank 0 is Refreshed	85°C		300	

Notes:

1. A full initialization sequence is required before proper device operation is ensured.

- 2. IDD is dependent on output loading and cycle rates. Specified values are obtained with minimum cycle time and the outputs open.
- 3. The IDD current will increase or decrease proportionally according to the amount of frequency alteration for the test condition.
- 4. Address transitions average one transition every 2 clocks.
- 5. Measurement is taken 500mS after entering into this operating mode to provide tester measuring unit settling time.
- 6. Other input signals can transition only one time for every 2 clocks and are otherwise at valid Vih or Vil levels.
- 7. CKE is HIGH during the REFRESH command period tRFC (min) else CKE is LOW.
- 8. Typical values at 25°C (not a maximum value).
- 9. Enables on-die refresh and address counters.

10. Values for IDD6 85°C full array and partial array are guaranteed for the entire temperature range. All other IDD6 values are estimated.

9.6 AC Characteristics and Operating Condition

9.6.1 AC Characteristics

(Notes: 5, 6, 7)


Parameter		•	-6		-75		11	
		Sym.	Min.	Max.	Min.	Max.	Unit	Notes
Ref/Active to Ref/Active Command P	eriod	t _{RC}	60		67.5		nS	8
Active to precharge Command Period	ł	t _{RAS}	42	100000	45	100000	nS	8
Active to Read/Write Command Dela	y Time	trcd	18		18		nS	8
Read/Write(a) to Read/Write(b) Com	mand Period	tccD	1		1		tск	8
Precharge to Active Command Period	d	t _{RP}	18		18		nS	8
Active(a) to Active(b) Command Period	bd	trrd	12		15		nS	8
Write Recovery Time		twr	15		15		nS	
Write-Recovery Time (Last data to Re	ead)	t LDR	1		1		tск	
CLK Cycle Time	CL* = 3	+	6	1000	7.5	1000	nS	
	CL* = 2	tск	9.6	1000	9.6	1000	nS	
CLK High Level width		tсн	2.5		2.5		nS	
CLK Low Level width		tc∟	2.5		2.5		nS	
Access Time from CLK	CL* = 3	- t _{AC}		5		5.4	nS	
	CL* = 2	LAC		6		8	nS	
Output Data Hold Time		tон	2.5		2.5		nS	
Output Data High Impedance Time	CL* = 3	tнz		5		5.4	nS	7
	CL* = 2			8		6	nS	7
Output Data Low Impedance Time		t _{LZ}	1.0		1.0		nS	
Power Down Mode Entry Time		tsв	0	6	0	7.5	nS	
Transition Time of CLK (Rise and Fal	I)	t⊤	0.3	1.2	0.3	1.2	nS	
Data-in Set-up Time		t _{DS}	1.5		1.5		nS	
Data-in Hold Time		tон	1		1		nS	
Address Set-up Time		tas	1.5		1.5		nS	
Address Hold Time		tан	1		1		nS	
CKE Set-up Time		tскs	1.5		1.5		nS	
CKE Hold Time		tскн	1		1		nS	
Command Set-up Time		tсмs	1.5		1.5		nS	
Command Hold Time		tсмн	1		1		nS	
Refresh Time		tref		64		64	mS	
Mode Register Set Cycle Time		t MRD	2		2		tск	8
Ref to Ref/Active Command Period		trfc	72		72		nS	
Self Refresh Exit to next valid Command Delay		txsr	115		115		nS	

* CL = CAS Latency

FEESE Winbond

9.6.2 AC Test Condition

Symbol	Parameter	Value	Unit
VIH(min)	Input High Voltage Level (AC)	0.8 x VDDQ	V
VIL(max)	Input Low Voltage Level (AC)	0.2 x VDDQ	V
VOTR	Output Signal Reference Level	0.5 x VDDQ	V

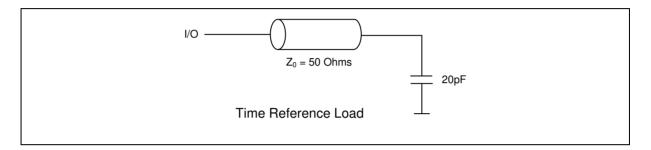

Input signal transition time between VIH and VIL is assumed as 1 Volts/nS.

Notes:

- 1. Conditions outside the limits listed under "ABSOLUTE MAXIMUM RATINGS" may cause permanent damage to the device. Exposure to "ABSOLUTE MAXIMUM RATINGS" conditions for extended periods may affect deice reliability.
- 2. All voltages are referenced to VSS and VSSQ.
- 3. These parameters depend on the cycle rate. These values are measured at a cycle rate with the minimum values of tCK and tRC . Input signals transition once per tCK period.
- 4. These parameters depend on the output loading. Specified values are obtained with the output open.
- 5. Power-up sequence is described in note 9.
- 6. AC Test Conditions: (refer to 9.6.2).
- 7. tHz defines the time at which the outputs achieve the open circuit condition and is not referenced to output voltage levels.
- 8. These parameters account for the number of clock cycles and depend on the operating frequency of the clock, as follows: The number of clock cycles = specified value of timing / clock period (count fractions as a whole number).
- 9. Power up Sequence: The SDRAM should be powered up by the following sequence of operations.
 - a. Power must be applied to VDD before or at the same time as VDDQ while all input signals are held in the "NOP" state. The CLK signal will be applied at power up with power.
 - b. After power-up a pause of at least 200 µS is required. It is required that DQM and CKE signals must be held "High" (VDD levels) to ensure that the DQ output is in High-impedance state.
 - c. All banks must be precharged.
 - d. The Mode Register Set command must be issued to initialize the Mode Register.
 - e. The Extended Mode Register Set command must be issued to initialize the Extended Mode Register.

f. Issue two or more Auto Refresh dummy cycles to stabilize the internal circuitry of the device. The Mode Register Set command can be invoked either before or after the Auto Refresh dummy cycles.




9.6.3 AC Latency Characteristics

CKE to clock disable (CKE Latency)	1		
DQM to output to HI-Z (Read DQM Latency)	2		
DQM to output to HI-Z (Write DQM Latency)		0	
Write command to input data (Write Data Latency)		0	
\overline{CS} to Command input (\overline{CS} Latency)		0	
Precharge to DQ Hi-Z Lead time		2	
		3	Cycle
Precharge to Last Valid data out		1	
		2	
Bust Stop Command to DQ Hi-Z Lead time		2	
		3	
Bust Stop Command to Last Valid Data out		1	
		2	
Read with Auto-precharge Command to Active/Ref Command		BL + tRP	
		BL + tRP	Cycle + nS
Write with Auto-precharge Command to Active/Ref Command	CL = 2	(BL+1) + tRP	
Write with Auto-precharge Command to Active/Ref Command		(BL+1) + tRP	

winbond


10. CONTROL TIMING WAVEFORMS

10.1 Command Input Timing

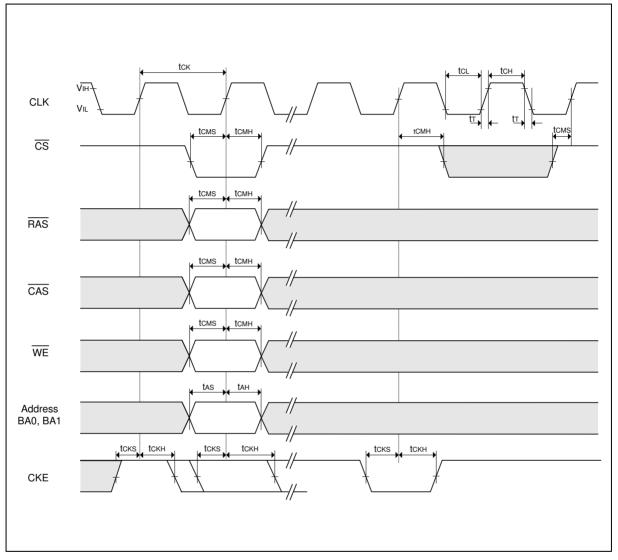




10.2 Read Timing

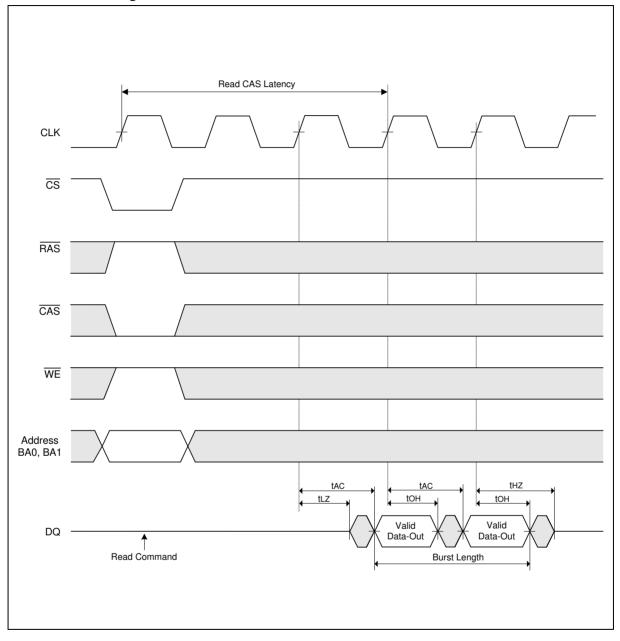


10.3 Control Timing of Input Data (x16)

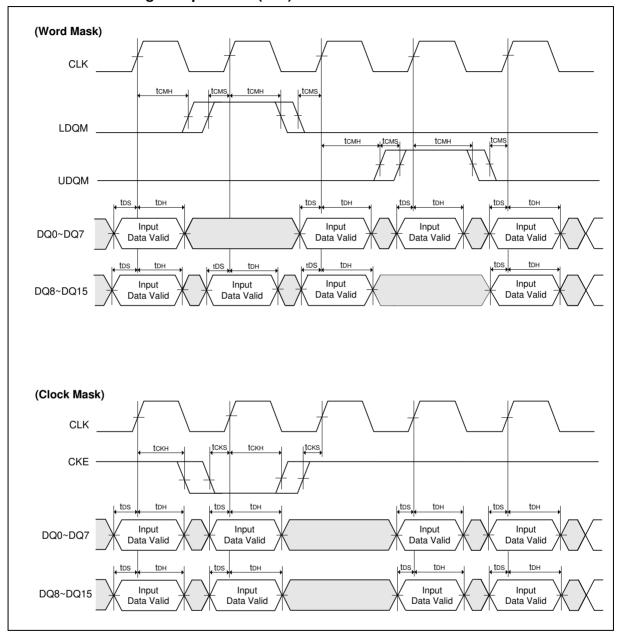


winbond

10.4 Control Timing of Output Data (x16)

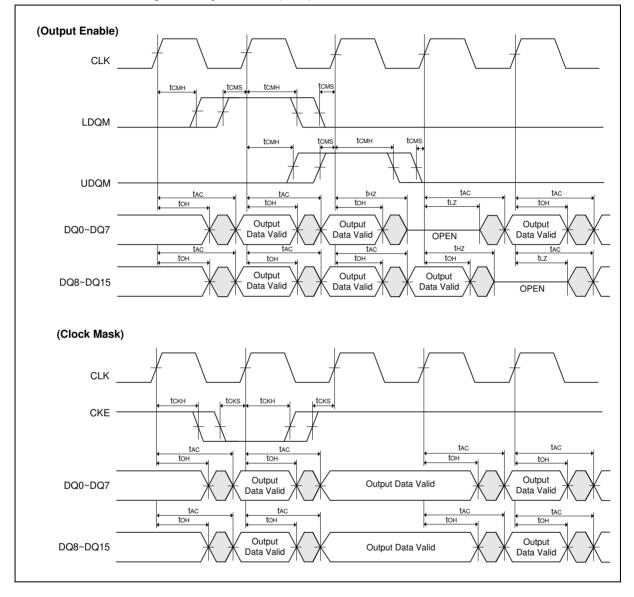

FEED winbond


10.5 Control Timing of Input Data (x32)

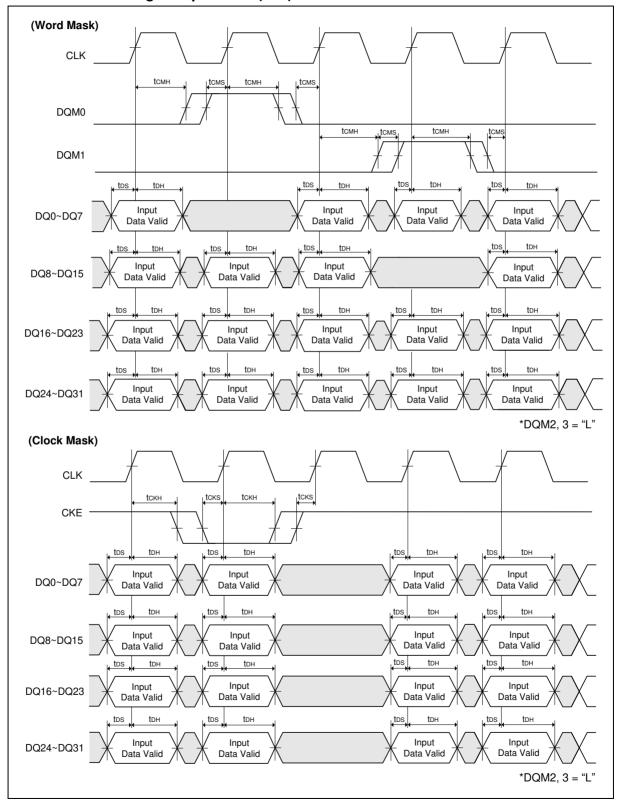

sees winbond

Publication Release Date: Dec. 01, 2016 Revision: A01-002

10.6 Control Timing of Output Data (x32)

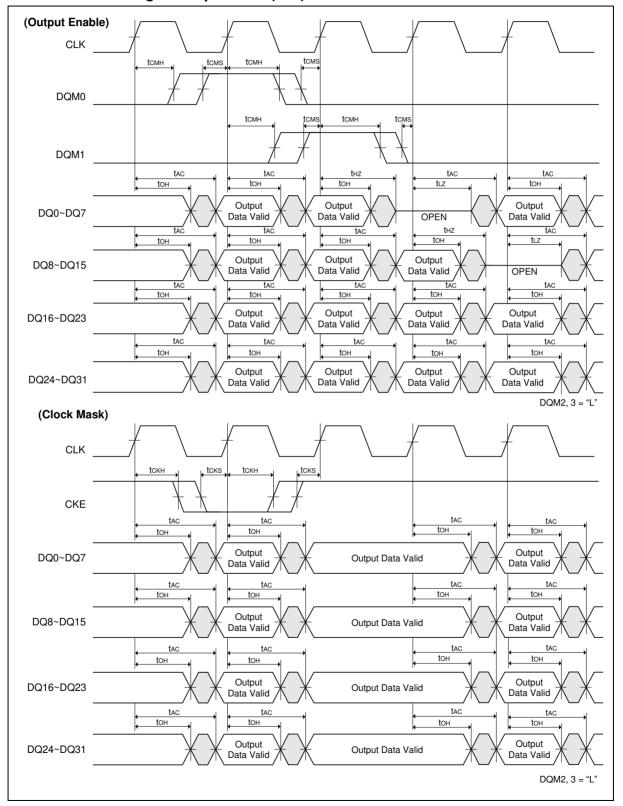


FEED winbond


Publication Release Date: Dec. 01, 2016 Revision: A01-002



10.7 Mode Register Set (MRS) Cycle

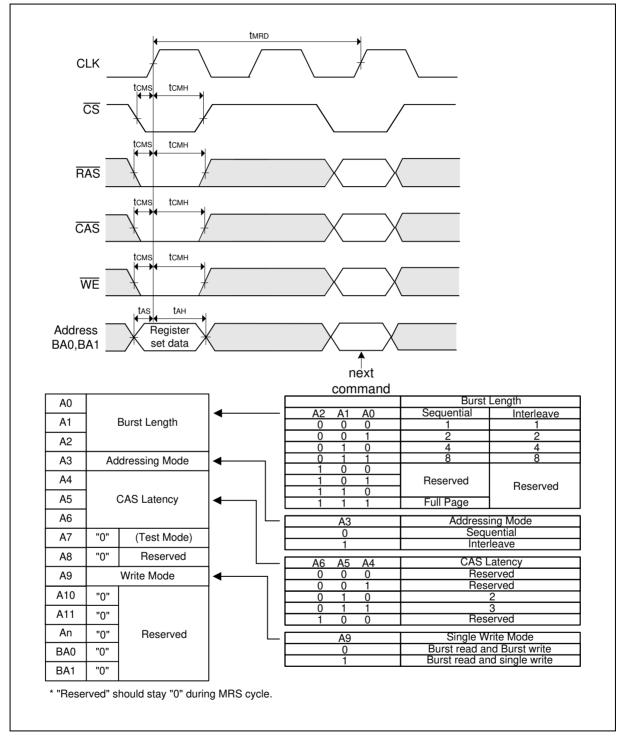


10.8 Extended Mode register Set (EMRS) Cycle

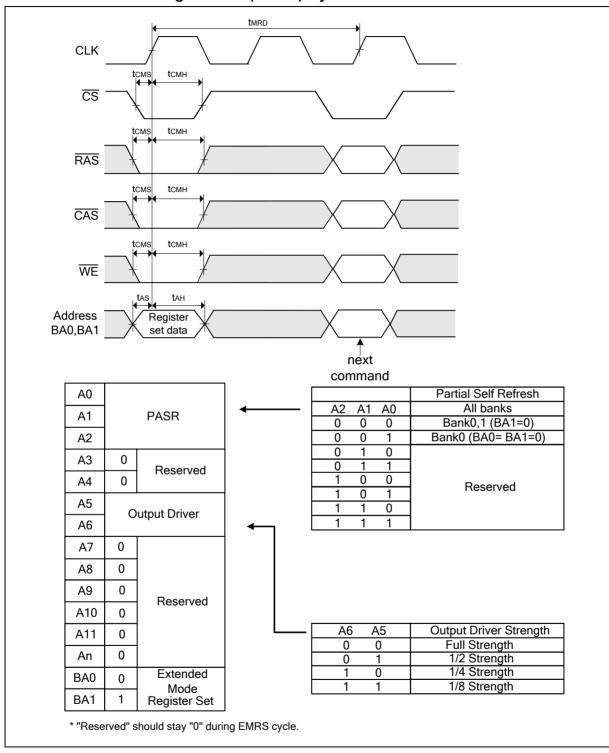


HEAR Winbond


11. OPERATING TIMING EXAMPLE


11.1 Interleaved Bank Read (Burst Length = 4, CAS Latency = 3)

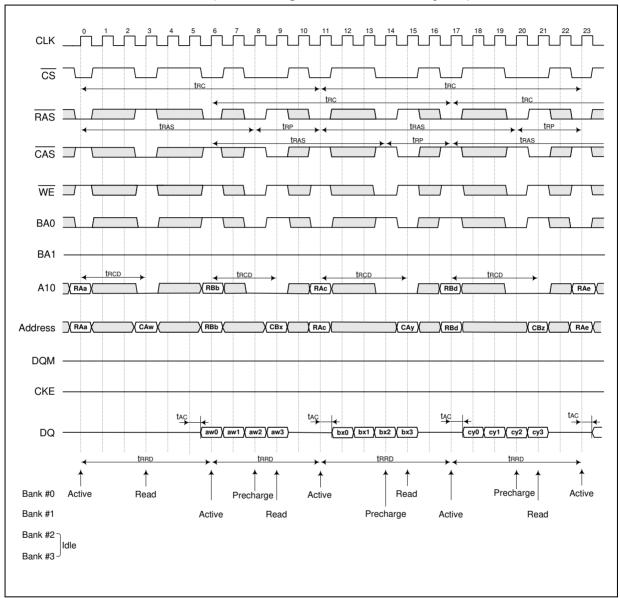



winbond

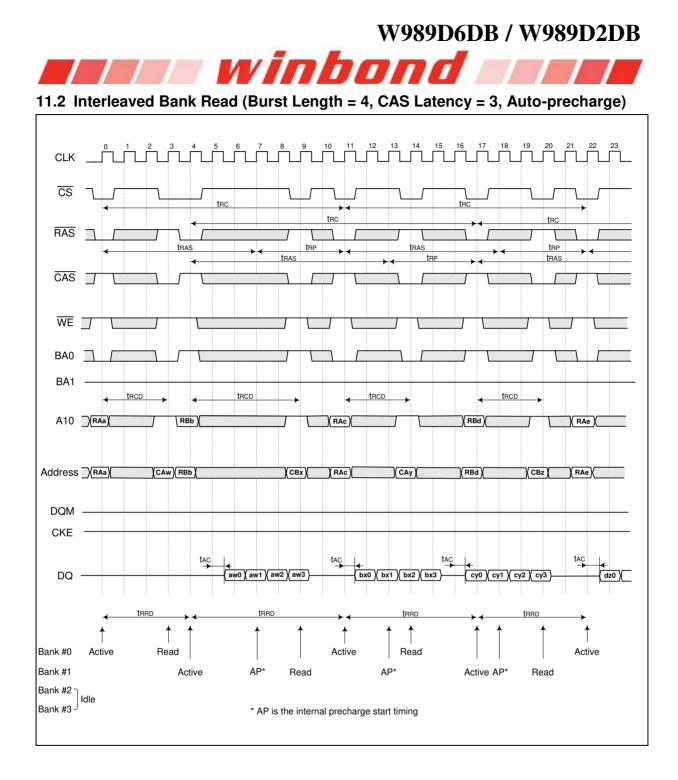


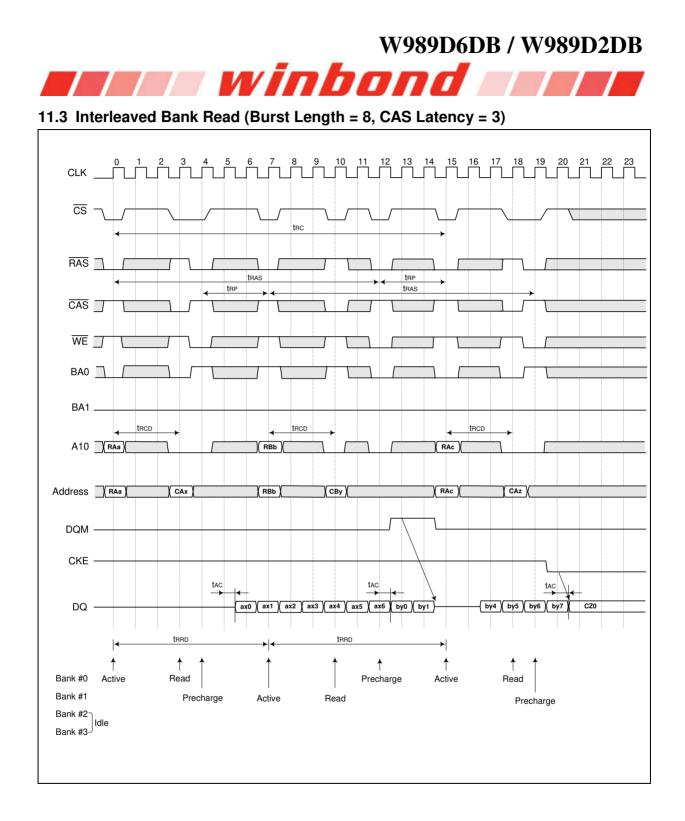


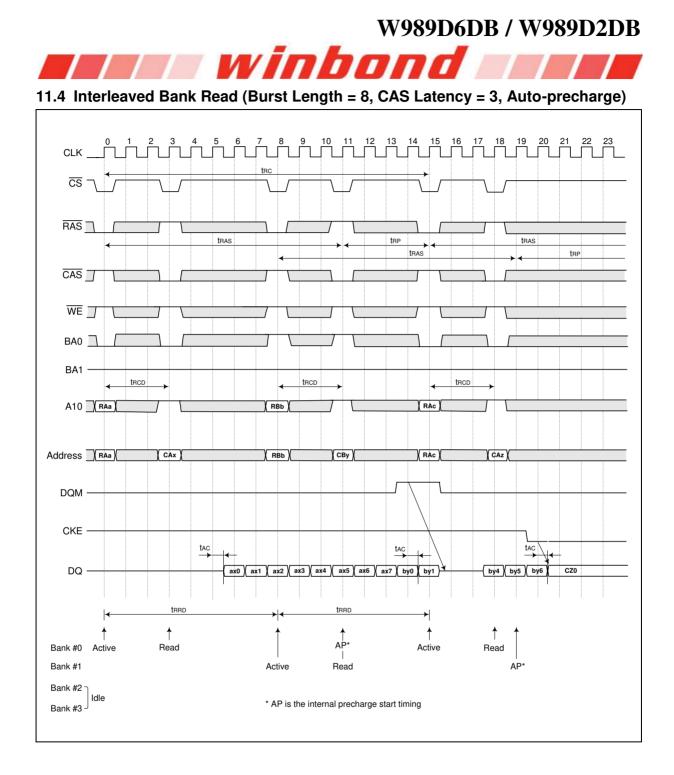


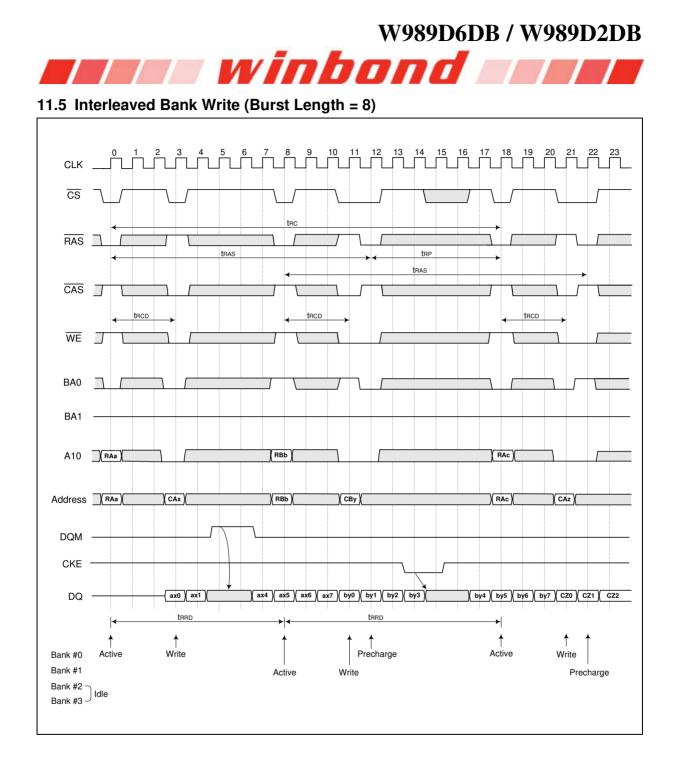


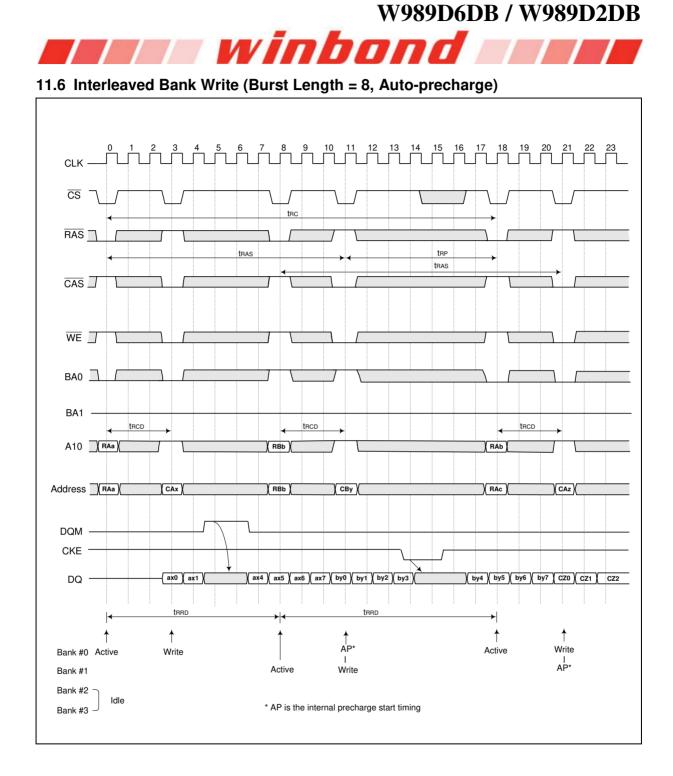

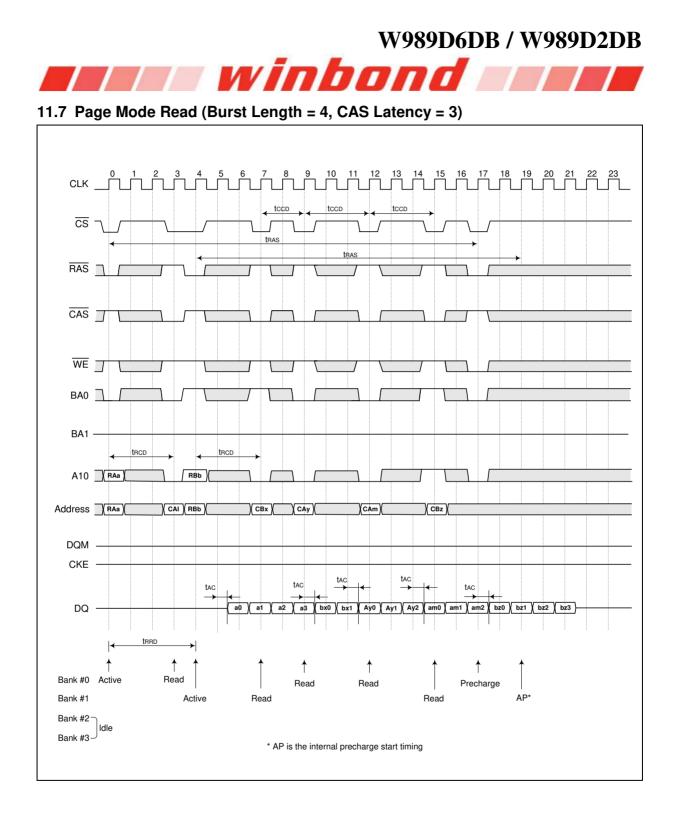


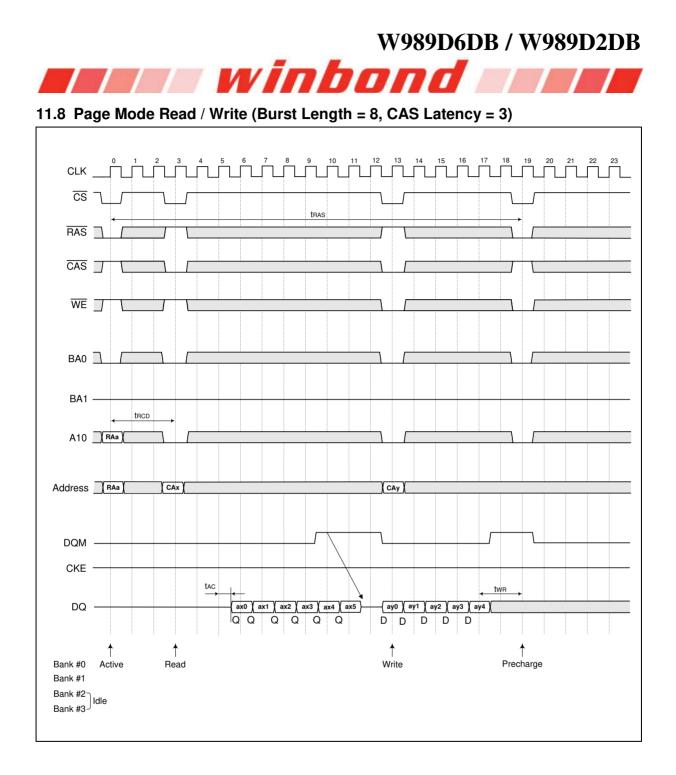

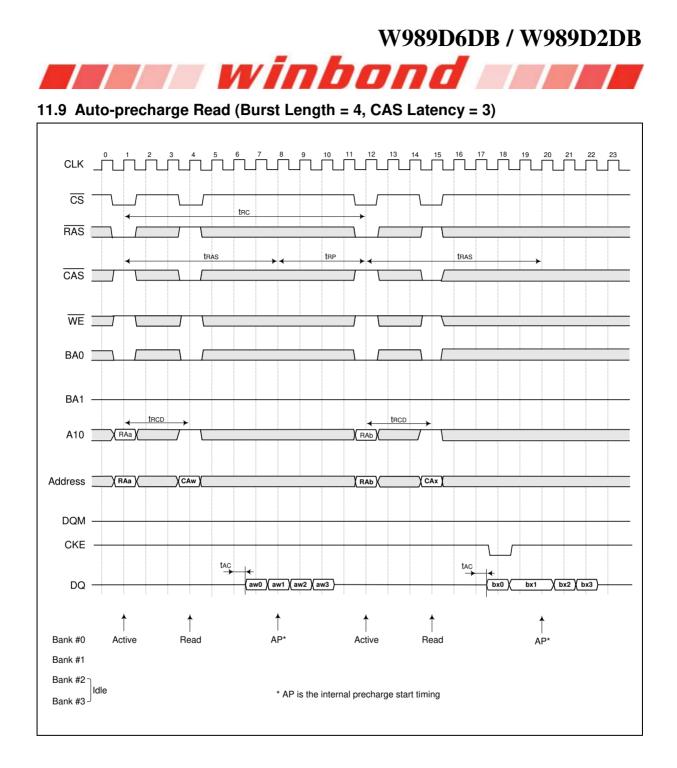

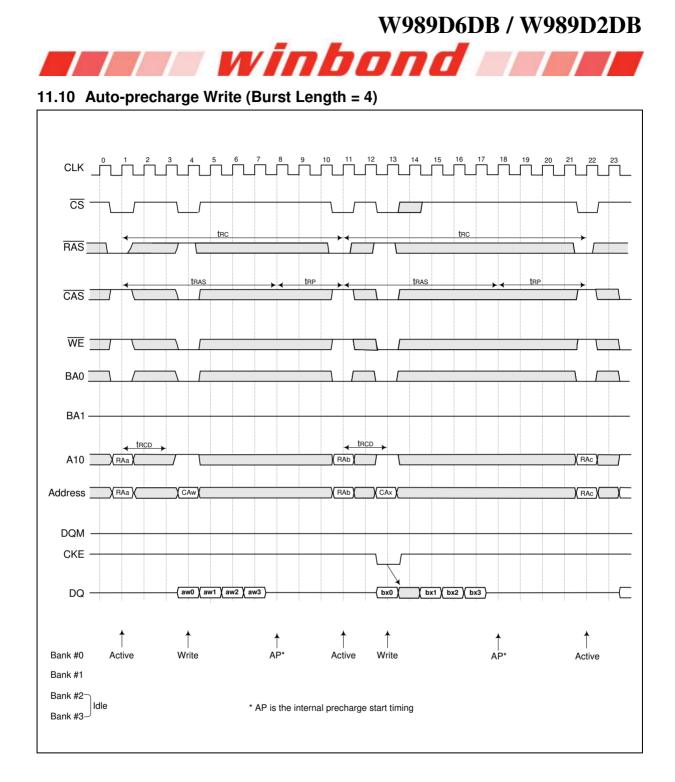

11.11 Auto Refresh Cycle

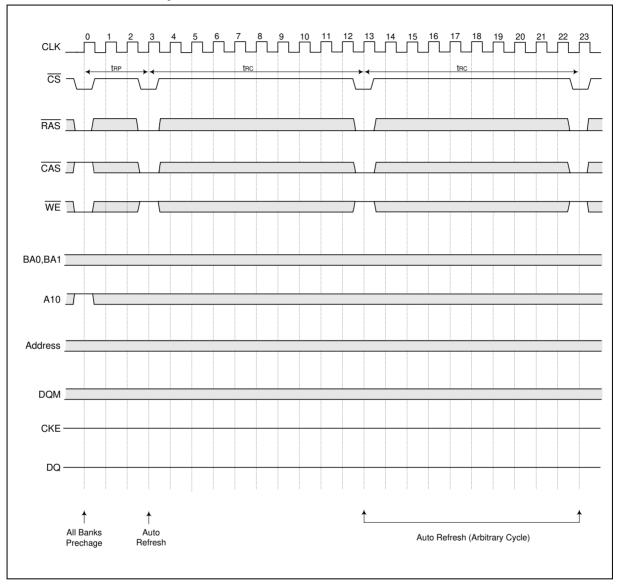


FEESE Winbond

W989D6DB / W989D2DB

1.4


11.12 Self Refresh Cycle

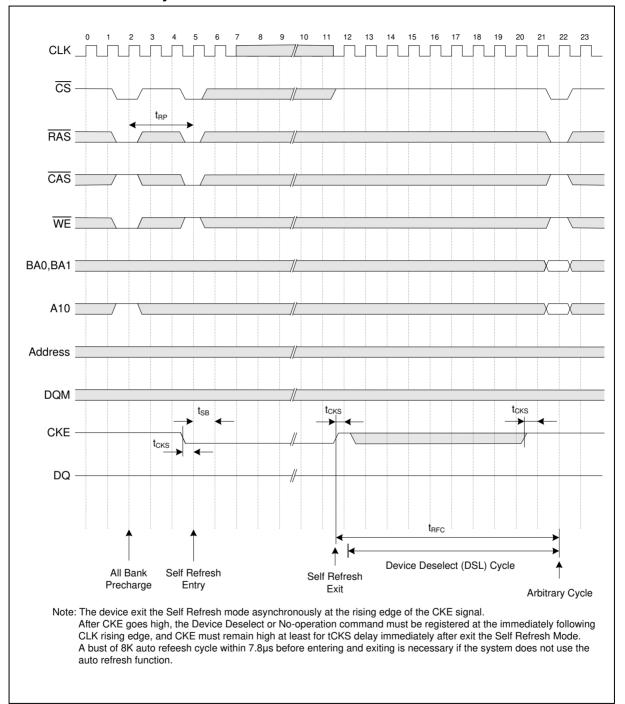

THEFT winbond


winhand 11.13 Burst Read and Single Write (Burst Length = 4, CAS Latency = 3) 11 ┌─_ 10 20 21 8 9 22 23 CLK CS RAS 7 CAS trcd WE J BA0 J BA1 -A10 RBa Address RBa (CBv) CBw CBx CBy CBz DQM CKE tac tac DQ av0 av1 av2 av3 aw0 ax0 ay0 az0 az1 az2 az3 Q Q Q Q D D D Q Q Q Q 1 Single Write Read Bank #0 Active Read Bank #1 Bank #2 Bank #3

11.14 Power Down Mode

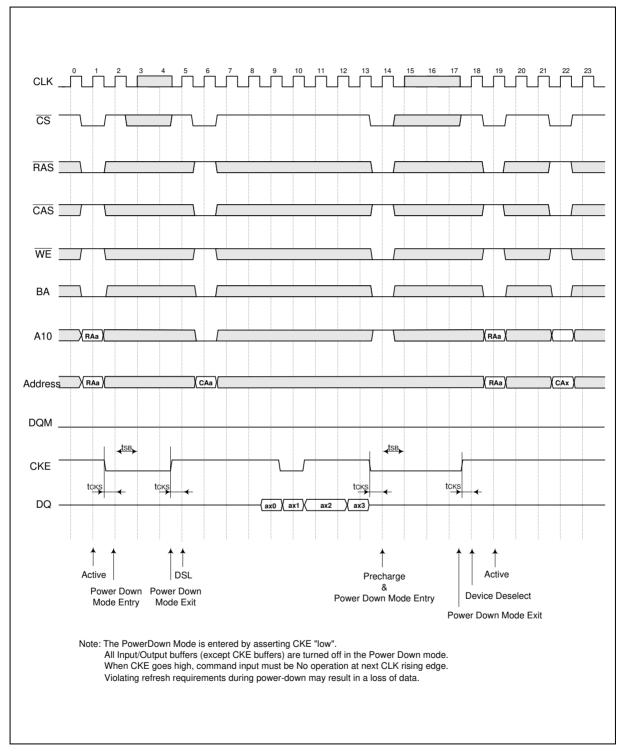


E

E 11.15 Deep Power Down Mode Entry 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 3 CLK __ י 1 ר 2 CS tRP RAS CAS WE _ BA0,BA1 A10 Address DQM tsb. CKE tcks DQ Active Banks Precharge Deep Power Down Entry

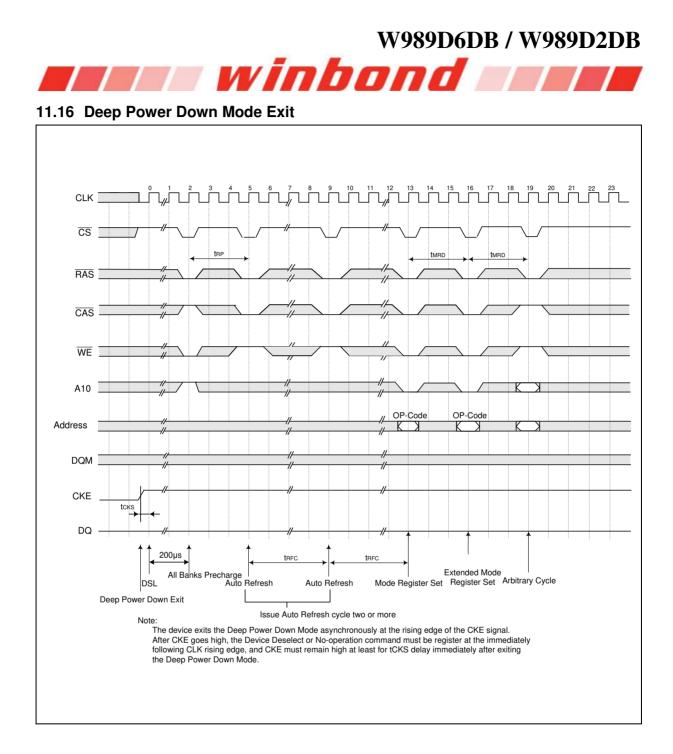


11.17 Auto-precharge Timing (Read Cycle)

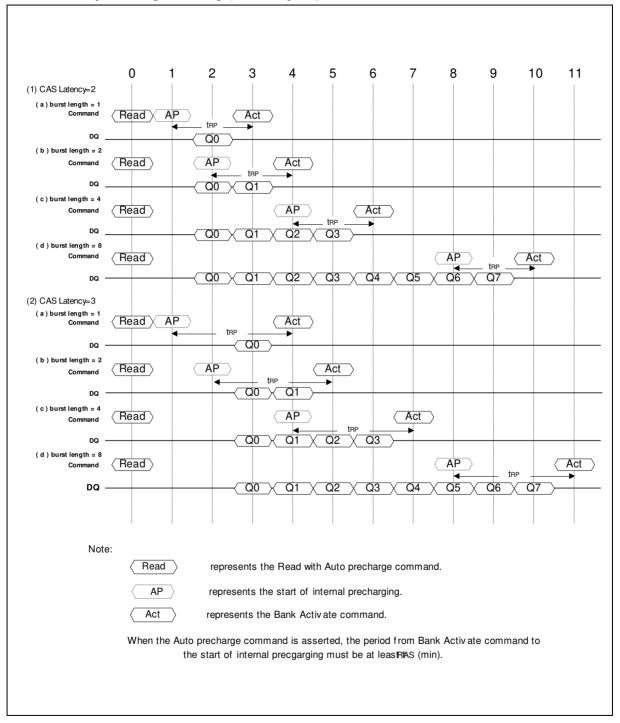


THEFT Winbond

11.18 Auto-precharge Timing (Write Cycle)

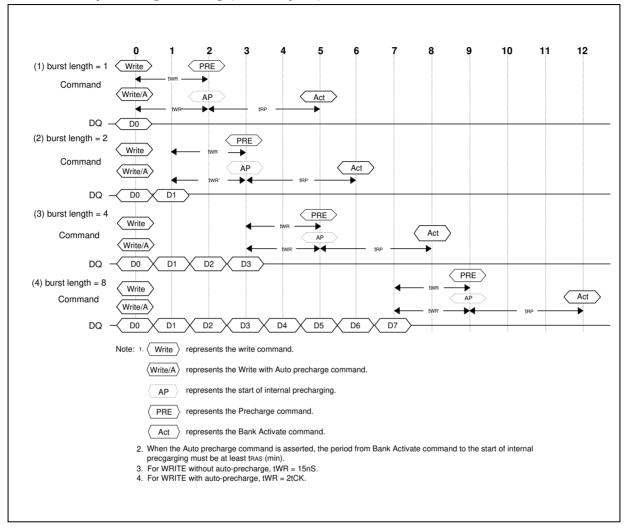


E


11.19 Timing Chart of Read to Write Cycle

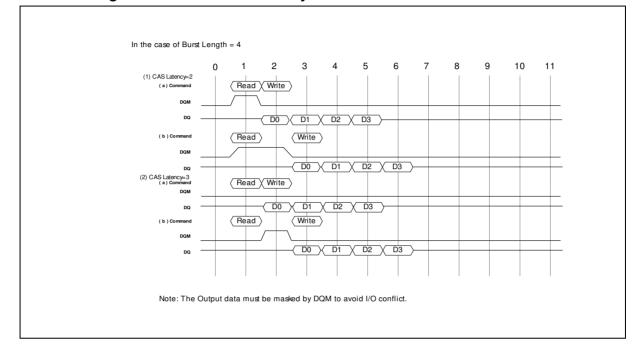


rese winbond

11.20 Timing Chart of Write to Read Cycle

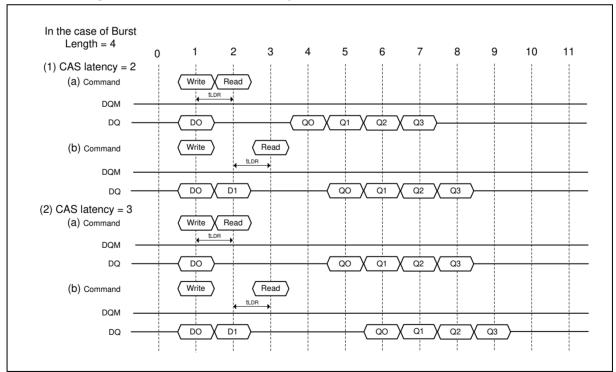


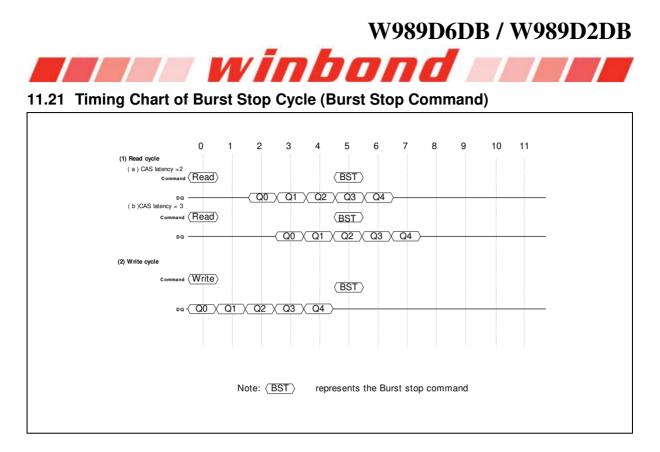

11.22 Timing Chart of Burst Stop Cycle (Precharge Command)

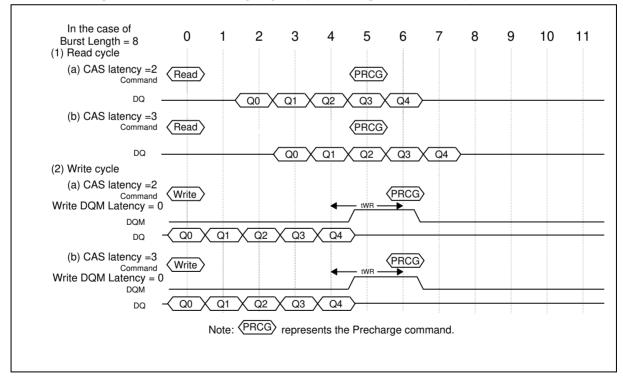


11.23 CKE/DQM Input Timing (Write Cycle)

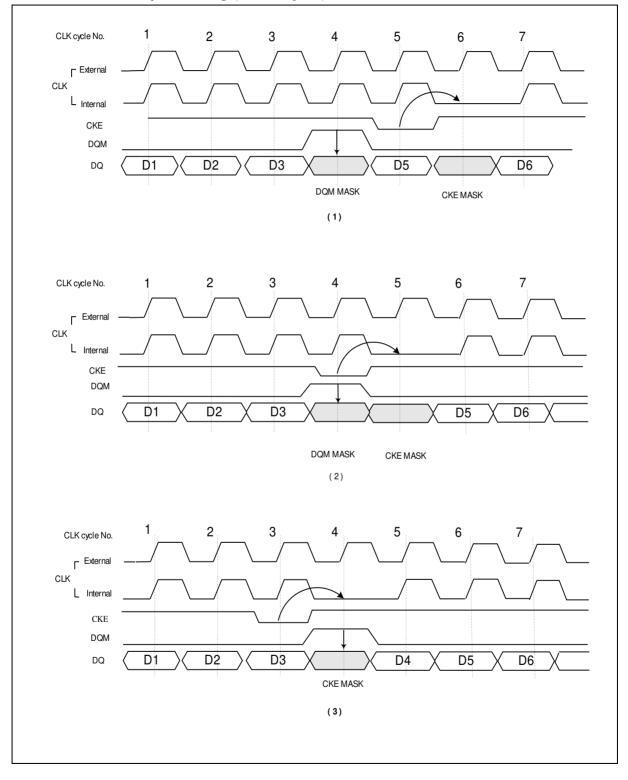

winbond

11.24 CKE/DQM Input Timing (Read Cycle)

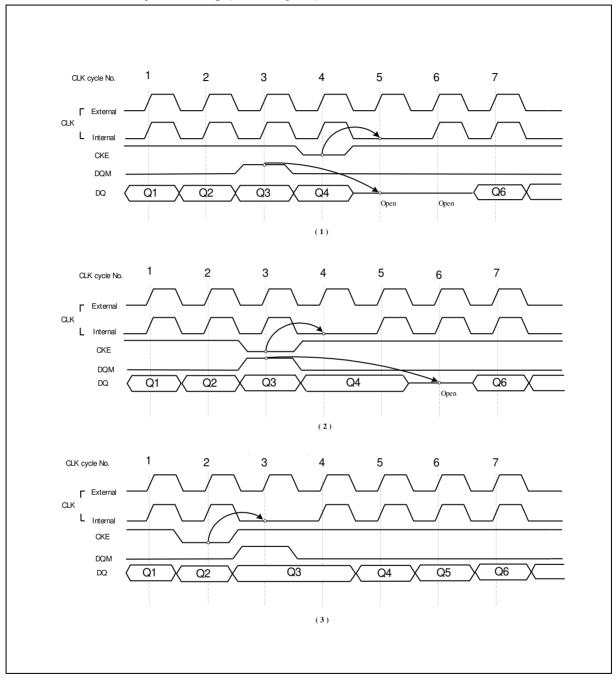


winbond

12. PACKAGE SPECIFICATION

12.1 LPSDR x16


Package Outline VFBGA 54 Balls (8x9 mm², Ball pitch:0.8mm)

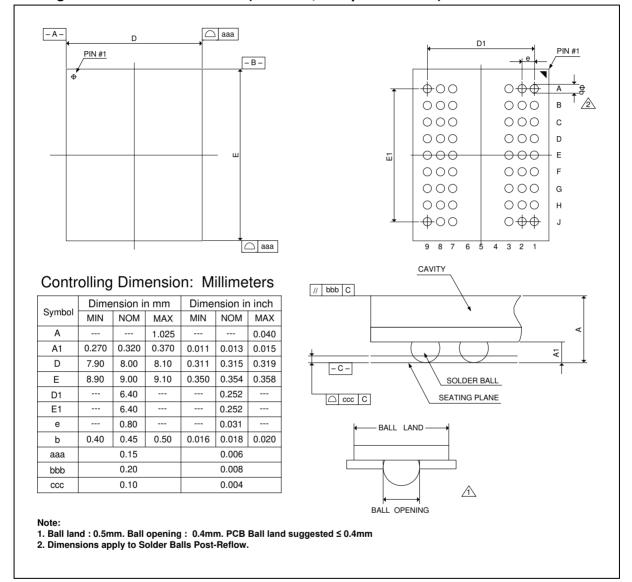

FEERE Winbond

12.2 LPSDR x32

Package Outline VFBGA 90 Balls (8x13 mm², Ball pitch: 0.8mm)

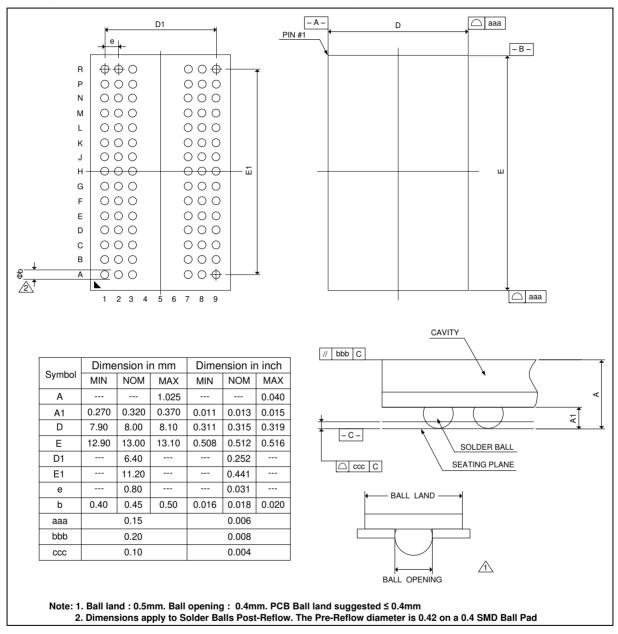

13. REVISION HISTORY

VERSION	DATE	PAGE	DESCRIPTION
A01-001	Mar. 19, 2014	All	Initial formally datasheet
A01-002	Dec. 01, 2016	29	Revise AC parameter tRRD unit from tCK to nS
		62	Revise VFBGA 54 symbol "A1" and "ccc" spec Remove symbol "A2" spec
		63	Revise VFBGA 90 symbol "A1" and "ccc" spec Remove symbol "A2" spec

THEFT Winbond

Important Notice

Winbond products are not designed, intended, authorized or warranted for use as components in systems or equipment intended for surgical implantation, atomic energy control instruments, airplane or spaceship instruments, transportation instruments, traffic signal instruments, combustion control instruments, or for other applications intended to support or sustain life. Further more, Winbond products are not intended for applications wherein failure of Winbond products could result or lead to a situation wherein personal injury, death or severe property or environmental damage could occur.

Winbond customers using or selling these products for use in such applications do so at their own risk and agree to fully indemnify Winbond for any damages resulting from such improper use or sales.

Please note that all data and specifications are subject to change without notice.

All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.