

# LFSTBEB845x Quick Start Guide

**STEP  
1**

**Unpack the board.  
Verify package contents  
according to the kit Web  
site: [www.freescale.com/  
sensortoolbox](http://www.freescale.com/sensortoolbox)**

Assemble the hardware by connecting a development board to the LFSTBUSB interface board. This kit comes with 3 accelerometer development boards that represent the MMA845xQ family. Each development board can be connected to the LFSTBUSB interface board. Both of these board types have a small arrow to indicate where to connect. See the image below. More information can be found on the Web site.

**STEP  
2**

**At [www.freescale.com/  
sensortoolbox](http://www.freescale.com/sensortoolbox)  
download the latest software  
version by clicking: [Download Software](#)**

All Sensor Toolbox kits use the same software and driver, so the install only needs to be done once. Follow the on-screen instructions to install the on-screen instructions to install the communication driver for the tool. Check back occasionally for software updates.

**STEP  
3**

**Plug in the USB and turn  
the board on using the  
power switch. Run the Sensor  
Toolbox link on your desktop.**

Explore other compatible kits at  
[www.freescale.com/sensortoolbox](http://www.freescale.com/sensortoolbox)




Freescale MMA845xQ  
3 x 3 x 1.0 mm QFN

MMA8451Q  
14-bit  
accelerometer

MMA8452Q  
12-bit  
accelerometer

MMA8453Q  
10-bit  
accelerometer

Freescale LFSTBUSB  
Interface Board

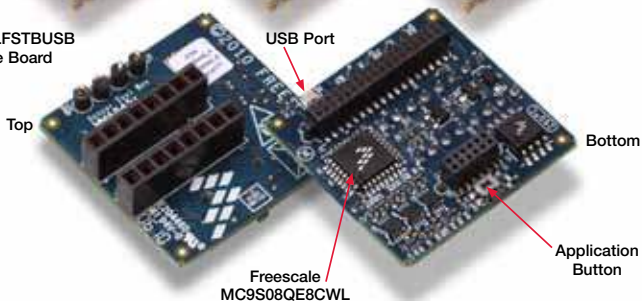

USB Port

Top

Bottom

Freescale  
MC9S08QE8CWL

Application  
Button

Learn more at [www.freescale.com/sensortoolbox](http://www.freescale.com/sensortoolbox).

Freescale and the Freescale logo are trademarks or registered trademarks of Freescale Semiconductor, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners. © Freescale Semiconductor, Inc. 2010.

Doc Number: SNSRTLXQSG / REV 0  
Agile Number: 926-78478 / REV A

