

## 200-568 Combatstick Button Assignments



Button 1 = Index Trigger

Button 2 = Left Position Red Button

Button 3 = Front Gray Button

Button 4 = Pinky Red Button

Button 5 = Back Side Red Button

Button 6 = Top Red Button

Buttons 7 through 10 = Four Way Hatswitch

POV Hatswitch = 8 Directions

X & Y Axes = Joystick Handle, typically used for Elevator and Ailerons

Z Axis = Black Wheel, typically used for Throttle