


# T2 Terminator Tooling Specification Sheet Part No. 63852-2000

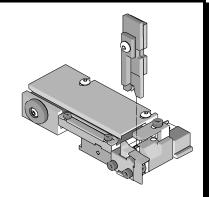

#### **FEATURES**


- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tablength
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements

### **SCOPE**

Products: 1.27mm (.050") Pitch Ulti-Mate™ Commercial Micro D, 26-28 AWG

Terminal Series No.	Terminal Order No.		Wire Size		Insulation Diameter		Strip Length	
Terminal Series No.			AWG	mm²	mm	ln.	mm	ln.
83000	83000-9502	83000-9503	26	0.14	0.89-1.02	.035040	1.30-1.60	.051063
	83000-9547	83000-9550						
	83000-9557	83000-9558						
	83000-9559	83000-9561						
	83000-9562							
	83000-9502	83000-9503				.020039	1.30-1.60	.051063
	83000-9547	83000-9550	28					
	83000-9557	83000-9558		0.08	0.50-1.00			
	83000-9559	83000-9561						
	83000-9562							

### **DEFINITION OF TERMS**

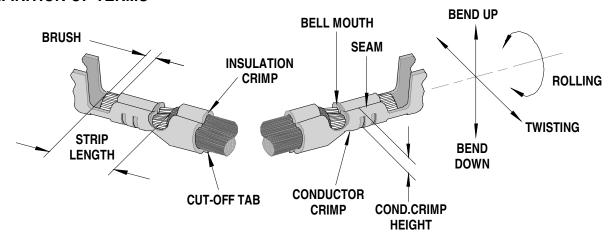

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

Doc No: ATS- 638522000 Release Date: 09-07-01 **UNCONTROLLED COPY** Page 1 of 6 Revision: C Revision Date: 10-10-07

## **CRIMP SPECIFICATION**

Terminal Series No.	Bell r	nouth	Cut-off Tab	Maximum	Conductor Brush		
Terriniai Series No.	mm	ln.	mm	ln.	mm	ln.	
83000	0.00-0.10	.000004	0.15	.006	0.00-0.45	.000018	

	Bend up Bend down		Twist Roll		Punch Width (Ref)			Seam	
Terminal Series No.	Bellu up	Conductor			Insulation		Seam shall not be open		
	Deg	gree	De	gree	mm	ln.	mm	ln.	and no wire allowed out
83000	3	3	8	10	0.80	.031	0.90	.035	of the crimping area

The above specifications are guidelines to an optimum crimp.

## **CONDITIONS**

After crimping, the conductor profile should measure the following.

Terminal Order No.	Wire Size		Crimp	Height	Pull Force Minimum		
Terminal Order No.	AWG	mm <sup>2</sup>	mm	ln.	N	Lb.	
83000-9502	28	0.08	0.41-0.46	.016018	9.8	2.20	
03000-9302	26	0.14	0.54-0.58	.021023	13.4	3.00	
83000-9503	28	0.08	0.41-0.46	.016018	9.8	2.20	
03000-9303	26	0.14	0.54-0.58	.021023	13.4	3.00	
83000-9547	28	0.08	0.41-0.46	.016018	9.8	2.20	
00000-9047	26	0.14	0.54-0.58	.021023	13.4	3.00	
83000-9550	28	0.08	0.41-0.46	.016018	9.8	2.20	
03000-9330	26	0.14	0.54-0.58	.021023	13.4	3.00	
83000-9557	28	0.08	0.41-0.46	.016018	9.8	2.20	
00000-9007	26	0.14	0.54-0.58	.021023	13.4	3.00	
83000-9558	28	0.08	0.41-0.46	.016018	9.8	2.20	
03000-9330	26	0.14	0.54-0.58	.021023	13.4	3.00	
83000-9559	28	0.08	0.41-0.46	.016018	9.8	2.20	
00000-9009	26	0.14	0.54-0.58	.021023	13.4	3.00	
83000-9561	28	0.08	0.41-0.46	.016018	9.8	2.20	
00000-9001	26	0.14	0.54-0.58	.021023	13.4	3.00	
83000-9562	28	0.08	0.41-0.46	.016018	9.8	2.20	
03000-9302	26	0.14	0.54-0.58	.021023	13.4	3.00	

Pull Force should be measured with no influence from the insulation crimp.


**UNCONTROLLED COPY** Doc No: ATS- 638522000 Release Date: 09-07-01 Revision: C Revision Date: 10-10-07

Page 2 of 6

# **PARTS LIST**

T2 Terminator 63852-2000								
Item	Order No	Engineering No.	Description	Quantity				
Perishable Tooling								
	63852-2070	63852-2070	Tool Kit (All "Y" Items)	REF				
1	63820-7801	63820-7801	Conductor Punch	1 Y				
2	63445-0807	63445-0807	Conductor Anvil	1 Y				
3	63454-0019	63454-0019	Insulation Punch	1 Y				
4	63445-0906	63445-0906	Insulation Anvil	1 Y				
5	63443-0003	63443-0003	Cut-Off Plunger Front	1 Y				
6	63443-0012	63443-0012	Plunger Retainer Front	1 Y				
		Other Componer	, , ,					
7	11-18-4083	60707-8	Front Cover	1				
8	11-24-1067	4996-4	Cut-off Plunger Spring	1				
9	11-40-4039	9 8302-5 Plunger Striker Front		1				
10	63443-0009	63443-0009	Scrap Chute Front	1				
11	63443-0021	63443-0021	Lower Tooling Key	1				
12	63443-2423	63443-2423	Anvil Mount	1				
13	63443-4025	63443-4025	Wire Stop	1				
14	63443-6001	63443-6001	Rear Cover	1				
Frame								
15	63800-8500	63800-8500	T2 Terminator	1				
		Hard	ware					
16	N/A	N/A	M3 by 6 Long SHCS	2**				
17	N/A	N/A	M4 by 6 Long SHCS	1**				
18	N/A	N/A	M4 by 12 Long BHCS	2**				
19	N/A	N/A	M4 by 16 Lg SHCS	1**				
20	N/A	N/A	M4 by 20 Long SHCS	1**				
21	N/A	N/A	M4 by 50 Long SHCS	1**				
22	N/A	N/A	3MM by 6 Long Roll Pin	1**				
23	N/A	N/A	#10-32 by 3/8" Long BHCS	1**				
** Available from an industrial supply company such as MSC (1-800-645-7270).								

**UNCONTROLLED COPY** Doc No: ATS- 638522000 Page 3 of 6 Release Date: 09-07-01 Revision Date: 10-10-07

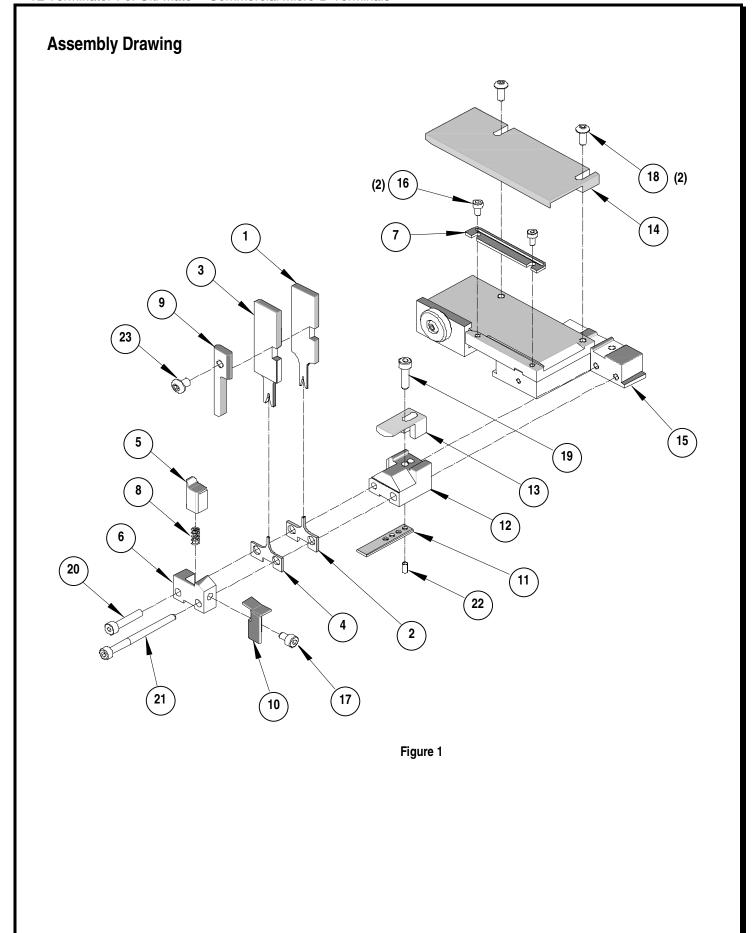

Doc No: ATS- 638522000 Revision: C Release Date: 09-07-01 Revision Date: 10-10-07

### **NOTES**

### Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

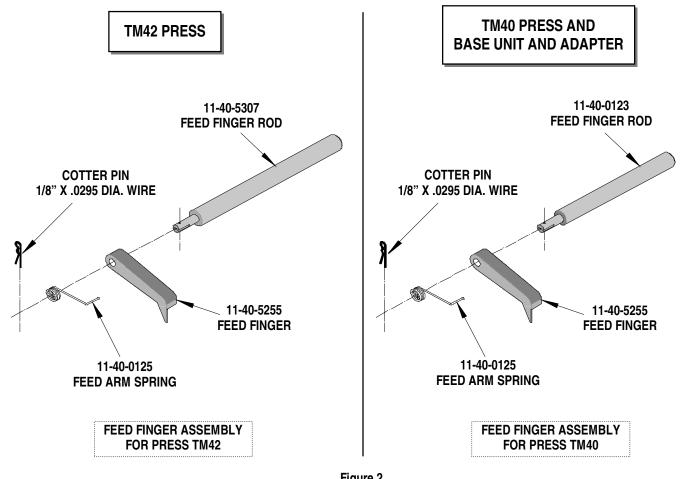


Figure 2

**UNCONTROLLED COPY** Release Date: 09-07-01 Page 5 of 6 Revision: C Revision Date: 10-10-07

Doc No: ATS- 638522000

#### **NOTES**

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

**CAUTION**: To prevent injury never operate this Terminator without the guards supplied with the press or in place. Reference the TM42 press manufacturer's instruction manual.

**CAUTION**: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Americas Headquarters Lisle, Illinois 60532 U.S.A. 1-800-78MOLEX amerinfo@molex.com Far East North Headquarters Yamato, Kanagawa, Japan 81-462-65-2324 feninfo@molex.com

Far East South Headquarters
Jurong, Singapore
65-6-268-6868
fesinfo@molex.com

European Headquarters Munich, Germany 49-89-413092-0 eurinfo@molex.com

Corporate Headquarters 2222 Wellington Ct. Lisle, IL 60532 U.S.A. 630-969-4550 Fax: 630-969-1352

Visit our Web site at http://www.molex.com

Doc No: ATS- 638522000 Release Date: 09-07-01 **UNCONTROLLED COPY** Page 6 of 6 Revision: C Revision Date: 10-10-07