

Getting Started with reServer



reServer, as a milestone product of reThings family, is extremely compact and powerful. This smart tiny server is able to work easily and efficiently from the edge to the cloud.

reServer is based on an ODYSSEY X86 v2 board and powered by the latest Intel® Core[™] 11th Gen. processor and Intel® UHD Graphics or Intel® Iris Xe Graphics, which delivers high CPU and AI performance for various applications. It has two high-speed 2.5-Gigabit Ethernet ports and supports hybrid connectivity including 5G, LoRa, BLE and WiFi. Meanwhile, reServer is of compact design to work efficiently in almost any scenario. The neat structure of reServer also makes it simple to access to the hard drives, memory and PCIe slots which allows easy installation, upgrades and maintenance. Having dual SATA III 6.0Gbps data connectors, reServer is able to equip up to two 3.5"/2.5" SATA internal hard disk drives to acquire more storage. It also has M.2 connectors to connect to various SSDs for faster read and write speeds.

Features

- Compact design for a server with an overall dimension of 132mm x124mm x233mm
- Powered by the latest 11th Gen Intel[®] Core[™] CPU and Intel[®] UHD Graphics or Intel[®] Iris Xe Graphics.
- Rich peripherals including dual® 2.5-Gigabit Ethernet ports, USB 3.2 Type-A port, USB 2.0 Type-A port, HDMI port and DP port
- Support hybrid connectivity including 5G, LoRa, BLE and WiFi (5G and LoRa need additional modules)
- Dual SATA III 6.0 Gbps data connectors for 3.5"/2.5" SATA hard disk drives with enough space inside the enclosure to store them both
- M.2 B-Key/ M-Key/ E-Key for expandability such as SSD, 4G/5G modules, WiFi 6
- Quiet cooling fan with a large VC heat sink for excellent heat dissipation
- Easy to install, upgrade and maintain with ease of access to the internal components after opening the enclosure
- Pre-installed Windows 10 Enterprise(Unactivated), also support other Windows OS and Linux OS

Versions		Basic Versions		High Performance Versions		
Platform		Core™ 11th Gen.	11th Gen.	Core™ 11th Gen.		Intel® Core™ vPro® 11th Gen. i7 1185GRE
	Cores/Threads of processor	2C/4T	4C/8T	4C/8T	4C/8T	4C/8T

Specifications

Versions		Basic Versions High Performanc		mance Versions			
	Co-processor	Microchip® ATSAMD21G18 32- Bit ARM® Cortex-M0+ @ 48MHz			Raspberry Pi [®] RP2040 32-Bit Dual ARM Cortex-M0+ @ 133MHz		
Memory	Technology	Dual Channels DDR4-3200					
	Capacity	8GB; 16GB (Support up to 64GB)			Support up to 64GB		
	ECC Memory Supported	NO			YES		
Graphics	Controller	UHD Graphics 48EUs (400 -	Intel® UHD Graphics 48EUs (400 - 1250MHz)	Xe Graphics G7 80EUs(400-	Intel [®] Iris Xe Graphics G7 80EUs(400- 1300MHz)	Intel® Iris Xe Graphics G7 96EUs(400-1300MHz)	
Advanced Technologies			YES				
	Intel [®] Total Memory Encryption	NO		YES			
Network	Controller	Intel [®] Ethernet Controller I225-V			Intel [®] Ethernet Controller I225-LM		
Wireless	WiFi	M.2 E-Key(PCIE & CNVi Support)			Intel [®] Wi-F	i 6 AX201(Optional)	
	Bluetooth	Bluetooth	5.0, BLE(O	ptional)			
Display	LCD	eDP 40-Pin 4 Lane Connector					
	HDMI	1 x HDMI 2.0b, up to 4Kx2Kx24bpp@60Hz					
	DP	1 x DP1.4a 7680x4320x24bpp@60Hz					
	Multiple Display	4 simultan	eous displa	ays with eac	h display int	erface combination	
External I/O	Ethernet	2 x 2.5GbE LAN ports (RJ45, supports 10/100/1000/2500 Mbps), Intel® i225					
	HDMI/DP	One/One					

Versions		Basic Versions	High Performance Versions			
USB Type-C		N/A	USB PD / USB 4.0 / Thunderbolt 4			
	USB Type-A	USB2.0 Type A x1 ; USB3.2 Type A x1	USB2.0 Type A x2 ; USB3.2 Type A x1			
	LED	Power Status				
	Power Supply	1x5.5x2.5mm DC Jack / Wafer 2.0mm 8pin				
	Micro Sim Card Slot	1				
Internal I/O	SATA	2 x SATA Gen III 6.0 Gb/s Data Connectors + 3 x SATA Power Connectors				
	COM Port	1 x RS-232/422/485, 1 x RS-232				
	GPIO	28-Pin Arduino Co-processor 2.54mm header	30-Pin Raspberry Pi Co-processor 2.54mm header			
	Audio	Realtek High Definition Audio, Microphone + headphone Combo Connector				
	USB2.0	USB2.0 9-pin Header x2 480Mbps				
	Fan	2 x 12V 4-wire Fan header, PWM Control				
	Front Panel Control	Power-on, Reset, Power Status LED, SATA Status LED				
	S/PDIF	3-Pin 2.54mm Header				
	SATA Power	WAFER4-Pin 2.0 pitch Connector				
	Co-CPU. Debug Port	6-Pin 0.5mm FPC Connector (SWD)				
Expansion	M.2 M-Key	1 x M-Key 2242/2280(PCle 3.0 x4)				
	M.2 E-Key	1 x E-Key 2230(PCIe 3.0 x1; USB2.0 x1;Intel CNVi)				
	M.2 B-Key	1 x B-Key2242/2252/2280(PCle 3.0 x2; USB2.0 x1)				
	High Speed I/O	1 X PCle x4 Gen4	1 X PCIe 3.0 x4/SMBus/LPC/USB 2.0/CPU GPIO etc.			
Power	Supply Voltage	DC Jack: 12V	DC Jack: 12V-19V			

Versions		Basic Versions	High Performance Versions		
	RTC Battery	Lithium 3V/210mAH			
Certification	EMC	CE,FCC,TELEC			
Mechanical Dimension		132mm*124mm*233mm			
	Thermal Solution	Heat Pipe Assemblies/Heat Spre	ading Vapor Chamber Assemblies		
	Weight	1800g			

Comparison

Version	Basic Versions		High Performance Versions		
Appearance					
Processor	Intel® Core™ 11th Gen. i3 1115G4	Intel® Core™ 11th Gen. i3 1125G4	Intel® Core™ 11th Gen. i5 1135G7	Intel® Core™ vPro® 11th Gen. i5 1145GRE	Intel® Core™ vPro® 11th Gen. i7 1185GRE
Cores/Threads of processor	2C/4T	4C/8T	4C/8T	4C/8T	4C/8T
Co-processor	Microchip [®] ATSAMD21G18 32-Bit ARM [®] Cortex- M0+ @ 48MHz			Raspberry Pi [®] RP2040 32-Bit Dual ARM Cortex-M0+ @ 133MHz	
Intel [®] vPro [®]	NO		YES		
Intel [®] Total Memory Encryption	NO		YES		
Graphics	Intel [®] UHD Graphics 48EUs (400 - 1250MHz)	Intel [®] UHD Graphics 48EUs (400 - 1250MHz)	Intel [®] Iris Xe Graphics G7 80EUs(400- 1300MHz)	Intel® Iris Xe Graphics G7 80EUs(400- 1300MHz)	Intel [®] Iris Xe Graphics G7 96EUs(400- 1300MHz)
Memory	Dual Channels DDR4-3200(Support up to 64GB in total)				
ECC Memory Supported	NO			YES	


Version	Basic Versions	High Performance Versions
Network Controller	Intel [®] Ethernet Controller I225-V	Intel® Ethernet Controller I225- LM
	M.2 M-Key; M.2 B-Key; M.2 E-Key; 1 X PCle x4 Gen4	M.2 M-Key; M.2 B-Key; M.2 E- Key; 1 X PCle 3.0 x4/SMBus/LPC/USB 2.0/CPU GPIO etc.
	USB Type-A(USB2.0 Type-A x1 ; USB3.2 Type-A x1); HDMI; DP; 2.5GbE LAN ports x2; Audio Jack; DC Jack(12V);	USB Type-C(USB PD / USB 4.0 / Thunderbolt 4); USB Type-A(USB2.0 Type-A x2 ; USB3.2 Type-A x1); HDMI;DP; 2.5GbE LAN ports x2; Audio Jack; DC Jack(12V-19V);
WirelessConnectivi ty	WIFI, BLE and Support LTE/4G/5G/LoRaWAN	

Hardware Overview

There are two different versions of reServer, Basic version and High performance version, which have different hardware configurations.

Basic version



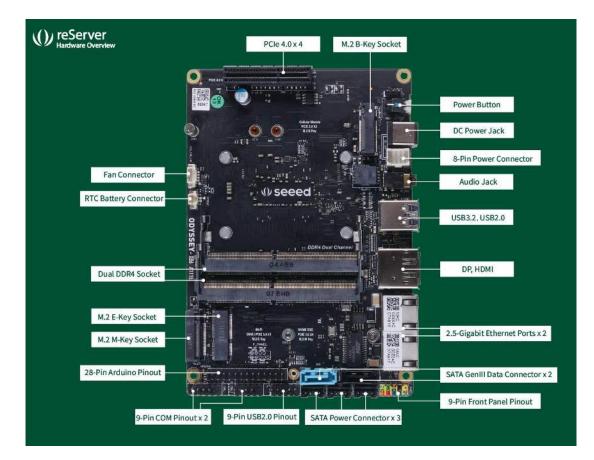



Dimensions

Both versions have the same dimensions.



Quick Start with reServer

If you want to get started with reServer in the fastest and easiest way, you can follow the guide below.

Hardware Required

You need to prepare the following hardware before getting started with reServer $\,{}^{\circ}$


- reServer
- Power Adapter(provided)
- External monitor
- HDMI/DP cable
- Keyboard and Mouse

Hardware Installation

For this part, we will introduce how to install or replace some hardware inside reServer. If there are no needs for you, please skip it. You might follow the **Assembly Guide Manual** attached at the end of this page to access to the main board of reServer before reading this part.


DDR4 Installation

DDR4-3200MT/s has been pre-installed for all versions of reServer but you can also add a new DDR4 to the other channel or replace the pre-installed one with your own to expand memory. The dual-channel SO-DIMM slots support DDR4-3200MT/s up to 64GB in total.

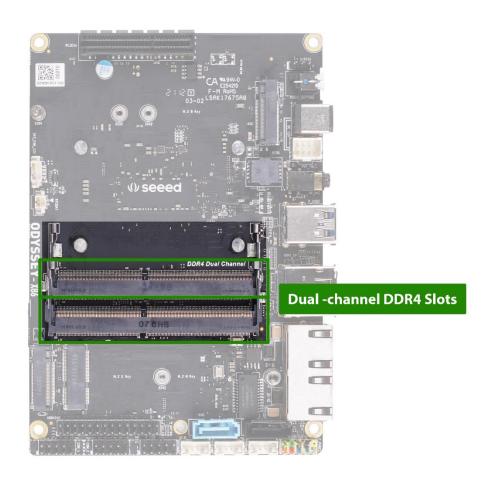

SSD Installation


A NVMe SSD has been pre-installed for all versions of reServer, while, still, the M.2 M-Key 2242/2280(PCIe 3.0 x4) allows you to replace it with the SSD you desire.

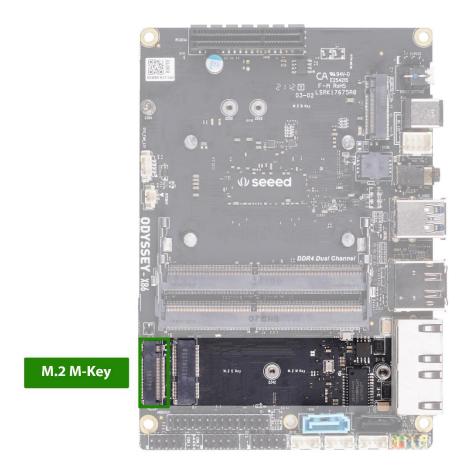


WiFi Module Installation

All versions of reServer have installed 2230 Dual Band WiFi 6 AX201(CNVio) Module at M.2 E-Key 2242/2280(PCIe 3.0x4). If you want to replace the preinstalled WiFi Module, feel free to follow the steps below.

- Step 1. Remove the SSD from M.2 M-Key slot.
- **Step 2.** Take off the WiFi antenna cable and remove the pre-installed WiFi Module from M.2 E-Key.

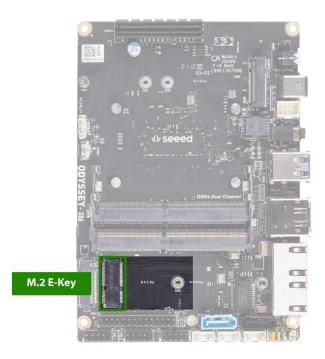

- **Step 3.** Install the new WiFi Module and connect the WiFi antenna cable back to it.
- Step 4. Install the SSD back to M.2 M-Key.

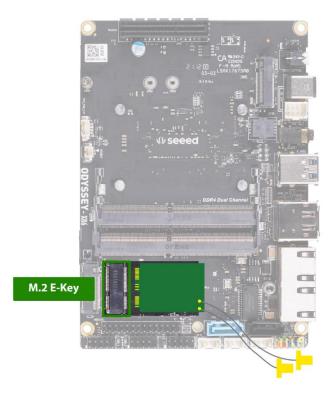


Note: reServer is shipped with two 2.4/3 GHz WiFi Antennas, you can attach the antenna to the adapter which connects with the antenna cable of the WiFi module inside the reServer to achieve better WiFi connectivity.




4G/5G/LoRaWAN Module Installation

reServer supports installing 4G/5G/LoRaWAN Module at M.2 B-Key 2242/2252/2280(PCIe 3.0 x2; USB2.0 x1). **(4G/5G/LoRaWAN Module is not included in reServer)** Please feel free to follow the steps to add 4G/5G/LoRaWAN Module.

• Step 1. Install 4G/5G/LoRaWAN Module to M.2 B-Key.

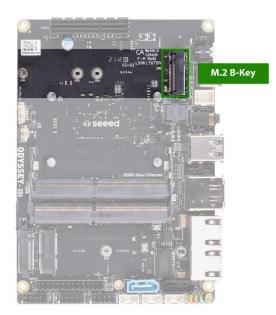

• Step 2. Connect the antenna cable to the Module.

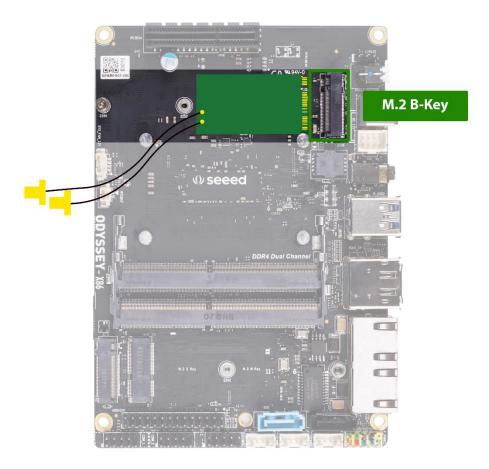

Note: You have to insert a standard SIM card into the micro SIM card slot to enable 5G/4G.

HDD Installation

reServer supports installing two 3.5"/2.5" internal hard disk drives to acquire more storage. (The HDDs are not included in reServer) Please follow the steps to install the HDDs. - Step 1. Remove the screws and pull out the brackets

- **Step 2**. Attach the HHDs to the brackets with screws
- **Step 3.** Push the HDD brackets down to connect the HHDs with the SATA ports.
- Step 4. Fix the HDD brackets with screws



Hardware Connection

For this part, we will introduce the interface connection of reServer. There are two versions of reServer. Please note that different versions might have different interfaces.

Display Connection

There are three methods for reServer to connect to a display while the third method is only for High-performing versions. **Method 1.** HDMI Port **•**

Method 2. DP Port

Method 3. USB Type-C(Available with High-performing versions only)

Basic version









Keyboard and Mouse Connection

Connect keyboard and mouse through USB ports. There are one USB 3.2 port and one USB 2.0 port for Basic versions while there are one USB 3.2 port and two USB 2.0 ports for High-performing versions. Basic version









Audio Connection

For Basic versions, the Audio Jack is on the left side I/O panel, while, for Highperforming versions, it's on the right side I/O panel for High-performing versions

Basic version









Power Connection

There are two methods to power up reServer, and the second one is only for High-performing versions.

Method 1. Simply connect AC-DC power adapter(included in the product box) with AC power cord(Out of the product box but still in the package), then connect it to 12V DC Jack of reServer.

Method 2. Connect USB Type-C charging cable(Not included in reServer) to the Thunderbolt 4 USB Type-C port(This port is only available with High-performing versions)

Basic version









Operation System Installation

For all versions of reServer, Windows 10 Enterprise(Unactivated) has been preinstalled, you can simply boot it up and activate the OS. However, reServer still supports other Windows OS and, also, Linux OS, so you can cover the preinstalled OS with the one you want.

Resources

- [PDF] reServer Assembly Guide
- [PDF] Atmel-SAMD21-datasheet

Tech Support

Please submit any technical issue into our forum.