

**I<sup>2</sup>S/TDM Output MEMS Microphone Flex Evaluation Boards**

**GENERAL DESCRIPTION**

This user guide applies to the following MEMS microphone evaluation boards:

- EV\_INMP441-FX
- EV\_ICS-43432-FX
- EV\_ICS-52000-FX

These are simple evaluation boards that allows quick evaluation of the performance of the INMP441, ICS-43432 and ICS-52000 MEMS microphones. The small size and low profile of the flexible PCB enables direct placement of the microphone into a prototype or an existing design for an in situ evaluation. The board consists of an I<sup>2</sup>S-output microphone soldered to a flexible PCB. The only other component on the board is a 0.1 μF supply bypass capacitor.

The flex PCB is designed to mate to a ZIF connector with 1.0 mm pin spacing. The Molex 52610-1071 connector is included in the kit with the flex PCB. The flex PCB can be mated to the connector by first pulling out the connector's tan clamp, inserting the flex PCB, and then pushing the clamp closed. Wires can be soldered directly to this connector's pins or it can be mounted directly on a rigid PCB for evaluation. It is recommended to use 28 AWG or smaller wire for soldering to this connector's pins. The PCB thickness at the pin edge is 0.3 mm.

The only functional differences between the boards with the different microphones mounted are the functions of pins 5 and 9 on the connector. On the EV\_INMP441-FX, pin 5 is the L/R channel select and pin 9 is an active-high enable for the microphone. For the EV\_ICS-43432-FX, pin 5 is also the L/R channel select and pin 9 should be set to ground. For the ICS-52000, pin 5 is the WS output and pin 9 should be set to VDD. All pin function descriptions are described in .

**TABLE 1. PIN FUNCTION DESCRIPTIONS**

Wire Color	Microphone Pin	Description
1	GND	Ground
2	SD	Serial digital output signal for I <sup>2</sup> S or TDM interface
3	SCK	Serial clock for I <sup>2</sup> S or TDM interface
4	WS	Word select for I <sup>2</sup> S or TDM interface
5	L/R (INMP441, ICS-43432)	Left/right channel select
	WSO (ICS-52000)	WS Output
6	GND	Ground
7	VDD	Power supply (1.8-3.3 V and 2 mA maximum)
8	GND	Ground
9	CHIPEN (INMP441)	Chip enable: Set to GND
	CONFIG (ICS-43432)	Set to VDD
10	CONFIG (ICS-52000)	Set to VDD
	GND	Ground

**EVALUATION BOARD CIRCUIT**

Figure 1 and Figure 2 show the schematics of the evaluation boards, and Figure 4 and show the flex board layouts. See the respective microphone data sheets for complete descriptions and specifications of the microphones.

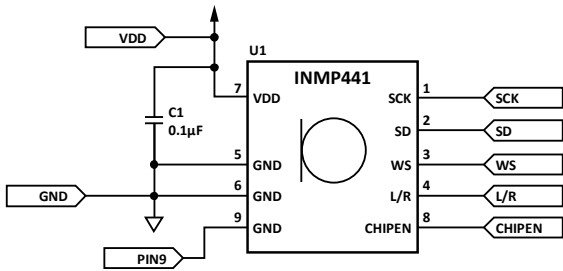


Figure 1. EV\_INMP441-FX Evaluation Board Schematic

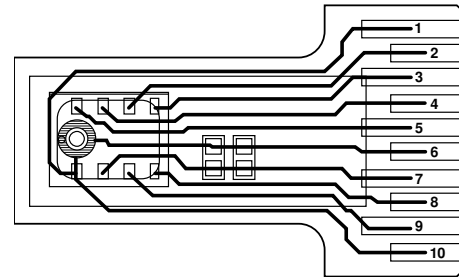


Figure 4. EV\_INMP441-FX Evaluation Board Layout (Top View)

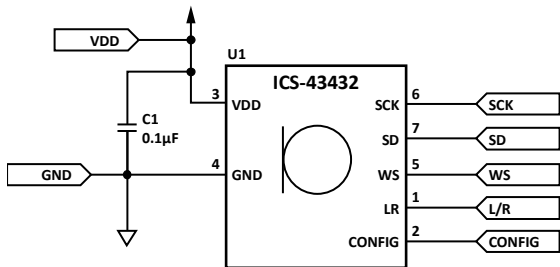


Figure 2. EV\_ICs-43432-FX Evaluation Board Schematic

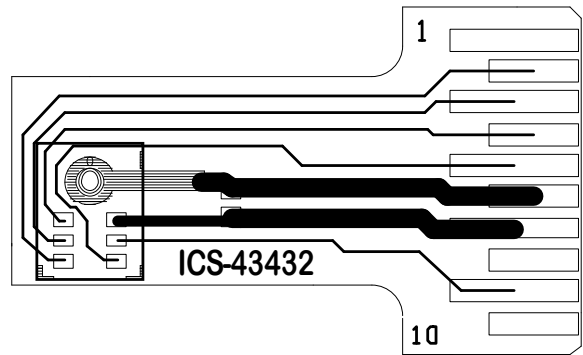


Figure 5. EV\_ICs-43432-FX and EV\_ICs-52000-FX Evaluation Board Layout (Top View)

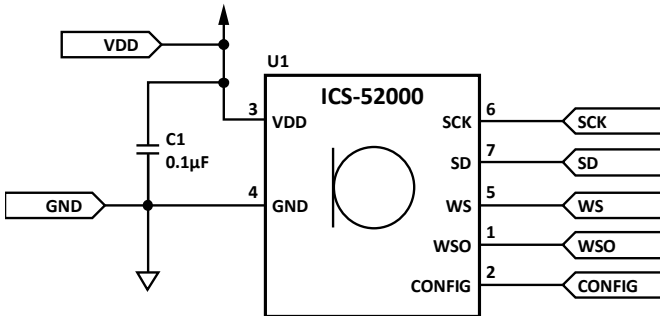


Figure 3. EV\_ICs-52000-FX Evaluation Board Schematic



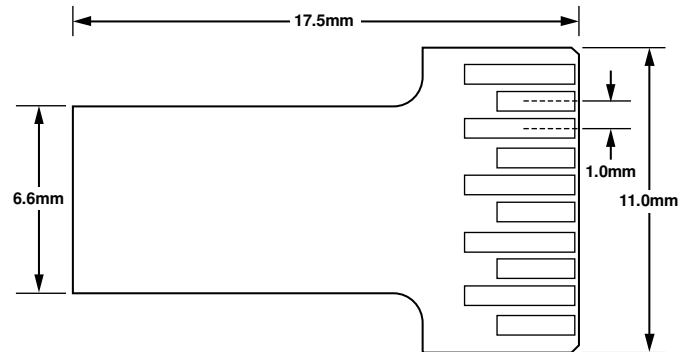


Figure 6. Evaluation Board Dimensions in Millimeters


**EVALUATION BOARD PHOTOGRAPHS**

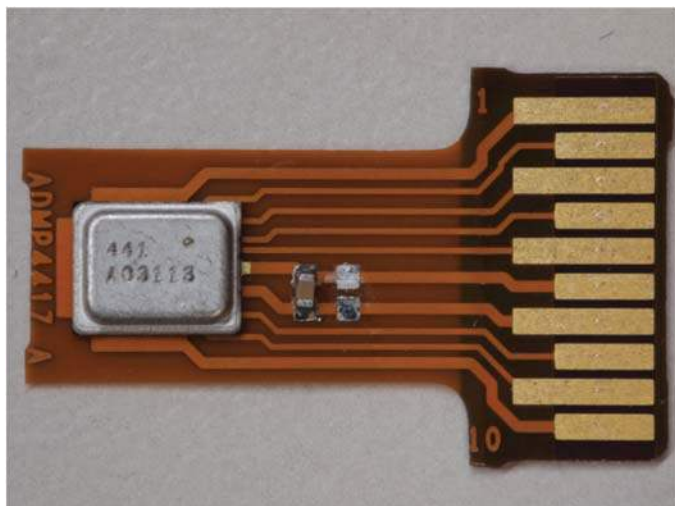


**Figure 7. EV\_INMP441-FX Top View**

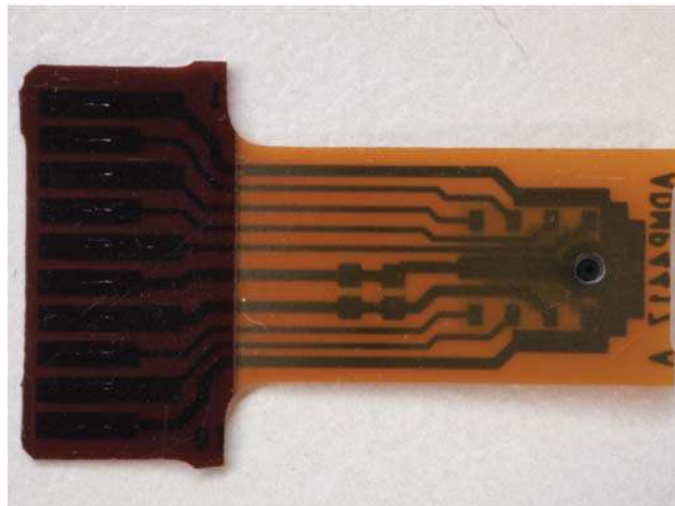

**Figure 9. EV\_INMP441-FX Bottom View**

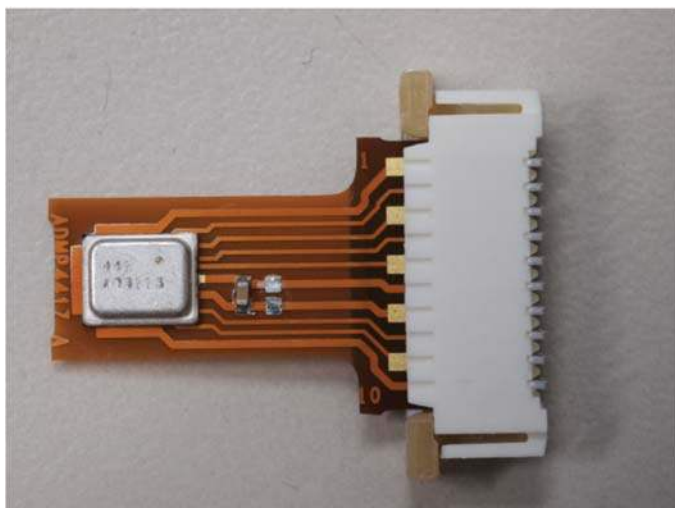

**Figure 8. EV\_INMP441-FX Flex PCB with Molex ZIF Connector**

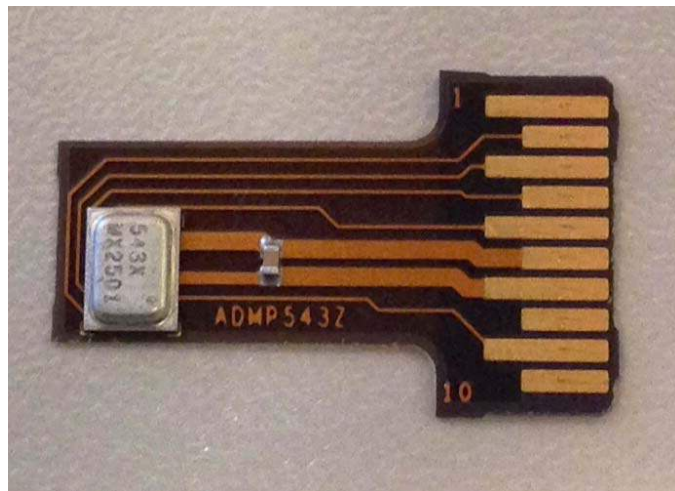

**Figure 10. EV\_IC5-43432-FX and EV\_IC5-52000-FX Top View**

---

**REVISION HISTORY**

<b>Revision Date</b>	<b>Revision</b>	<b>Description</b>
07/23/2014	1.2	Initial Release
8/26/2016	1.3	Added documentation for EV_ICS-52000-FX

---

**COMPLIANCE DECLARATION DISCLAIMER**

InvenSense believes the environmental and other compliance information given in this document to be correct but cannot guarantee accuracy or completeness. Conformity documents substantiating the specifications and component characteristics are on file. InvenSense subcontracts manufacturing, and the information contained herein is based on data received from vendors and suppliers, which has not been validated by InvenSense.

This information furnished by InvenSense is believed to be accurate and reliable. However, no responsibility is assumed by InvenSense for its use, or for any infringements of patents or other rights of third parties that may result from its use. Specifications are subject to change without notice. InvenSense reserves the right to make changes to this product, including its circuits and software, in order to improve its design and/or performance, without prior notice. InvenSense makes no warranties, neither expressed nor implied, regarding the information and specifications contained in this document. InvenSense assumes no responsibility for any claims or damages arising from information contained in this document, or from the use of products and services detailed therein. This includes, but is not limited to, claims or damages based on the infringement of patents, copyrights, mask work and/or other intellectual property rights.

Certain intellectual property owned by InvenSense and described in this document is patent protected. No license is granted by implication or otherwise under any patent or patent rights of InvenSense. This publication supersedes and replaces all information previously supplied. Trademarks that are registered trademarks are the property of their respective companies. InvenSense sensors should not be used or sold in the development, storage, production or utilization of any conventional or mass-destructive weapons or for any other weapons or life threatening applications, as well as in any other life critical applications such as medical equipment, transportation, aerospace and nuclear instruments, undersea equipment, power plant equipment, disaster prevention and crime prevention equipment.

©2016 InvenSense, Inc. All rights reserved. InvenSense, MotionTracking, MotionProcessing, MotionProcessor, MotionFusion, MotionApps, DMP, AAR and the InvenSense logo are trademarks of InvenSense, Inc. Other company and product names may be trademarks of the respective companies with which they are associated.



©2016 InvenSense, Inc. All rights reserved.