


## LG VRF Air Conditioning

Gateway for the integration of LG VRF systems into KNX home automation systems

### USER MANUAL

Issue date: 04/2020 r1.0 ENGLISH

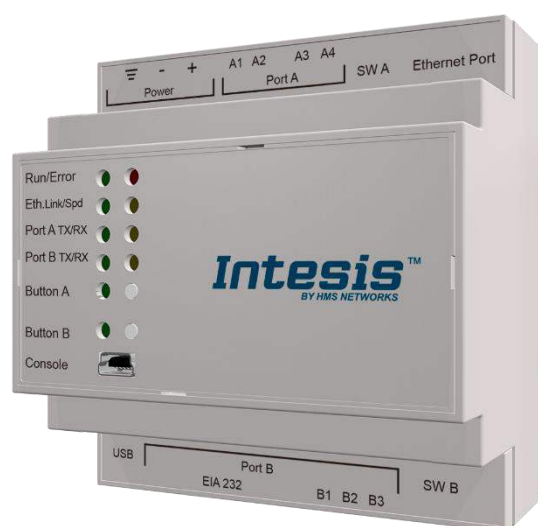

## Important User Information

### Disclaimer

The information in this document is for informational purposes only. Please inform HMS Industrial Networks of any inaccuracies or omissions found in this document. HMS Industrial Networks disclaims any responsibility or liability for any errors that may appear in this document.

HMS Industrial Networks reserves the right to modify its products in line with its policy of continuous product development. The information in this document shall therefore not be construed as a commitment on the part of HMS Industrial Networks and is subject to change without notice. HMS Industrial Networks makes no commitment to update or keep current the information in this document.

The data, examples and illustrations found in this document are included for illustrative purposes and are only intended to help improve understanding of the functionality and handling of the product. In view of the wide range of possible applications of the product, and because of the many variables and requirements associated with any particular implementation, HMS Industrial Networks cannot assume responsibility or liability for actual use based on the data, examples or illustrations included in this document nor for any damages incurred during installation of the product. Those responsible for the use of the product must acquire sufficient knowledge in order to ensure that the product is used correctly in their specific application and that the application meets all performance and safety requirements including any applicable laws, regulations, codes and standards. Further, HMS Industrial Networks will under no circumstances assume liability or responsibility for any problems that may arise as a result from the use of undocumented features or functional side effects found outside the documented scope of the product. The effects caused by any direct or indirect use of such aspects of the product are undefined and may include e.g. compatibility issues and stability issues.

Gateway for the integration of LG VRF systems into KNX home automation systems.

<b>ORDER CODE</b>	<b>LEGACY ORDER CODE</b>
INKNXLGE016O000	LG-AC-KNX-16
INKNXLGE064O000	LG-AC-KNX-64

**INDEX**

1 Description ..... 5

    1.1 Introduction ..... 5

    1.1 Functionality ..... 6

    1.2 Capacity of Intesis ..... 7

2 KNX System ..... 8

    2.1 Description ..... 8

    2.2 Points definition ..... 8

3 Connections ..... 9

    3.1 Power device ..... 10

    3.2 Connect to LG installation ..... 10

    3.3 Connection to KNX ..... 10

    3.4 Connection to the configuration tool ..... 10

4 Set-up process and troubleshooting ..... 11

    4.1 Pre-requisites ..... 11

    4.2 Intesis MAPS. Configuration & monitoring tool for Intesis KNX series ..... 11

        4.2.1 Introduction ..... 11

        4.2.2 Connection ..... 11

        4.2.3 Configuration tab ..... 12

        4.2.4 KNX configuration ..... 12

        4.2.5 LG configuration ..... 14

        4.2.6 Signals ..... 17

        4.2.7 Sending the configuration to Intesis ..... 17

        4.2.8 Diagnostic ..... 18

        4.2.9 Set-up procedure ..... 19

5 Electrical & Mechanical Features ..... 20

6 Dimensions ..... 21

7 AC Unit Types compatibility ..... 22

8 Error codes for Indoor and Outdoor Units ..... 23

9 Appendix A – Communication Objects Table ..... 25

# 1 Description

## 1.1 Introduction


This document describes the integration of LG VRF air conditioning systems into KNX home automation systems using gateway *Intesis KNX – LG VRF*.

The aim of this integration is to monitor and control your LG air conditioning system, from your KNX TP-1 installation. To do it so, Intesis performs as a one more KNX device, sending and receiving telegrams to group addresses in the KNX network.

Intesis makes available the LG air conditioning system indoor units' datapoints through independent KNX objects.

Up to 64 indoor units supported, depending on product version.

This document assumes that the user is familiar with KNX and LG technologies and their technical terms.

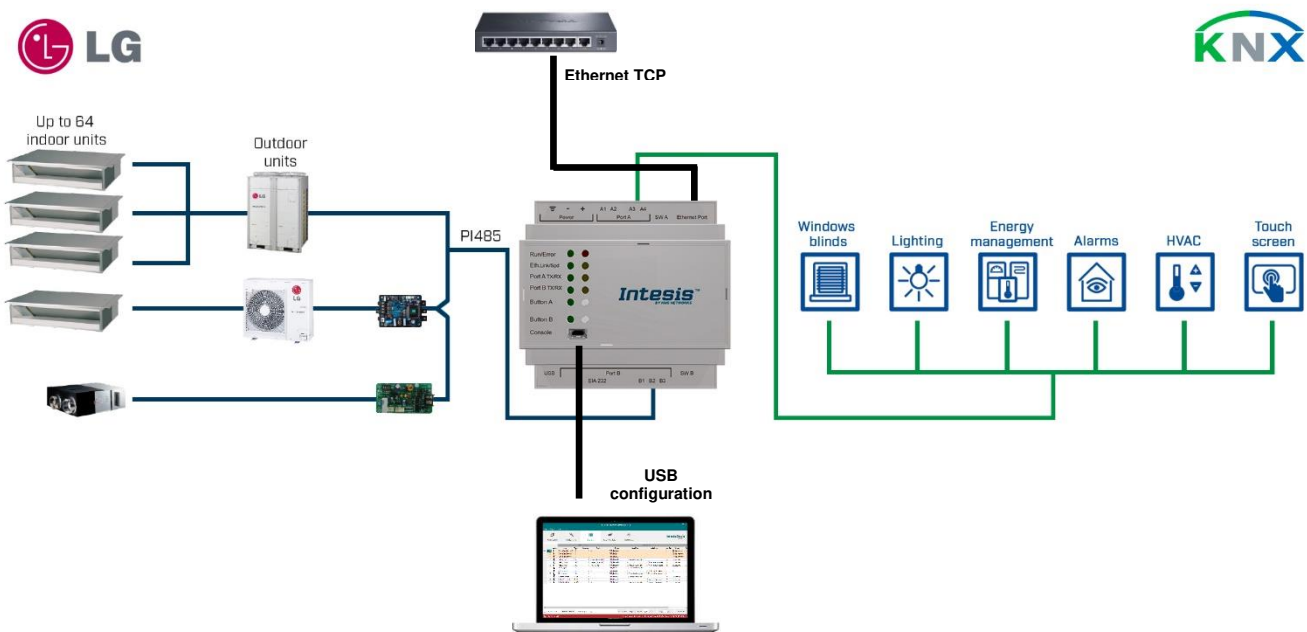

Integration of LG VRF systems into KNX control systems

## 1.1 Functionality

Intesis™ continuously monitors LG VRF network for all configured signals and keeps the updated status of all of them in its memory. It triggers updates on configured group addresses to KNX network on value change.

Commands toward the indoor unit communication adaptor are permitted.

Each indoor unit is offered as a set of KNX objects.

Element	Object supported
General signals (all units)	<ul style="list-style-type: none"><li>• Command</li></ul>
Indoor Unit	<ul style="list-style-type: none"><li>• Status</li><li>• Command</li><li>• Communication status</li></ul>

## 1.2 Capacity of Intesis

Element	Max.	Notes
Number of indoor units	64*	Number of indoor units that can be controlled through Intesis

\*There are different models of *Intesis KNX – LG VRF* each one with different capacity. The table above shows the capacity for the top model (with maximum capacity).

Their order codes are:

- INKNXLGE016O000: Model supporting up to 16 indoor units
- INKNXLGE064O000: Model supporting up to 64 indoor units

## 2 KNX System

In this section, a common description for all Intesis KNX series gateways is given, from the point of view of KNX system which is called from now on *internal system*. Connection with the LG system is also called from now on *external system*.

### 2.1 Description

Intesis KNX connects directly to the KNX TP-1 bus and performs as one more device into the KNX system, with the same configuration and operational characteristics as other KNX devices.

Internally, the circuit part connected to the KNX bus is opto-isolated from the rest of the electronics.

*Intesis KNX* receives, manages and sends all the telegrams related to its configuration to the KNX bus.

On receiving WRITE telegrams of KNX group addresses associated to communication objects, the corresponding messages are sent to the external system (LG installation).

When a change in a signal of the external system is detected, a WRITE telegram is sent to the KNX bus (addressed with the group address associated to the corresponding group object), in order to maintain both systems synchronized in every moment.

The status of the KNX bus is checked continuously and, if a bus drop-down is detected, for example due to failure in the bus power supply, after the KNX bus is restored again, Intesis will send READ telegrams to group addresses of all communication objects marked with flag 'Ri'. The behavior of each individual point into Intesis is determined by the flags configured for the communication object. See details below.

### 2.2 Points definition

Every group object in configuration has following KNX properties:

Property	Description
<b>Description</b>	Descriptive information about the communication object or signal.
<b>Object function</b>	Information on range of values for the group object.
<b>DPT</b>	Datapoint type. It is the KNX data type used to encode the signal's value. It will depend on the type of signal associated in the external system in every case.
<b>Group</b>	It is the KNX group to which the point is associated. It is also the group to which the read (R), write (W), transmit (T), update (U) and read on init (Ri) flags are applied. It is the sending group.
<b>Listening addresses</b>	They are the addresses that can write on the group object, a part of the main group address.
<b>R</b>	Read. If this flag is activated, READ telegrams of this group address will be accepted.
<b>Ri</b>	Read on Init. If this flag is activated, the object will trigger corresponding READ request (on associated group address) on initialization.
<b>W</b>	Write. If this flag is activated, WRITE telegrams on this group object will be accepted.
<b>T</b>	Transmit. If this flag is activated, when the group object value changes, due to a change in the external system, a WRITE telegram of the associated group address will be sent to the KNX bus.
<b>U</b>	Update. If this flag is activated, UPDATE telegrams (response to READ telegrams) on this group object will be accepted.
<b>Active</b>	If activated, the point will be active in Intesis, if not, the behavior will be as if the point is not defined. This allows deactivating points without the need of delete them for possible future use.


These properties are common for all Intesis KNX series gateways. Although each integration may have specific properties according to the type of signals of the external system.

See list of communication objects in section [9 APPENDIX A – COMMUNICATION OBJECTS TABLE](#).



### 3 Connections

Find below information regarding the Intesis connections available.

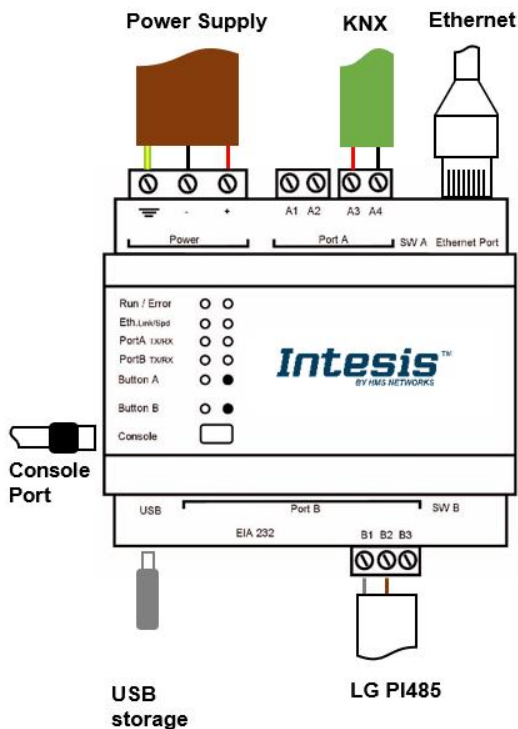

#### Power Supply

Must use NEC Class 2 or Limited Power Source (LPS) and SELV rated power supply.

#### If using DC power supply:

Respect polarity applied of terminals (+) and (-). Be sure the voltage applied is within the range admitted (check table below). The power supply can be connected to earth but only through the negative terminal, never through the positive terminal.

#### If using AC power supply:

Make sure the voltage applied is of the value admitted (24 Vac). Do not connect any of the terminals of the AC power supply to earth, and make sure the same power supply is not supplying any other device.

#### Ethernet

Connect the cable coming from the IP network to the connector ETH of the gateway. Use an Ethernet CAT5 cable. If communicating through the LAN of the building, contact the network administrator and make sure traffic on the port used is allowed through all the LAN path (check the gateway user manual for more information). Default IP is 192.168.100.246. DHCP is enabled by default.

#### PortA / KNX

Connect the KNX TP1 bus to connectors A3 (+) and A4 (-) of gateway's PortA. Respect the polarity.

#### PortB / LG VRF

Connect the LG PI 485 bus to the connectors B1 (BUS A) and B2 (BUS B) of gateway's PortB. Respect the polarity.

#### Console Port

Connect a mini-type B USB cable from your computer to the gateway to allow communication between the Configuration Software and the gateway. Remember that Ethernet connection is also allowed. Check the user manual for more information.

#### USB

Connect a USB storage device (not a HDD) if required. Check the user manual for more information.

Ensure proper space for all connectors when mounted (see section [6 DIMENSIONS](#)).

### 3.1 Power device

The first step to perform is to power up the device. To do so, a power supply working with any of the voltage range allowed is needed (check section [5 ELECTRICAL & MECHANICAL FEATURES](#)). Once connected the ON led will turn on.

**WARNING!** In order to avoid earth loops that can damage the gateway, and/or any other equipment connected to it, we strongly recommend:

- The use of DC power supplies, floating or with the negative terminal connected to earth. **Never use a DC power supply with the positive terminal connected to earth.**
- The use of AC power supplies only if they are floating and not powering any other device.

### 3.2 Connect to LG installation

Use the Port B connector of the Intesis device to connect LG PI485 bus to the Intesis. Remember to follow all safety precautions indicated by LG.

Connect the LG PI 485 bus to connectors B1 (BUS A) and B2 (BUS B) of gateway's PortB. Respect the polarity.

### 3.3 Connection to KNX

Connect the KNX TP1 bus to connectors A3 (+) and A4 (-) of gateway's PortA. Respect the polarity.

### 3.4 Connection to the configuration tool

This action allows the user to have access to configuration and monitoring of the device (more information can be found in the configuration tool User Manual). Two methods to connect to the PC can be used:

- **Ethernet:** Using the Ethernet port of Intesis.
- **USB:** Using the console port of Intesis, connect a USB cable from the console port to the PC.

## 4 Set-up process and troubleshooting

### 4.1 Pre-requisites

It is necessary to have a KNX installation, device or interface operative and well connected to the corresponding KNX port of Intesis. It is also required to have a LG Air Conditioner installation, with accessible LG EIA485 bus for connection of Intesis.

Connectors, connection cables, PC to use the configuration tool and other auxiliary material, if needed, are not supplied by HMS Industrial Networks S.L.U. for this standard integration.

Items supplied by HMS Networks for this integration are:

- Intesis gateway.
- Link to download the configuration tool.
- USB Console cable to communicate with Intesis.
- Product documentation.

### 4.2 Intesis MAPS. Configuration & monitoring tool for Intesis KNX series

#### 4.2.1 Introduction

Intesis MAPS is a Windows® compatible software developed specifically to monitor and configure Intesis new generation gateways.

The installation procedure and main functions are explained in the *Intesis MAPS KNX User Manual*. This document can be downloaded from the link indicated in the installation sheet supplied with the Intesis device or in the product website at [www.intesis.com](http://www.intesis.com)

In this section, only the specific case of LG to KNX systems will be covered.

Please check the Intesis MAPS KNX User Manual for specific information about the different parameters and how to configure them.

#### 4.2.2 Connection

To configure the Intesis connection parameters press on the **Connection** button in the *menu bar*.

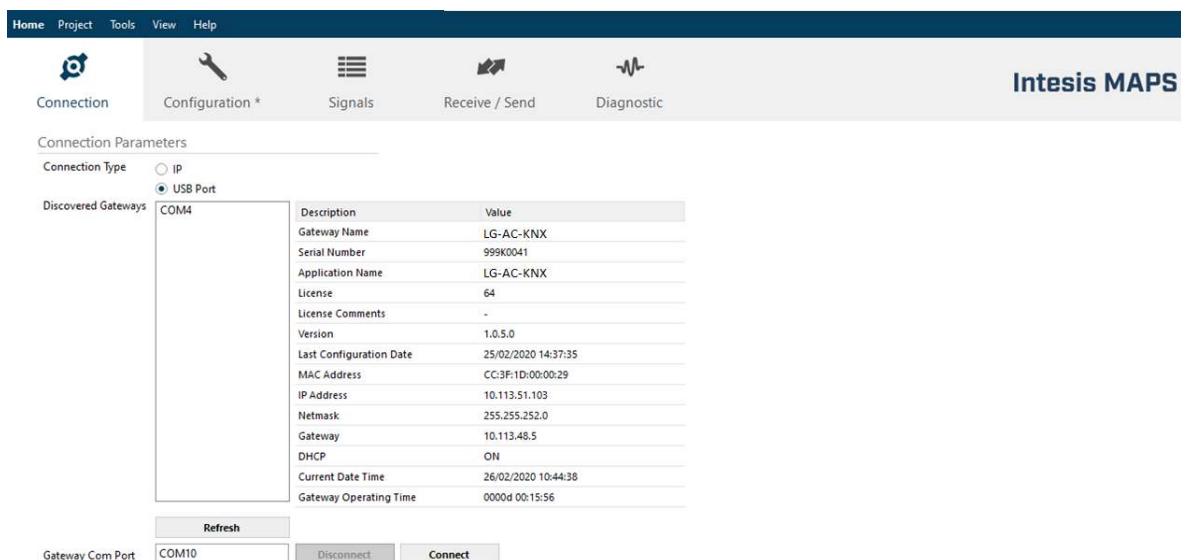


Figure 4.1 MAPS connection

### 4.2.3 Configuration tab

Select the **Configuration** tab to configure the connection parameters. Three subsets of information are shown in this window: General (Gateway general parameters), KNX (KNX interface configuration) and LG (LG interface parameters).

The screenshot shows the Intesis MAPS Configuration tab. The left sidebar has 'General', 'KNX', and 'LG' sections. The main area is titled 'General Configuration' and contains the following fields:

- Gateway Name:** LG-AC-KNX
- Project Description:** Intesis LG AC to KNX Gateway
- Connection:**
  - Enable DHCP
  - IP Address:** 192.168.100.246
  - Netmask:** 255.255.255.0
  - Default Gateway:** (empty)
  - Password:** admin
- USB Host:**
  - Edit USB Configuration:** USB

Figure 4.2 Intesis MAPS configuration tab

### 4.2.4 KNX configuration

Set parameters of KNX interface of Intesis.

The screenshot shows the Intesis MAPS KNX configuration tab. The left sidebar has 'General', 'KNX', and 'LG' sections. The main area is titled 'Device Configuration' and contains the following fields:

- Physical Address:** 15.15.255
- Extended Addresses:**  Enabled
- Operating Mode:**
  - KNX DPT for HVAC operation mode comm. object:**
    - Base DPT:** 20.105 - DPT\_HVACContrMode (0-Auto, 1-Heat, 3-Cool, ...)
    - Extra DPT:**
      - 1.100 - DPT\_Heat/Cool (0-Cool, 1-Heat)
      - 5.001 - DPT\_Scaling (PID compatibility)
  - Use of 1-bit Operating Modes:**
    - 1-bit Control Objects
    - 1-bit Status Objects
- Temperature Sensor:**
  - Ambient temperature provided from KNX:**  Enabled
- Fan Speed:**
  - Auto Fan Speed:**  Enabled
  - KNX DPT for Fan Speed comm. objects:** DPT\_Scaling (5.001)
  - Use of 1-bit Fan Speed:**
    - 1-bit Control Objects
    - 1-bit Status Objects

Figure 4.3 Intesis MAPS KNX configuration tab

#### 1. Device configuration

**1.1. Physical Address.** KNX physical address of the device in the network

**1.2. Extended Addresses.** Enables usage of KNX Extended addresses (range from 16/0/0 to 32/7/255).

**2. Operating Mode.** Settings related to KNX interface for control and feedback of AC unit's operating mode.

**2.1. KNX DPT for HVAC operation mode comm object. Base DPT.** Base DPT to use for control/monitor the operating mode. Following DPT types are offered:

- DPT\_20.105. DPT\_HVACContrMode: 0-Auto, 1-Heat, 3-Cool, 9-Fan, 14-Dry
- DPT\_5.x (non-standardized): 0-Auto, 1-Heat, 2-Dry, 3-Fan, 4-Cool

**2.2. KNX DPT for HVAC operation mode comm object. Extra DPT.** Additional DPT to use for control/monitor the operating mode.

- DPT\_1.100. DPT\_Heat/Cool: 0-Cool, 1-Heat.
- DPT\_5.001. DPT\_Scaling: Enables objects “Control\_Heat Mode & On” and “Control\_Cool Mode & On”. Their type is DPT\_Scaling (0..100%), and their ending is to be able to control parameters On/Off, Cool/Heat of indoor unit from a single percentage object. They are meant to provide compatibility with certain thermostats oriented to the operation of valves for Heating/Cooling. Whenever a value > 0% is received at each of these two objects, the corresponding operating mode and ON operation is sent to the indoor unit. Whenever both values are 0%, indoor unit is set to OFF

**2.3. Use of 1-bit Operating Modes. 1-bit Control Objects.** Enables a bit-type object for the control of each operating mode.

**2.4. Use of 1-bit Operating Modes. 1-bit Status Objects.** Enables a bit-type object for monitoring each operating mode.

### 3. Temperature Sensor.

**3.1. Ambient temperature provided from KNX.** Enables object Control\_KNX ambient temperature.



**NOTE:** Indoor unit does not accept, by itself, that an ambient temperature for control of operation of the indoor unit is provided. To allow regulation of indoor unit according to a temperature reference from KNX, what Intesis does is passing a different temperature setpoint to the indoor unit than the one required by the user. The passed setpoint is such that the difference ‘Ambient temperature reported by LG IU – AC setpoint’ is equal to ‘Ambient temperature reported by KNX – AC setpoint required by KNX’, using the following formula:

$$\text{“AC Setp. Temp”} = \text{“AC Ret. Temp”} - (\text{“KNX Amb. Temp.”} - \text{“KNX Setp. Temp”})$$

Where:

- AC Setp. Temp: AC indoor unit setpoint temperature
- AC Ret. Temp: AC indoor unit return temperature
- KNX Amb. Temp.: Ambient temperature provided from KNX
- KNX Setp. Temp: Setpoint temperature provided from KNX

Consequently, when using this feature (Ambient temp provided from KNX), setpoint at AC and setpoint in KNX will not necessarily be the same (actually, user will not be able to operate setpoint from AC System controllers as the remote controller).

**4. Fan Speed.** Settings related to KNX interface for control and feedback of AC unit’s fan speed.

**4.1. Auto Fan Speed.** Configures availability of Auto Fan Speed control/monitoring objects. Necessary if your indoor unit has auto fan speed.

**4.2. KNX DPT for Fan Speed comm objects. DPT\_5.001, DPT\_Scaling.** Control/monitoring of Fan Speed is performed by means of scaling (percentage) objects. Thresholds for control object and values for status object will vary according to number of fanspeeds of the unit.

**4.2. KNX DPT for Fan Speed comm objects. DPT\_5.010, DPT\_Value\_1\_Ucount.** Control/monitoring of Fan Speed is performed by means of enumerated values.

**4.4. Use of 1-bit Fan Speed. 1-bit Control Objects.** Enables a bit-type object for control of fan speed.

**4.5. Use of 1-bit Fan Speed. 1-bit Status Objects.** Enables a bit-type object for monitoring of each fan speed.

### 4.2.5 LG configuration

#### Units configuration

Set parameters for connection with LG's installation.

Units Configuration

Autodiscover

Unit ID	Unit Address	Unit Type	Description
<input checked="" type="checkbox"/> Unit 1	00	AC	Indoor Unit 1
<input checked="" type="checkbox"/> Unit 2	01	VENT	Indoor Unit 2
<input checked="" type="checkbox"/> Unit 3	02	DX	Indoor Unit 3
<input checked="" type="checkbox"/> Unit 4	03	AWHP	Indoor Unit 4
<input type="checkbox"/> Unit 5	04	AC	Indoor Unit 5
<input type="checkbox"/> Unit 6	05	AC	Indoor Unit 6
<input type="checkbox"/> Unit 7	06	AC	Indoor Unit 7
<input type="checkbox"/> Unit 8	07	AC	Indoor Unit 8
<input type="checkbox"/> Unit 9	08	AC	Indoor Unit 9
<input type="checkbox"/> Unit 10	09	AC	Indoor Unit 10
<input type="checkbox"/> Unit 11	0A	AC	Indoor Unit 11
<input type="checkbox"/> Unit 12	0B	AC	Indoor Unit 12
<input type="checkbox"/> Unit 13	0C	AC	Indoor Unit 13
<input type="checkbox"/> Unit 14	0D	AC	Indoor Unit 14
<input type="checkbox"/> Unit 15	0E	AC	Indoor Unit 15
<input type="checkbox"/> Unit 16	0F	AC	Indoor Unit 16
<input type="checkbox"/> Unit 17	10	AC	Indoor Unit 17
<input type="checkbox"/> Unit 18	11	AC	Indoor Unit 18
<input type="checkbox"/> Unit 19	12	AC	Indoor Unit 19
<input type="checkbox"/> Unit 20	13	AC	Indoor Unit 20
<input type="checkbox"/> Unit 21	14	AC	Indoor Unit 21
<input type="checkbox"/> Unit 22	15	AC	Indoor Unit 22
<input type="checkbox"/> Unit 23	16	AC	Indoor Unit 23

Supported Active Units: -

Figure 4.4 Intesis MAPS LG configuration tab

In Units Configuration section you need to enter, for each unit:

- **Active.** If it's active (checkbox at Unit xx), ranging from 1 to 64 indoor units that will be integrated (maximum number of units will depend on Intesis model)
- **Unit address.** Address 0...FF of Unit in LG EIA485 bus.
- **Unit type.** It sets the type of the indoor unit. You can select between AC, VENT, DX and AWHP units.
- **Description.** Descriptive name to easy identification of the unit (for example, 'living room floor 1 unit', etc).

Additional to manual entry of each unit, Autodiscover of present units in LG VRF system is possible. To do so, click button **Scan**. Following window will appear:

Scan LG Units

Scan Configuration

Set IU range Start  End

Type of units in the system

AC  VENT  DX  AWHP

Advanced Configuration

Scan Status

Estimated SCAN time: 8 minutes

Scan Results

New units detected

Import	Unit Address	Unit type

Selected IU: -  Replace Units  Add Units

Figure 4.5 Intesis MAPS Scan LG Units window

Before pressing the **Scan** button, set the appropriate settings for the SCAN:

- Set the IU addresses range to search.
- Set the type of units in the LG system to search.

Scan Configuration

Set IU range Start  End

Type of units in the system

AC  VENT  DX  AWHP

Advanced Configuration

Set timeout to  (s)

Figure 4.6 Intesis MAPS Scan Configuration settings

- In advance configuration we can set the timeout of the SCAN in case of need.

Scanning time will be different according to SCAN Configuration. As we add more type of AC units to scan, the scanning time will increase. It is the same in case we scan a large range of units compared to a short range.

Once the settings are established, by pressing SCAN EIA 485 bus will be scanned for available units. Error window will appear if there is a problem in the connection with EIA 485 bus (units not powered, bus not connected, ...).

A progress bar will appear during the scan. When the scan finishes, detected units will be shown in available units as follows:

Scan Results

New units detected

Import	Unit Address	Unit type
<input type="checkbox"/>	2F	AC
<input type="checkbox"/>	30	AC

Selected IU: -  Replace Units  Add Units

Estimated SCAN time xx minutes

Figure 4.7 Intesis MAPS Scan LG Units window with scan results

Select the units to add (or replace) in installation, according to selection **Replace Units / Add Units**. Once the desired units and action are selected, click **Apply** to perform the action.

Units Configuration

Autodiscover Scan

Unit ID	Unit Address	Unit Type	Description
<input checked="" type="checkbox"/> Unit 1	2F	AC	Indoor Unit 1
<input checked="" type="checkbox"/> Unit 2	30	AC	Indoor Unit 2
<input type="checkbox"/> Unit 3	02	AC	Indoor Unit 3
<input type="checkbox"/> Unit 4	03	AC	Indoor Unit 4
<input type="checkbox"/> Unit 5	04	AC	Indoor Unit 5
<input type="checkbox"/> Unit 6	05	AC	Indoor Unit 6
<input type="checkbox"/> Unit 7	06	AC	Indoor Unit 7
<input type="checkbox"/> Unit 8	07	AC	Indoor Unit 8
<input type="checkbox"/> Unit 9	08	AC	Indoor Unit 9
<input type="checkbox"/> Unit 10	09	AC	Indoor Unit 10
<input type="checkbox"/> Unit 11	0A	AC	Indoor Unit 11
<input type="checkbox"/> Unit 12	0B	AC	Indoor Unit 12
<input type="checkbox"/> Unit 13	0C	AC	Indoor Unit 13
<input type="checkbox"/> Unit 14	0D	AC	Indoor Unit 14
<input type="checkbox"/> Unit 15	0E	AC	Indoor Unit 15
<input type="checkbox"/> Unit 16	0F	AC	Indoor Unit 16
<input type="checkbox"/> Unit 17	10	AC	Indoor Unit 17
<input type="checkbox"/> Unit 18	11	AC	Indoor Unit 18
<input type="checkbox"/> Unit 19	12	AC	Indoor Unit 19
<input type="checkbox"/> Unit 20	13	AC	Indoor Unit 20
<input type="checkbox"/> Unit 21	14	AC	Indoor Unit 21
<input type="checkbox"/> Unit 22	15	AC	Indoor Unit 22
<input type="checkbox"/> Unit 23	16	AC	Indoor Unit 23

Supported Active Units: -

Global Parameters

Other control devices in PI485 No other controller in PI485

Figure 4.8 Intesis MAPS LG configuration tab after importing scan results

**Global parameters**

In this section we will find the following settings:

Global Parameters

Other control devices in PI485 LG Slave device in PI485  LG Slave has PDI feature

LG Temperature Units Celsius

Figure 4.9 Intesis MAPS LG configuration tab. Global parameters

- **Other control devices in PI485.** This setting will allow to configure if there were any other controller device in the LG VRF bus or not.
  - **LG Slave has PDI feature.** If there were a LG slave device with PDI feature (Power Distribution Indicator), it is necessary to activate the LG Slave has PDI feature checkbox. This action will create a new signal to transmit the consumption value to KNX (Wh).
- **LG Temperature Units.** This setting allows to choose between Celsius or Fahrenheit degrees for the KNX side.



### 4.2.6 Signals

All available KNX objects, its corresponding description and other main parameters are listed in the signals tab.

#	Active	Description	KNX						LG						
			Object Function	DPT	Group Address	Additional Addresses	U	T	Ri	W	R	Unit ID	Unit Type	IU	
1	<input checked="" type="checkbox"/>	On/Off for AC, DX and AWHP (all units)	0-Off, 1-On	1.001: switch	0/0/1					W	-	-	-		
2	<input checked="" type="checkbox"/>	Operating Mode for AC, DX and AWHP (all units)	0-Auto, 1-Heat, 3-Cool, 9-Fan, 14-Dry	20.105: HVAC ContrMode	0/0/2					W	-	-	-		
3	<input checked="" type="checkbox"/>	On/Off VENT and DX (all units)	0-Off, 1-On	1.001: switch	0/0/5					W	-	-	-		
4	<input checked="" type="checkbox"/>	Control VENT and DX Operation mode	0-Normal, 1-Heater_Exchange, 4-Auto	5.x: (8-bit, Unsigned Value)	0/0/6					W	-	-	-		
5	<input checked="" type="checkbox"/>	Fan Speed (all units)	1-Low, 2-Med, 3-High	5.x: (8-bit, Unsigned Value)	0/0/7					W	-	-	-		
6	<input checked="" type="checkbox"/>	Fan Speed AUTO (all units)	1-Set auto fan; 0-Stop auto fan	1.001: switch	0/0/8					W	-	-	-		
7	<input checked="" type="checkbox"/>	Vane position swing (all units)	0-Swing Off, 1-Swing On	1.001: switch	0/0/9					W	-	-	-		
8	<input checked="" type="checkbox"/>	Temperature Setpoint (all units)	18..30°C	9.001: temperature (°C)	0/0/10					W	-	-	-		
9	<input checked="" type="checkbox"/>	Control_On/Off	0-Off, 1-On	1.001: switch	1/1/1						W	Unit 1 - Indoor...	AC	2F	
10	<input checked="" type="checkbox"/>	Status_On/Off	0-Off, 1-On	1.001: switch	1/1/2						T	R	Unit 1 - Indoor...	AC	2F
11	<input checked="" type="checkbox"/>	Control_Operation mode	0-Auto, 1-Heat, 3-Cool, 9-Fan, 14-Dry	20.105: HVAC ContrMode	1/1/3						W	Unit 1 - Indoor...	AC	2F	
12	<input checked="" type="checkbox"/>	Status_Operation mode	0-Auto, 1-Heat, 3-Cool, 9-Fan, 14-Dry	20.105: HVAC ContrMode	1/1/4						T	R	Unit 1 - Indoor...	AC	2F
13	<input checked="" type="checkbox"/>	Control_Fan speed scaling	Thresholds (0..49%, 50..82%, 83..100%)	5.001: percentage (0..100%)	1/1/25						W	Unit 1 - Indoor...	AC	2F	
14	<input checked="" type="checkbox"/>	Status_Fan speed scaling	Thresholds (33%, 67%, 100%)	5.001: percentage (0..100%)	1/1/26						T	R	Unit 1 - Indoor...	AC	2F
15	<input checked="" type="checkbox"/>	Control_Fan speed Man/Auto	0-Manual; 1-Auto	1.001: switch	1/1/33						W	Unit 1 - Indoor...	AC	2F	
16	<input checked="" type="checkbox"/>	Status_Fan speed Man/Auto	0-Manual; 1-Auto	1.001: switch	1/1/34						T	R	Unit 1 - Indoor...	AC	2F
17	<input checked="" type="checkbox"/>	Control_Vane position swing	0-Swing Off, 1-Swing On	1.001: switch	1/1/35						W	Unit 1 - Indoor...	AC	2F	
18	<input checked="" type="checkbox"/>	Status_Vane position swing	0-Swing Off, 1-Swing On	1.001: switch	1/1/36						T	R	Unit 1 - Indoor...	AC	2F
19	<input checked="" type="checkbox"/>	Control_Temperature Setpoint	18..30°C	9.001: temperature (°C)	1/1/37						W	Unit 1 - Indoor...	AC	2F	
20	<input checked="" type="checkbox"/>	Status_Temperature Setpoint	18..30°C	9.001: temperature (°C)	1/1/38						T	R	Unit 1 - Indoor...	AC	2F
21	<input checked="" type="checkbox"/>	Status_AC Ambient Temperature	-10..50°C	9.001: temperature (°C)	1/1/39						T	R	Unit 1 - Indoor...	AC	2F
22	<input checked="" type="checkbox"/>	Control_Remote control lock	0-Disable, 1-Enable	1.002: boolean	1/1/41						W	Unit 1 - Indoor...	AC	2F	
23	<input checked="" type="checkbox"/>	Status_Remote control lock	0-Disable, 1-Enable	1.002: boolean	1/1/42						T	R	Unit 1 - Indoor...	AC	2F
24	<input checked="" type="checkbox"/>	Status_Unit error	0-No Error, 1-Error	1.005: alarm	1/1/43						T	R	Unit 1 - Indoor...	AC	2F
25	<input checked="" type="checkbox"/>	Status_Unit error code	0-No Error, X-Error (1..255)	8.x: (2-byte, Signed Value)	1/1/44						T	R	Unit 1 - Indoor...	AC	2F
26	<input checked="" type="checkbox"/>	Status_Unit type	0-Not Defined; 1-AC; 2-VENT; 3-DX; 4-AWHP	5.x: (8-bit, Unsigned Value)	1/1/80						T	R	Unit 1 - Indoor...	AC	2F
27	<input checked="" type="checkbox"/>	Status_IUXI_U Communication Error IU	0-No error, 1-Error	1.005: alarm	1/1/81						T	R	Unit 1 - Indoor...	AC	2F
28	<input checked="" type="checkbox"/>	Control_On/Off	0-Off, 1-On	1.001: switch	2/1/1						W	Unit 2 - Indoor...	AC	30	
29	<input checked="" type="checkbox"/>	Status_On/Off	0-Off, 1-On	1.001: switch	2/1/2						T	R	Unit 2 - Indoor...	AC	30

Figure 4.10 Intesis MAPS Signals tab

### 4.2.7 Sending the configuration to Intesis

When the configuration is finished, follow the next steps.

- 1.- Save the project (Menu option **Project->Save**) on your hard disk (more information in Intesis MAPS User Manual).
- 2.- Go to tab 'Receive / Send' of MAPS, and in Send section, press Send button. Intesis will reboot automatically once the new configuration is loaded.

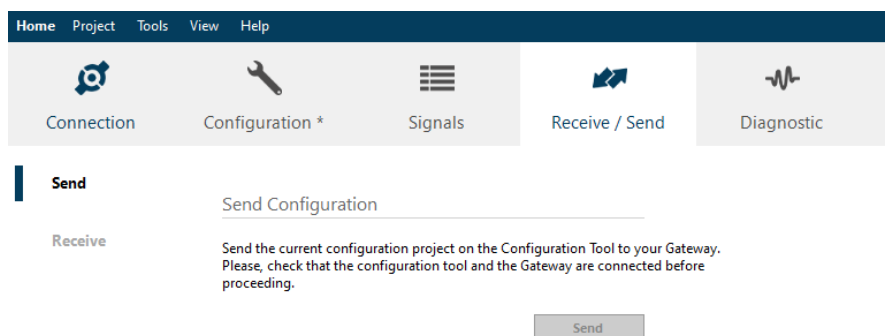


Figure 4.11 Intesis MAPS Receive/Send tab

**After any configuration change, do not forget to send the configuration file to the Intesis using the Send button in the Receive / Send section.**

## 4.2.8 Diagnostic

To help integrators in the commissioning tasks and troubleshooting, the Configuration Tool offers some specific tools and viewers.

In order to start using the diagnostic tools, connection with the Gateway is required.

The Diagnostic section is composed by two main parts: Tools and Viewers.

- Tools**  
 Use the tools section to check the current hardware status of the box, log communications into compressed files to be sent to the support, change the Diagnostic panels' view or send commands to the gateway.
- Viewers**  
 In order to check the current status, viewer for the Internal and External protocols are available. It is also available a generic Console viewer for general information about communications and the gateway status and finally a Signals Viewer to simulate the BMS behavior or to check the current values in the system.

The screenshot displays the Intesis MAPS software interface. The top navigation bar includes 'Home', 'Project', 'Tools', 'View', and 'Help'. Below this, there are icons for 'Connection', 'Configuration \*', 'Signals', 'Receive / Send', and 'Diagnostic'. The 'Diagnostic' section is active, showing a 'Signals Viewer' table with the following data:

#	KNX	LG	Description	DPT	Group Address
1			On/Off for AC, DX and AWHP (all units)	1.001: switch	0/0/1
2			Operating Mode for AC, DX and AWHP (a...	20.105: HVAC ContrMode	0/0/2
3			On/Off VENT and DX (all units)	1.001: switch	0/0/5
4			Control VENT and DX Operation mode	5.x: (8-bit, Unsigned Value)	0/0/6
5			Fan Speed (all units)	5.x: (8-bit, Unsigned Value)	0/0/7
6			Fan Speed AUTO (all units)	1.001: switch	0/0/8
7			Vane position swing (all units)	1.001: switch	0/0/9
8			Temperature Setpoint (all units)	9.001: temperature (°C)	0/0/10

The interface also shows a 'Console' viewer on the left and a 'Send' button at the bottom. The status bar at the bottom indicates 'Not Connected' and 'BMS Protocol: KNX | Device Protocol: LG | 2020/02/27 10:02:52'.

**Figure 4.12** Diagnostic

More information about the Diagnostic section can be found in the Configuration Tool manual.

## 4.2.9 Set-up procedure

1. Install Intesis MAPS on your laptop following the instructions given by the Installation wizard.
2. Mount the Intesis device in the desired installation location. Installation can be on DIN rail or on a stable not vibrating surface (DIN rail mounted inside a metallic industrial cabinet connected to ground is recommended).
3. Connect the device to the communication busses according to **3 CONNECTIONS**. Do not supply yet the device.
4. Once all the connections are committed, power up the Intesis device. The supply voltage can be 9 to 36 Vdc or just 24 Vac. Take care of the polarity of the supply voltage applied when using DC PS.

**WARNING!** In order to avoid earth loops that can damage Intesis and/or any other equipment connected to it, we strongly recommend:

- The use of DC power supplies, floating or with the negative terminal connected to earth. **Never use a DC power supply with the positive terminal connected to earth.**
  - The use of AC power supplies only if they are floating and not powering any other device.
5. Connect the PC to Intesis by using the Ethernet or the console port (see **3 CONNECTIONS**).
  6. Open Intesis MAPS, create a new project selecting a copy of the one named **INKNXLGE---0000**.
  7. Modify the configuration as desired, save it and download the configuration file to Intesis as explained in the Intesis MAPS user manual.
  8. Visit the Diagnostic section and check that there is communication activity, some TX frames and some other RX frames. This means that the communication is OK.

In case there were no communication activity between Intesis and the KNX side and/or LG units, check that those are operative: check communication cable used to connect all devices and any other communication parameter.

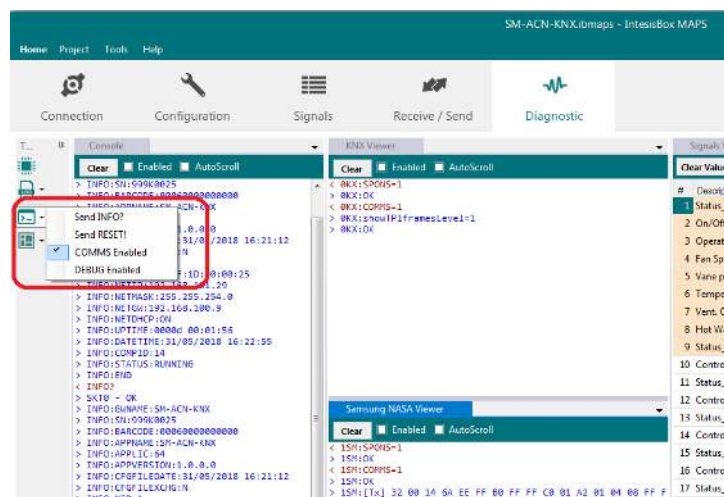



Figure 4.13 Enable COMMS

## 5 Electrical & Mechanical Features




<b>Enclosure</b>	Plastic, type PC (UL 94 V-0) Net dimensions (d×w×h): 90x88x56 mm Recommended space for installation (d×w×h): 130x100x100mm Color: Light Grey. RAL 7035	<b>Battery</b>	Size: Coin 20mm x 3.2mm Capacity: 3V / 225mAh Type: Manganese Dioxide Lithium
<b>Mounting</b>	Wall. DIN rail EN60715 TH35.	<b>Console Port</b>	Mini Type-B USB 2.0 compliant 1500VDC isolation
<b>Terminal Wiring</b> (for power supply and low-voltage signals)	Per terminal: solid wires or stranded wires (twisted or with ferrule) 1 core: 0.5mm <sup>2</sup> ... 2.5mm <sup>2</sup> 2 cores: 0.5mm <sup>2</sup> ... 1.5mm <sup>2</sup> 3 cores: not permitted	<b>USB port</b>	Type-A USB 2.0 compliant Only for USB flash storage device (USB pen drive) Power consumption limited to 150mA (HDD connection not allowed)
<b>Power</b>	1 x Plug-in screw terminal block (3 poles) 9 to 36VDC +/-10%, Max.: 140mA. 24VAC +/-10% 50-60Hz, Max.: 127mA Recommended: 24VDC	<b>Push Button</b>	Button A: Check the user manual Button B: Check the user manual
<b>Ethernet</b>	1 x Ethernet 10/100 Mbps RJ45 2 x Ethernet LED: port link and activity	<b>Operation Temperature</b>	0°C to +60°C
<b>Port A</b>	1 x KNX TP-1 Plug-in screw terminal block orange (2 poles) 2500VDC isolation from other ports KNX power consumption: 5mA Voltage rating: 29VDC 1 x Plug-in screw terminal block green (2 poles) Reserved for future use	<b>Operational Humidity</b>	5 to 95%, no condensation
<b>Switch A</b> (SWA)	1 x DIP-Switch for PORT A configuration: Reserved for future use	<b>Protection</b>	IP20 (IEC60529)
<b>PORT B</b>	1 x Serial EIA232 (SUB-D9 male connector) Reserved for future use 1 x LG EIA 485 Plug-in screw terminal block (3 poles) 1500VDC isolation from other ports	<b>LED Indicators</b>	10 x Onboard LED indicators 2 x Run (Power)/Error 2 x Ethernet Link/Speed 2 x Port A TX/RX 2 x Port B TX/RX 1 x Button A indicator 1 x Button B indicator
<b>Switch B</b> (SWB)	1 x DIP-Switch for PORT B configuration: Reserved for future use (leave OFF, default)		

## 6 Dimensions

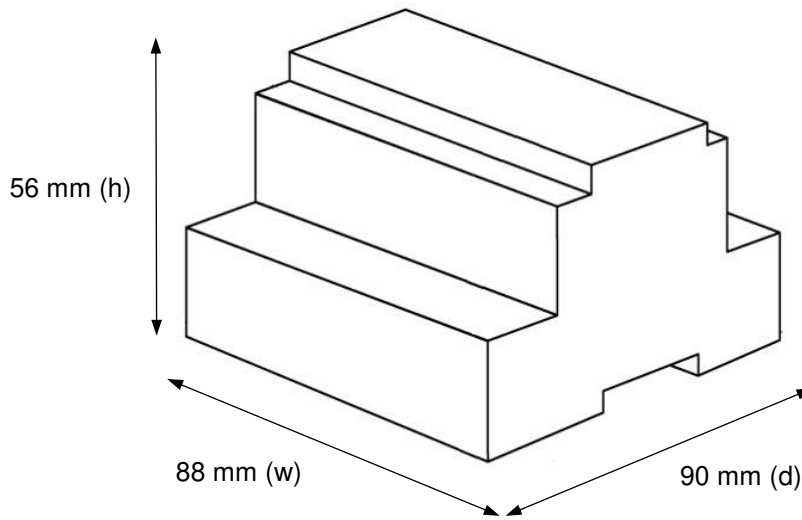

Recommended available space for its installation into a cabinet (wall or DIN rail mounting), with space enough for external connections.

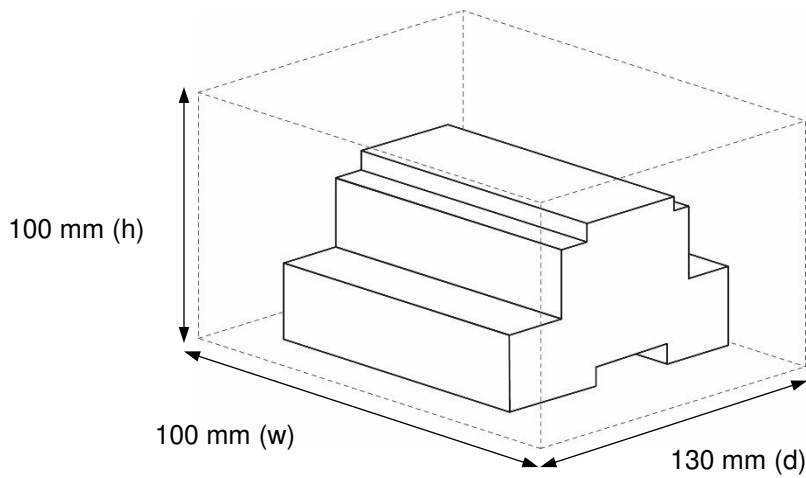

## 7 AC Unit Types compatibility

A list of LG unit model references compatible with INKNXLGE016O000 / INKNXLGE064O000 and their available features can be found in:

[https://www.intesis.com/docs/compatibilities/inxxxlge0xxo000\\_compatibility](https://www.intesis.com/docs/compatibilities/inxxxlge0xxo000_compatibility)

## 8 Error codes for Indoor and Outdoor Units

This list contains all possible values shown in KNX Object for “Error Code” for each indoor unit and outdoor unit.

Thus, a unit having two or more active errors from that list will only report a single error code – the one of the first error that has been detected.

INTESIS Error code	LG Error Code	Error contents
1	CH01	Indoor unit air sensor error
2	CH02	Indoor unit pipe inlet sensor error
3	CH03	No transmission between cabled remote controller & indoor unit
4	CH04	Drain pump error
5	CH05	Indoor & outdoor unit transmission error
6	CH06	Indoor unit pipe outlet sensor error
7	CH07	All indoor units are not running in same mode on HP devices
8	CH08	Hydro kit hot water storage tank temperature sensor error.
9	CH09	Indoor unit EEPROM malfunction
10	CH10	Indoor unit BLDC fan motor malfunction
11	CH11	Indoor unit communication error
21	CH21	Inverter PVB IPM failure (appears as 211 on VRF Master, 212 on Slave 1, 213 on Slave 2, 214 on Slave 3)
22	CH22	AC input overcurrent failure (appears as 211 on VRF Master, 212 on Slave 1, 213 on Slave 2, 214 on Slave 3)
23	CH23	Inv Compressor DC Link low voltage (appears as 211 on VRF Master unit, 212 on Slave 1, 213 on Slave 2, 214 on Slave 3)
24	CH24	Compressor output head too high (Main outdoor unit 24, Slave1 109, Slave2 140 Slave3 153)
25	CH25	Input voltage high or low
26	CH26	Inv Compressor first operation failure (Master 261, Slave1 262, Slave2 263, Slave3 264)
27	CH27	PSC error
43	CH43	High pressure sensor failure (Master 431, Slave1 432, Slave2 433, Slave3 434)
44	CH44	Outdoor unit ambient sensor faulty (Master 441, Slave1 442, Slave2 443, Slave3 444)
45	CH45	Condenser pipe sensor defective (Master 451, Slave1 452, Slave2 453, Slave3 454)
46	CH46	Compressor suction temperature thermistor defective
47	CH47	Constant1 Compressor outlet pipe temperature sensor malfunction (Master 471, Slave1 472, Slave2 443, Slave3 474)
48	CH48	Constant 2 Compressor outlet pipe temperature sensor failure (Master 481, Slave1 482, Slave2 483, Slave3 484)
49	CH49	Outdoor unit IPM temperature sensor defective
50	CH50	Outdoor unit phase connection error (Master 501, Slave1 502, Slave2 503, Slave3 504)
51	CH51	Capacity Excess
52	CH52	Communication error between inverter PCB and main PCB (Master 521, Slave1 522, Slave2 522, Slave3 523)
53	CH53	Communication error between outdoor main PCB and indoor unit PCB. (Master 531, Slave1 532, Slave2 532, Slave3 533)
54	CH54	The phase connections are missing or in the wrong order (Master 541, Slave1 542, Slave2 543, Slave3 544)
57	CH57	Communication error between main PCB and inverter PCB (Master 571, Slave 572, Slave2 573, Slave3 574)
59	CH59	Plus connection error (Master 591, Slave1 592, Slave2 593, Slave3 594)

60	CH60	Inverter PCB EEPROM error (Master 601, Slave1 602, Slave2 603, Slave3 604)
61	CH61	Condenser pipe sensor temperature load
62	CH62	Heat sink sensor overheat
65	CH65	Heat sink sensor open or short circuit
67	CH67	Outdoor unit fan locked (Master 671, Slave1 672, Slave2 673, Slave3 674)
69	CH69	Constant 1 Compressor CT Sensor failure (Master 691, Slave1 692, Slave2 693, Slave3 694)
70	CH70	Stationary 2 Compressor CT Sensor failure (Master 701, Slave1 702, Slave2 703, Slave3 704)
73	CH73	AC input surge current failure (Master 731, Slave1 732, Slave2 733, Slave3 734)
75	CH75	Fan CT sensor fault (Master 751, Slave1 752, Slave2 753, Slave3 754)
76	CH76	Fan DC link high voltage error (Master 761, Slave1 762, Slave2 763, Slave3 764)
77	CH77	Fan overcurrent fault (Master 771, Slave1 772, Slave2 773, Slave3 774)
79	CH79	Fan initial start error (Master 791, Slave1 792, Slave2 793, Slave3 794)
86	CH86	Main PCB EEPROM failure (Master 861, Slave1 862, Slave2 863, Slave3 864)
87	CH87	Fan PCB EEPROM failure (Master 871, Slave1 872, Slave2 873, Slave3 874)
104	CH104	Communication error between outdoor units (Master 11- & gt; 041, Slave1 12- & gt; 042, Slave2 13- & gt; 043, Slave3 14- & gt; 044)
105	CH105	Communication error between fan PCB and inverter PCB (Master 11 – & 051, Slave1 12 – 05 052, Slave2 13- & 053, Slave3 14 – 05 054)
106	CH106	Outdoor Unit Fan PCB IPM Error
107	CH107	Fan DC link low voltage fault (Master 11 – 07 071, Slave1 12 – 07 072, Slave2 13 – 07 073, Slave3 14 – 07 074)
113	CH113	Outdoor Unit Liquid pipe (condenser) temperature sensor faulty (Master 11- 131 131, Slave1 12 – 132 132, Slave2 13 – 133 133, Slave3 14 – 134 134)
115	CH115	Outdoor unit subcool output temperature sensor failure (Master 11 – & gt; 151, Slave1 12 – & gt; 152, Slave2 13- & gt; 153, Slave3 14 – & gt; 154)
173	CH173	Outdoor unit constant1 compressor overcurrent (Master 11 – 73 731, Slave1 12 – 7 732, Slave2 13 – 7 733, Slave3 14 – 73 734)
174	CH174	Outdoor unit constant2 compressor overcurrent (Master 11 – 74 741, Slave1 12 – 74 742, Slave2 13 – 74 743, Slave3 14 – 74 744)
182	CH182	Master Outdoor Unit main PCB to auxiliary PCB communication error
184	CH184	Oil compensating pipe temperature sensor malfunction (Master (11-841), Slave1 (12-842), Slave2 (13-843), Slave3 (14-844))
185	CH185	Oil compensating pipe temperature sensor malfunction (Master (11-851), Slave1 (12-852), Slave2 (13-853), Slave3 (14-854))
186	CH186	Oil compensating pipe temperature sensor malfunction (Master (11-861), Slave1 (12-862), Slave2 (13-863), Slave3 (14-864))
193	CH193	Fan PCB Heatsink temperature is high (Master 11 – 93 931, Slave1 12- 9 932, Slave2 – 9 933, Slave3 14- 93 934)
194	CH194	Fan PCB heatsink temperature sensor faulty (Master 11 – 94 941, Slave1 12 – 94 942, Slave2 13 – 94 943, Slave3 14 – 94 944)
242	CH242	Network failure



9 Appendix A – Communication Objects Table

TYPE OF SIGNAL FUNCTION	TYPE OF UNITS				NAME	LEN.	DPT	DPT ID	FLAGS				FUNCTION	
	AC	VENT	DX	AWHP					R	W	T	U		
GLOBAL SIGNALS	ON/OFF	X	X	X	X	On/Off (all units)	1 bit	DPT_Switch	1.001		W			0-Off, 1-On
	OP MODE	X	X	X	X	Operating Mode (all units)	1 byte	DPT_HVACContrMode	20.105		W			0-Auto, 1-Heat, 3-Cool, 9-Fan, 14-Dry
		X	X	X	X	Operating Mode (all units)	1 byte	Non-standarized	5.x		W			0-Auto, 1-Heat, 2-Dry, 3-Fan, 4-Cool
		X	X	X	X	Operating Mode (all units)	1 byte	Non-standarized	5.x		W			0-Cool, 1-Heat, 2-Dry, 3-Fan, 4-Auto
	ON/OFF VENT and DX	X	X	X	X	On/Off VENT and DX (all units)	1 bit	DPT_Switch	1.001		W			0-Off, 1-On
	OP MODE VENT and DX	X	X	X	X	Control VENT and DX (all units)	1 byte	Non-standarized	5.x		W			0-Normal, 1-Heater_Exchange, 4-Auto
	FAN SPEED	X	X	X	X	Fan Speed (all units)	1 byte	Non-standarized	5.x		W			1-Low, 2-Mid, 3-High, 4-High+
		X	X	X	X	Fan Speed AUTO (all units)	1 bit	DPT_Switch	1.001		W			1-Set auto fan; 0-Stop auto fan
	VANE POSITION	X	X	X	X	Vane position SWING (all units)	1 bit	DPT_Switch	1.001		W			1-Set swing vane; 0-Stop swing vane
SETP TEMP	X	X	X	X	Temperature Setpoint (°C) (all units)	2 byte	DPT_Value_Temp	9.001		W			Cool:18...30 °C; Heat:18...30 °C	
INDOOR UNIT SIGNALS	ON/OFF	X		X	X	Control_On/Off	1 bit	DPT_Switch	1.001		W			0-Off, 1-On
		X		X	X	Status_On/Off	1 bit	DPT_Switch	1.001	R		T		0-Off, 1-On
	OP MODE	X		X	X	Control_Operation mode	1 byte	DPT_HVACContrMode	20.105		W			0-Auto, 1-Heat, 3-Cool, 9-Fan, 14-Dry
		X		X	X	Status_Operation mode	1 byte	DPT_HVACContrMode	20.105	R		T		0-Auto, 1-Heat, 3-Cool, 9-Fan, 14-Dry
		X		X	X	Control_Operation mode	1 byte	Non-standarized	5.x		W			0-Auto, 1-Heat, 2-Dry, 3-Fan, 4-Cool
		X		X	X	Status_Operation mode	1 byte	Non-standarized	5.x	R		T		0-Auto, 1-Heat, 2-Dry, 3-Fan, 4-Cool
		X		X	X	Control_Operation mode	1 byte	Non-standarized	5.x		W			0-Cool, 1-Heat, 2-Dry, 3-Fan, 4-Auto
		X		X	X	Status_Operation mode	1 byte	Non-standarized	5.x	R		T		0-Cool, 1-Heat, 2-Dry, 3-Fan, 4-Auto
		X		X	X	Control_Mode Cool/Heat	1 bit	DPT_Heat/Cool	1.100		W			0-Cool, 1-Heat
		X		X	X	Status_Mode Cool/Heat	1 bit	DPT_Heat/Cool	1.100	R		T		0-Cool, 1-Heat
		X		X	X	Control_Heat mode&ON	1 byte	DPT_Scaling	5.001		W			0%-Off, 1%-100%-On+Heat
		X		X	X	Control_Cool mode&ON	1 byte	DPT_Scaling	5.001		W			0%-Off, 1%-100%-On+Cool
		X		X	X	Control_Auto mode	1 bit	DPT_Switch	1.001		W			1-Set auto mode
X		X	X	Status_Auto mode	1 bit	DPT_Switch	1.001	R		T		1-Auto mode active, 0-Auto mode not active		

TYPE OF SIGNAL FUNCTION		TYPE OF UNITS				NAME	LEN.	DPT	DPT ID	FLAGS				FUNCTION
		AC	VENT	DX	AHP					R	W	T	U	
INDOOR UNIT SIGNALS	FAN SPEED	X		X	X	Control_Heat mode	1 bit	DPT_Switch	1.001		W			1-Set heat mode
		X		X	X	Status_Heat mode	1 bit	DPT_Switch	1.001	R		T		1-Heat mode active, 0-Heat mode not active
		X		X	X	Control_Cool mode	1 bit	DPT_Switch	1.001		W			1-Set cool mode
		X		X	X	Status_Cool mode	1 bit	DPT_Switch	1.001	R		T		1-Cool mode active, 0-Cool mode not active
		X				Control_Fan mode	1 bit	DPT_Switch	1.001		W			1-Set fan mode
		X				Status_Fan mode	1 bit	DPT_Switch	1.001	R		T		1-Fan mode active, 0-Fan mode not active
		X				Control_Dry mode	1 bit	DPT_Switch	1.001		W			1-Set dry mode
		X				Status_Dry mode	1 bit	DPT_Switch	1.001	R		T		1-Dry mode active, 0-Dry mode not active
	FAN SPEED	X	X	X		Control_Fan speed enumerated	1 byte	Non-standarized	5.x		W			1-Low, 2-Mid, 3-High
		X	X	X		Status_Fan speed enumerated	1 byte	Non-standarized	5.x	R		T		1-Low, 2-Mid, 3-High
		X	X	X		Control_Fan speed scaling	1 byte	DPT_Scaling	5.001		W			Thersholds (0%..49%; 50%..82%; 83%..100%)
		X	X	X		Status_Fan speed scaling	1 byte	DPT_Scaling	5.001	R		T		Thersholds (33%; 67%; 100%)
		X	X	X		Control_Fan speed low	1 bit	DPT_Switch	1.001		W			1-Set fan speed low
		X	X	X		Status_Fan speed low	1 bit	DPT_Switch	1.001	R		T		1-Speed low active, 0-Speed low not active
		X	X	X		Control_Fan speed mid	1 bit	DPT_Switch	1.001		W			1-Set fan speed mid
		X	X	X		Status_Fan speed mid	1 bit	DPT_Switch	1.001	R		T		1-Speed mid active, 0-Speed mid not active
		X	X	X		Control_Fan speed high	1 bit	DPT_Switch	1.001		W			1-Set fan speed high
		X	X	X		Status_Fan speed high	1 bit	DPT_Switch	1.001	R		T		1-Speed high active, 0-Speed high not active
		X	X	X		Control_Fan speed Man/Auto	1 bit	DPT_Switch	1.001		W			0-Manual; 1-Auto
		X	X	X		Status_Fan speed Man/Auto	1 bit	DPT_Switch	1.001	R		T		0-Manual; 1-Auto
VANES	X				Control_Vane position swing	1 bit	DPT_Switch	1.001		W			1-Set swing vane, 0-Stop swing vane	
	X				Status_Vane position swing	1 bit	DPT_Switch	1.001	R		T		1-Vane swing active, 0-Vane swing not active	
TEMP.	X		X		Control_Temperature Setpoint (°C)	2 byte	DPT_Value_Temp	9.001		W			Cool:18..30 °C; Heat:18..30 °C	
	X		X		Status_Temperature Setpoint (°C)	2 byte	DPT_Value_Temp	9.001	R		T		Cool:18..30 °C; Heat:18..30 °C	
	X		X	X	Status_AC Ambient Temperature (°C)	2 byte	DPT_Value_Temp	9.001	R		T		-10..50 °C	
	X		X		Control_KNX ambient Temperature (°C)	2 byte	DPT_Value_Temp	9.001		W			°C	

TYPE OF SIGNAL FUNCTION		TYPE OF UNITS				NAME	LEN.	DPT	DPT ID	FLAGS				FUNCTION
		AC	VENT	DX	AWHP					R	W	T	U	
INDOOR UNIT SIGNALS	REMOTE CONTROL	X	X	X	X	Control_Remote control lock	1 bit	DPT_Bool	1.002		W			0-Lock Disabled, 1-Lock enabled
		X	X	X	X	Status_Remote control lock	1 bit	DPT_Bool	1.002	R		T		0-Lock Disabled, 1-Lock enabled
	ERROR CODE	X	X	X	X	Status_Unit error	1 bit	1.005-DPT_Alarm	1.005	R		T		0-No error, 1-Error
		X	X	X	X	Status_Unit error code	2 byte	Non-standarized	8.x	R		T		0-No Error, X-Error
	CONSUMP.	X		X	X	Status_Accumulated power consumption	4 byte	DPT_ActiveEnergy	13.010	R		T		0...999990Wh
	ON/OFF VENT and DX		X	X		Control_Vent. On/Off	1 bit	DPT_Switch	1.001		W			0-Off, 1-On
			X	X		Status_Vent. On/Off	1 bit	DPT_Switch	1.001	R		T		0-Off, 1-On
	OP MODE VENT and DX		X	X		Control_Vent. Operation mode	1 byte	Non-standarized	5.x		W			0-Normal, 1-Heater_Exchange, 4-Auto
			X	X		Status_Vent. Operation mode	1 byte	Non-standarized	5.x	R		T		0-Normal, 1-Heater_Exchange, 4-Auto
			X	X		Control_Vent. Normal mode	1 bit	DPT_Switch	1.001		W			1-Set Vent. Normal mode
			X	X		Status_Vent. Normal mode	1 bit	DPT_Switch	1.001	R		T		1-Vent. Normal mode active, 0-Vent. Normal mode not active
			X	X		Control_Vent. HeatEx mode	1 bit	DPT_Switch	1.001		W			1-Set Vent. HeatEx mode
			X	X		Status_Vent. HeatEx mode	1 bit	DPT_Switch	1.001	R		T		1-Vent. HeatEx mode active, 0-Vent. HeatEx mode not active
			X	X		Control_Vent. Auto mode	1 bit	DPT_Switch	1.001		W			1-Set Vent. Auto mode
		X	X		Status_Vent. Auto mode	1 bit	DPT_Switch	1.001	R		T		1-Vent. Auto mode active, 0-Vent. Auto mode not active	
	MAINT.		X	X		Status_FilterSign	1 bit	DPT_Alarm	1.005	R		T		0-Normal, 1-Alarm
	DX SIGNALS			X		Status_Supply air temperature	2 byte	DPT_Value_Temp	9.001	R		T		-10..50 °C
				X		Status_Outdoor temperature	2 byte	DPT_Value_Temp	9.001	R		T		-10..50 °C
				X		Control_Heater	1 bit	DPT_Switch	1.001		W			0-Off, 1-On
				X		Status_Heater	1 bit	DPT_Switch	1.001	R		T		0-Off, 1-On
			X		Control_Power saving	1 bit	DPT_Switch	1.001		W			0-Off, 1-On	
			X		Status_Power saving	1 bit	DPT_Switch	1.001	R		T		0-Off, 1-On	
			X		Control_Rapidity	1 bit	DPT_Switch	1.001		W			0-Off, 1-On	
			X		Status_Rapidity	1 bit	DPT_Switch	1.001	R		T		0-Off, 1-On	
			X		Control_Humidity	1 bit	DPT_Switch	1.001		W			0-Off, 1-On	
		X		Status_Humidity	1 bit	DPT_Switch	1.001	R		T		0-Off, 1-On		
AWHP SIGNALS				X	Status_A2W setpoint mode	1 bit	DPT_Switch	1.001	R		T		0-Air, 1-Water	
				X	Control_A2W setpoint	2 byte	DPT_Value_Temp	9.001		W			Air (18..30°C) / Water (6..80°C)	
				X	Status_A2W setpoint	2 byte	DPT_Value_Temp	9.001	R		T		Air (18..30°C) / Water (6..80°C)	
				X	Control_HotWater On/Off	1 bit	DPT_Switch	1.001		W			0-Off, 1-On	

TYPE OF SIGNAL FUNCTION		TYPE OF UNITS				NAME	LEN.	DPT	DPT ID	FLAGS				FUNCTION	
		AC	VENT	DX	AWHP					R	W	T	U		
INDOOR UNIT SIGNALS	AWHP SIGNALS				X	Status_HotWater On/Off	1 bit	DPT_Switch	1.001	R		T		0-Off, 1-On	
					X	Status_HotWater only	1 bit	DPT_Switch	1.001	R		T		0-Off, 1-On	
					X	Control_HotWater setpoint	2 byte	DPT_Value_Temp	9.001		W			30...80°C	
					X	Status_HotWater setpoint	2 byte	DPT_Value_Temp	9.001	R		T		30...80°C	
					X	Status_Water inlet temperature	2 byte	DPT_Value_Temp	9.001	R		T		°C	
					X	Status_Water discharge temperature	2 byte	DPT_Value_Temp	9.001	R		T		°C	
					X	Status_Water tank temperature	2 byte	DPT_Value_Temp	9.001	R		T		°C	
					X	Status_Water solar temperature	2 byte	DPT_Value_Temp	9.001	R		T		°C	
		SYSTEM INFO	X	X	X	X	Status_Unit type	1 byte	Non-standarized	5.x	R		T		0-Not defined, 1-AC, 2-VENT, 3-DX, 4-AWHP
		COMM. STATUS	X	X	X	X	Status IUXX_Communication Error IU	1 bit	DPT_Alarm	1.005	R		T		0-No error, 1-Error