



a bel group

Qwik RJ45™ Crimp and Cut Tool Part Number 290263-02

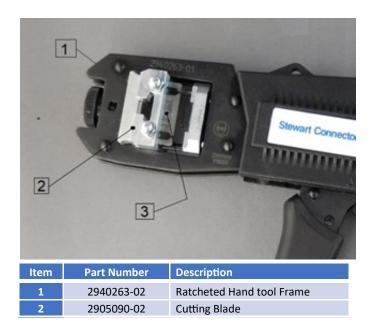

Removing Die set from Hand Tool

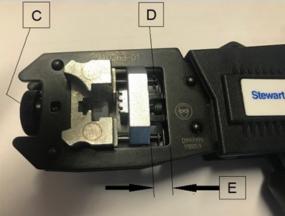




To remover the die set from the hand tool frame loosen thumb Screw (C) completely. Close Ratcheted tool handle one click to reveal the Cap head screw (D). With the opening (E)

(approximately .28"), push the die set out from the opposite side.

Adjusting Contact Height:

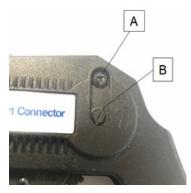

This Tool incorporates an eccentric axle and an adjustable wheel to adjust and recalibrate to ensure correct crimp performance. Should adjustment be necessary, the following procedure should be followed:


1. Loosen and remove the Combination Head screw (A).

2. Using a screwdriver, turn the numbered adjustment wheel to the next higher/lower number (B).

3. Re-install the Combination Head screw and tighten.

Removing and Replacing the Cutting Blade

To Change the cutter blade remove the acorn nuts (F). Care must be taken to not allow the springs under the acorn nuts to spring off the posts. Once springs are removed, remove the cover plate to expose the blade.

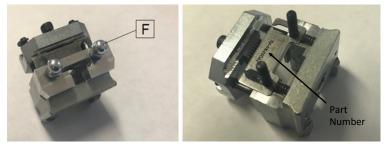

Carefully remove the blade with the springs attached by sliding blade over the alignment pins. When inserting new blade make sure the part number side of the blade is visible before installing cover plate. Re-install cover plate, springs and acorn nuts. Make sure everything moves freely before inserting die set into hand tool frame.

