


Module Front

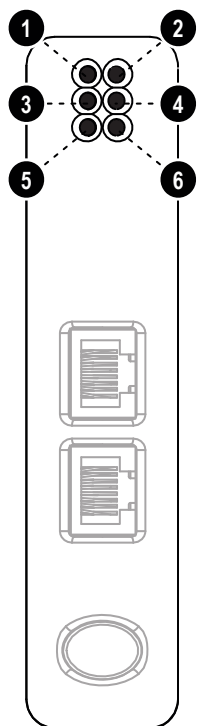

LED Indicators

LED	Indication	Description
1 (Module Status)	Off	No power
	Green	Controlled by a scanner in run state
	Flashing Green	Not configured, or scanner in idle state
2 (Network Status)	Flashing Red	Minor fault (recoverable)
	Red	Major fault (unrecoverable)
	Flashing Green/Red	Self-test in progress
	Off	No IP address, or no power
3 (Link)	Green	Online, one or more EtherNet/IP connections established
	Flashing Green	Online, no connections established
	Red	Duplicate IP address detected. Fatal error.
4 (Activity)	Flashing Red	One or more connections timed out
	Flashing Green/Red	Self-test in progress
	Off	No Ethernet activity
5 (Subnet Status)	Flashing Green	Activity, receiving/transmitting Ethernet packets
	Green	No link
6 (Device Status)	Green	Connected to an Ethernet network
	Red	No Ethernet activity
	Flashing Green	Activity, receiving/transmitting Ethernet packets
5 (Subnet Status)	Flashing green	Running, but one or more transaction errors
	Green	Running
	Red	Transaction error/timeout or subnet stopped
	Off	Power off
6 (Device Status)	Alternating red/green	Invalid or missing configuration
	Green	Initializing
	Flashing green	Running
	Red	Bootloader mode
	Flashing red	Note the flash sequence pattern and contact HMS support

Accessories Checklist

The following items are required for installation:

- Anybus Communicator Resource CD (Includes configuration software, manuals and application notes)
- RS232 configuration cable
- Subnetwork connector
- Ethernet cable and connector (not included)


Installation and Startup Summary

- Mount the Communicator on the DIN-rail.
- Connect the Communicator to the Ethernet/IP network.
- Connect the Communicator to the subnetwork.
- Connect the configuration cable between the Communicator and the PC containing the Anybus Configuration Manager software (ACM).
- Power on the Communicator (+24 V DC).
- Configure the Communicator using ACM.
- Include the Anybus Communicator EDS file in the Ethernet/IP configuration tool.
- Configure and start the Ethernet/IP network.

Bottom View

PC Connector:

- 1. GND
- 2. GND
- 3. RS232 Rx
- 4. RS232 Tx

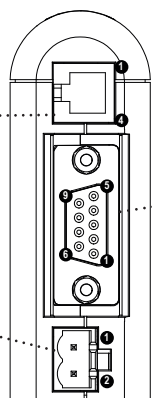


Power:

- 1. +24 V DC
- 2. GND

Subnetwork Connector

Pin no.	Description
1	+5V OUT
2	RS232 Rx
3	RS232 Tx
4	NC
5	Signal GND
6	RS422 Rx+
7	RS422 Rx-
8	RS485+ / RS422 Tx+
9	RS485- / RS422 Tx-

Ethernet/IP Connectors

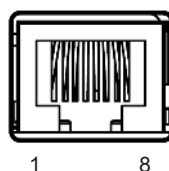

Pin no	Description
1	TD+
2	TD-
3	RD+
4	Termination
5	Termination
6	RD-
7	Termination
8	Termination

Further information and documents about this product can be found at the product pages on www.anybus.com.

UL Certification



IND: CONT. EQ.
FOR HAZ LOC.
CL I, DIV 2
GP A,B,C,D
TEMP
CODE
E203225

Warnings!

- **WARNING - EXPLOSION HAZARD - SUBSTITUTION OF ANY COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.**
- **WARNING - EXPLOSION HAZARD - WHEN IN HAZARDOUS LOCATIONS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES.**
- **WARNING - EXPLOSION HAZARD - DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NON-HAZARDOUS.**

Attention!

- **ATTENTION – RISQUE D’EXPLOSION – LE REMPLACEMENT DE TOUT COMPOSANTS INVALIDE LA CERTIFICATION CLASS I, DIVISION 2.**
- **ATTENTION – RISQUE D’EXPLOSION – EN ZONE EXPLOSIVE, VEUILLEZ COUPER L’ALIMENTATION ÉLECTRIQUE AVANT LE REMPLACEMENT OU LE RACCORDEMENT DES MODULES.**
- **ATTENTION – RISQUE D’EXPLOSION – NE PAS DÉCONNECTER L’ÉQUIPEMENT TANT QUE L’ALIMENTATION EST TOUJOURS PRÉSENTE OU QUE LE PRODUIT EST TOUJOURS EN ZONE EXPLOSIVE ACTIVE.**

Additional installation and operating instructions

- Max Ambient Temperature: 55°C (for Hazloc environments)
- Field wiring terminal markings (wire type (Cu only, 14-30 AWG)).
- Use 60/75 or 75°C copper (Cu) wire only.
- Terminal tightening torque must be 5-7 lb-in (0.5 - 0.8 Nm).
- Use in overvoltage category 1 pollution degree 2 environment.
- Installed in an enclosure considered representative of the intended use.
- Secondary circuit intended to be supplied from an isolating source and protected by overcurrent protective devices installed in the field sized per the following:

Control Circuit Wire Size		Maximum Protective Device Rating
AWG	(mm ²)	Amperes
22	(0.32)	3
20	(0.52)	5
18	(0.82)	7
16	(1.3)	10
14	(2.1)	20
12	(3.3)	25

ODVA Conformity



EtherNet/IP CONFORMANCE TESTED™ is a certification mark of ODVA.

EMC Compliance (CE)



This product is in accordance with the EMC directive 89/336/EEC, with amendments 92/31/EEC and 93/68/EEC through conformance with the following standards:

- **EN 50082-2 (1993)**
EN 55011 (1990) Class A
- **EN 61000-6-2 (1999)**
EN 61000-4-3 (1996) 10 V/m
EN 61000-4-6 (1996) 10 V/m (all ports)
EN 61000-4-2 (1995) ±8 kV Air Discharge
±4 kV Contact discharge
EN 61000-4-4 (1995) ±2 kV Power port
±1 kV Other ports
EN 61000-4-5 (1995) ±0.5 kV Power ports (DM/CM)
±1 kV Signal ports

Further information and documents about this product can be found at the product pages on www.anybus.com.