

# BOOSTXL-RS232 BoosterPack™ Hardware

## User's Guide



Literature Number: SLLU250  
November 2016

---



---



---

<b>1</b>	<b>Trademarks</b> .....	<b>4</b>
<b>2</b>	<b>Introduction</b> .....	<b>4</b>
	2.1 Overview .....	4
<b>3</b>	<b>Hardware Description</b> .....	<b>5</b>
	3.1 Top and Bottom View .....	5
	3.2 Board Overview .....	5
	3.3 Block Diagram .....	6
	3.4 DB9 Connector .....	7
	3.5 Header Descriptions .....	8
	3.6 LED Description.....	10
<b>4</b>	<b>Functional Modes</b> .....	<b>11</b>
	4.1 Auto-Powerdown Plus.....	11
	4.2 Forced On .....	11
	4.3 Forced Off .....	11
	4.4 Invalid .....	12
<b>5</b>	<b>Interfacing with External Hardware</b> .....	<b>13</b>
<b>6</b>	<b>Additional Information</b> .....	<b>14</b>
	6.1 Design Files .....	14
	6.2 Hardware Change Log .....	14
	6.3 Schematic.....	14
	6.4 PCB Layout.....	15

## List of Figures

1	BOOSTXL-RS232 .....	4
2	Top View of BOOSTXL-RS232 .....	5
3	Bottom View of BOOSTXL-RS232 .....	5
4	BOOSTXL-RS232 Overview .....	5
5	BOOSTXL-RS232 Block Diagram .....	6
6	DB9 Pinout.....	7
7	GPIO Headers.....	8
8	Header J9.....	9
9	Supply Select.....	9
10	RS232 LEDs .....	10
11	Interfacing With LaunchPad.....	13
12	BOOSTXL-RS232 Schematic (Zoom for Higher Resolution).....	14
13	Top Layer Routing .....	15
14	Bottom Layer Routing.....	15

## List of Tables

1	RS-232 Female DB9 Connector Pin Summary .....	7
2	Driver Functions .....	11
3	Receiver Functions.....	11
4	INVALID Status.....	12
5	Description of Hardware Changes .....	14

# **BOOSTXL-RS232 BoosterPack™ Hardware**

---

---

---

## **1 Trademarks**

BoosterPack, LaunchPad are trademarks of Texas Instruments. All other trademarks are the property of their respective owners.

## **2 Introduction**

### **2.1 Overview**

The RS232 BoosterPack provides the opportunity to communicate to and from a TI LaunchPad™ using the RS232 serial protocol. This opens new capabilities for the microcontrollers to interface with industrial equipment for debugging, for accessing memory directly for backup recovery, and for simplified data transfer between systems with proprietary code.


The featured product is the [TRS3122E](#), an ultra-low power, high-speed dual RS232 transceiver. It supports data [RX, TX] channels as well as flow control [RTS, CTS] channels that can be easily assigned to 1 of 10 general purpose input/output (GPIO) pins. These channels on the TRS3122E can be configured to be either one set of data channels and one set of control channels for flow control or to be two sets of data channels. However, this BoosterPack is configured for one set of data channels [RX, TX] and one set of control channels [RTS, CTS]. With its unique doubler and tripler charge pump architecture, the TRS3122E can operate at a VCC as low as 1.8 V while maintaining compatibility with 3.3-V and 5-V supplies. This BoosterPack allows for operating voltages of 1.8 V or 3.3 V.

This device features a shutdown mode that reduces supply current as low as 0.5  $\mu$ A. This can be done manually or by setting the TRS3122E into its *Auto-Powerdown Plus* mode. See [Section 4](#) for more information on the modes of operation of the TRS3122E along with how to set up the BoosterPack for these modes.

#### **2.1.1 What Is Included?**

- 1× RS232 BoosterPack
- 7× Shunt Jumper

[Figure 1](#) is a photo of the BOOSTXL-RS232 board.

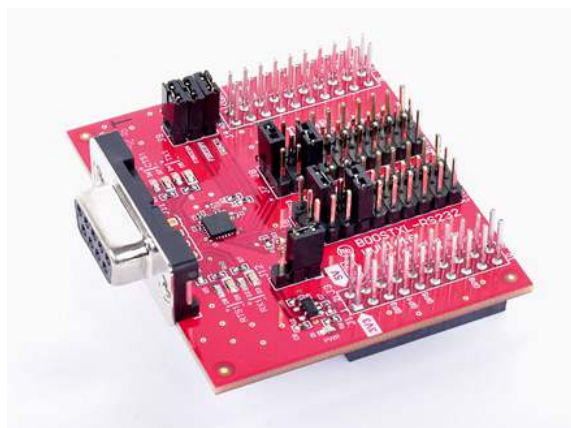

**Figure 1. BOOSTXL-RS232**

### 3 Hardware Description

#### 3.1 Top and Bottom View

Figure 2 is a top view of the BOOSTXL-RS232 and Figure 3 is a bottom view of the BOOSTXL-RS232.

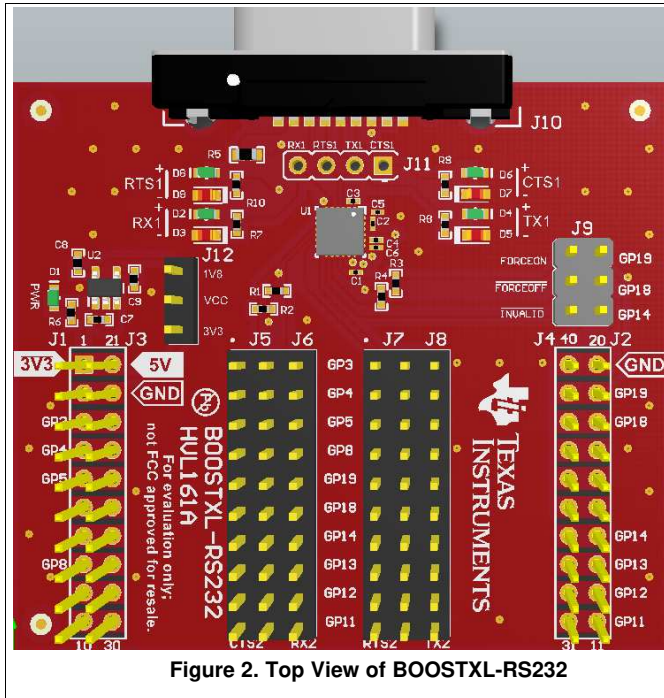


Figure 2. Top View of BOOSTXL-RS232

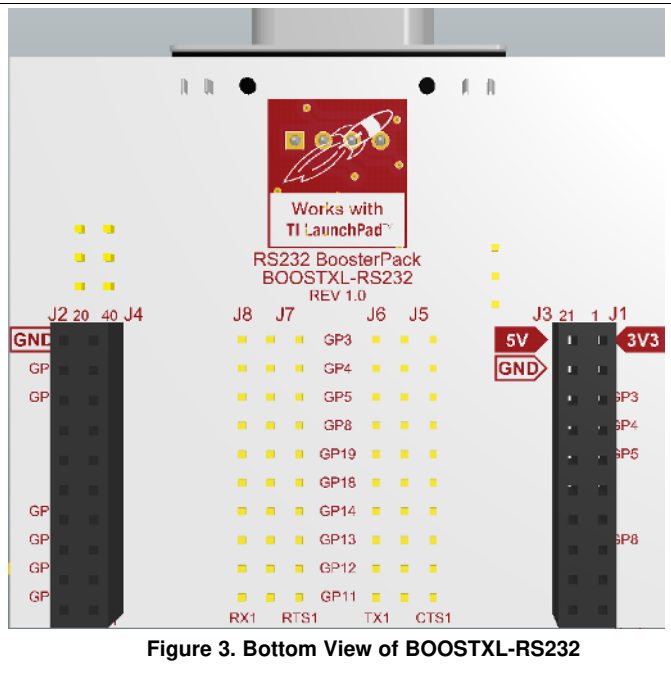


Figure 3. Bottom View of BOOSTXL-RS232

#### 3.2 Board Overview

Figure 4 shows an overview of the BOOSTXL-RS232 BoosterPack. The main features such as devices, connectors, headers, and LEDs are highlighted.

See Section 3.4, Section 3.5, and Section 3.6 for additional details regarding each portion of the board.


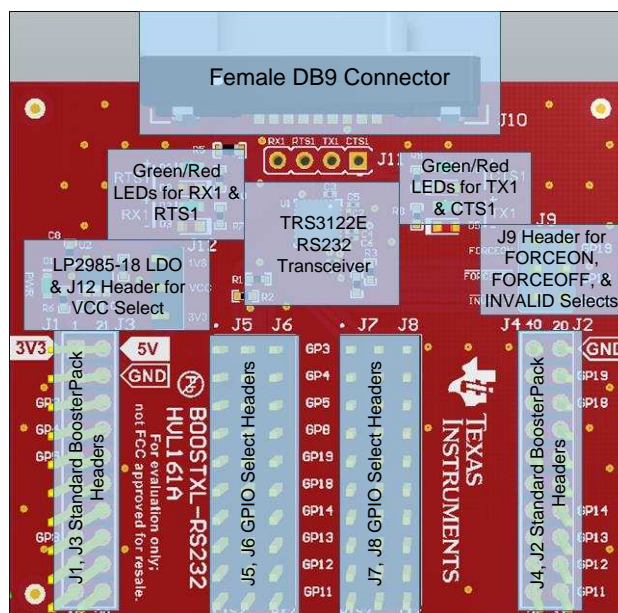


Figure 4. BOOSTXL-RS232 Overview

### 3.3 Block Diagram

Figure 5 details a block diagram of the BOOSTXL-RS232 BoosterPack. The 40-pin BoosterPack header allows the BoosterPack to be easily interfaced with LaunchPads. A 3-pin header is available to change  $V_{CC}/V_L$  between 3.3 V and 1.8 V. This allows the BoosterPack to communicate with LaunchPads either at 3.3-V or 1.8-V logic levels. See Section 3.5.4 for more details. The two 30-pin GPIO headers allow for the selection of GPIO pins on the LaunchPad to be connected to the TRS3122E. See Section 3.5.1 for more information. A 6-pin header is available to allow for the FORCEON, FORCEOFF, and INVALID pins on the TRS3122E to be connected to LaunchPad GPIO pins for more control. See Section 3.5.2 and Section 3.5.3 for more information.

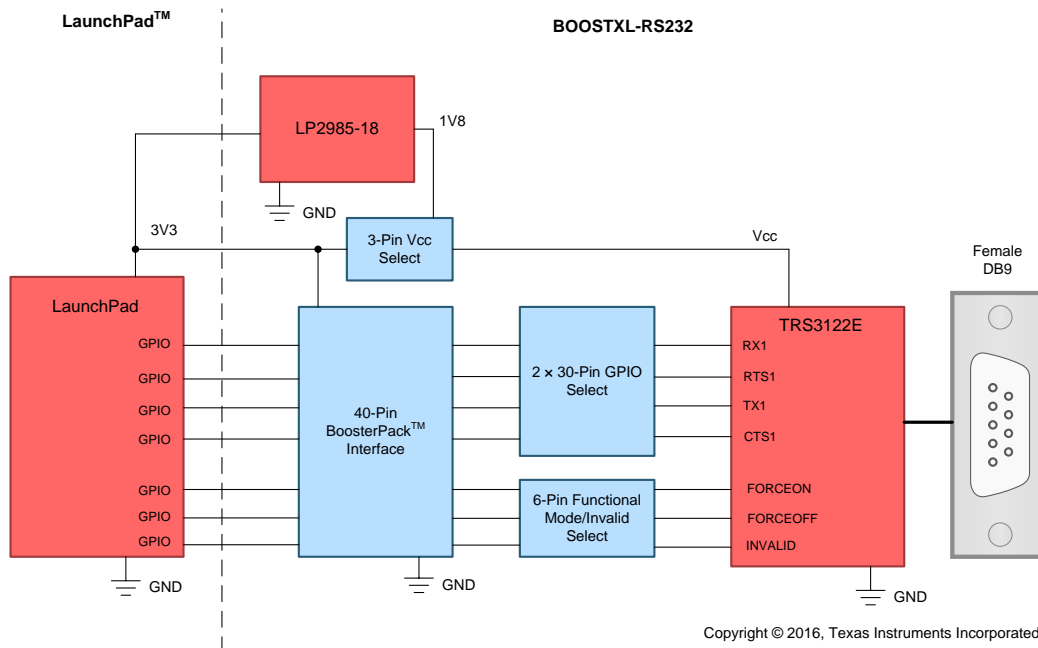

**Figure 5. BOOSTXL-RS232 Block Diagram**

### 3.4 DB9 Connector

The BoosterPack includes a female data circuit-terminating equipment (DCE) DB9 port. Female DCE ports are designed to connect with the male data terminal equipment (DTE) port of the computer. The labeling for Figure 6 is from the perspective of the computer with the DTE port. Therefore, RX1 is actually an output from the BoosterPack to the connected device through the RS232 interface, while TX1 is an input from the connected device to the BoosterPack through the RS232 interface. The same applies to the RTS1 (input) and CTS1 (output) ports. The RX2, TX2, CTS2, and RTS2 ports are used to interface with the microcontroller through 0-V to 3.3-V (or 1.8-V) TTL signals. See Table 1 for information on how the DB9 connector is routed on the BOOSTXL-RS232 BoosterPack.



**Figure 6. DB9 Pinout**

**Table 1. RS-232 Female DB9 Connector Pin Summary**

Pin	Function
1	NC
2	UART Receive 1 (RX1)
3	UART Transmit 1 (TX1)
4	Shorted to pin 6 (unused flow control line)
5	GND
6	Shorted to pin 4 (unused flow control line)
7	Request to Send 1 (RTS1)
8	Clear to Send 1 (CTS1)
9	NC

### 3.5 Header Descriptions

#### 3.5.1 Using J5, J6 and J7, J8 GPIO Headers

The J5, J6 and J7, J8 10 × 3 headers are for assigning the TRS3122E UART Drivers or Receivers (labeled as CTS2, RX2, RTS2, and TX2 on the BoosterPack) to various LaunchPad GPIOs. The default jumper setup has TX2, RX2, RTS2, and CTS2 assigned to LaunchPad GPIO pins GP3, GP4, GP5, and GP8, respectively. TI recommends tying TX2 and RX2 to GP3 and GP4, respectively, since GP3 and GP4 are typically the UART transmit and receive ports on TI LaunchPads, this is not required but should be kept in mind. RTS2 and CTS2 can be connected to any desired GPIO pin.

Each pin of the middle column of the 10 × 3 headers correlates to a particular GPIO pin. The pin it is connected to is labeled in between the J5, J6 and J7, J8 header groups, this is seen in Figure 7. The columns on either side of the middle column are connected to their coinciding transceiver pins, which are labeled at the bottom of each column, this is seen in Figure 7. For example, looking at header J5, J6 in Figure 7, the right column coincides with RX2. Placing a jumper across the first pins of the middle column and the right column would short GP3 from the LaunchPad to the DIN1 pin on the TRS3122E.

---

**NOTE:** See Section 5 for information on headers J1-4 and how they interface with the LaunchPad ecosystem.

---



---

**NOTE:** See Figure 13 and Figure 14 for more clarification of how the headers are routed.

---

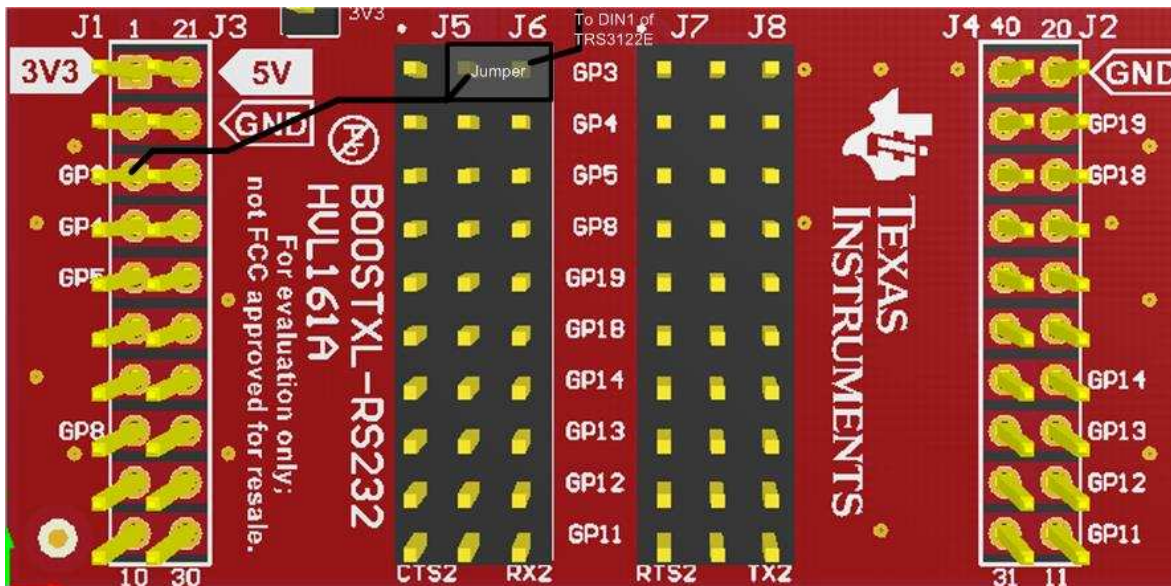


Figure 7. GPIO Headers

#### 3.5.2 Utilizing FORCEON and FORCEOFF

The J9 3 × 2 header allows for the option to assign FORCEON and FORCEOFF to GP19 and GP18, respectively. FORCEON can be connected to GP19 by placing a jumper across pins 1 and 2 on J9 and FORCEOFF can be connected to GP18 by placing a jumper across pins 3 and 4 on J9, see Figure 8. This allows for the control of the different functional modes of the TRS3122E. See Section 4 to learn more about the different functional modes and how to control them using FORCEON and FORCEOFF.

---

**NOTE:** If FORCEON and FORCEOFF are not intended to be controlled, then remove the jumpers discussed.

---



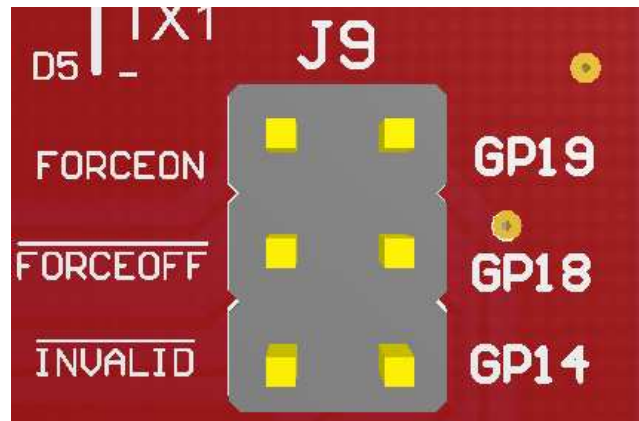


Figure 8. Header J9

### 3.5.3 Utilizing INVALID Signal

The J9 3 × 2 header also allows for the option to monitor the  $\overline{\text{INVALID}}$  pin of the TRS3122E by linking it to a GPIO pin on a LaunchPad. By placing a jumper across pins 5 and 6 on J9, see Figure 8, the  $\overline{\text{INVALID}}$  pin will be connected to GP14. The GPIO port on a LaunchPad can then be set to an input and used to monitor the  $\overline{\text{INVALID}}$  pin. See Section 4.4 to learn more about the  $\overline{\text{INVALID}}$  pin.

---

**NOTE:** If the  $\overline{\text{INVALID}}$  pin is not intended to be monitored, remove the jumper.

---

### 3.5.4 Assigning Desired Supply Voltage

The BOOSTXL-RS232 BoosterPack is populated with a linear regulator to drop the typical 3.3-V  $V_{CC}$  on most LaunchPads to 1.8 V. This allows for communication with LaunchPads that are capable of communicating at 1.8-V logic levels. To switch between a 1.8-V and 3.3-V supply, use a jumper on J12 to short the center  $V_{CC}$  pin to the desired supply voltage, see Figure 9. A short between pin 1 and 2 results in 3.3-V  $V_{CC}$  and a short between 2 and 3 results in 1.8-V  $V_{CC}$ . Pin 1 on J12 is denoted with a white line along one edge of the pin, as seen in Figure 9. While  $V_L$  and  $V_{CC}$  are independent on the TRS3122E device itself, these two pins are tied together on the BoosterPack. This way  $V_L$  cannot accidentally be set higher than  $V_{CC}$ . This option was added to display the ultra-low voltage capabilities of the TRS3122E.

---

**NOTE:**  $V_{CC}$  and  $V_L$  should only be set to 1.8 V if the BOOSTXL-RS232 is intended to interface with a LaunchPad that operates at 1.8-V logic levels. Otherwise TI recommends leaving the jumper across pins 1 and 2 of J12.

---

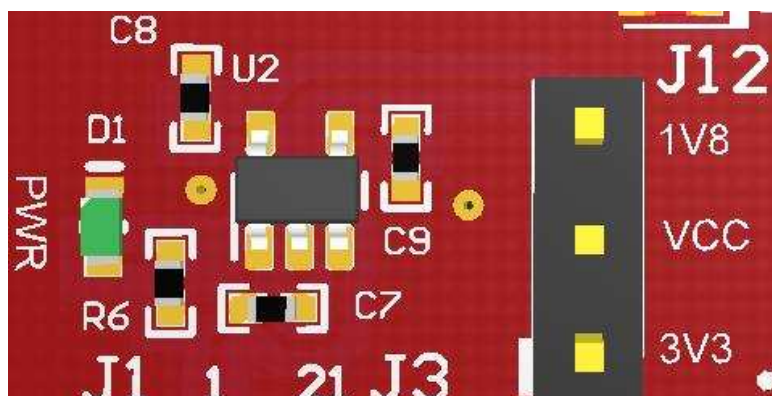


Figure 9. Supply Select

### 3.6 LED Description

For this BoosterPack, there are two LEDs per RS232 line (RTS1, RX1, CTS1, TX1) and one power indication LED, see [Figure 10](#). The LEDs serve as a reference when connecting the BoosterPack to a LaunchPad and up to a RS232 serial port. A red LED for an RS232 line indicates negative voltage or a LOW signal, while a green LED indicates positive voltage or a HIGH signal. This information is also denoted next to each LED; a '+' sign for the green LED and a '-' sign for the red LED. Upon powering the BoosterPack, the power LED will turn on and the driver and receiver line LEDs may also be on, depending on what the board is connected to.

Since RS232 TX and RX lines sit at a LOW voltage level until data is transmitted or received, the red LED for TX1 and RX1 on the board will be on until data is transmitted or received. While transmitting or receiving, the green LED will blink for the line in use. End of transmission is indicated with just a red LED. The RTS1 green LED will be on when a request-to-send signal is raised and the CTS1 green LED will be on when the clear-to-send signal is raised. Otherwise, the red LEDs will be on.

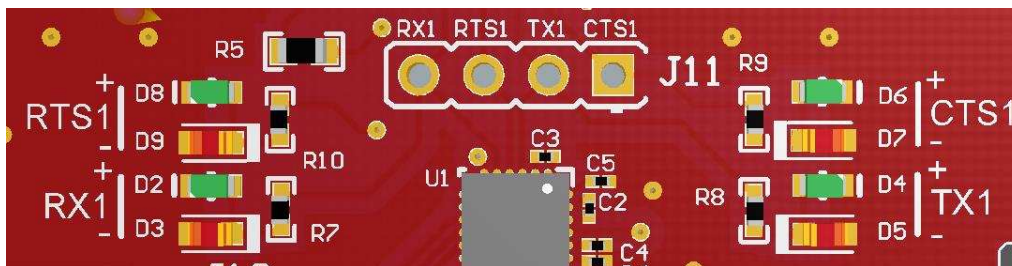


Figure 10. RS232 LEDs

## 4 Functional Modes

The BOOSTXL-RS232 BoosterPack has three modes of operation: On with Auto-Powerdown Plus enabled, Forced On, and Forced Off. Included in this section is the discussion of the INVALID pin.

### 4.1 Auto-Powerdown Plus

Auto-Powerdown Plus is enabled when FORCEON is set LOW and FORCEOFF is set HIGH. Using the integrated edge-detection circuitry and timer of the TRS3122E, the device can sense when there is no activity on the driver or receiver inputs for 30 seconds. When this condition is sensed by the device, it automatically shuts the charge pump off, reducing supply current to 0.5  $\mu$ A. When a valid transition is sensed on one of the driver or receiver inputs, the charge pump turns back on and TRS3122E exits powerdown mode. The typical time to exit powerdown mode is typically 30  $\mu$ s, but can be as long as 150  $\mu$ s. As a result, the system saves power without requiring any software control. While in the low power mode with Automatic Powerdown enabled (FORCEOFF = HIGH and FORCEON = LOW), the receiver inputs are still enabled.

The FORCEON and FORCEOFF pins control the power states of the transceiver. When the jumpers short FORCEON to GP19 and FORCEOFF to GP18, the power down states of the transceiver can be controlled through GPIO, see [Table 2](#) and [Table 3](#).

### 4.2 Forced On

If the FORCEON and FORCEOFF pins are both set HIGH, the device will power on with Auto-Powerdown Plus disabled. Both the drivers and receivers will be active regardless of inactivity, as shown in [Table 2](#) and [Table 3](#).

### 4.3 Forced Off

The device can be manually powered down by externally setting the FORCEOFF pin LOW. Both the drivers and receivers will be powered off, as shown in [Table 2](#) and [Table 3](#). This mode overrides the other modes.

**Table 2. Driver Functions<sup>(1)</sup>**

Inputs				Output	Driver Status
DIN	FORCEON	FORCEOFF	Time Elapsed Since Last RIN or DIN Transition	DOUT	
X	X	L	X	Z	Powered off
L	H	H	X	H	Normal operation with auto-powerdown plus disabled
H	H	H	X	L	
L	L	H	< 30 s	H	Normal operation with auto-powerdown plus enabled
H	L	H	< 30 s	L	
L	L	H	> 30 s	Z	Powered off by auto-powerdown plus feature
H	L	H	> 30 s	Z	

<sup>(1)</sup> H = high level, L = low level, X = irrelevant, Z = high impedance (off), 30 s is typical inactivity time

**Table 3. Receiver Functions<sup>(1)</sup>**

Inputs			Output	Receiver Status
RIN	FORCEOFF	Time Elapsed Since Last RIN or DIN Transition	ROUT	
X	L	X	Z	Powered off
L	H	X	H	Normal operation with auto-powerdown plus disabled or enabled
H	H	X	L	
Open	H	X	H	

<sup>(1)</sup> H = high level, L = low level, X = irrelevant, Z = high impedance (off), Open = input disconnected or connected driver off

#### 4.4 Invalid

The  $\overline{\text{INVALID}}$  pin senses whether or not there is a cable connected to the port. A HIGH voltage level on the pin means there is a connection and a LOW voltage level on the pin means there is not a connection, see [Table 4](#).

**Table 4.  $\overline{\text{INVALID}}$  Status<sup>(1)</sup>**

Inputs				Output
RIN1, RIN2	FORCEON	FORCEOFF	Time Elapsed Since Last RIN or DIN Transition	$\overline{\text{INVALID}}$
Any L or H	X	X	X	H
All Open	X	X	X	L

<sup>(1)</sup> H = high level, L = low level, X = irrelevant, Z = high impedance (off), Open = input disconnected or connected driver off


## 5 Interfacing with External Hardware

TI BoosterPacks are designed in a way that allows multiple devices (BoosterPacks and LaunchPads) to continually stack on top of each other.

### CAUTION

When stacking devices, correctly align the two devices and make sure that any unwanted connections are not made by accident. Unwanted connections occur when header pins on the bottom device contacts vias or through-hole solder joints of the upper device. These unwanted contacts can create shorts that may cause incorrect circuit operation and could potentially cause damage to the hardware.

Figure 11 shows the top layer of the BOOSTXL-RS232 with the headers J1-4 and J9 highlighted. J1-4 are eventually connected directly to LaunchPad pins. J9 is highlighted because the right column is routed directly to header pins that are connected to LaunchPad pins. The highlighted headers are color matched to the description boxes on the exterior of the image of the board. If the description boxes are labeled, it means that they are specifically routed on the BoosterPack. For example, the first red box on the left is labeled 3V3 and it is lined up with pin 1 of J1, which is highlighted red. This means that pin 1 of J1 is connected to the 3V3 pin of the LaunchPad. If they are empty, they are not routed. You will notice that the inner, black headers are not routed at all. This is because they are not needed for the operation of this board and are left available to stack other development boards that might need them. See [ti.com/launchpad](http://ti.com/launchpad) for details regarding connecting to other development boards.

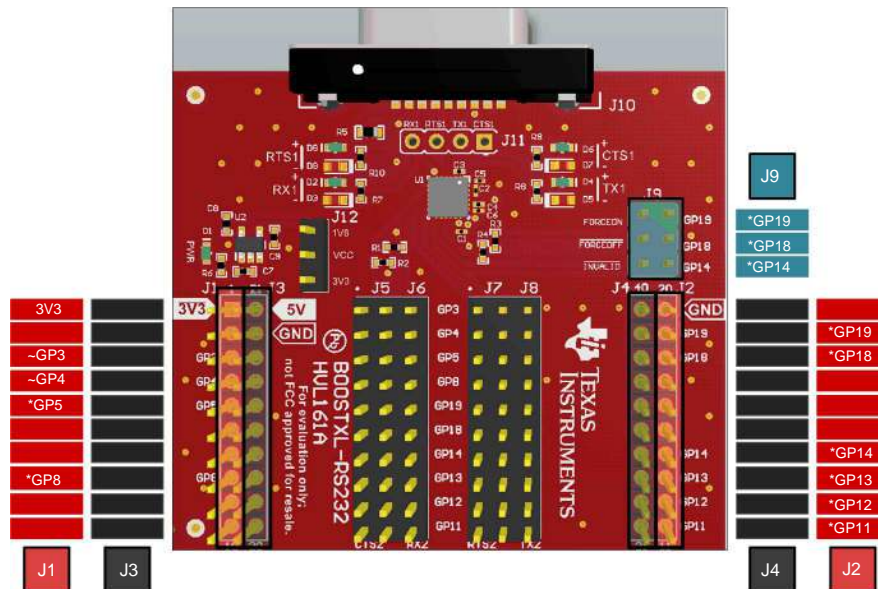

- (1) Pins with no name or description are not connected. Pins with the same name or description are shorted together.
- (2) \* these pins are not required for BoosterPack operation.
- (3) ~ these pins are not required to be used but are recommended

Figure 11. Interfacing With LaunchPad

## 6 Additional Information

### 6.1 Design Files

All design files including schematics, layout, bill of materials (BOM), Gerber files, and documentation are available in the *Texas Instruments Resource Explorer*.

[dev.ti.com/tirex](http://dev.ti.com/tirex)

The schematic is shown in [Section 6.3](#), the top layer and bottom layer PCB layouts are illustrated in [Figure 13](#) and [Figure 14](#).

### 6.2 Hardware Change Log


[Table 5](#) details descriptions of hardware changes.

**Table 5. Description of Hardware Changes**

PCB Revision	Description of Changes
Rev 1.0	Initial Release

### 6.3 Schematic

[Figure 12](#) illustrates the BOOSTXL-RS232 schematic.

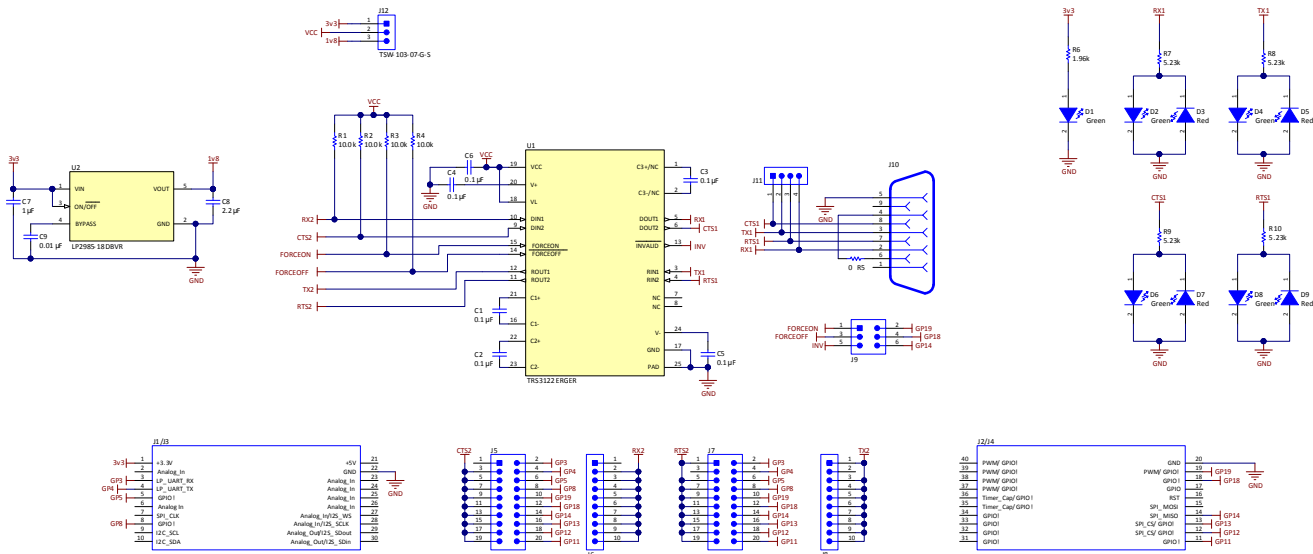

Copyright ©2016, Texas Instruments Incorporated

**Figure 12. BOOSTXL-RS232 Schematic (Zoom for Higher Resolution)**

### 6.4 PCB Layout

Figure 13 shows the top layer routing of the BOOSTXL-RS232. Figure 14 shows the bottom layer routing of the BOOSTXL-RS232.

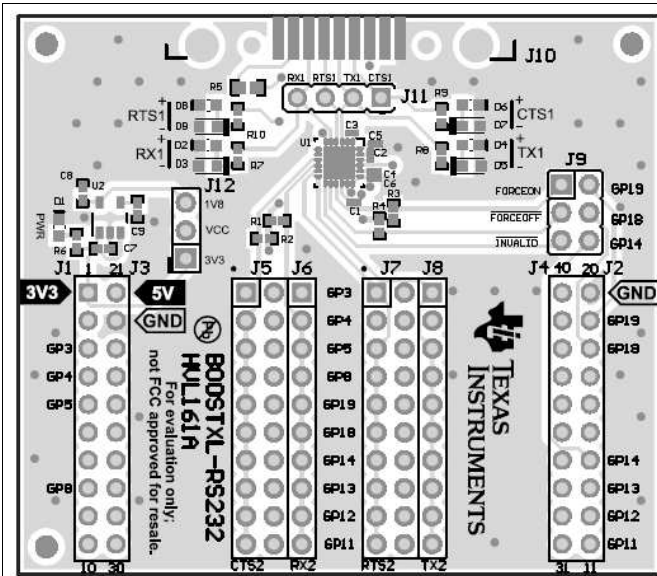


Figure 13. Top Layer Routing

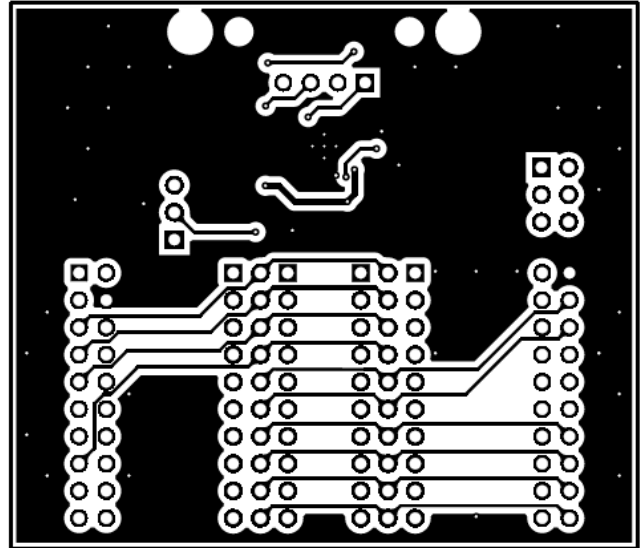


Figure 14. Bottom Layer Routing

## STANDARD TERMS AND CONDITIONS FOR EVALUATION MODULES

1. *Delivery:* TI delivers TI evaluation boards, kits, or modules, including demonstration software, components, and/or documentation which may be provided together or separately (collectively, an "EVM" or "EVMs") to the User ("User") in accordance with the terms and conditions set forth herein. Acceptance of the EVM is expressly subject to the following terms and conditions.
  - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductors products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms and conditions that accompany such Software
  - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
2. *Limited Warranty and Related Remedies/Disclaimers:*
  - 2.1 These terms and conditions do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
  - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for any defects that are caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI. Moreover, TI shall not be liable for any defects that result from User's design, specifications or instructions for such EVMs. Testing and other quality control techniques are used to the extent TI deems necessary or as mandated by government requirements. TI does not test all parameters of each EVM.
  - 2.3 If any EVM fails to conform to the warranty set forth above, TI's sole liability shall be at its option to repair or replace such EVM, or credit User's account for such EVM. TI's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by TI and that are determined by TI not to conform to such warranty. If TI elects to repair or replace such EVM, TI shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.
3. *Regulatory Notices:*
  - 3.1 *United States*
    - 3.1.1 *Notice applicable to EVMs not FCC-Approved:*

This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.
    - 3.1.2 *For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:*

### CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Interference Statement for Class A EVM devices

*NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.*



## FCC Interference Statement for Class B EVM devices

*NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### 3.2 Canada

3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210

#### Concerning EVMs Including Radio Transmitters:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

#### Concernant les EVMs avec appareils radio:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### Concerning EVMs Including Detachable Antennas:

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

#### Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

### 3.3 Japan

3.3.1 *Notice for EVMs delivered in Japan:* Please see [http://www.tij.co.jp/llds/ti\\_ja/general/eStore/notice\\_01.page](http://www.tij.co.jp/llds/ti_ja/general/eStore/notice_01.page) 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。  
[http://www.tij.co.jp/llds/ti\\_ja/general/eStore/notice\\_01.page](http://www.tij.co.jp/llds/ti_ja/general/eStore/notice_01.page)

3.3.2 *Notice for Users of EVMs Considered "Radio Frequency Products" in Japan:* EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required by Radio Law of Japan to follow the instructions below with respect to EVMs:

1. Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above, User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】 開発キットの中には技術基準適合証明を受けていないものがあります。技術適合証明を受けていないものご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。日本テキサス・インスツルメンツ株式会社

東京都新宿区西新宿 6 丁目 2 4 番 1 号

西新宿三井ビル

3.3.3 *Notice for EVMs for Power Line Communication:* Please see [http://www.tij.co.jp/lstds/ti\\_ja/general/eStore/notice\\_02.page](http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_02.page)  
電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。 [http://www.tij.co.jp/lstds/ti\\_ja/general/eStore/notice\\_02.page](http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_02.page)

#### 4 *EVM Use Restrictions and Warnings:*

4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.

4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.

#### 4.3 *Safety-Related Warnings and Restrictions:*

4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.

4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.

4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.

5. *Accuracy of Information:* To the extent TI provides information on the availability and function of EVMS, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.

6. *Disclaimers:*
- 6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY WRITTEN DESIGN MATERIALS PROVIDED WITH THE EVM (AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.
- 6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS AND CONDITIONS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT MADE, CONCEIVED OR ACQUIRED PRIOR TO OR AFTER DELIVERY OF THE EVM.
7. *USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS.* USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS AND CONDITIONS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.
8. *Limitations on Damages and Liability:*
- 8.1 *General Limitations.* IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS AND CONDITIONS OR THE USE OF THE EVMS PROVIDED HEREUNDER, REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TI MORE THAN ONE YEAR AFTER THE RELATED CAUSE OF ACTION HAS OCCURRED.
- 8.2 *Specific Limitations.* IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY WARRANTY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS AND CONDITIONS, OR ANY USE OF ANY TI EVM PROVIDED HEREUNDER, EXCEED THE TOTAL AMOUNT PAID TO TI FOR THE PARTICULAR UNITS SOLD UNDER THESE TERMS AND CONDITIONS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM AGAINST THE PARTICULAR UNITS SOLD TO USER UNDER THESE TERMS AND CONDITIONS SHALL NOT ENLARGE OR EXTEND THIS LIMIT.
9. *Return Policy.* Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.
10. *Governing Law:* These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2016, Texas Instruments Incorporated

## IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have **not** been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

### Products

Audio	<a href="http://www.ti.com/audio">www.ti.com/audio</a>
Amplifiers	<a href="http://amplifier.ti.com">amplifier.ti.com</a>
Data Converters	<a href="http://dataconverter.ti.com">dataconverter.ti.com</a>
DLP® Products	<a href="http://www.dlp.com">www.dlp.com</a>
DSP	<a href="http://dsp.ti.com">dsp.ti.com</a>
Clocks and Timers	<a href="http://www.ti.com/clocks">www.ti.com/clocks</a>
Interface	<a href="http://interface.ti.com">interface.ti.com</a>
Logic	<a href="http://logic.ti.com">logic.ti.com</a>
Power Mgmt	<a href="http://power.ti.com">power.ti.com</a>
Microcontrollers	<a href="http://microcontroller.ti.com">microcontroller.ti.com</a>
RFID	<a href="http://www.ti-rfid.com">www.ti-rfid.com</a>
OMAP Applications Processors	<a href="http://www.ti.com/omap">www.ti.com/omap</a>
Wireless Connectivity	<a href="http://www.ti.com/wirelessconnectivity">www.ti.com/wirelessconnectivity</a>

### Applications

Automotive and Transportation	<a href="http://www.ti.com/automotive">www.ti.com/automotive</a>
Communications and Telecom	<a href="http://www.ti.com/communications">www.ti.com/communications</a>
Computers and Peripherals	<a href="http://www.ti.com/computers">www.ti.com/computers</a>
Consumer Electronics	<a href="http://www.ti.com/consumer-apps">www.ti.com/consumer-apps</a>
Energy and Lighting	<a href="http://www.ti.com/energy">www.ti.com/energy</a>
Industrial	<a href="http://www.ti.com/industrial">www.ti.com/industrial</a>
Medical	<a href="http://www.ti.com/medical">www.ti.com/medical</a>
Security	<a href="http://www.ti.com/security">www.ti.com/security</a>
Space, Avionics and Defense	<a href="http://www.ti.com/space-avionics-defense">www.ti.com/space-avionics-defense</a>
Video and Imaging	<a href="http://www.ti.com/video">www.ti.com/video</a>

### TI E2E Community

[e2e.ti.com](http://e2e.ti.com)