

## LT6110 Cable/Wire Drop Compensator

#### DESCRIPTION

The DC2033A demo board features the LT®6110 cable/ wire drop compensator IC. The LT6110 is a precision high side current sense that monitors load current via a sense resistor and converts the sense voltage to a sinking or sourcing current. Using the LT6110 sourcing or sinking current to control a regulator's output voltage can compensate for the voltage loss due to a cable/wire drop. The LT6110 includes an internal sense resistor or can be used with an external sense resistor.

The DC2033A is jumper-configurable for the LT6110 to use the internal sense resistor, an external  $25 m\Omega$  sense resistor, or a  $5.4 m\Omega$  PCB trace sense resistor. The DC2033A default configuration is for the LT6110 to use the internal sense resistor.

Design files for this circuit board are available at <a href="http://www.linear.com/demo">http://www.linear.com/demo</a>

LT, LTC, LTM, Linear Technology and the Linear logo are registered trademarks of Linear Technology Corporation. All other trademarks are the property of their respective owners.

#### TYPICAL WIRE DROP COMPENSATION CONNECTIONS

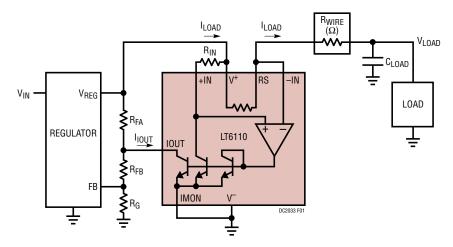


Figure 1. One Cable/Wire Compensation (One Wire to a Load Sharing the Regulator's Ground)

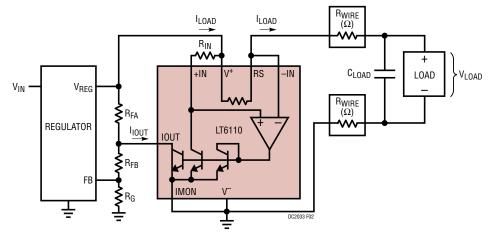


Figure 2. Two Cable/Wire Compensation (One Wire to a Load and One Ground Return Wire)





## **PERFORMANCE SUMMARY** Specifications are at T<sub>A</sub> = 25°C

PARAMETER		MIN	TYP	MAX	UNITS
Supply Range (V <sup>+</sup> to V <sup>-</sup> )		2		50	V
Amplifier Input Offset Voltage, V <sub>OS</sub>			100	300	μV
IOUT Current Error (Does Not Include V <sub>OS</sub> or R <sub>IN</sub> Errors)	I <sub>+IN</sub> = 10μΑ I <sub>+IN</sub> = 100μΑ I <sub>+IN</sub> = 1mA		0.6 0.4 1.5	1.6 1 2.5	% % %
IMON Current Error (3 • I <sub>+IN</sub> )	I <sub>+IN</sub> = 100μA		1.5	3	%
IOUT Voltage Range		0.4		V <sup>+</sup>	V
IOUT Current Error Change for IOUT Voltage 0.4V to 3.5V				0.2	%/V
IMON Current Error Change for IMON Voltage 0V to 3.1V				0.2	%/V
IOUT Signal Bandwidth	I <sub>+IN</sub> = 100μA		180		kHz
Supply Current			16	30	μА

#### **QUICK START SETUP**

The Quick Start Setup of Figure 3, shows the basic connections required for getting familiar with a DC2033A. An ammeter is used to measure the load current to a  $5\Omega$  load or an active load. To confirm the operation of the LT6110, connect a wire jumper from VOUT1 to regulator. This jumper connects the power supply 5V to the ROUT  $100\Omega$  pull-up resistor. The voltmeter across ROUT is for monitoring the  $I_{IOUT}$  current. A DC2033A is assembled with a  $402\Omega$  R<sub>IN1</sub> resistor to provide quick testing convenience.

The R<sub>IN1</sub> resistor and the V<sub>SENSE</sub> voltage set the LT6110 output current (I<sub>IOUT</sub>). To begin, adjust the power supply for 1A load current. With 1A load current flowing through the internal  $20m\Omega$  R<sub>SENSE</sub> resistor and  $100\mu V$  V<sub>OS</sub>, the I<sub>IOUT</sub> current is  $50\mu A$ , (1A •  $20m\Omega$  +  $100\mu V$ )/402 $\Omega$ . The voltmeter should read 5mV ( $50\mu A$  •  $100\Omega$ )  $\pm$  the R<sub>SENSE</sub>, V<sub>OS</sub>, R<sub>IN1</sub>, R<sub>OUT</sub> and I<sub>IOUT</sub> errors. Figure 4 shows the Quick Setup schematic and I<sub>IOUT</sub> equations.

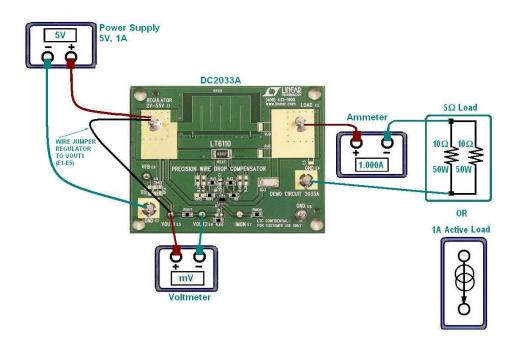


Figure 3. Quick Start Setup

LINEAR TECHNOLOGY

### **QUICK START SETUP**

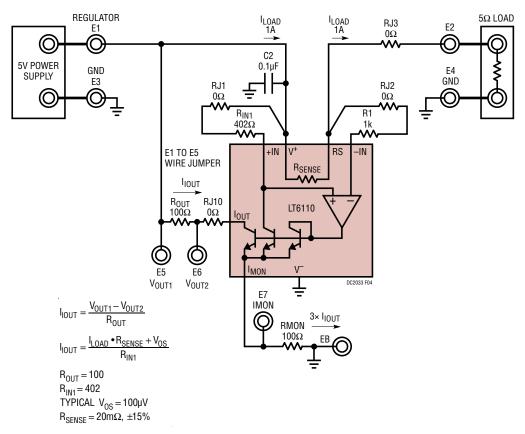


Figure 4. DC2033A Quick Setup Circuit and Equations

# Setting Up the DC2033A for Wire Compensation Testing

The DC2033A default circuit uses the LT6110 internal  $20m\Omega$  sense resistor ( $R_{SENSE}$ ) and is configured with  $0\Omega$  RJ1, RJ2 and RJ3 are installed with  $0\Omega$  jumpers. The RJ1 and RJ2 are standard  $0\Omega$  jumpers and connect the LT6110 amplifier across the internal  $R_{SENSE}$ . The RJ1 and RJ2 resistance is not a concern as the current flowing through them is very small (the resistance variation of standard  $0\Omega$  resistors is  $20m\Omega$  to  $100m\Omega$ ). However, a standard  $0\Omega$  jumper must not be used in the path of the load current because the jumper's I • R drop adds an error term to a wire drop compensation design (for example the I • R drop of a  $50m\Omega$  jumper for 2A is 100mV). The RJ3 jumper is ultra- $0\Omega$ , with less than  $1m\Omega$  and rated for 30A at  $70^{\circ}C$ . The RJ3 jumper can be

removed and re-installed as RJ6 or RJ9, to configure the DC2033A with an LT6110 and an external R<sub>SENSE</sub> (for an alternative to an ultra- $0\Omega$  jumper install two 0.25 inch length of 18AWG solid copper wires in parallel for up to 20A I<sub>LOAD</sub>).

The  $R_{IN1}$  resistor and the  $V_{SENSE}$  voltage set the LT6110 output current ( $I_{IOUT}$ ) for regulator output voltage control. The  $I_{IOUT}$  current connects to the regulator feedback resistors and boosts the regulator's output voltage ( $V_{REG}$ ). The  $V_{REG}$  voltage increases directly with the load current and cancels the wire's  $I \bullet R$  drop ( $V_{DROP}$ ) to the remote load.

A DC2033A has 0805 size pads for installing a switching regulator's feedback resistors ( $R_{FA}$ ,  $R_{FB}$  and  $R_{G}$ ). A low quiescent current switching regulator has 10µA or less current flowing through the feedback divider and requires



### **QUICK START SETUP**

three feedback resistors for an LT6110 connection, as in Figure 1. In addition, a DC2033A includes pads for a feedback loop compensation capacitor, C4.

A Quick Design Guide.

Variable Definitions:

 $I_{LOAD}$  is the maximum load current and  $I_{IOUT}$  is the LT6110 output current, (design target is 100 $\mu$ A).

R<sub>SENSE</sub> is the LT6110 internal or external current sense resistor and R<sub>WIRE</sub> is the copper wire resistance.

( $R_{WIRE}$  includes the resistance of the load current carrying PCB traces and wire connectors minus the  $R_{SENSE}$  resistance).

V<sub>FB</sub> is the regulator's feedback reference voltage.

 $I_Q$  is the no-load quiescent current flowing through the resistor feedback divider, ( $I_Q = V_{FB}/R_G$ ), (refer to the regulator's demo manual).

 $V_{REG}$  is the no-load current regulator output voltage. Quick Design Equations:

$$R_{IN1} = \frac{V_{SENSE}}{I_{IOUT}} V_{SENSE} = I_{LOAD} \cdot R_{SENSE}$$

$$R_{FA} = \frac{V_{DROP}}{I_{IOUT}} V_{DROP} = I_{LOAD} \cdot (R_{SENSE} + R_{WIRE})$$

$$R_{FB} = \frac{V_{REG} - V_{FB}}{I_{O}} R_{G} = \frac{V_{FB}}{I_{O}}$$

Quick Design Check:

$$V_{REG} = (R_{FA} + R_{FB} + R_{G}) \cdot I_{Q}$$

**NOTE:** For DC2033A REGULATOR input voltages higher than 36V, remove the RJ10 jumper sorting the 27V Zener, D1. Refer to the LT6110 data sheet for additional application circuits and information.

#### DC2033A Application Options

The DC2033A is designed to be used with a regulator board and copper wire. On board jumper pads and turrets configure an LT6110 circuit using  $0\Omega$  jumpers and provide for wired connections to a regulator board. Figures 6, 7 and 8 show typical DC2033 application circuit options.

Table 2. DC2033A Current Sense Resistor,  $R_{\text{SENSE}}$  and Jumper Options

•					
R <sub>SENSE</sub>	RESISTANCE (25°C)	$\begin{array}{c} \text{JUMPERS} \\ \text{STANDARD } 0\Omega \end{array}$	JUMPERS ULTRA-0Ω	I <sub>LOADMAX</sub>	
Internal	$20$ m $Ω$ at $I_{LOAD}$ = 1A, (16.5m $Ω$ to 22.5m $Ω$	RJ1, RJ2	RJ3	3A at 125°C	
LT6110 R <sub>SENSE</sub>	22m $\Omega$ at I <sub>LOAD</sub> = 3A, (18.5m $\Omega$ to 24.5m $\Omega$				
External R <sub>EXT</sub>	25mΩ at $I_{LOAD}$ = 1A, ±1%	RJ4, RJ5	RJ6	6A at 70°C 5A at 90°C	
External R <sub>PCB</sub>	$5.4\text{m}\Omega$ at $I_{LOAD} = 1\text{A}$ , $\pm 15\%$	RJ7, RJ8	RJ9	20A at 25°C 10A at 90°C	
	$5.7$ m $\Omega$ at I <sub>LOAD</sub> = 10A, ±15%				

#### The DC2033A with a Regulator Demo Board

A DC2033A board can be configured and connected to a regulator demo board for a complete cable/wire drop compensation system evaluation. Typically a regulator demo board includes a feedback resistor divider that sets the output voltage  $V_{REG}$ . Remove the feedback resistors from the regulator board and connect the regulator's feedback pin (FB or  $V_{REF}$ ) to the DC2033A  $V_{FB}$  (E9). In addition, connect the  $V_{OUT}$  and GND of the regulator board to the REGULATOR (E1) and to the GND (E3) of the DC2033A respectively. Figure 5 shows Linear Technology's buck regulator demo board, DC1458A, connected to a DC2033A, using an external sense resistor,  $R_{EXT}$ . The DC1458A demo board includes the LT3972, 5V at 3.5A buck regulator. Figure 6 shows the complete cable/wire compensation schematic.

**NOTE:** The LT3972 R2 and R3 feedback resistors are removed from the DC1458A board and are on the DC2033A board ( $R_{FA}$ ,  $R_{FB}$  and  $R_{G}$ ). The no-load LT3972 voltage is

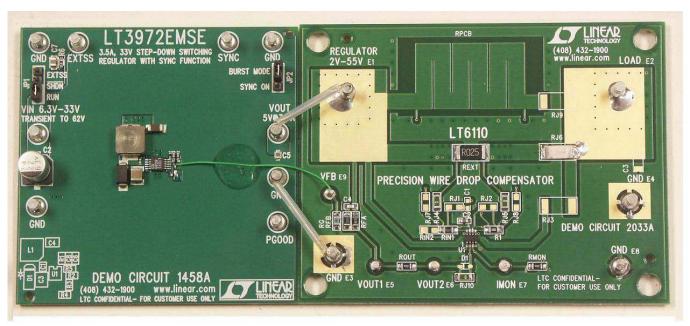


Figure 5. DC1458A and DC2033A Connections



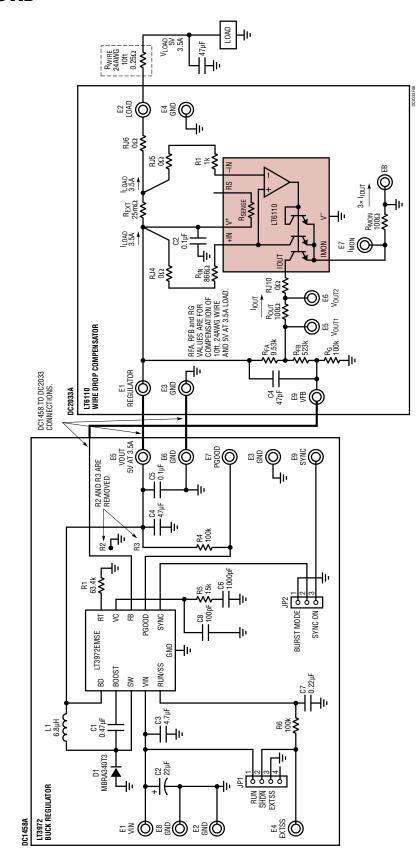


Figure 6. An LT3972 5V at 3.5A Buck Regulator with LT6110 Circuit Compensating for the Drop of a 10ft, 24AWG Cable/Wire

TECHNOLOGY TECHNOLOGY

5V and the feedback voltage,  $V_{FB}$  is 0.79V. The values of the feedback resistors are selected using the Quick Design Guide with an  $I_Q = 8\mu A$ . The specified quiescent current is  $8\mu A$ . Resistors  $R_{FA}$ ,  $R_{FB}$  and  $R_G$  are 9.53k, 523k and 100k respectively.  $V_{REG} = (9.53k + 523k + 100k) \cdot 8\mu A = 5V (\pm 1\%$  and  $\pm 1.27\%$  resistor and  $V_{FB}$  tolerance respectively).

#### The DC2033A PCB Trace R<sub>SENSE</sub>

A DC2033A has a serpentine PCB trace that can be used as an LT6110 external sense resistor for high load currents (5A to 20A). Remove RJ3 ultra- $0\Omega$  jumper and install as RJ9. Remove standard  $0\Omega$  jumpers RJ1 and RJ2 and install

RJ7 and RJ8. Figure 7 shows the DC2033A schematic with LT6110 and PCB  $R_{\text{SENSE}}$ .

The copper thickness of a DC2033A PCB trace is two ounces. A typical resistance for a 2oz square trace is 0.25m $\Omega$  at 25°C. The R<sub>PCB</sub> serpentine trace length is six 0.15 × 0.6 inch rectangular traces connected by 0.015 × 0.15 inch traces. The current path area of each rectangular trace is equivalent to three and one-half squares. The R<sub>PCB</sub> resistance is 5.4m $\Omega$  at 25°C, ±15%. R<sub>WIRE</sub> is the total resistance from the regulator output to the remote load (minus the R<sub>SENSE</sub> resistance).

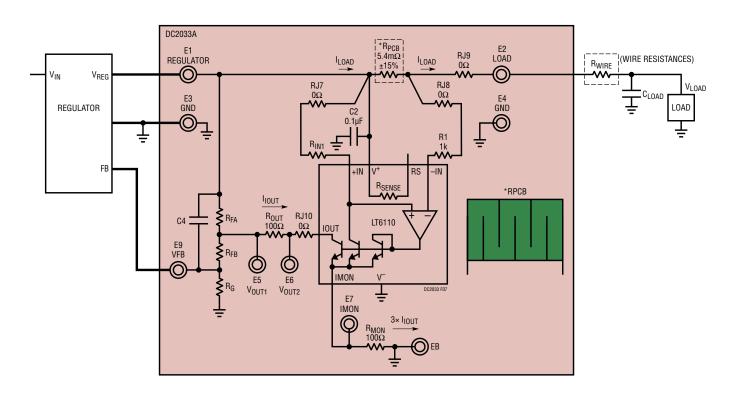


Figure 7. DC2033 Configured for R<sub>PCB</sub> (PCB Trace Sense Resistor)



The RJ9 jumper in the load current path must be ultra- $0\Omega$ ,  $1m\Omega$  or less (the jumper's I • R drop adds an error term to a wire drop compensation design). The RJ3 jumper is ultra- $0\Omega$ , less than  $1m\Omega$  and can be removed and installed as RJ9 (for an alternative to an ultra- $0\Omega$  jumper install two 0.25 inch length of 18AWG solid copper wires in parallel for an RJ9 jumper).

#### Using the DC2033A with an LT6110 DFN Package

The bottom layer of a DC2033A is designed for an LT6110 DFN IC. To use a DC2033A for evaluating with an LT6110 DFN IC with an internal  $R_{SENSE}$  requires the following: Remove U1 (LT6110 SOT IC) and jumper RJ3 from the top of the board. Install a U2 (LT6110 DFN), RJ11 and RJ12 on the bottom of DC2033A. Figure 8 shows the schematic of a DC2033A with an LT6110 DFN package.

The DC2033A PCB layout is optimized for an LT6110 SOT23 package. A DC2033A with a LT6110 DFN (U2) and an internal  $R_{SENSE}$ , adds a 2%  $R_{SENSE}$  error due to a PCB via from the top to the bottom PCB layer. In addition to using a DC2033A with a LT6110 DFN and an internal  $R_{SENSE}$ , the DC2033A can be configured for an LT6110 DFN with an external REXT or RPCB current sense resistor (refer to the jumper table on the DC2033A schematic).

The load current path RJ6, RJ9, RJ11 and RJ12 jumpers must be ultra- $0\Omega$ , less than  $1m\Omega$ , (for an alternative to an ultra- $0\Omega$  jumper install two 0.25 inch length of 18AWG solid copper wires in parallel for an RJ6, RJ9, RJ11 or RJ12 jumper).

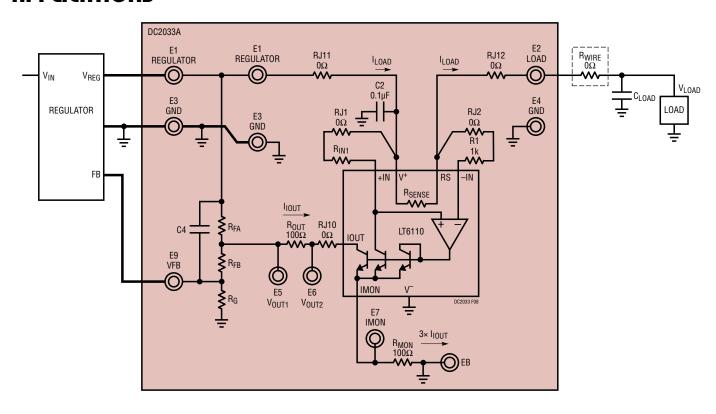


Figure 8. DC2033 Configure with an LT6110 DFN Package and Internal R<sub>SENSE</sub>




## DEMO MANUAL DC2033A

## **PARTS LIST**

ITEM	QTY	REFERENCE	PART DESCRIPTION	MANUFACTURER/PART NUMBER
1	0	C1, C4	CAP, X7R, 50V, 10%, 0603 OPT	
2	1	C2	CAP, X7R, 0.1µF, 50V, 10%, 0603	TDK C1608X7R1H104K
3	0	C3	CAP, X7R, 50V,1206 OPT	
4	1	D1	DIODE, ZENER 27V 200MW SOD-323	DIODES/ZETEX, BZT52C27S-7-F
5	4	E5, E6, E7, E9	TESTPOINT, TURRET, 0.063"	MILL-MAX, 2308-2-00-80-00-07-0
6	5	E1 TO E4, E8	TESTPOINT, TURRET, 0.093"	MILL-MAX, 2501-2-00-80-00-00-07-0
7	1	REXT	CURRENT SENSE RESISTOR 0.025 $\Omega$ 1% 2512	VISHAY, WSL2512R0250FEA18
8	0	RIN2, RG, RFA, RFB	RES, CHIP, 1%, 1/8W, 0805 OPT	
9	1	RIN1	RES, CHIP, 1%, 1/8W, 402Ω, 0805	VISHAY, CRCW0805402RFKEA
10	3	RJ1, RJ2, RJ10	RES, 0Ω JUMPER, 0805	VISHAY, CRCW08050000Z0EA
11	0	RJ4, RJ5, RJ7, RJ8	RES, 0Ω JUMPER, 0805 OPT	
12	1	RJ3	RES, ULTRA-0Ω JUMPER, 2512	NACOMA/TEPRO RN5326
13	0	RJ6, RJ9, RJ11, RJ12	RES, ULTRA-0Ω JUMPER, 2512 OPT	USE TWO 0.25in,18AWG SOLID COPPER WIRES IN PARALLEL
14	2	ROUT, RMON	RES, CHIP, 1%, 1/8W, 100Ω, 0805	VISHAY, CRCW0805100RFKEA
15	0	RPCB	RES PCB TRACE, 5.4mΩ, ±15%	(PCB TRACE RESISTOR)
16	1	R1	RES, CHIP, 1%, 1/8W, 1k, 0805	VISHAY, CRCW08051K00FKEA
17	1	U1	IC, WIRE DROP COMPENSATOR, TSOT-23-8	LINEAR TECHNOLOGY, LT6110ITS8#PBF
18	0	U2	IC, WIRE DROP COMPENSATOR, 8 LEAD DFN, OPT	
19	4	MH1, MH2, MH3, MH4	STANDOFF, SNAP ON	KEYSTONE, 8831

#### **SCHEMATIC DIAGRAM**

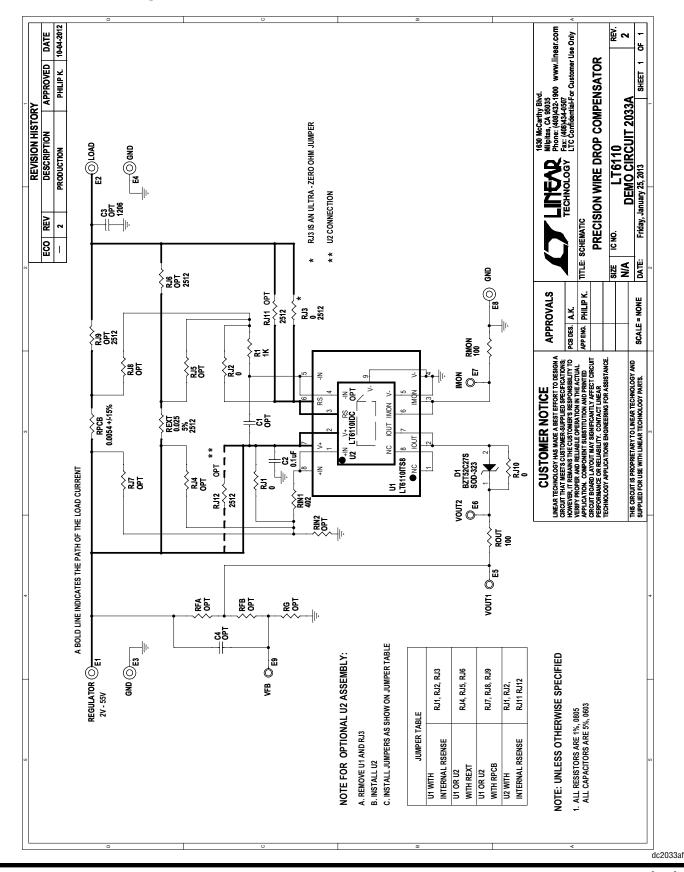

#### DEMO MANUAL DC2033A

#### DEMONSTRATION BOARD IMPORTANT NOTICE

Linear Technology Corporation (LTC) provides the enclosed product(s) under the following **AS IS** conditions:

This demonstration board (DEMO BOARD) kit being sold or provided by Linear Technology is intended for use for **ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY** and is not provided by LTC for commercial use. As such, the DEMO BOARD herein may not be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including but not limited to product safety measures typically found in finished commercial goods. As a prototype, this product does not fall within the scope of the European Union directive on electromagnetic compatibility and therefore may or may not meet the technical requirements of the directive, or other regulations.

If this evaluation kit does not meet the specifications recited in the DEMO BOARD manual the kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY THE SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THIS INDEMNITY, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user releases LTC from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge. Also be aware that the products herein may not be regulatory compliant or agency certified (FCC, UL, CE, etc.).

No License is granted under any patent right or other intellectual property whatsoever. LTC assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or any other intellectual property rights of any kind.

LTC currently services a variety of customers for products around the world, and therefore this transaction is not exclusive.

**Please read the DEMO BOARD manual prior to handling the product**. Persons handling this product must have electronics training and observe good laboratory practice standards. **Common sense is encouraged**.

This notice contains important safety information about temperatures and voltages. For further safety concerns, please contact a LTC application engineer.

Mailing Address:

Linear Technology 1630 McCarthy Blvd. Milpitas, CA 95035

Copyright © 2004, Linear Technology Corporation

