



P/N: INS-ABP-2016
KIT-PANEL-BACK-20X16


Installation Instructions:

The kit consists of the following components

- Item A) Panel, 20x16x08 – QTY (1)
- Item B) Screw, PH #10-32 x 5/16" – QTY (4)

Position the Panel (A) flush against the back of the Base aligned with the bosses and secure with #10-32 X 5/16" Pan Head Screws (B) (x4) into the boss, as shown. Torque to 10-15 in-lbs., using Philips head #2 screwdriver.

Base not included.
Shown for ref. only

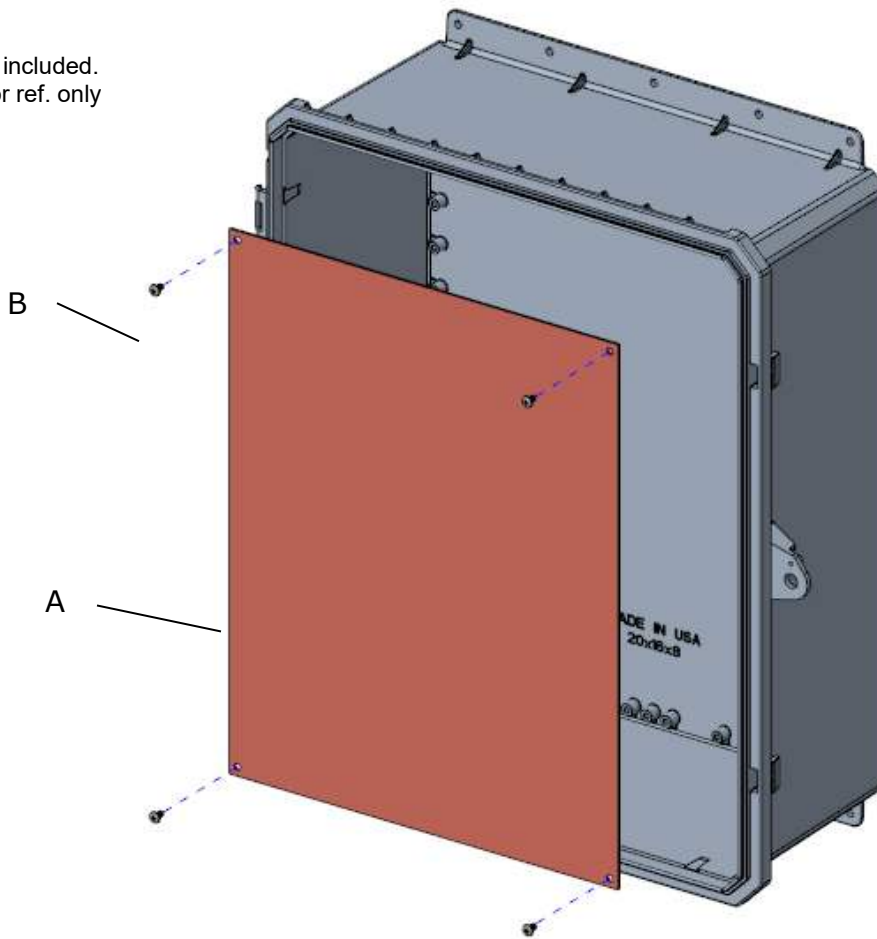

Integra Enclosures, Inc

8989 Tyler Blvd / Mentor, OH 44060 / Voice 440-269-8155 / Fax 440-269-4977 / www.integraenclosures.com (INS-ABP-2016_REV_A)