
### **2000 CONSOLE- SERIES**

# ASSEMBLY INSTRUCTIONS FOR BASE SWING FREAME ASSEMBLY

BUL10061 REV. **A** 

PAGE 1 OF 2

PART NO.	Α	В
2CSFB19	22.05	19.275
2CSFB24	22.05	24.275

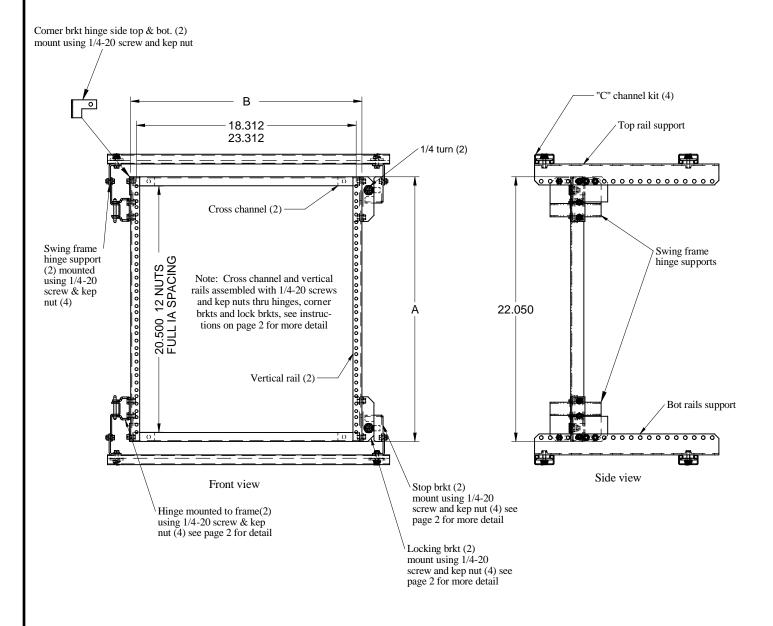












#### **2000 CONSOLE- SERIES**

## ASSEMBLY INSTRUCTIONS FOR BASE SWING FREAME ASSEMBLY


BUL10061 REV. **A** 

PAGE 2 OF 2

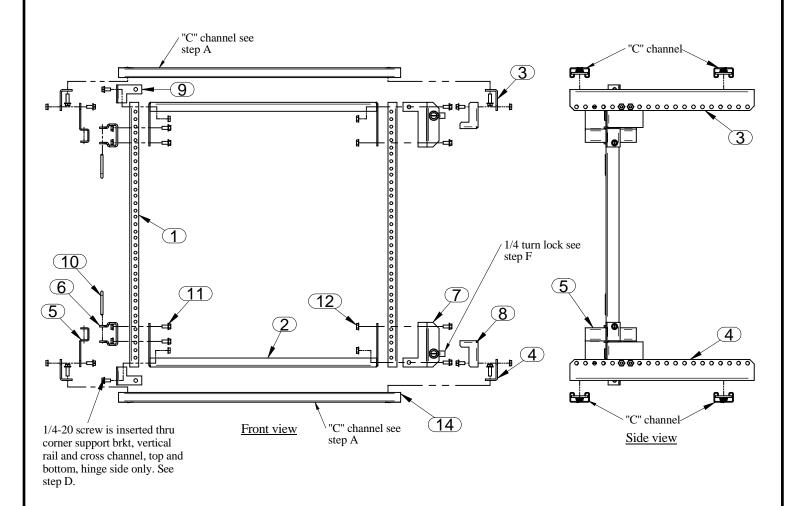

PARTS LIST		
ITEM No.	DESCRIPTION	QTY
1	VERTICAL RAIL	2
2	CROSS CHANNEL	2
3	SUPPORT BRACKET TOP (NOT INC)	2
4	SUPPORT BRACKET BOTTOM	2
5	HINGE BRACKET	2
6	HINGE BRACKET	2
7	LOCKING BRACKET	2
8	STOP BRACKET	2
9	CORNER SUPPORT BRACKET	2
10	HINGE PIN	2
11	1/4-20 SCREW	16
12	1/4-20 KEP NUT	16
13	SPRING STEEL CATCH	2
14	1/4-20 SPRING NUTS (NOT INC)	8

# TOOL BOX





#### **ASSEMBLY INSTRUCTIONS:**

- A) Mount C channel mounting kit as per instructions in 2CMC kit purchased separately
- B) Mount top and bottom support brkts (items 3 & 4) as shown above and also as shown in 2CBRSK kits purchased separately
- C) Mount hinge brkts (item 5) and stop brkts (item 8) onto rail supports top and bottom. Assemble using 1/4-20 screws and nuts (items 11 & 12). Note that frames can be mounted hinged left or right hand. Left hand hinge assembly shown.
- D) Assemble swing frame parts: EIA spaced vertical rails (item 1) to cross channels (item 2), using locking brkts (item 7), hinge (item 6), and corner brkts (item 9). Secure using 1/4-20 hardware supplied.
- E) Mount swing frame onto hinge bracket using hinge pins (item 10) top and bottom. Secure hinge pin using spring catch (item 14).
- F) Close frame against the stop bracket on lock side and turn 1/4 turn lock to lock frame into place.



visit our website @ www.hammondmfg.com