


# HMEBG - SERIES

BUL86262

REV. A

## ASSEMBLY INSTRUCTIONS FOR HMEBG - HME GLAND PLATE BOTTOM

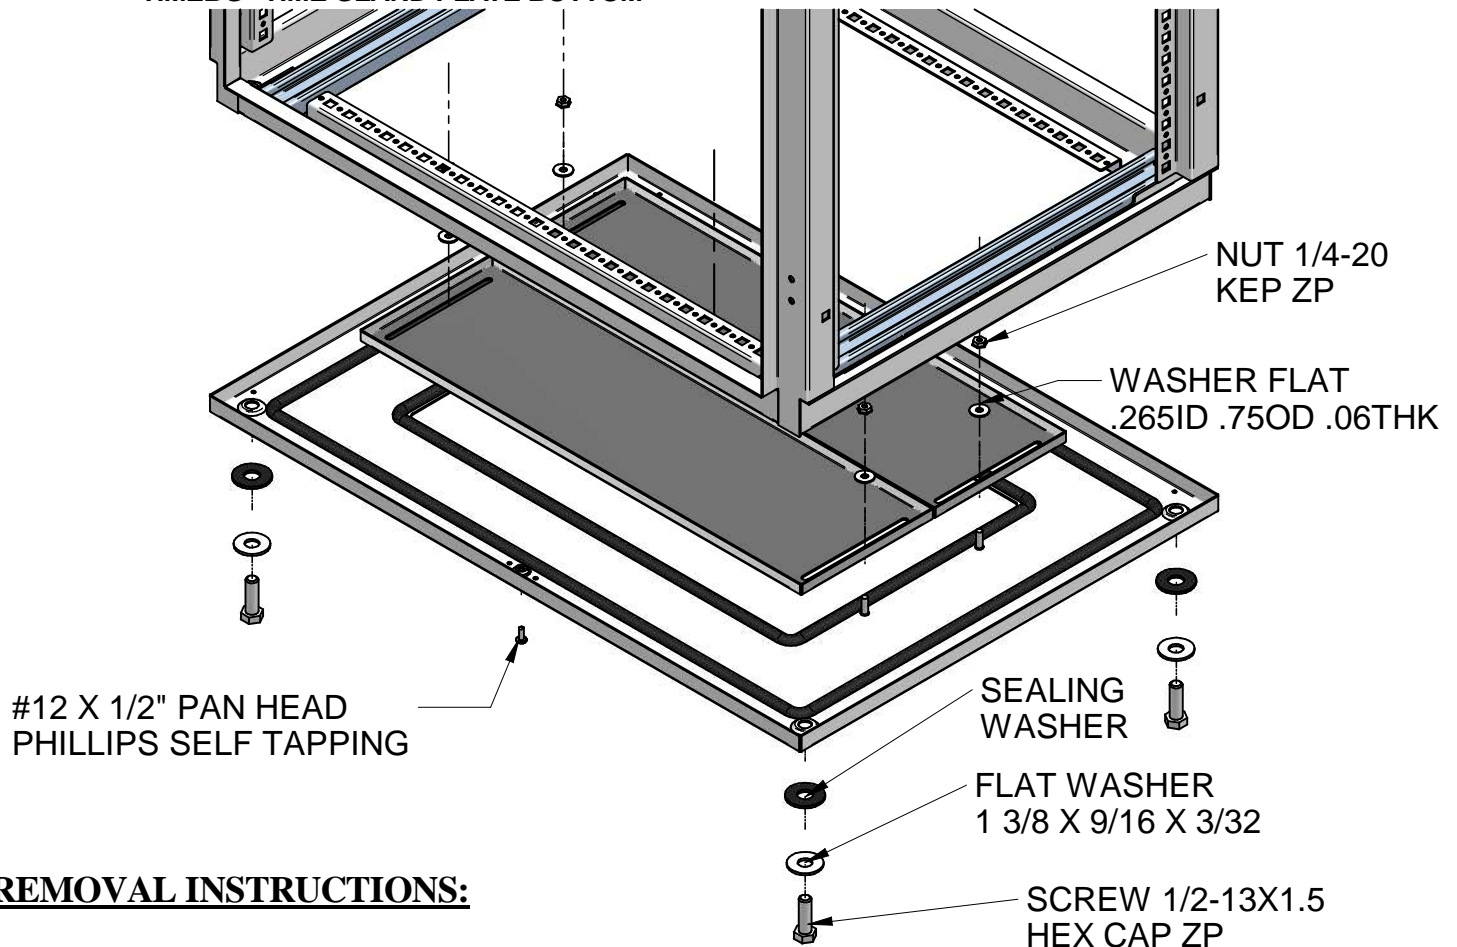

### REMOVAL INSTRUCTIONS:


- A) Loosen four 1/2" bolts and remove thread rolling screws.
- B) Remove bottom panel.

### INSTALLATION INSTRUCTIONS:

- A) Line holes up on bottom panel with holes on the bottom of the frame.
- B) Install 1/2" bolts with washers and tighten down, also install center thread rolling screw.

### GLAND PLATE REMOVAL/ADJUSTMENT INSTRUCTIONS:

- A) Loosen 1/4-20 Nuts.
- B) Adjust or remove gland plates, tighten back down with 1/4-20 nuts and washers.

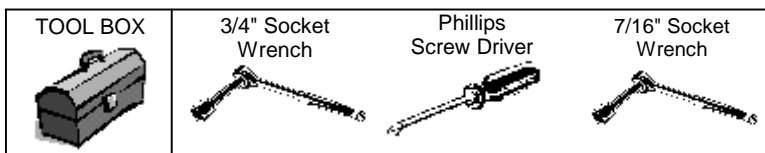

 **HAMMOND  
MANUFACTURING™**  
[www.hammondmfg.com](http://www.hammondmfg.com)