## Required Tools and Components

## Provided by Manufacturer (per module set)

## Provided by Installer


1 MSS switch module

Hand Tools

**Fasteners** 

1 MSS magnet module

Circuit Tester

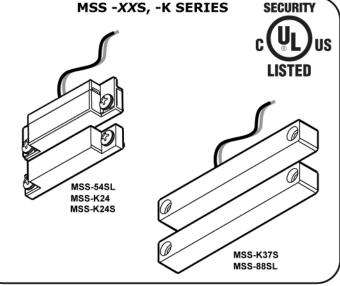


**Specifications** Max Current: 0.25 A Resistive Max Voltage: 30 VDC Max Power: .25 W Resistive The Magnasphere MSS-Concealed series is intended to be connected to a UL Listed compatible control panel for US applications and a ULC Listed compatible control panel for


Canadian applications.

NOMENCLATURE GUIDE Surface Mount MSS - # # S X Size Class 12" Wire Leads (default, if blank),

Terminals, 18" Armored Leads

MSS - K # # X K = See Specification for this distinct model



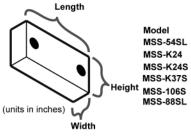

Max Gap	Length	Width	Height	Conductor
.38	2.50	.50	.50	J
.38	2.50	.50	.50	Т
.38	2.50	.50	.50	J
.38	4.00	.50	.50	J
.38	4.00	.50	.50	J
.38	4.00	.50	.50	J
	.38 .38 .38 .38	.38 2.50 .38 2.50 .38 4.00 .38 4.00	.38 2.50 .50 .38 2.50 .50 .38 2.50 .50 .38 2.50 .50 .38 4.00 .50 .38 4.00 .50	.38 2.50 .50 .50 .38 2.50 .50 .50 .38 2.50 .50 .50 .38 4.00 .50 .50 .38 4.00 .50 .50

Conductor/Connection Key: L = 12" Leads, J = 12" Leads with Jacket, T = Screw Terminals, A = 18" Armored Leads


## Installation Plan & Switch Orientation

The MSS -XXS/-K should be mounted close to the latch side of the door for optimal performance; Up to 15" (38cm) from the doorknob/door-latch edge is recommended in order to meet UL 681 requirements: contact shall be installed so door cannot be opened more than 2 inches without causing an alarm. See table for operating gaps. Ensure that the modules are well aligned. Before drilling, a careful layout of the site is recommended in order to achieve module alignment and secure routing of wires. Magnasphere uses rare-earth magnet materials which do not require isolation from steel surfaces. (Spacers may be needed only for alignment.)

Test and wire the switch. Magnasphere contacts have a directional, restricted sense zone for enhanced security. Check that the installation is properly oriented, bringing the magnet to rest within the contact's secure sense zone.

Fasten the switch modules to the frame and door. Test the operation of the installed switch.

Note: some models have multiple wire egresses and multiple mounting hole sets. One pair of fasteners per module is sufficient.

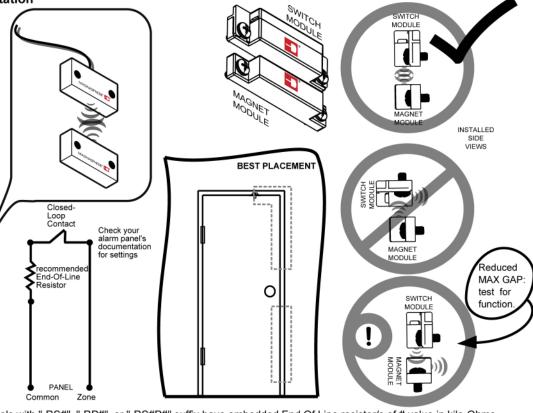

Models with "-RS#", "-RP#", or "-RS#P#" suffix have embedded End Of Line resistor/s of # value in kilo-Ohms.