



OUTSIDE VIEW

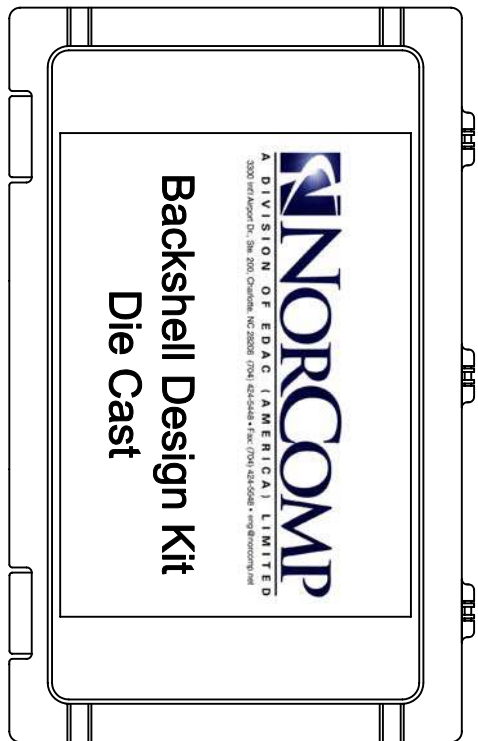

INSIDE VIEW

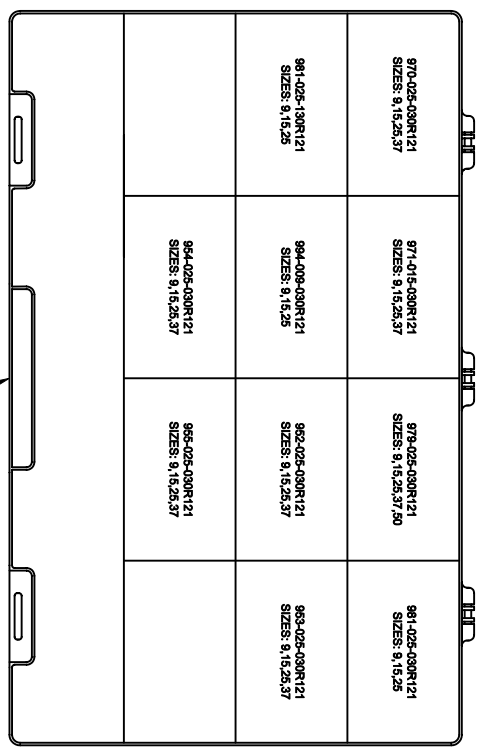

KIT INCLUDES:

QTY	PART NUMBER
1	970-025-030R121
1	971-015-030R121
1	979-025-030R121
1	981-025-030R121
1	984-009-030R121
1	985-025-030R121
1	986-025-030R121
1	989-025-030R121
1	954-025-030R121
1	955-025-030R121

QUICK REFERENCE GUIDE TO BACKSHELLS

	THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF NorComp AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OF SALE OF APPARATUS WITHOUT WRITTEN PERMISSION.	
	DRAWN: N. Kovalsky CHECKED:	DATE: 06-11-07 DATE:

<h1>NorComp</h1>	SCALE: 1 : 1/4 DWG NO. BACKSHELL DESIGN KIT - 030	SHEET 1 OF 1	REV 0
------------------	--	----------------------------	--------------