

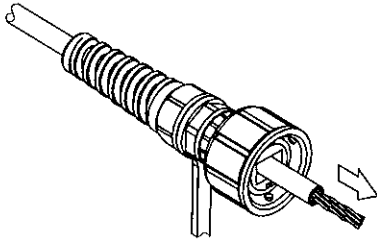


INDUSTRIAL CONNECTOR INSTALLATION SHEET UTP / FTP

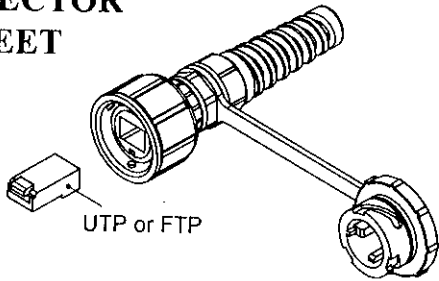


STEP 1:

Insert the wire through the parts as shown. Terminate the plug per the T568A/T568B wiring as required.

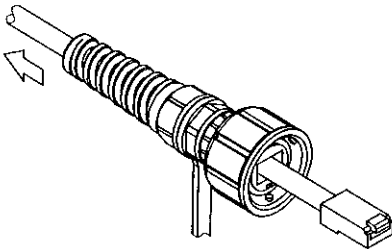

STEP 2:

Pull the plug back into the housing.

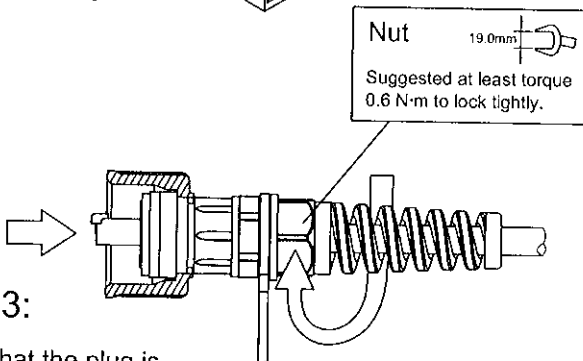

Nut 19.0mm

Suggested at least torque 0.6 N·m to lock tightly.

STEP 3:

Confirm that the plug is in the correct position.

STEP 4:

Twist the back portion as shown in order to lock the cable Gland.